



9. Flow Chart of Troubleshooting


9-1. Power On

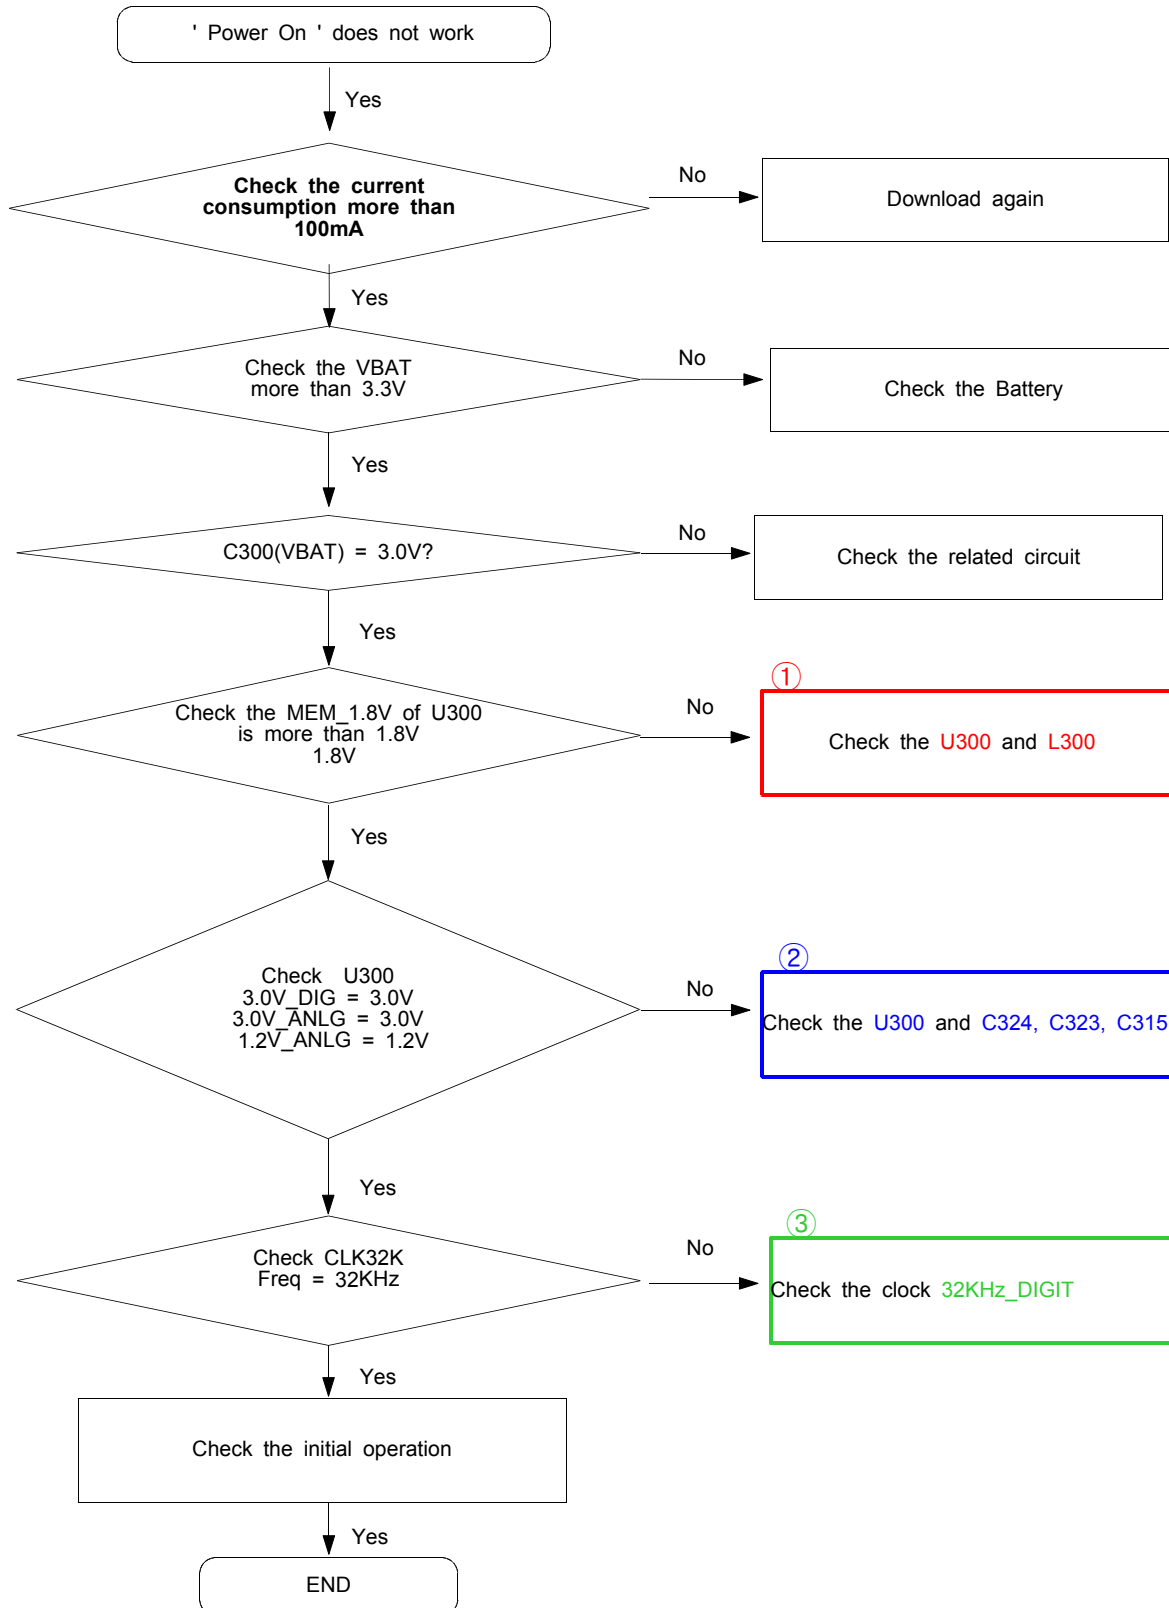

Flow Chart of Troubleshooting

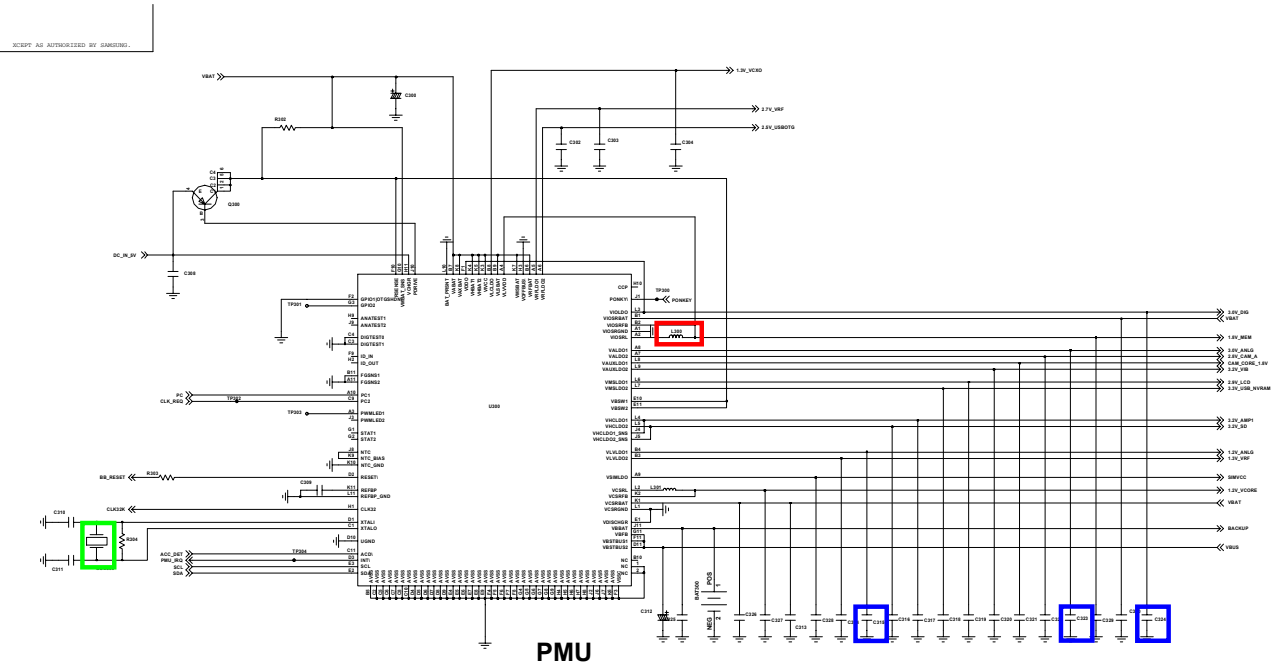


9-2. Initial

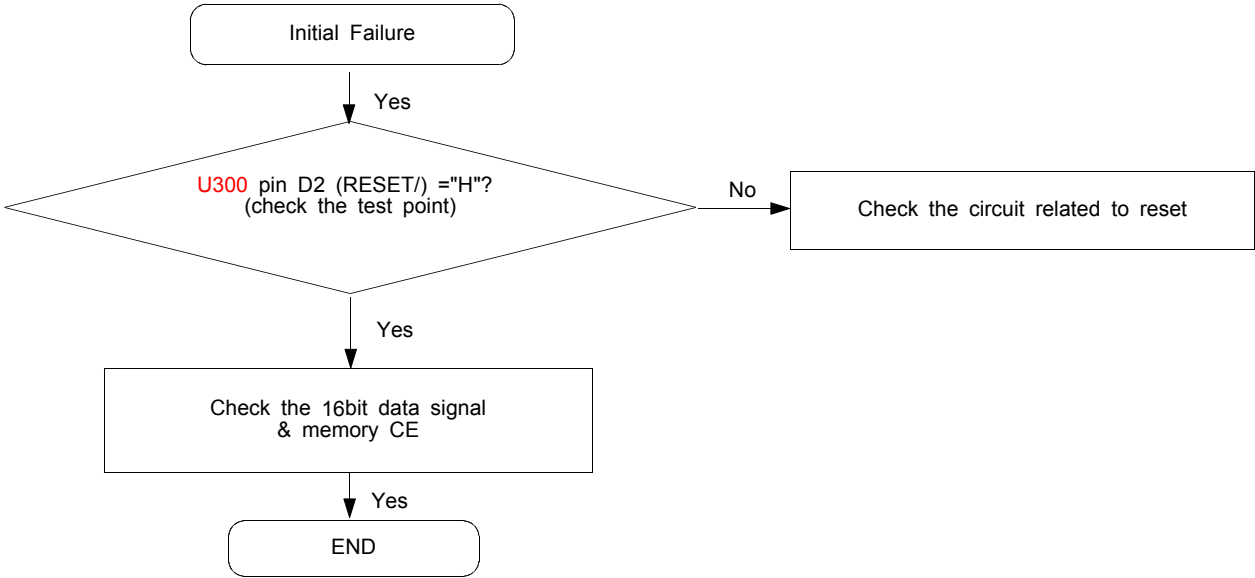


Flow Chart of Troubleshooting

SECRET AS AUTHORIZED BY SAMSUNG.


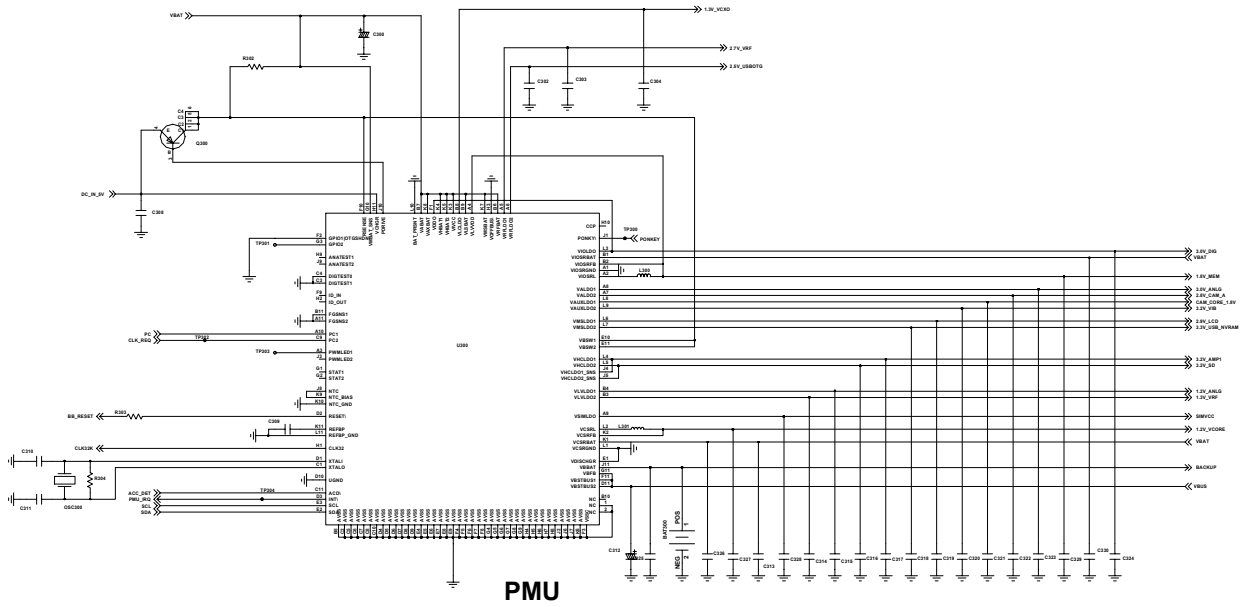


9-3. Charging Part

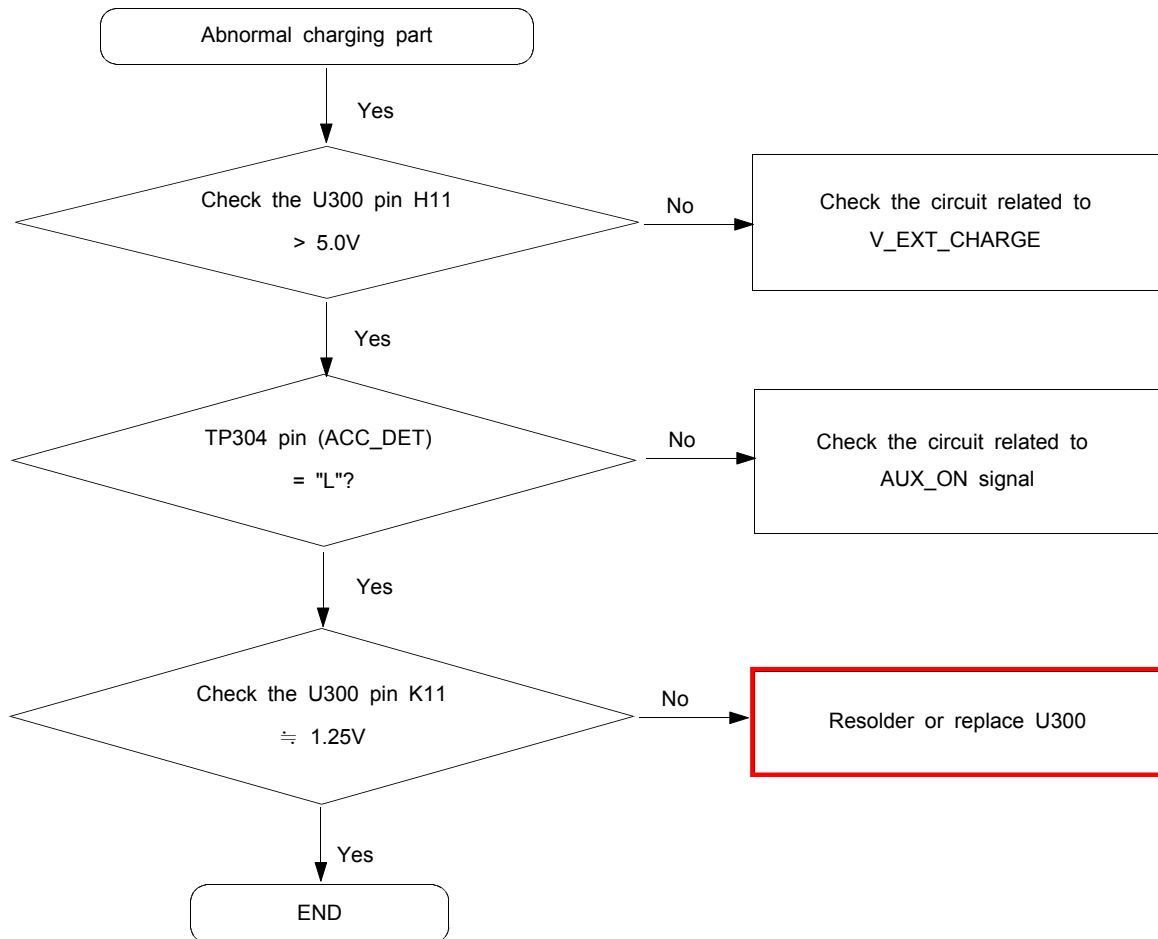



Flow Chart of Troubleshooting

SCRIPT AS AUTHORIZED BY SAMSUNG.

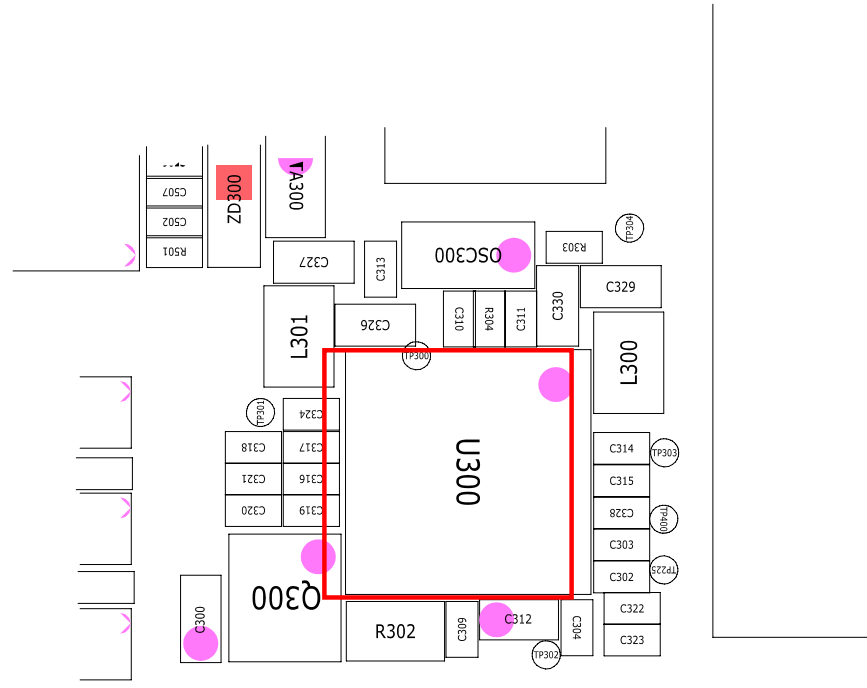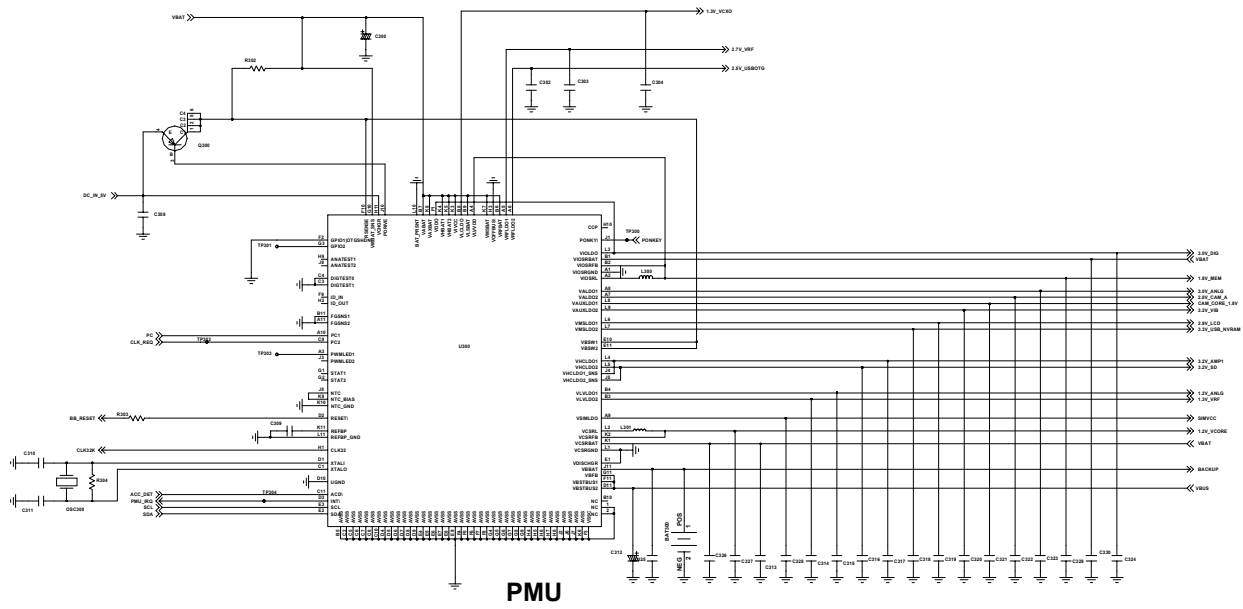


9-4. Sim Part

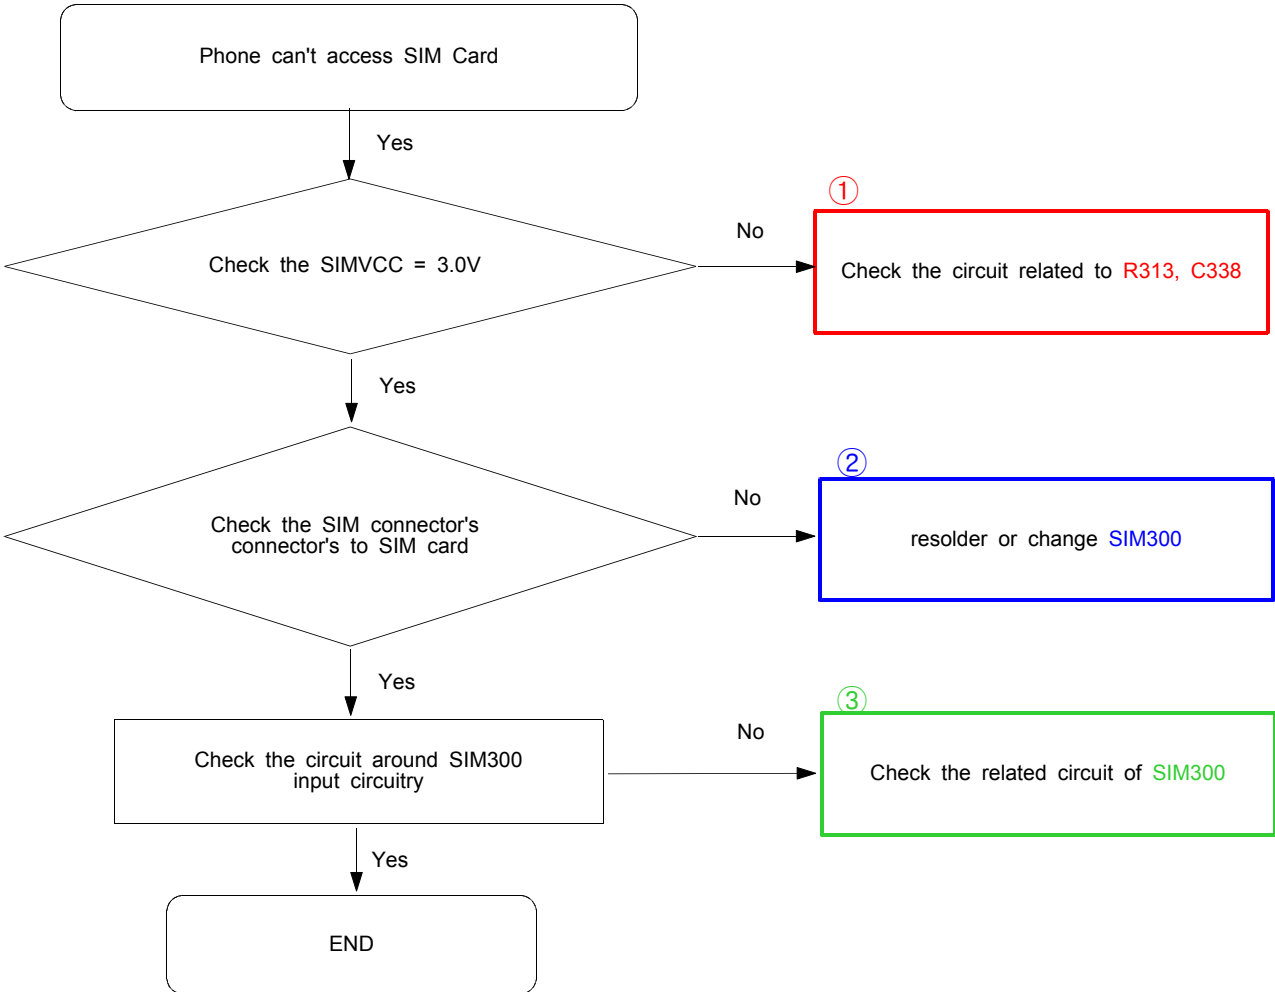


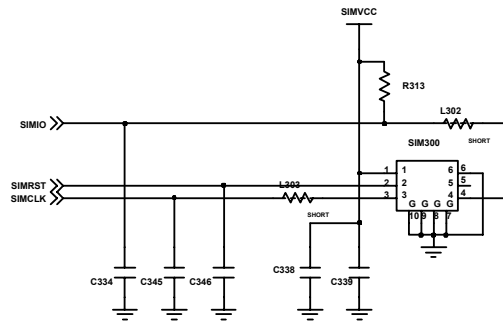



SIM CONNECTOR

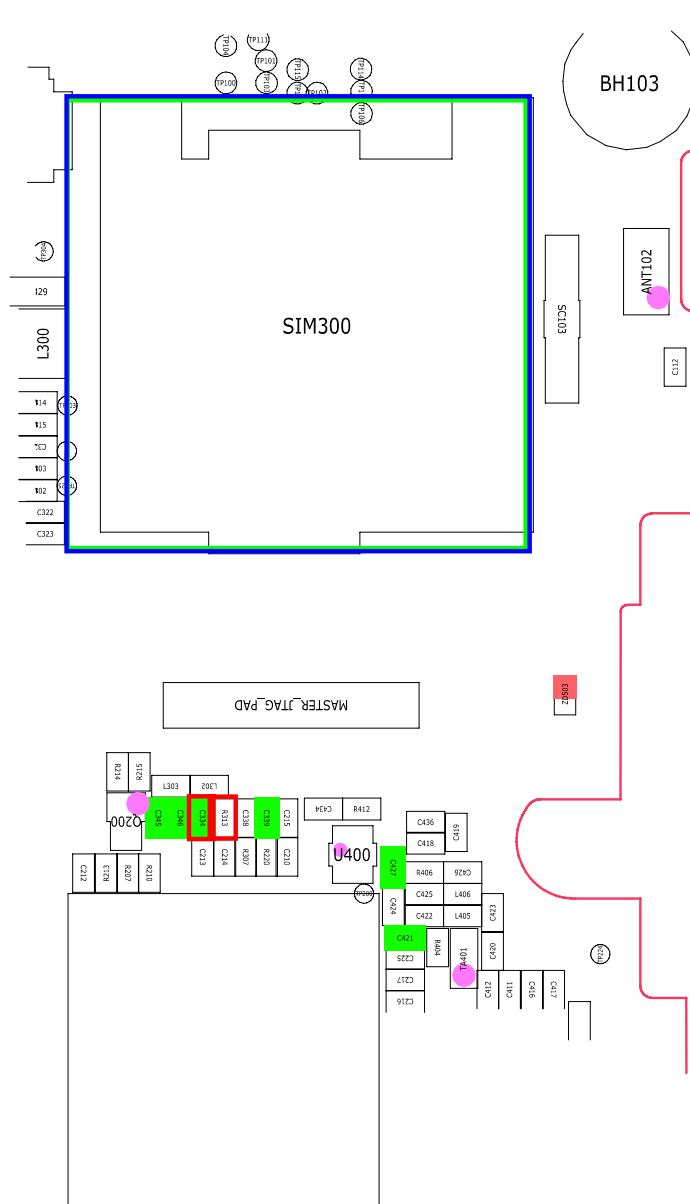


9-5. Microphone Part

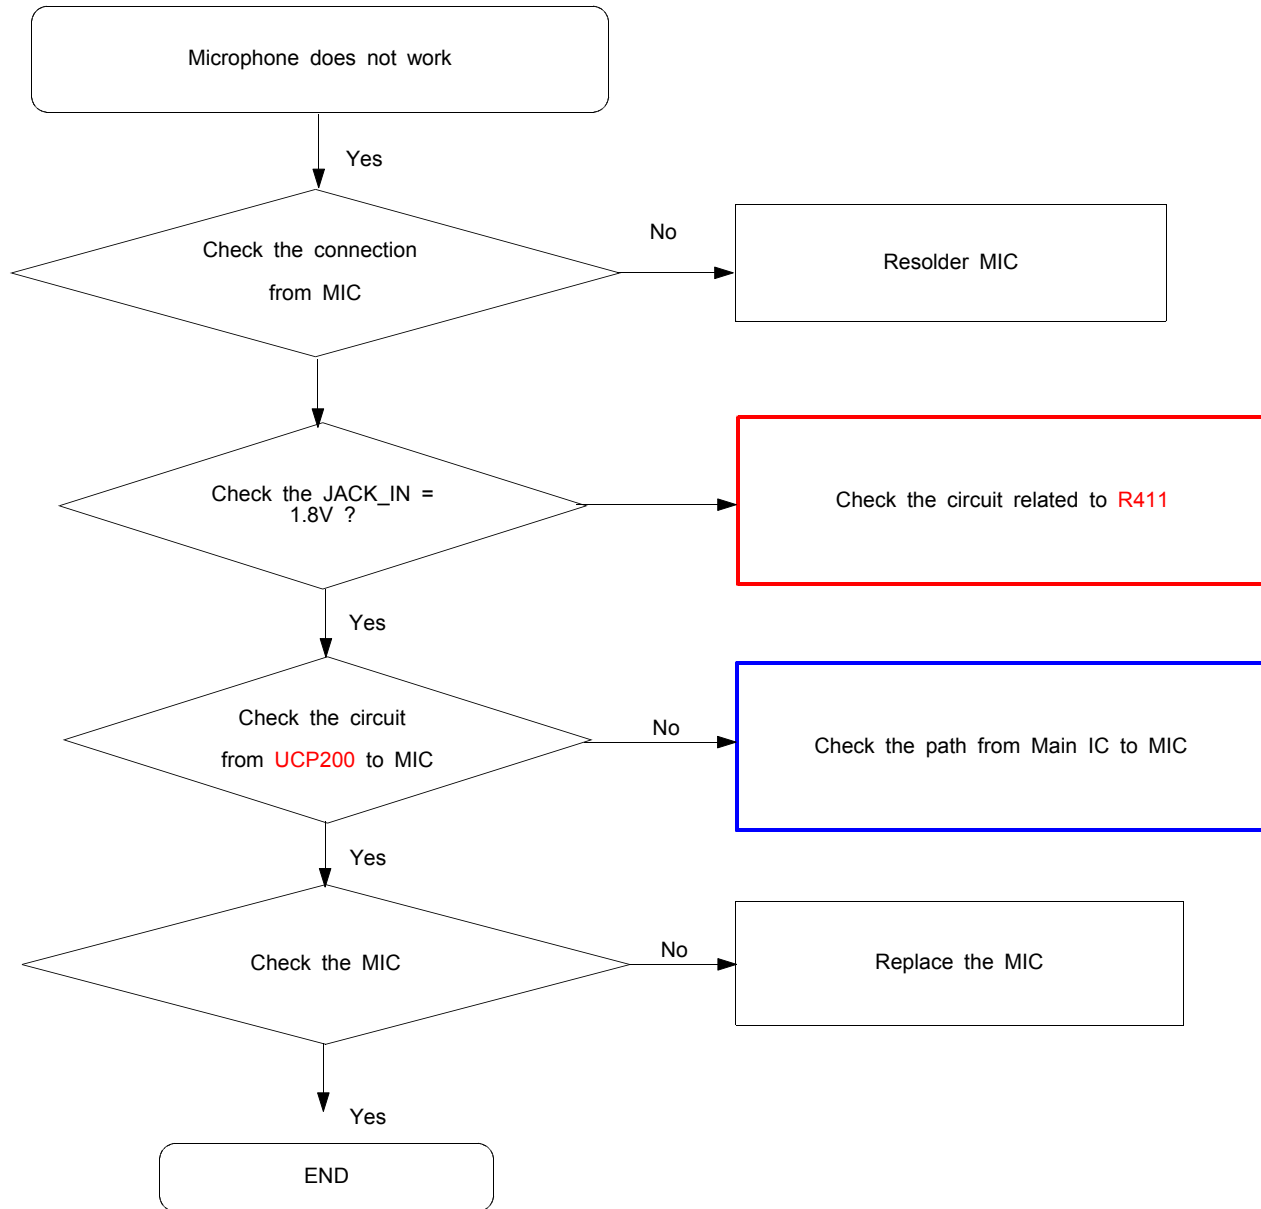


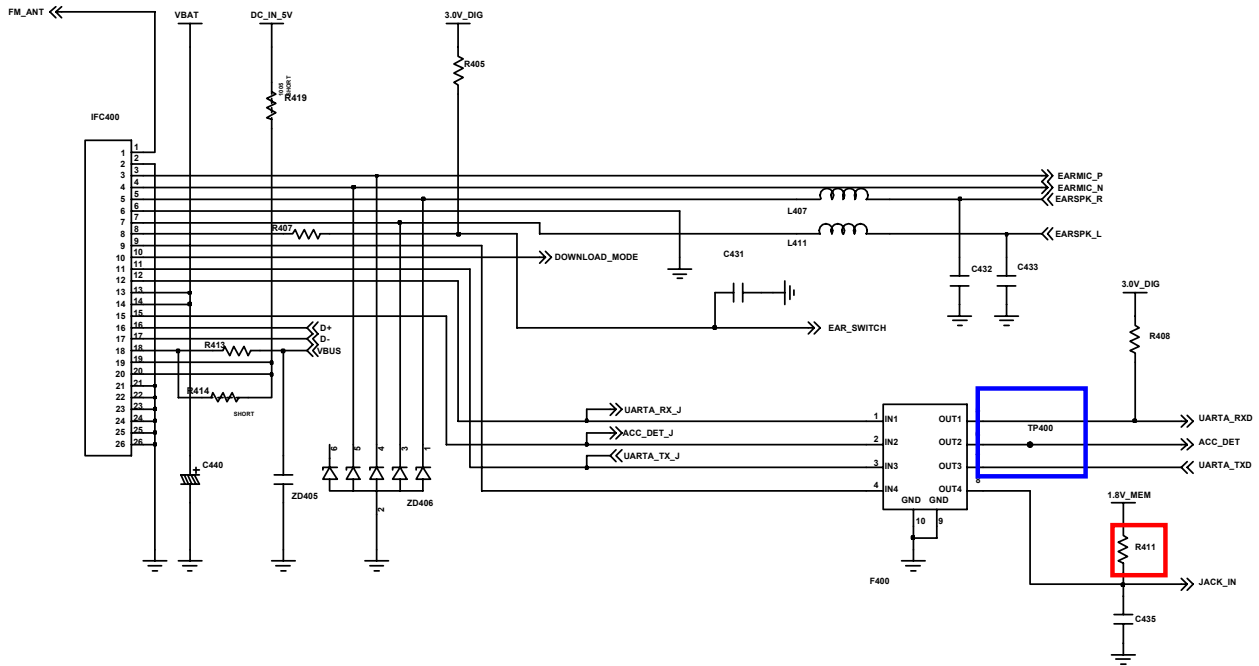


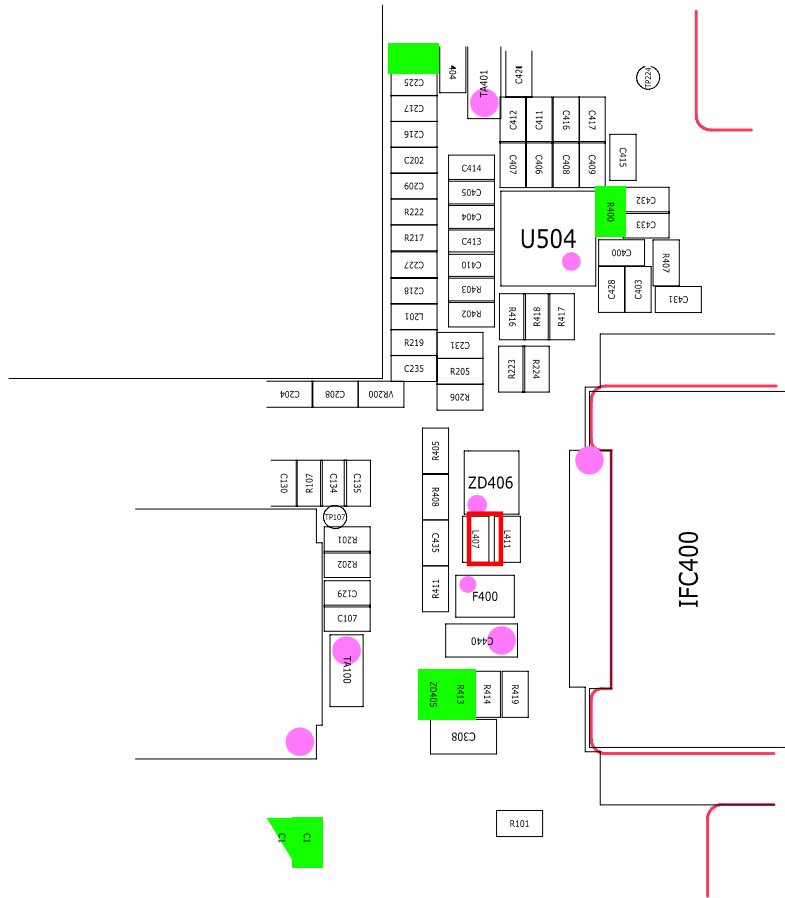


9-6. Speaker Part(Melody)

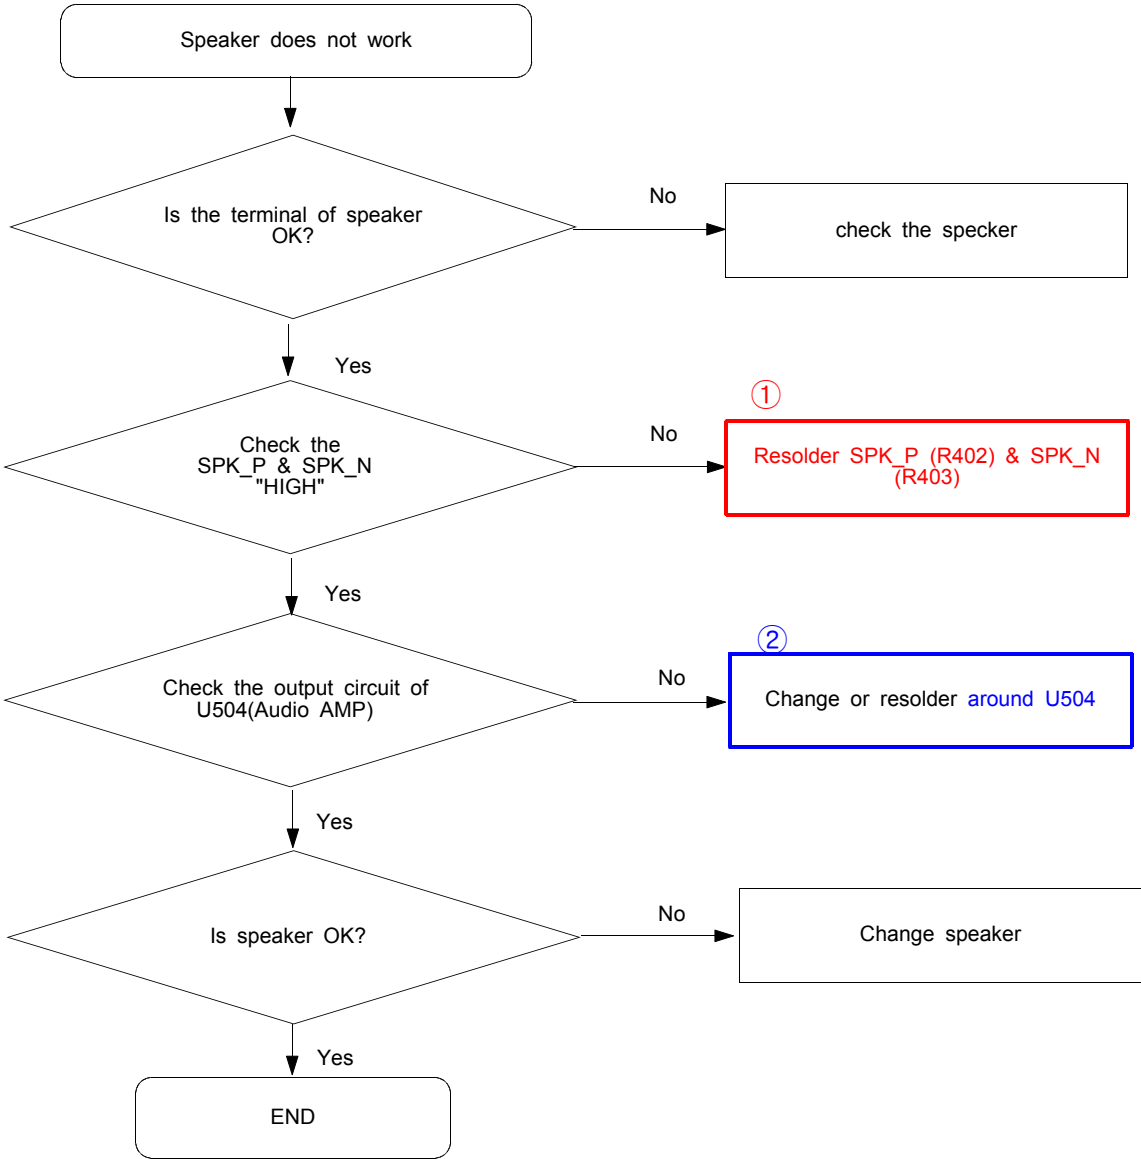


Flow Chart of Troubleshooting

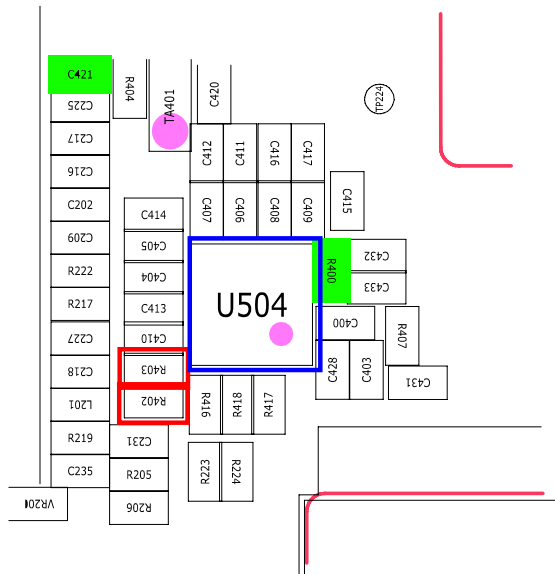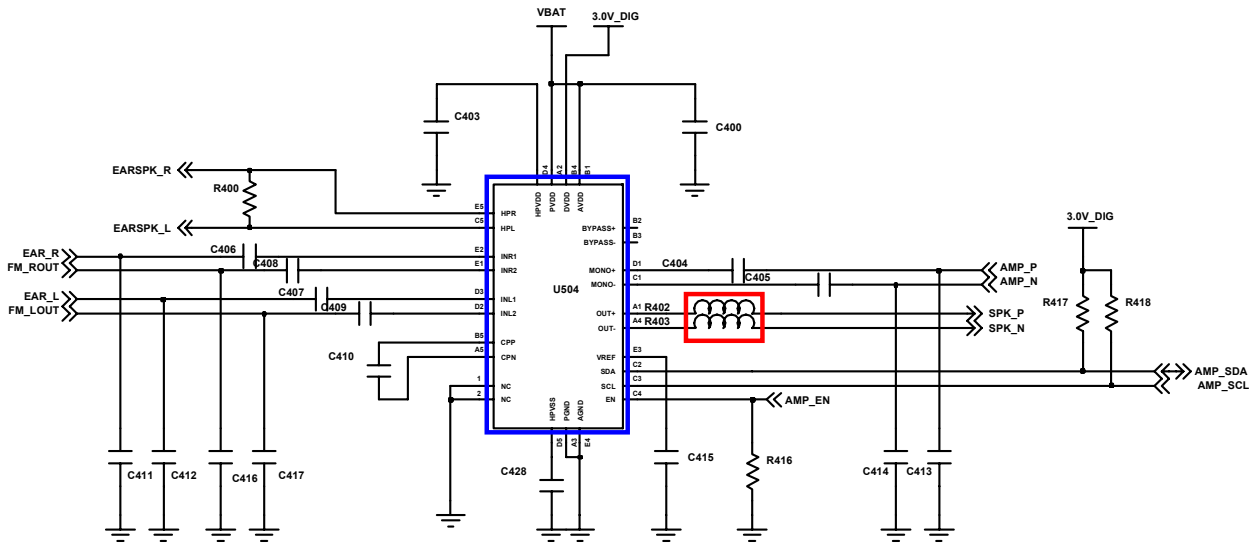


9-7. Key Data Input

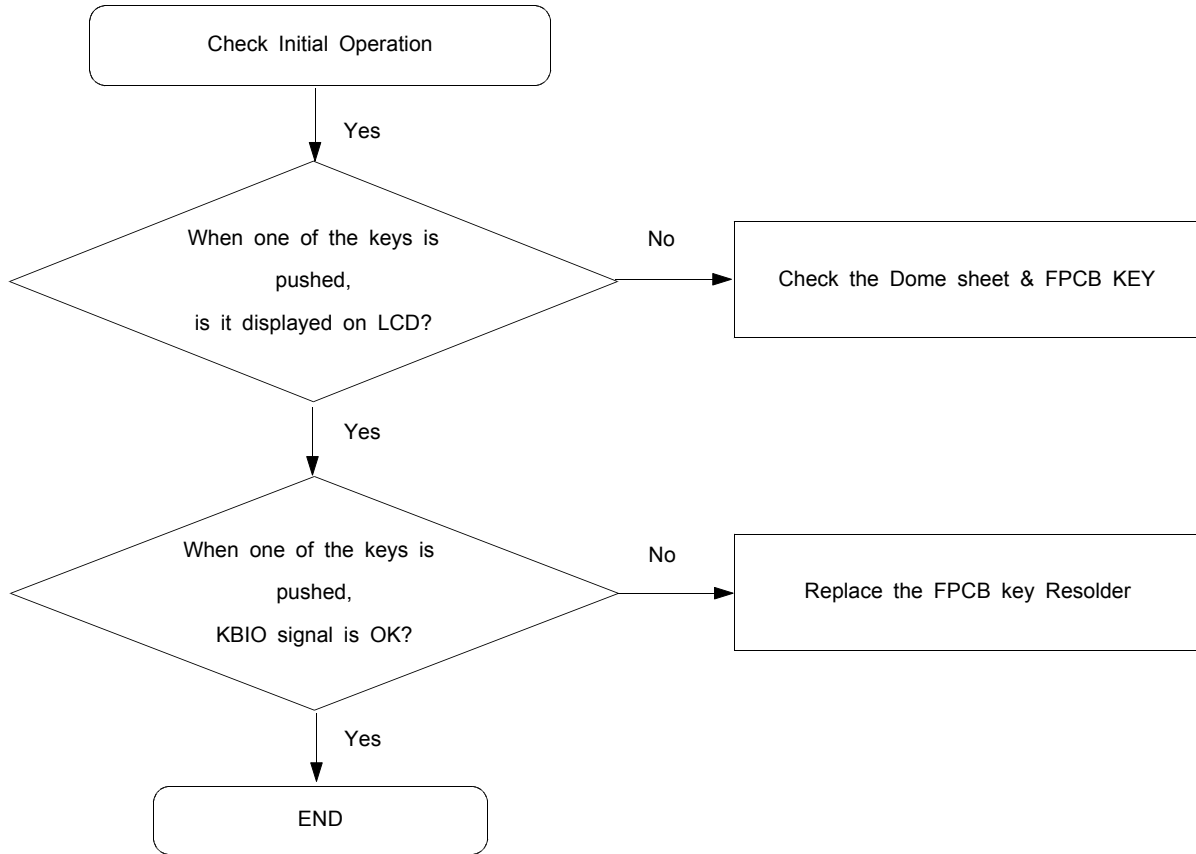


< Volume KEY >

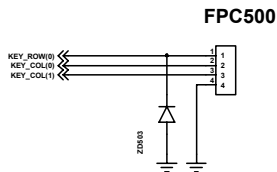


< Camera & Mode KEY >

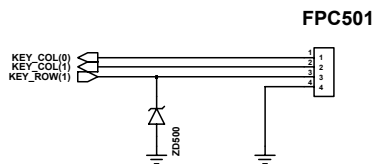


< SUB KEY >

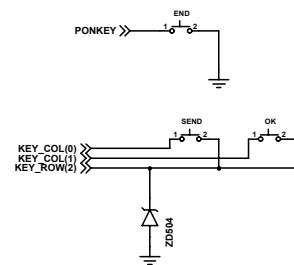


9-8. Camera part

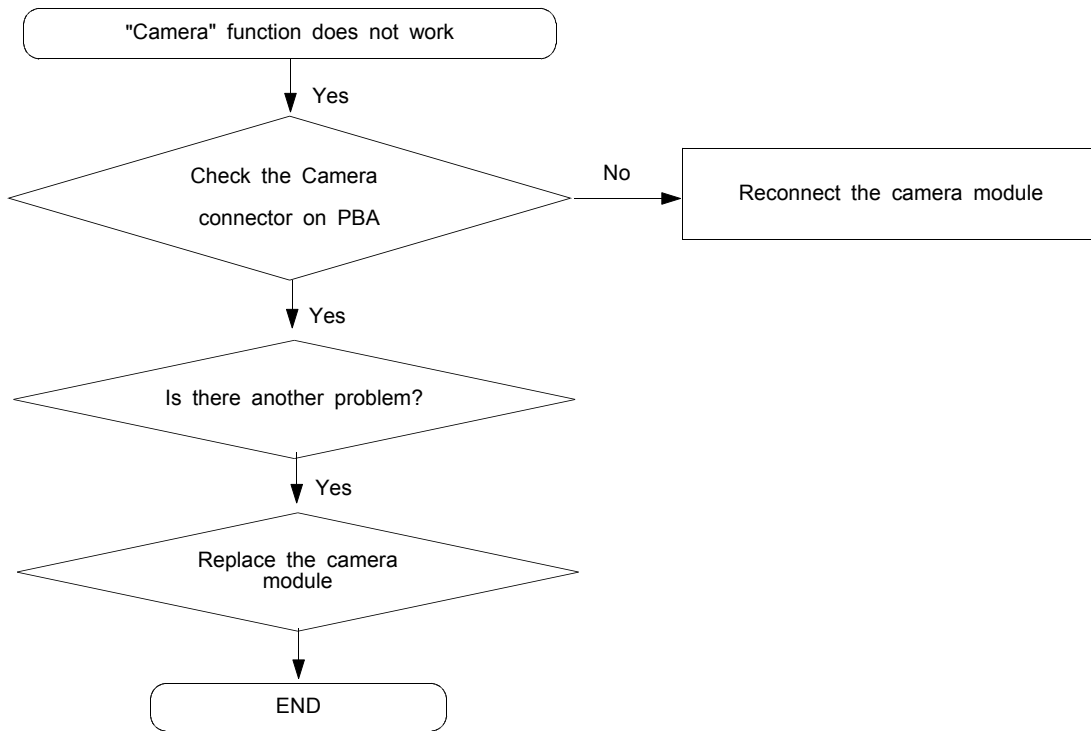


9-9. GSM850 Receiver

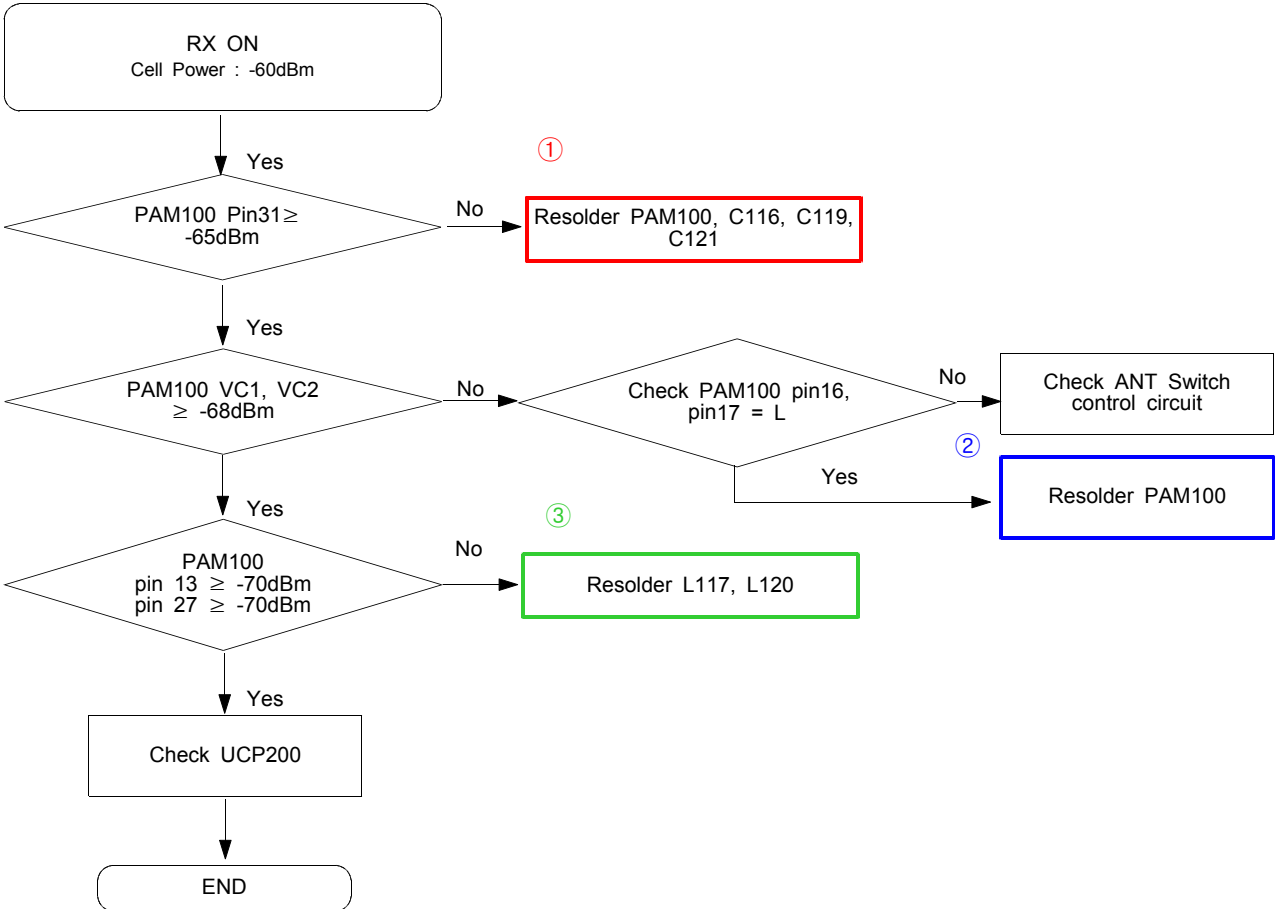


9-10. GSM Receiver

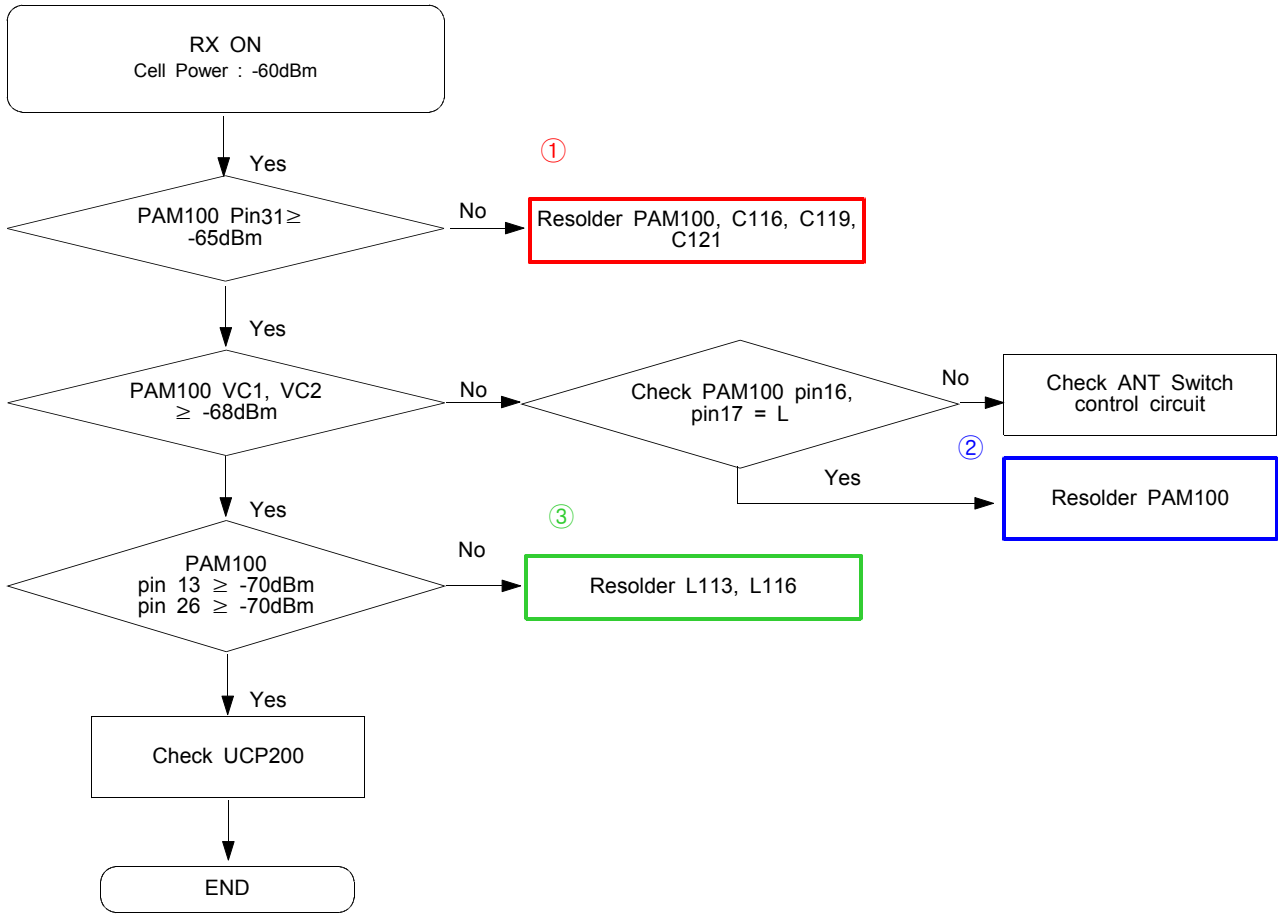



9-11. DCS Receiver

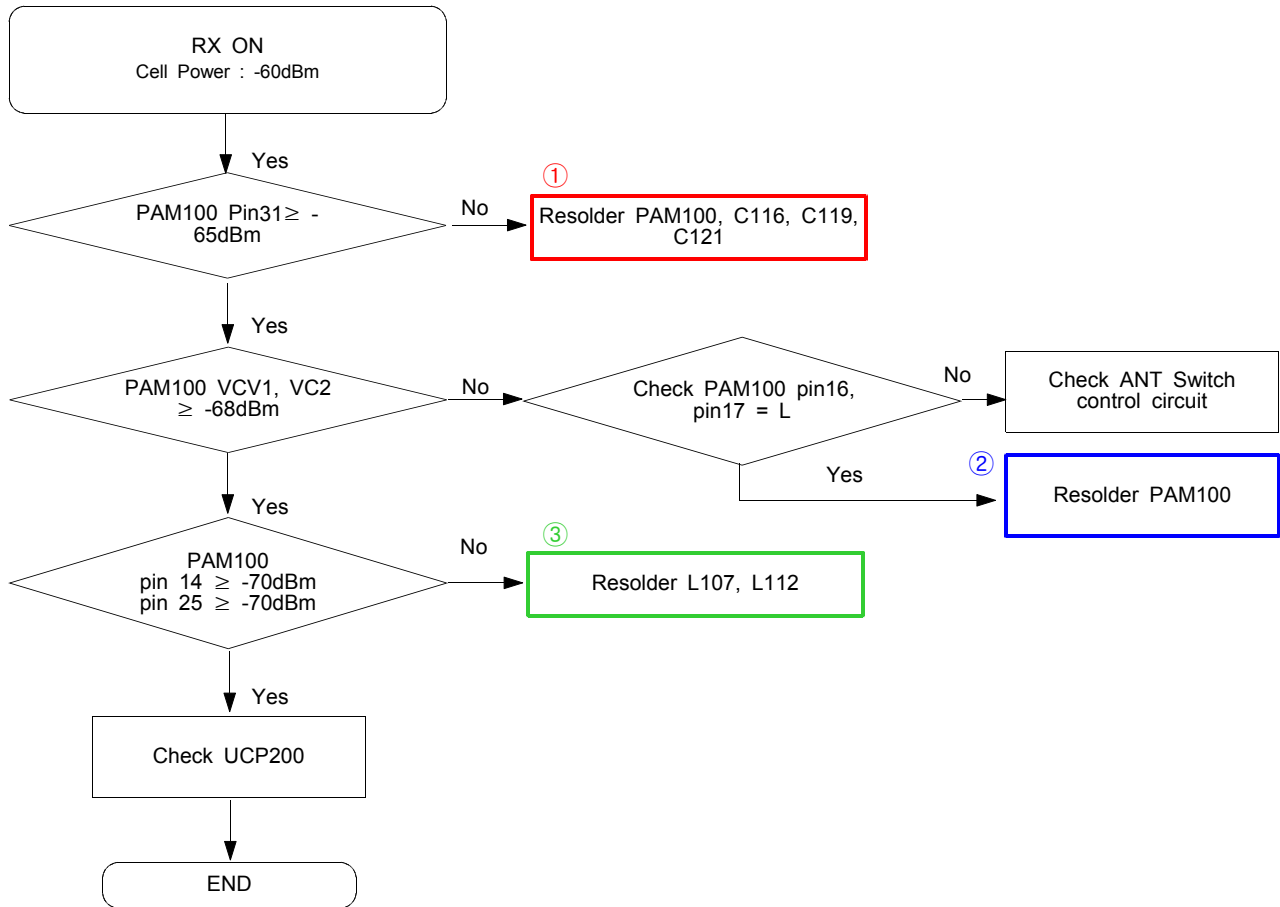


9-12. PCS Receiver

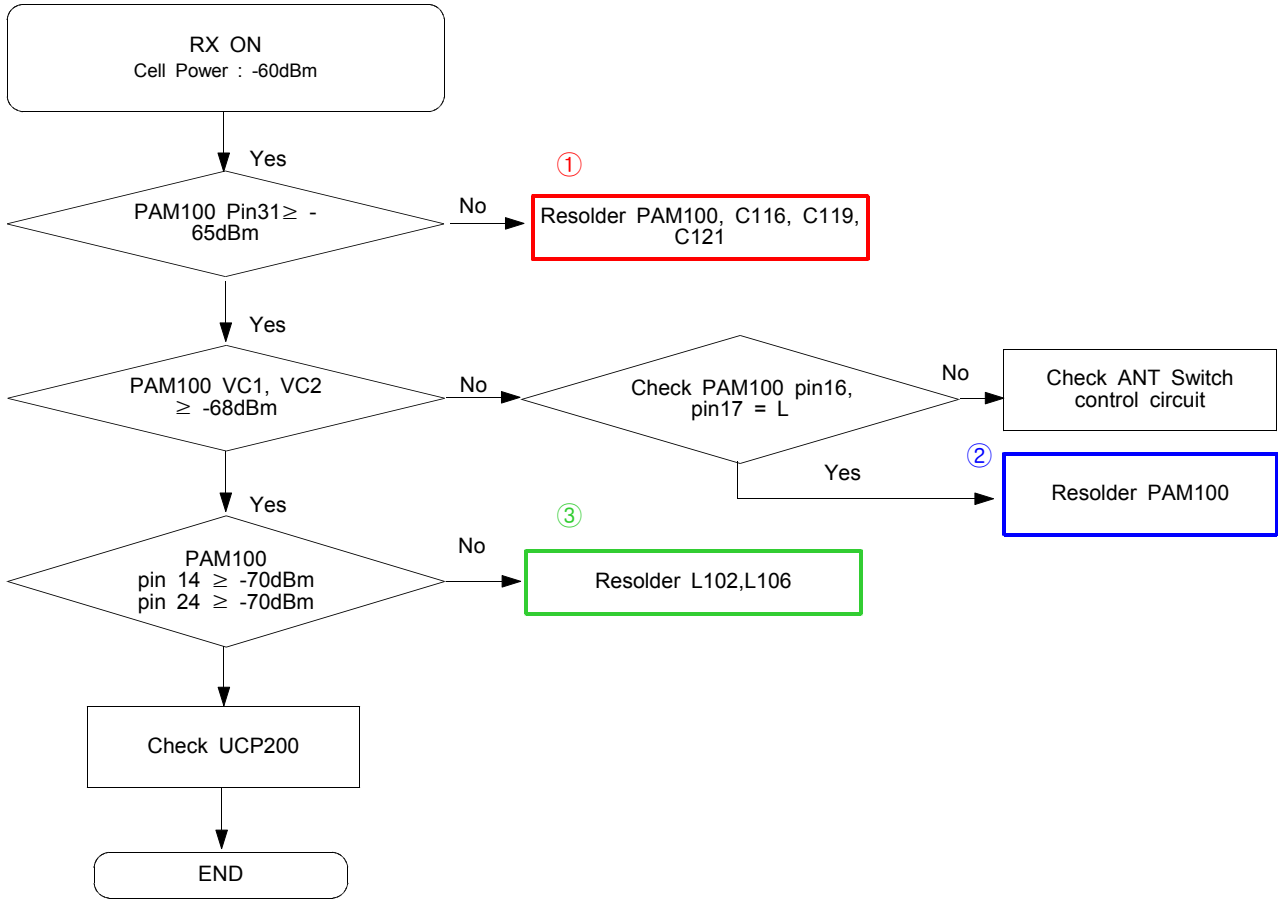

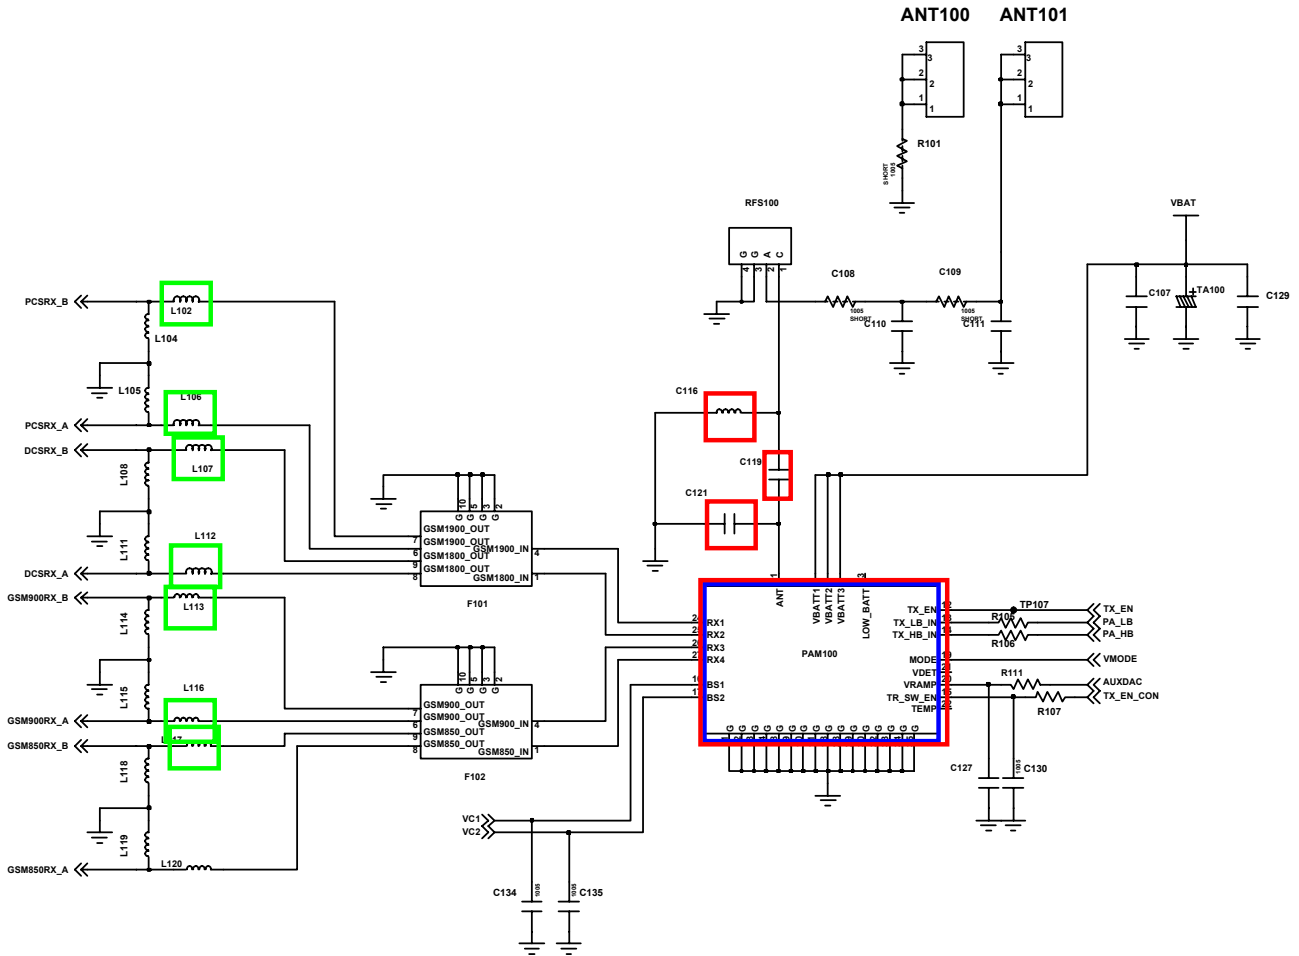


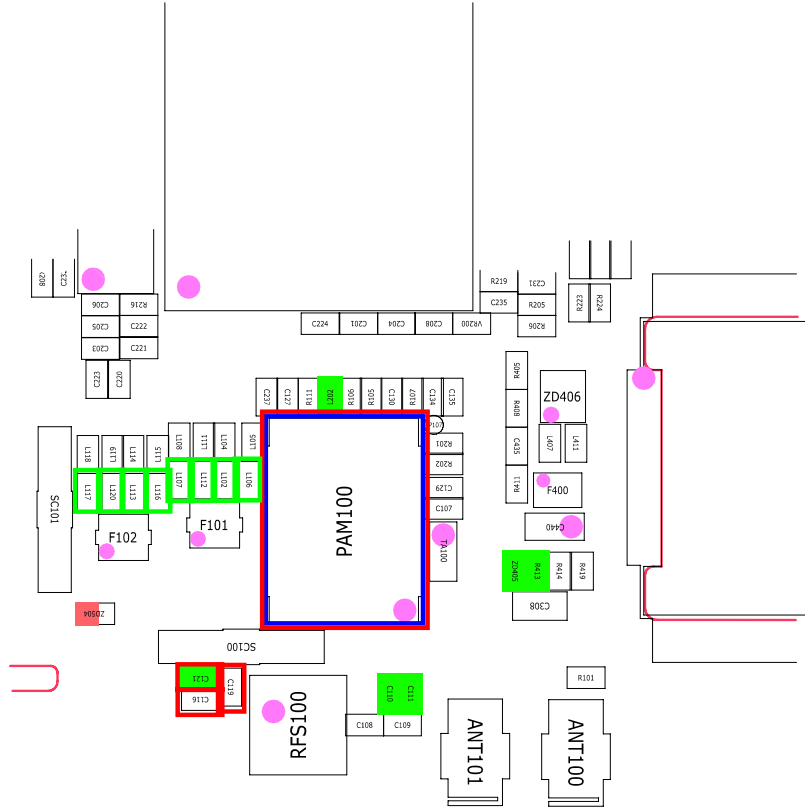


9-13. GSM850 Transmitter

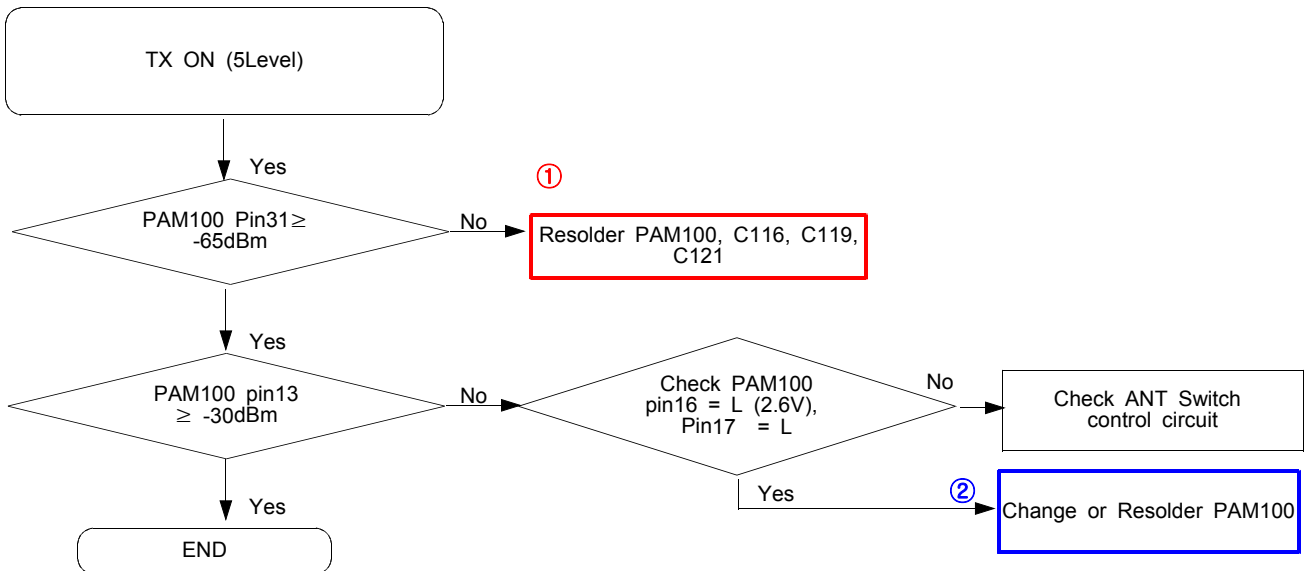


9-14. GSM Transmitter

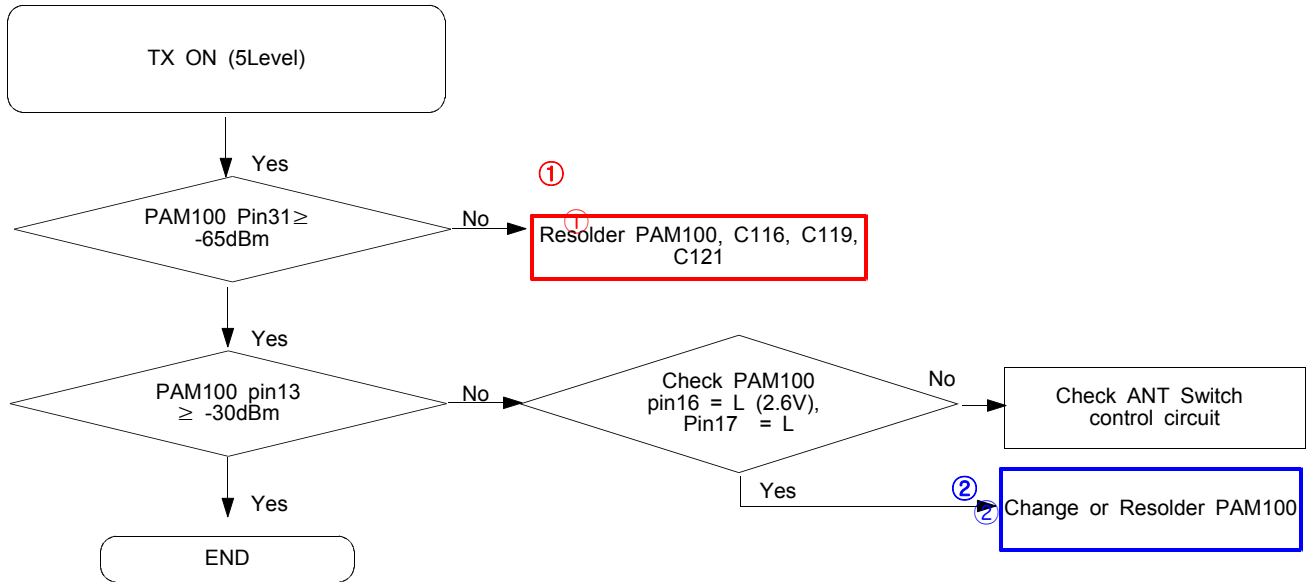



9-15. DCS Transmitter

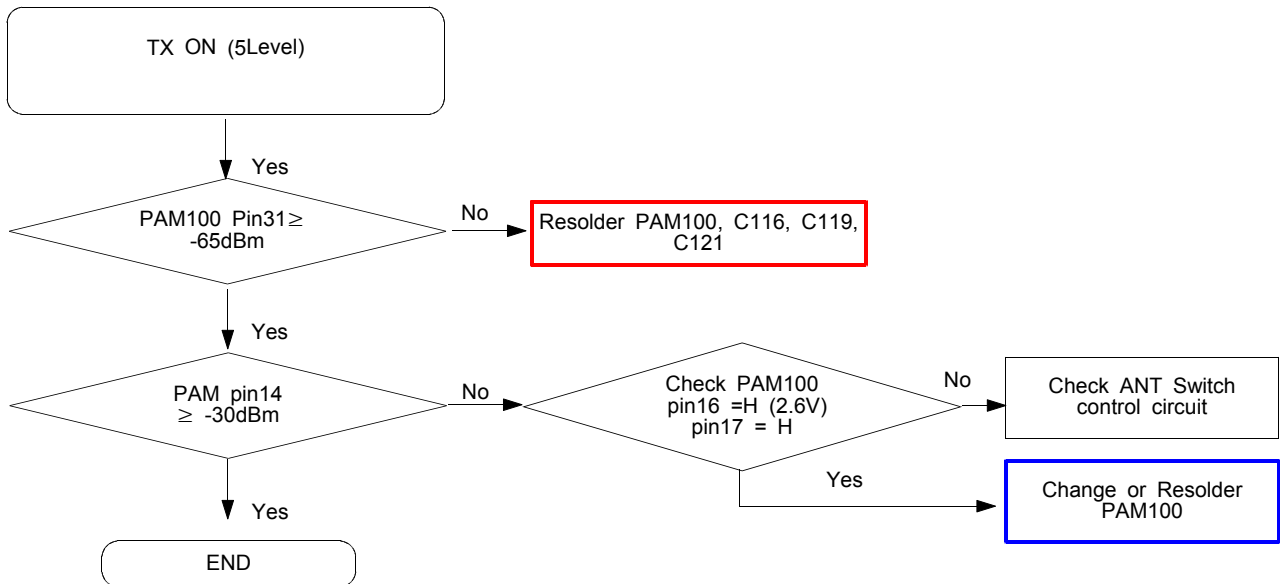


9-16 PCS Transmitter

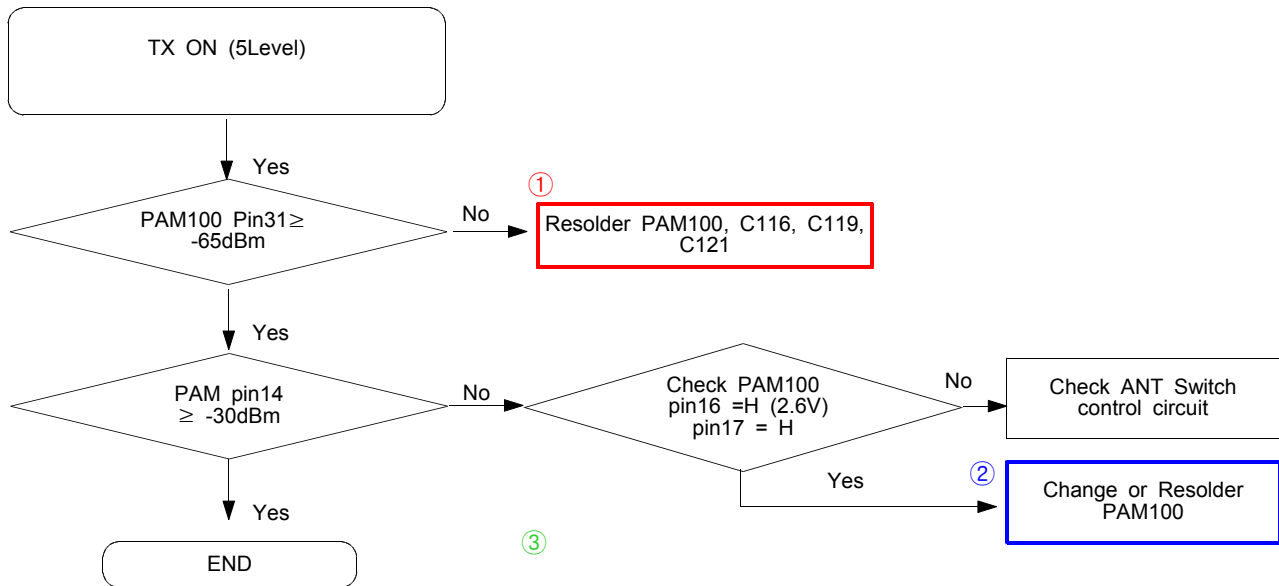


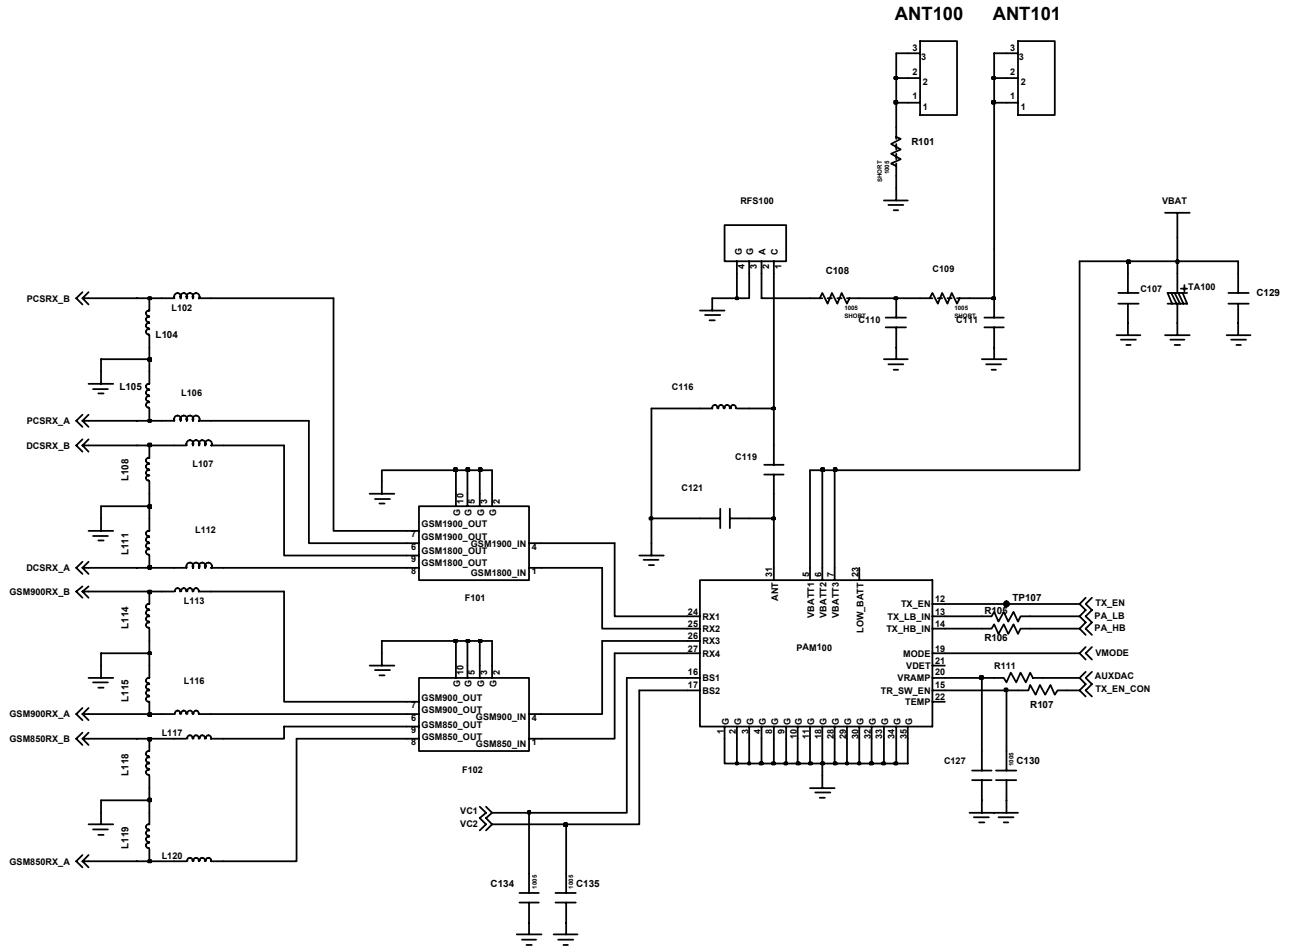

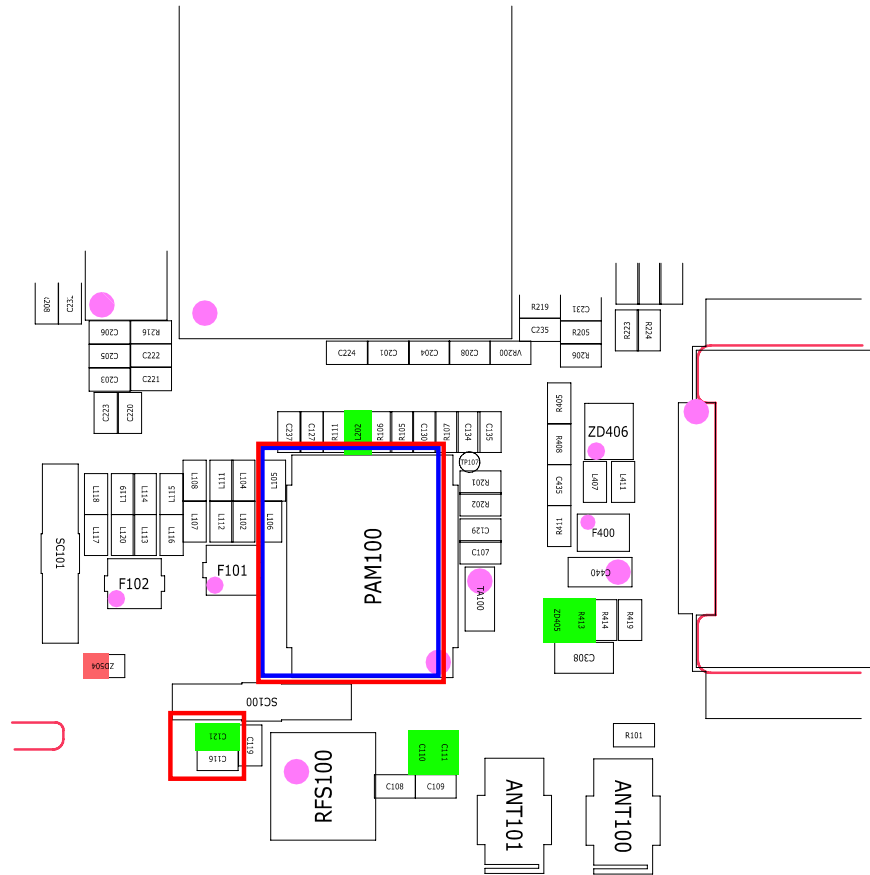


9-17 Bluetooth part

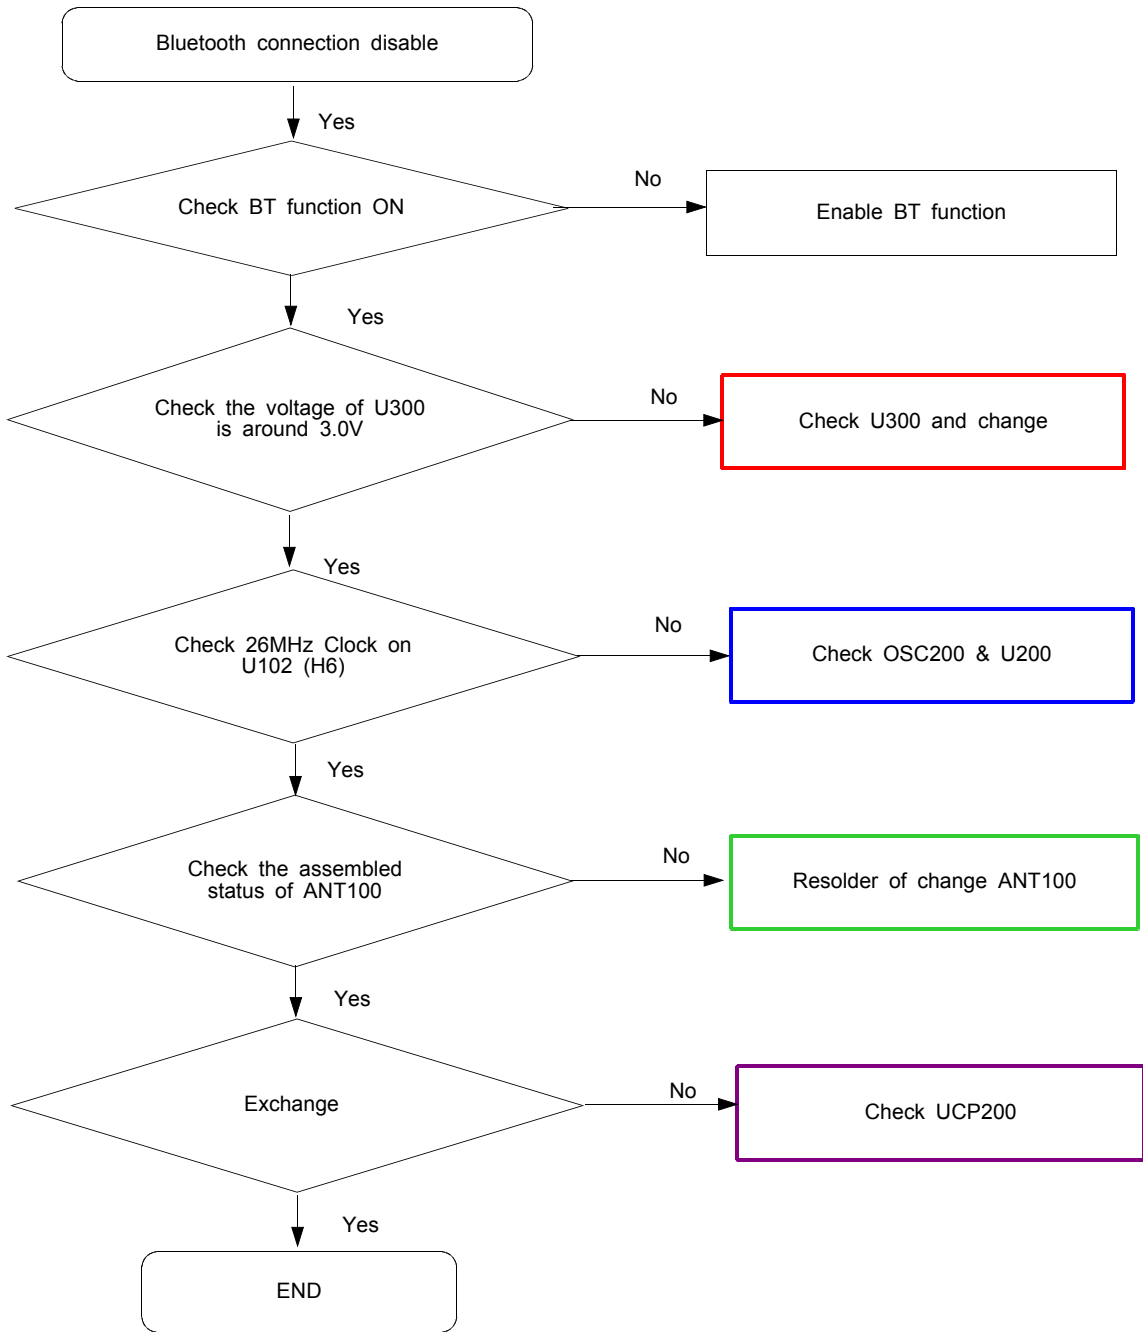

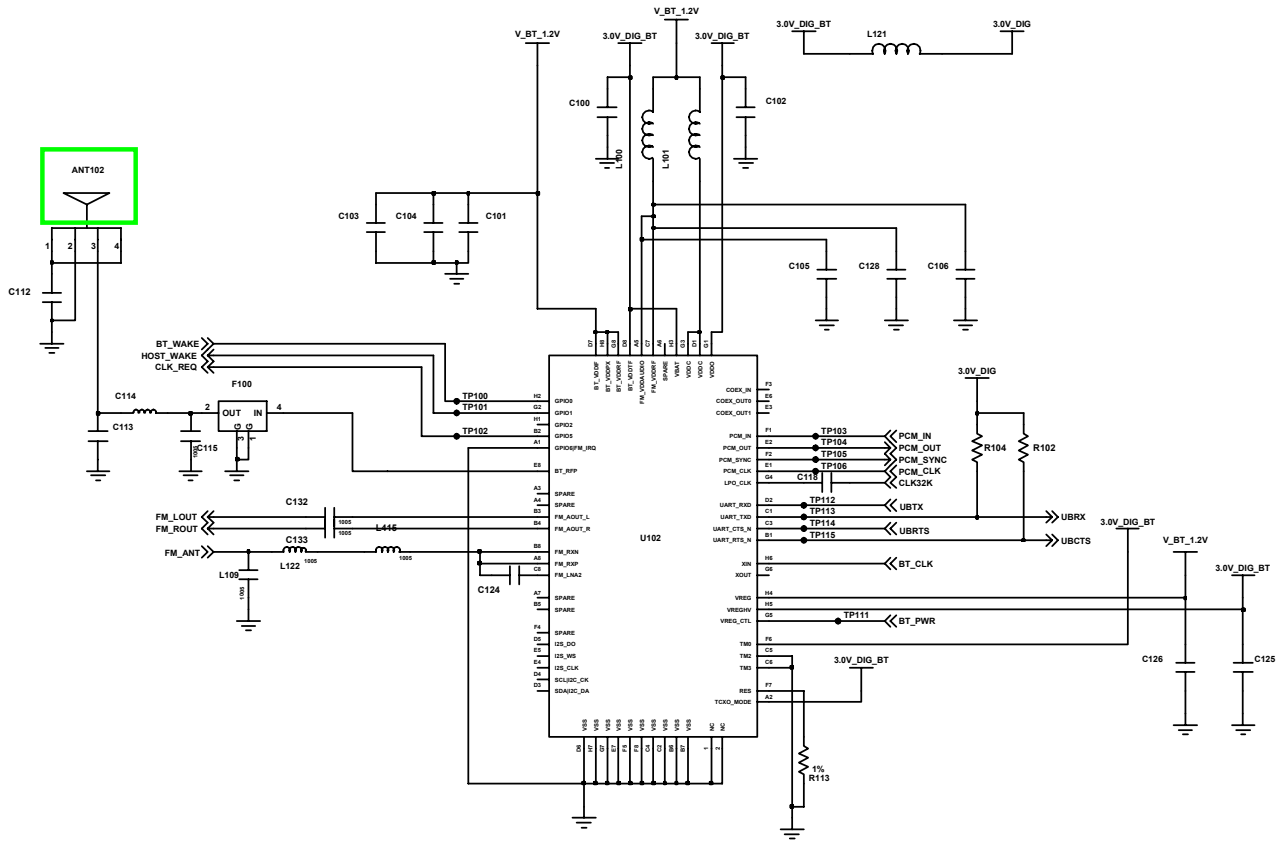

BLUETOOTH + FM RADIO

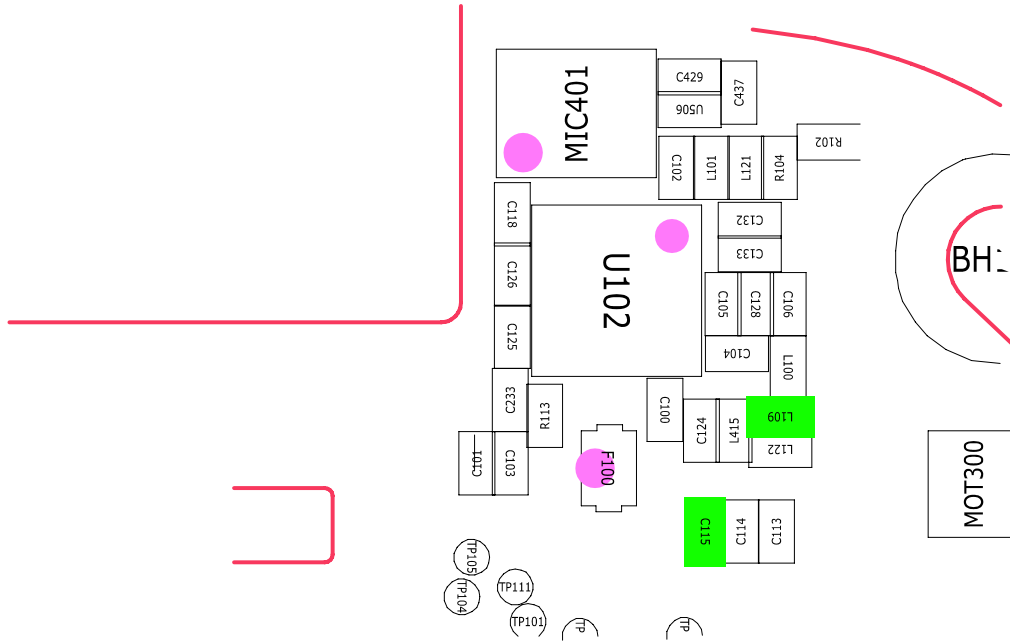

9-18. Radio part

