






10. Flow Chart of Troubleshooting

10-1. Baseband


10-1-1. Power ON

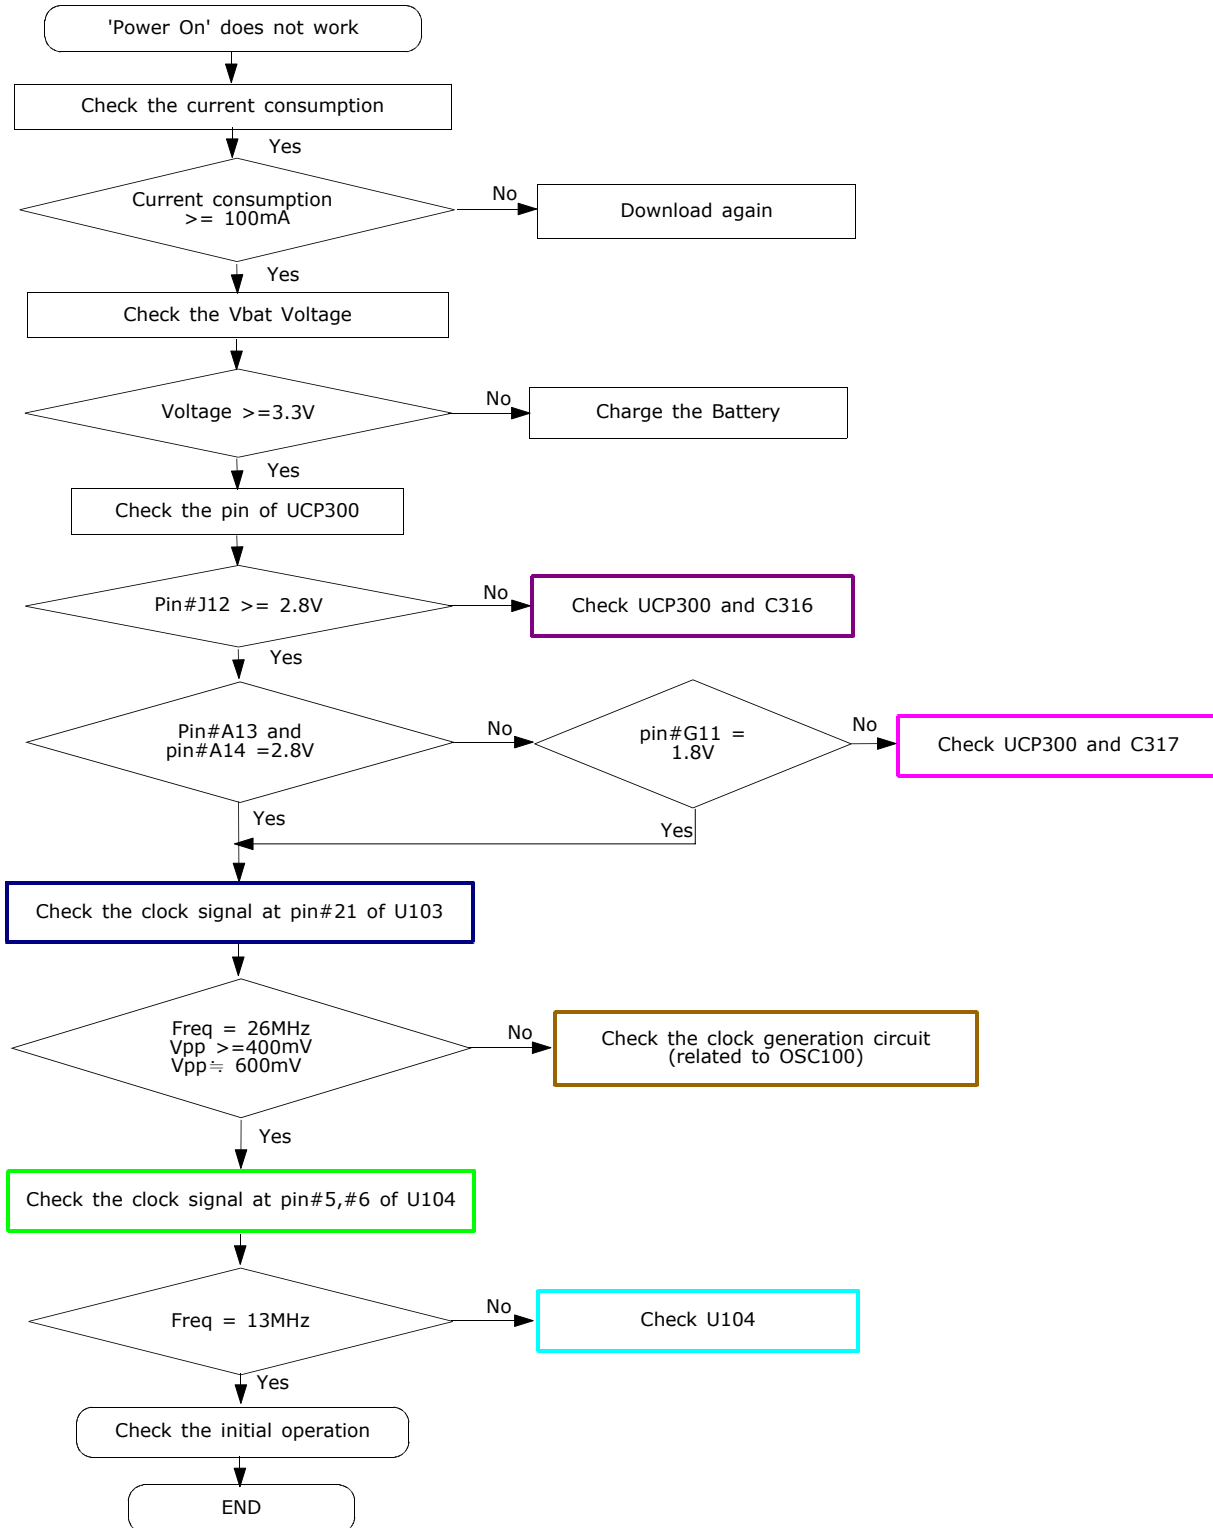



Flow Chart of Troubleshooting

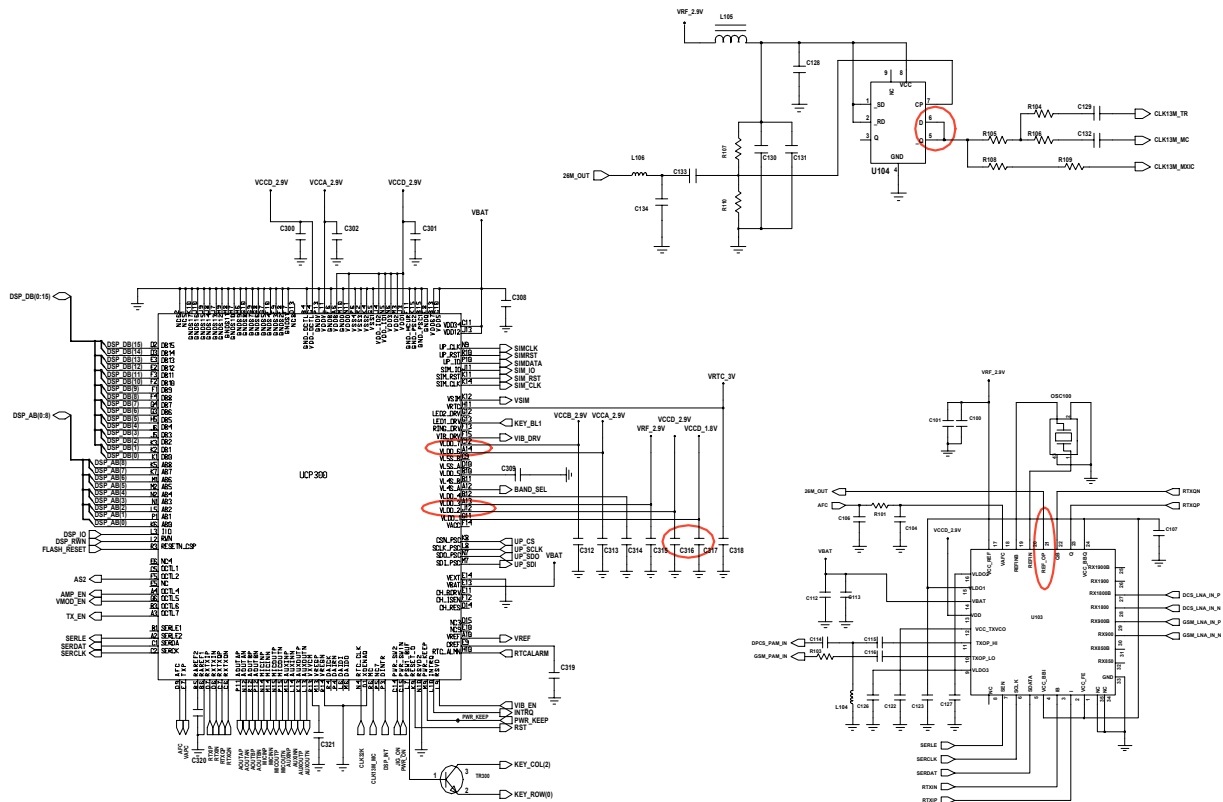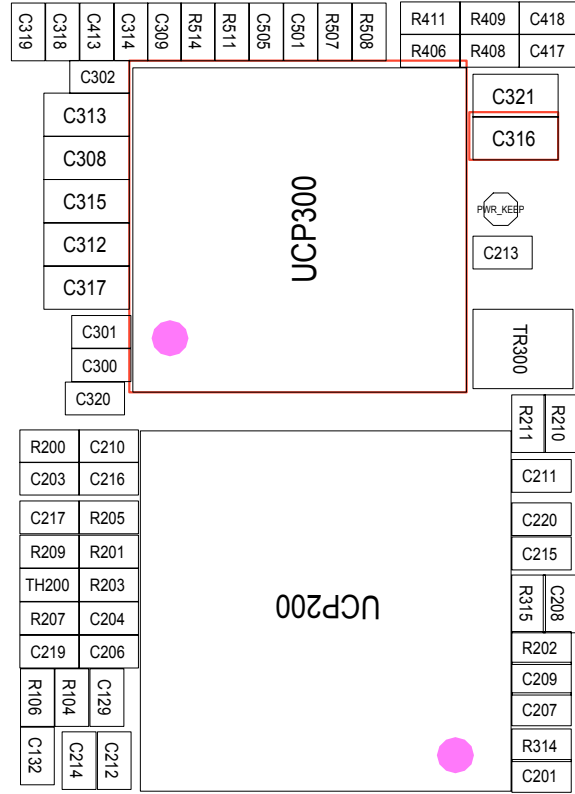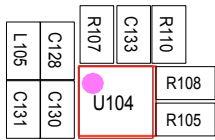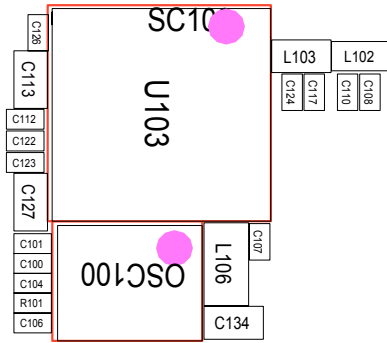


10-1-2. System Initial

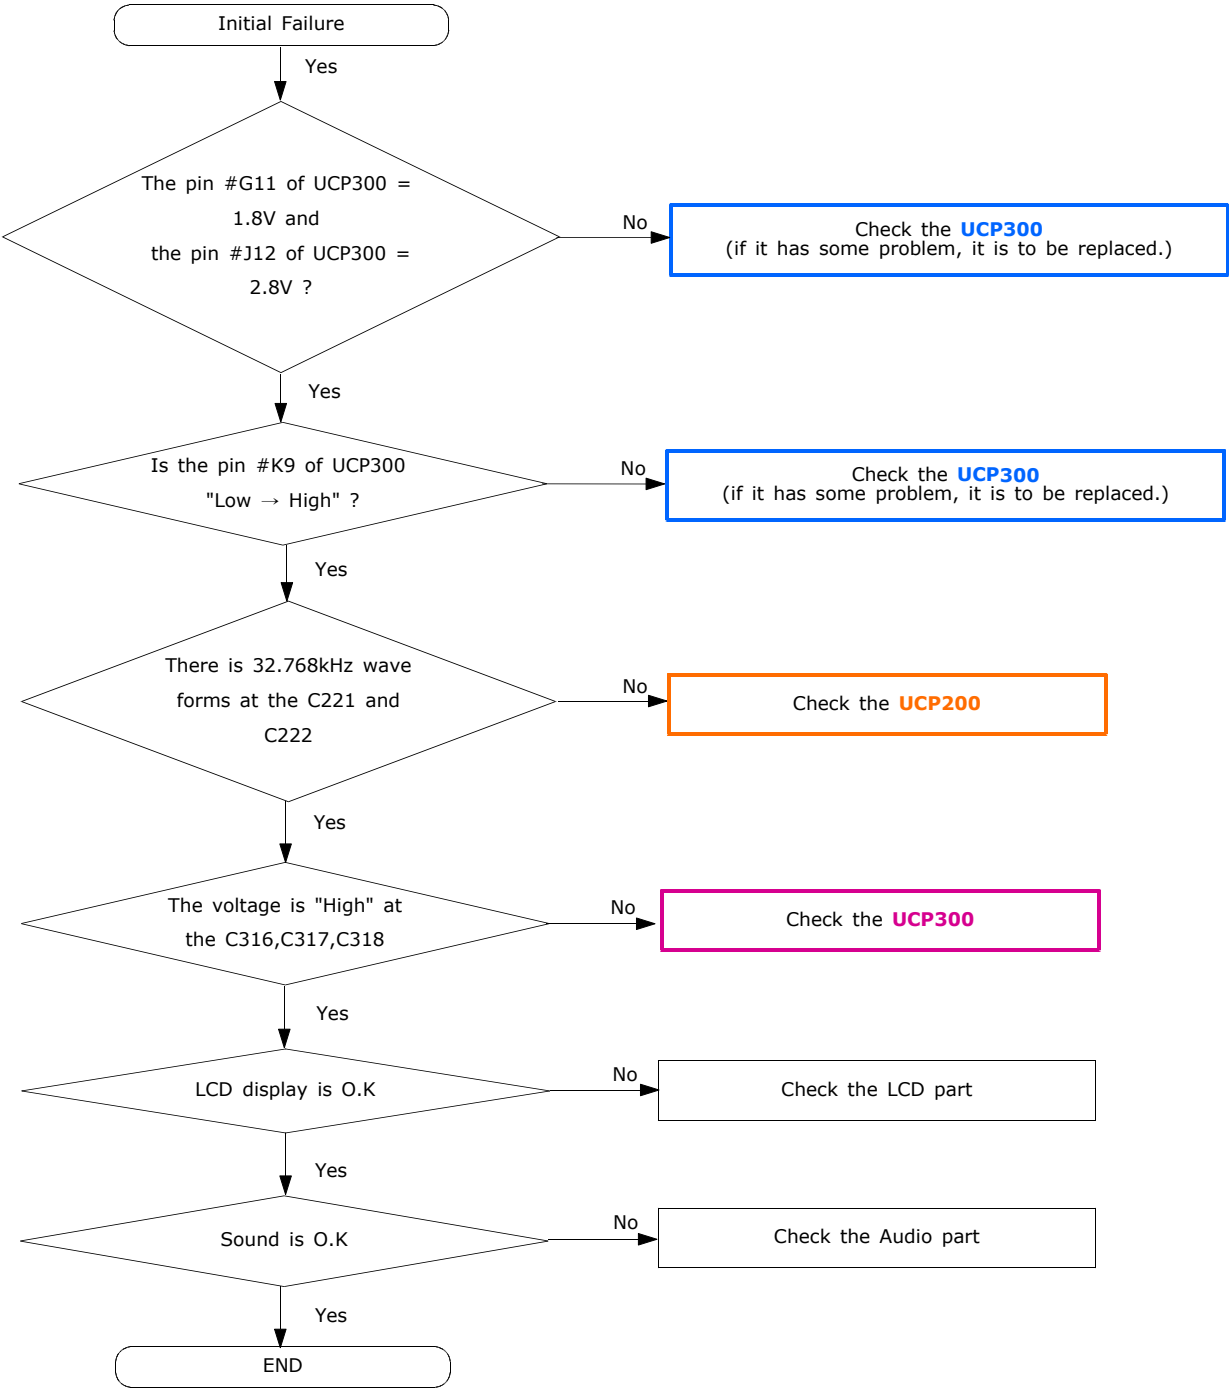

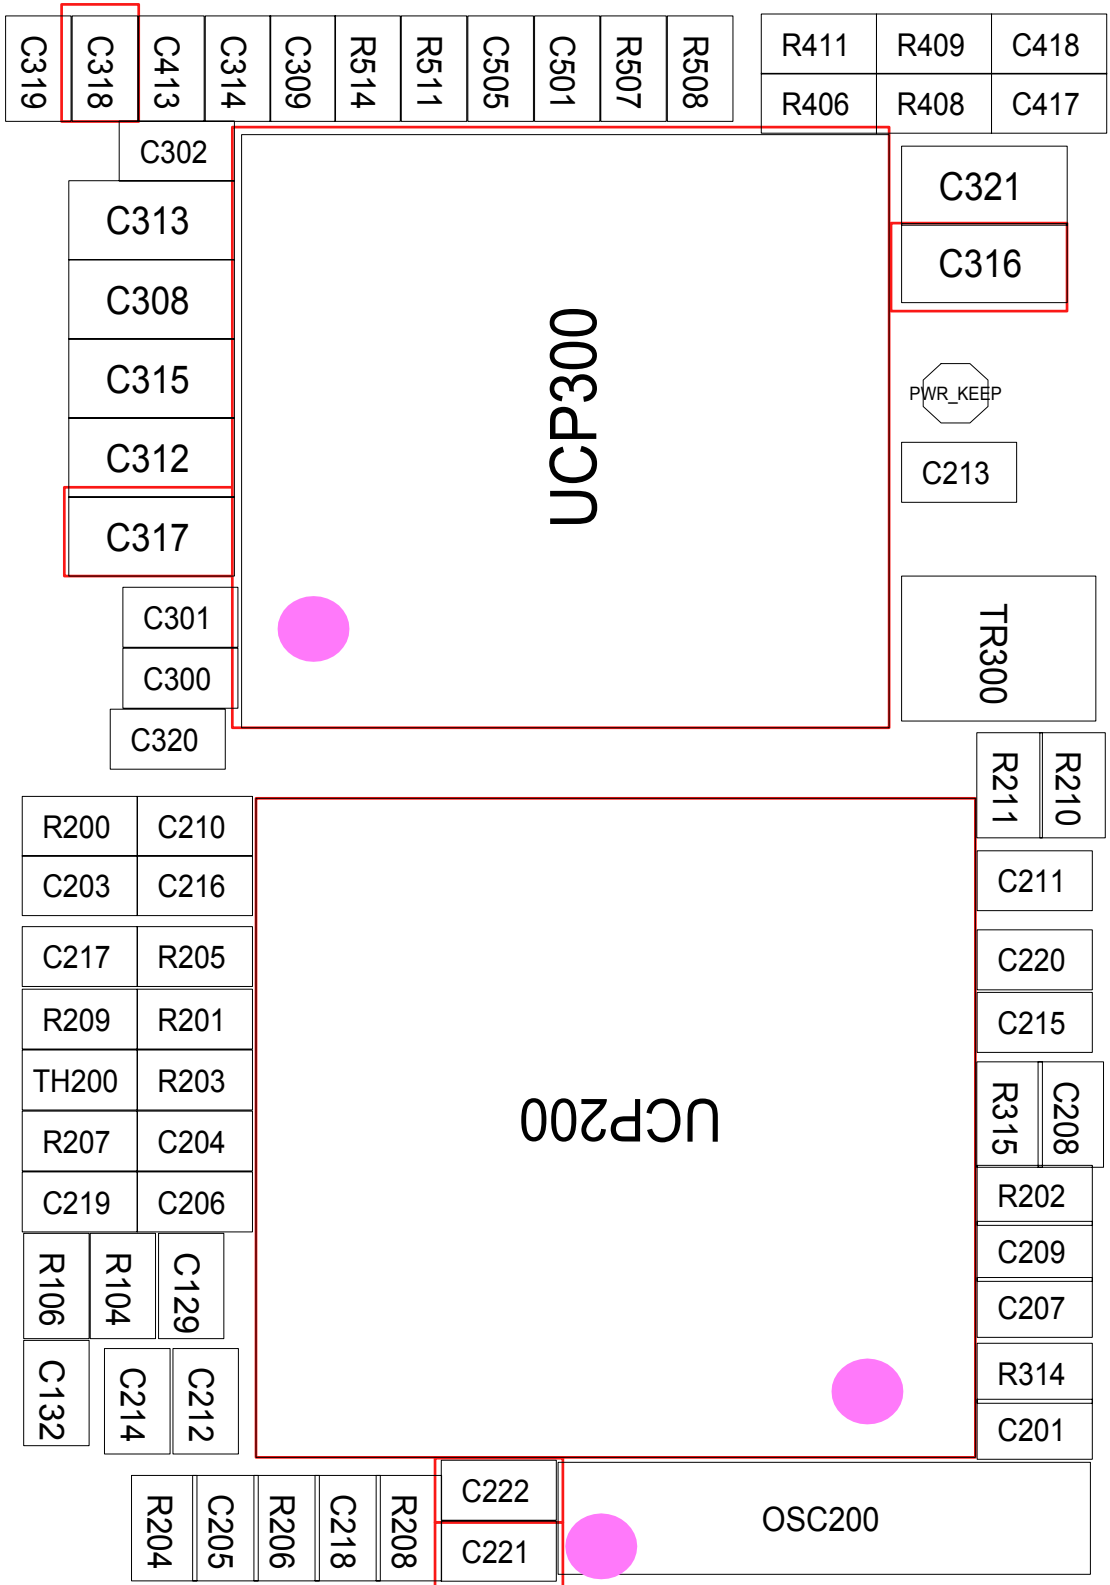


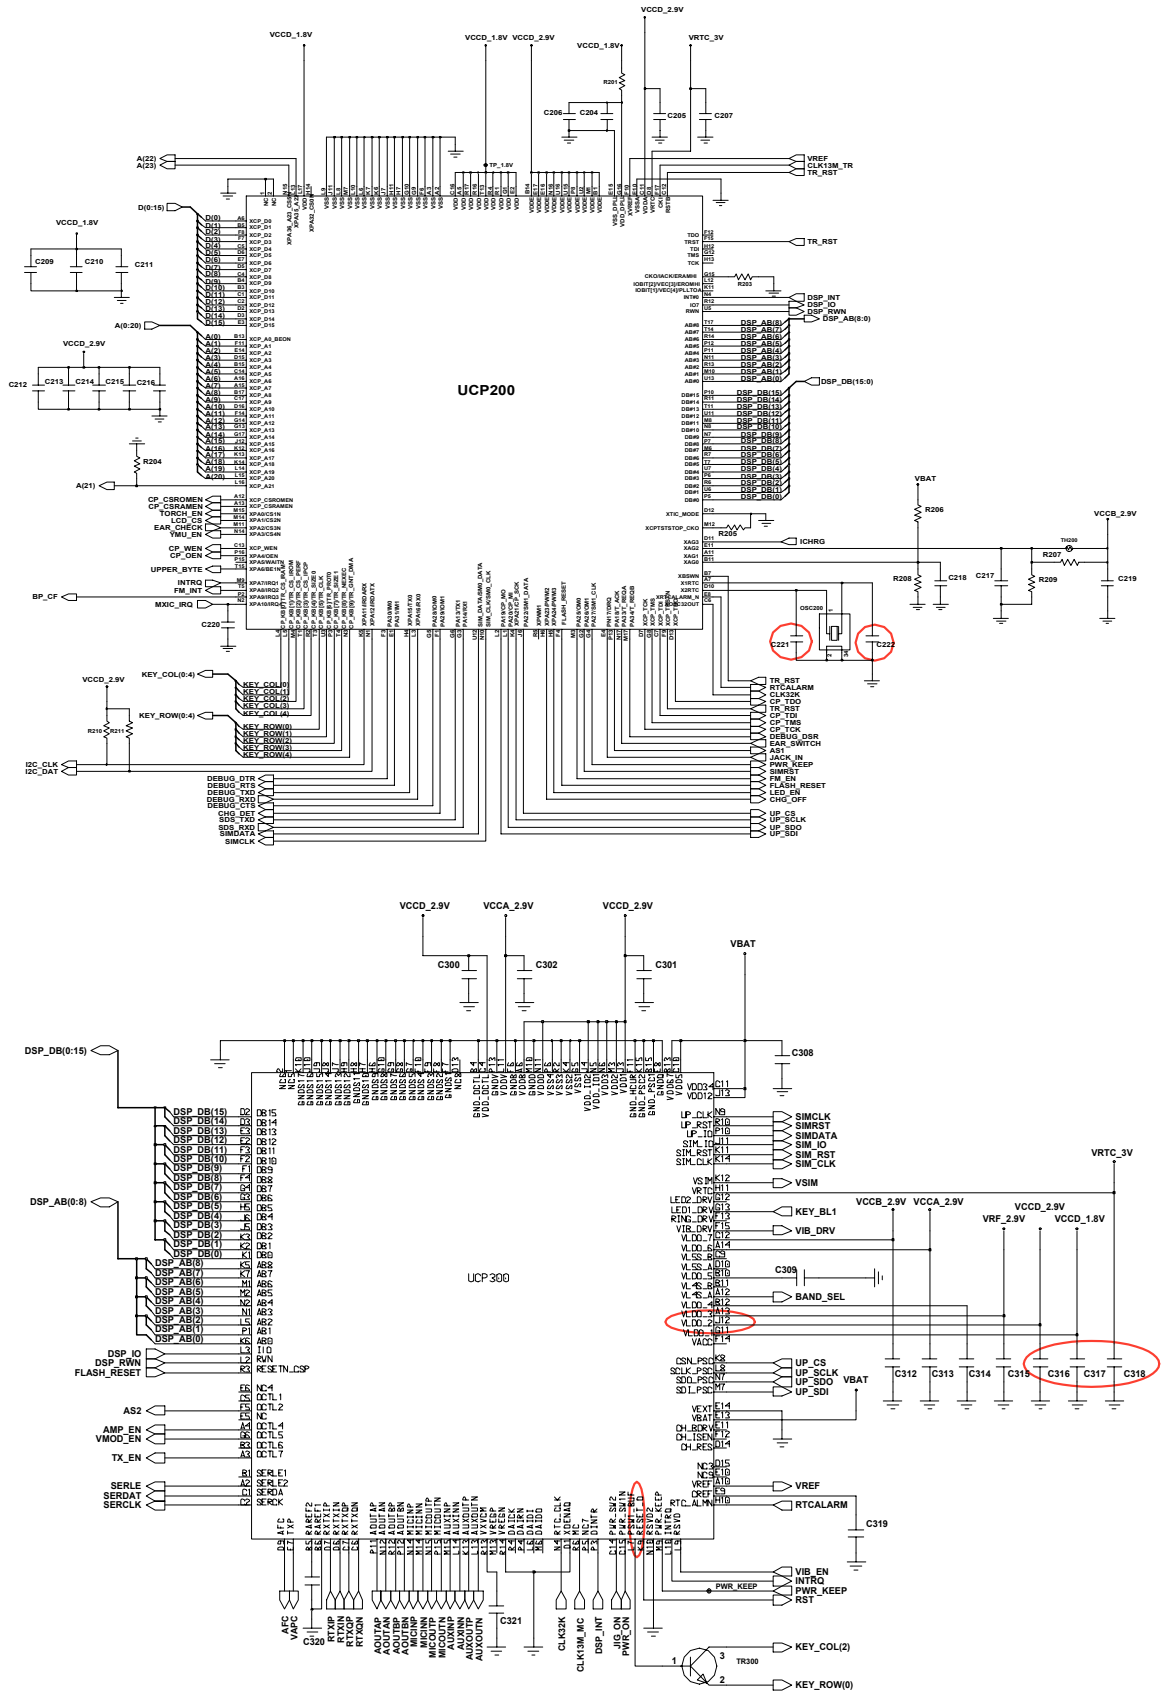



10-1-3. Sim Part



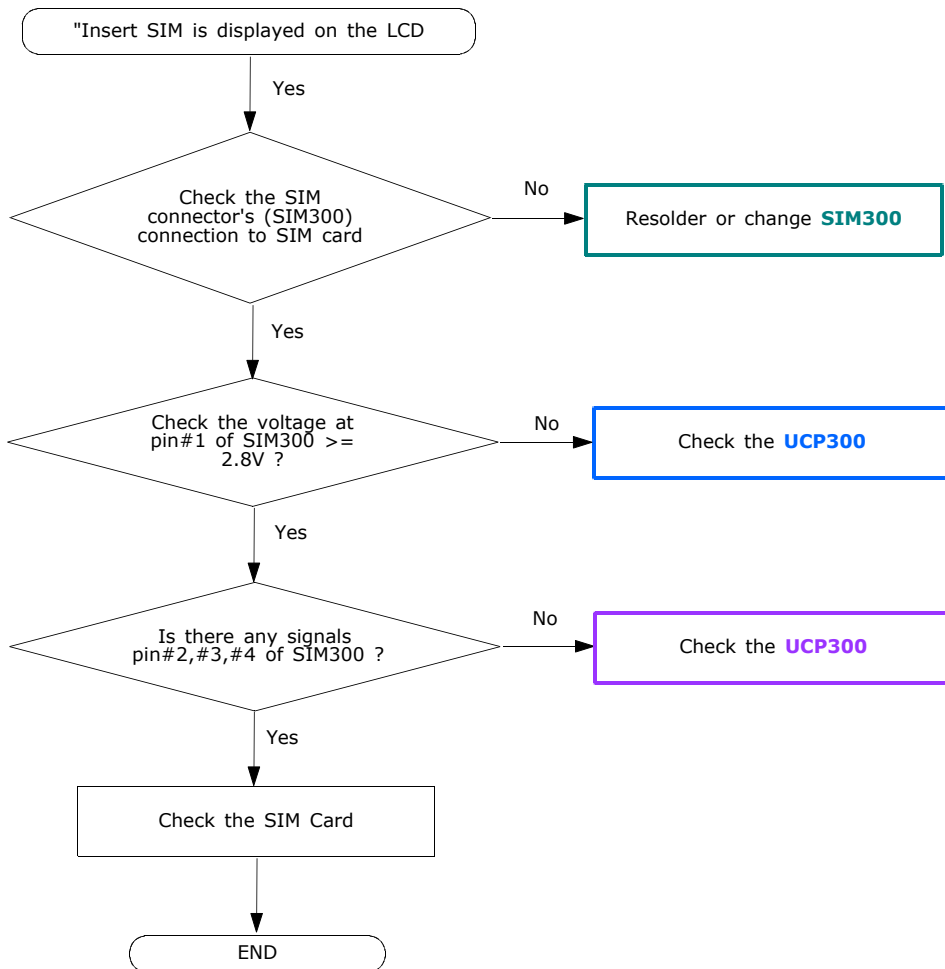





Flow Chart of Troubleshooting

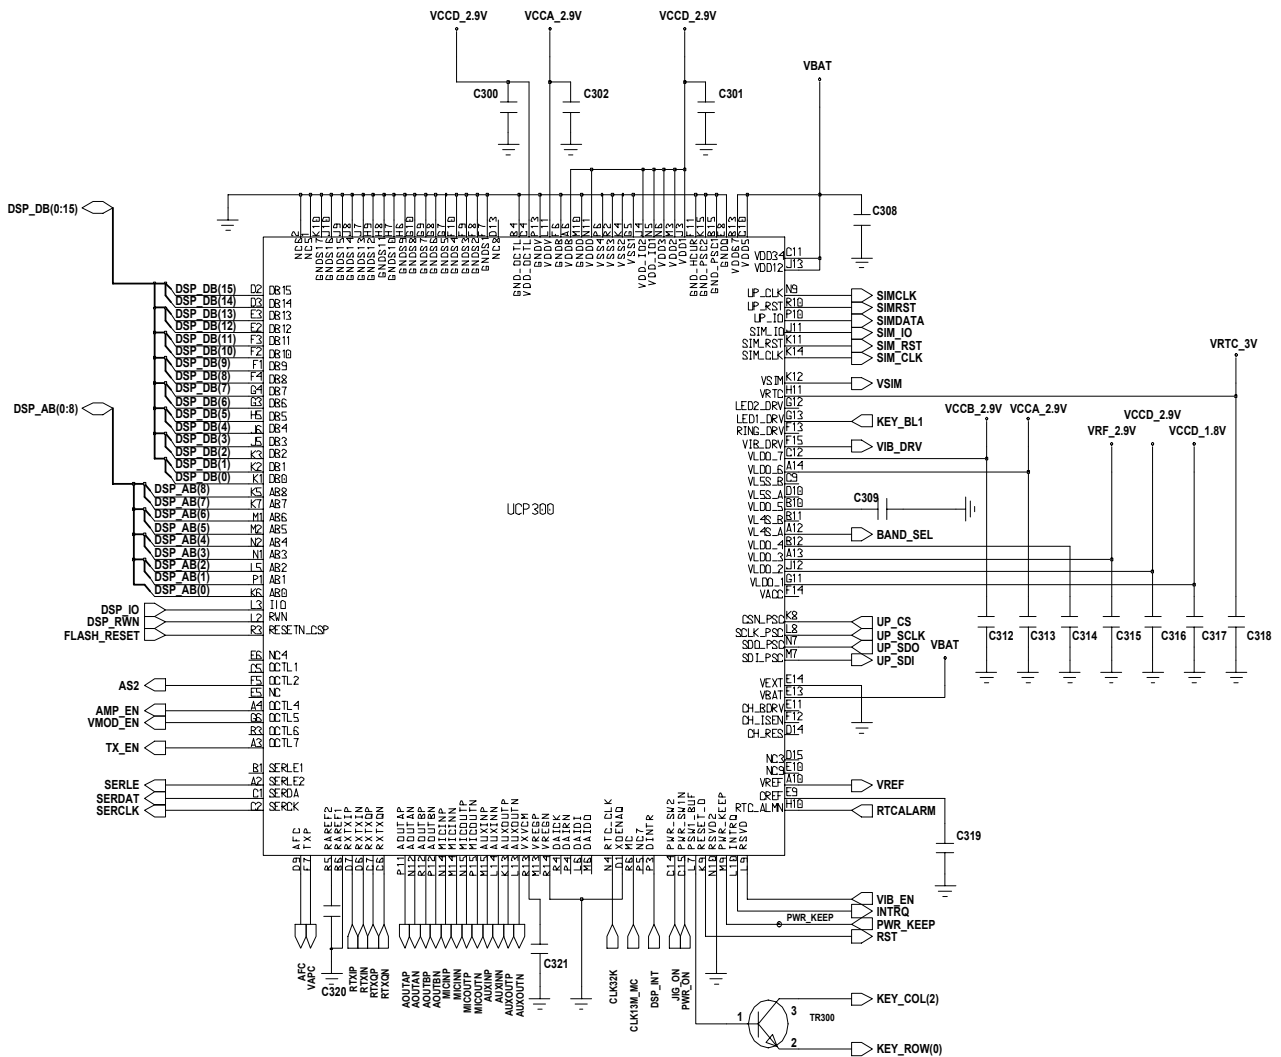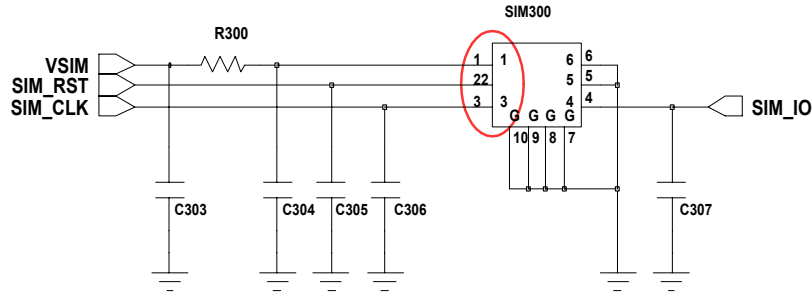

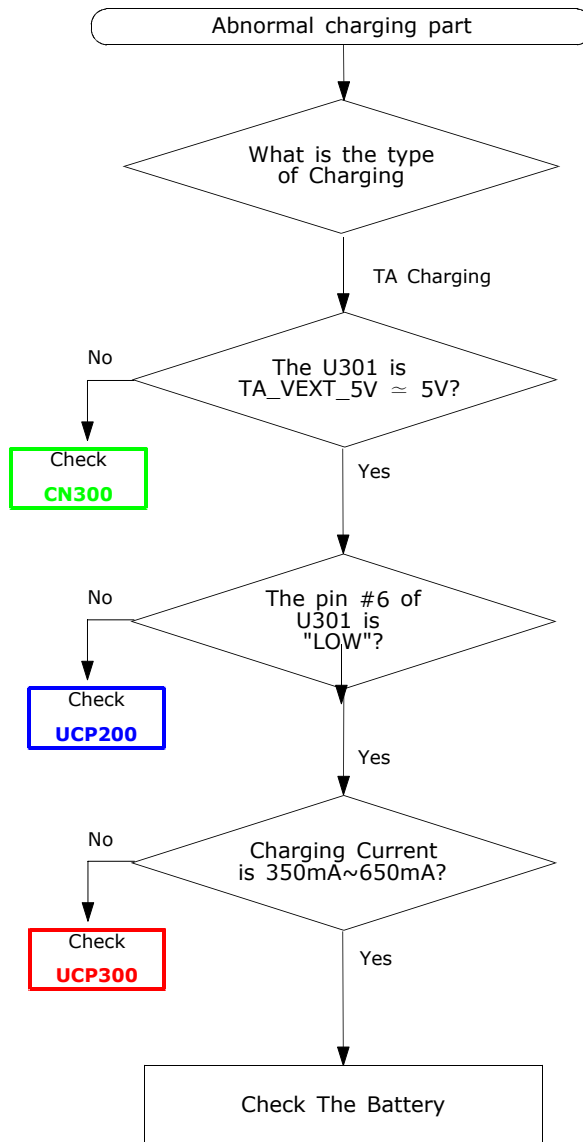
10-1-4. Charging Part

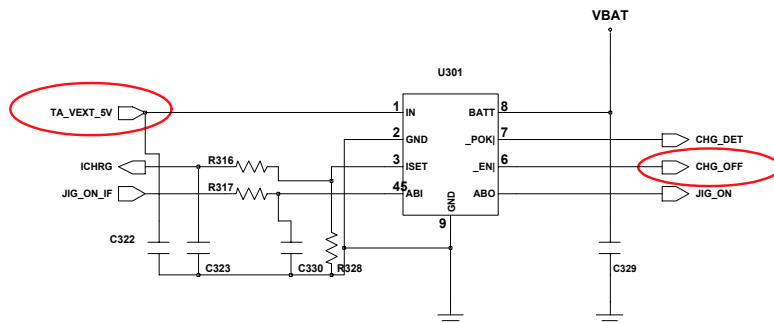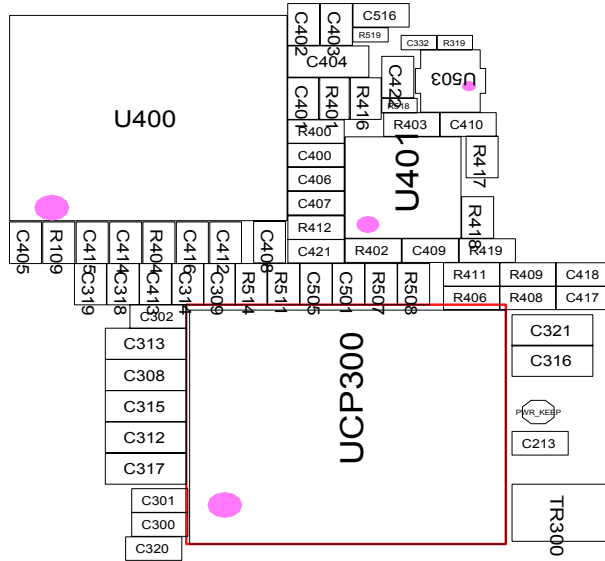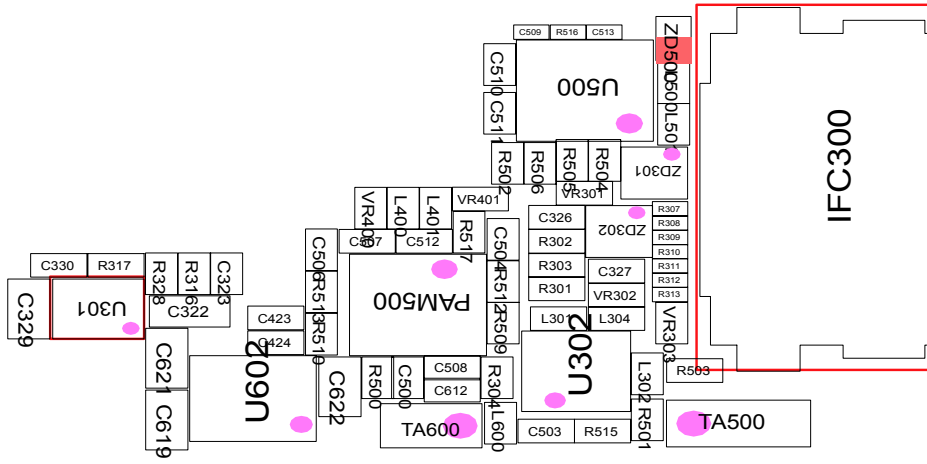


10-1-5. Microphone Part

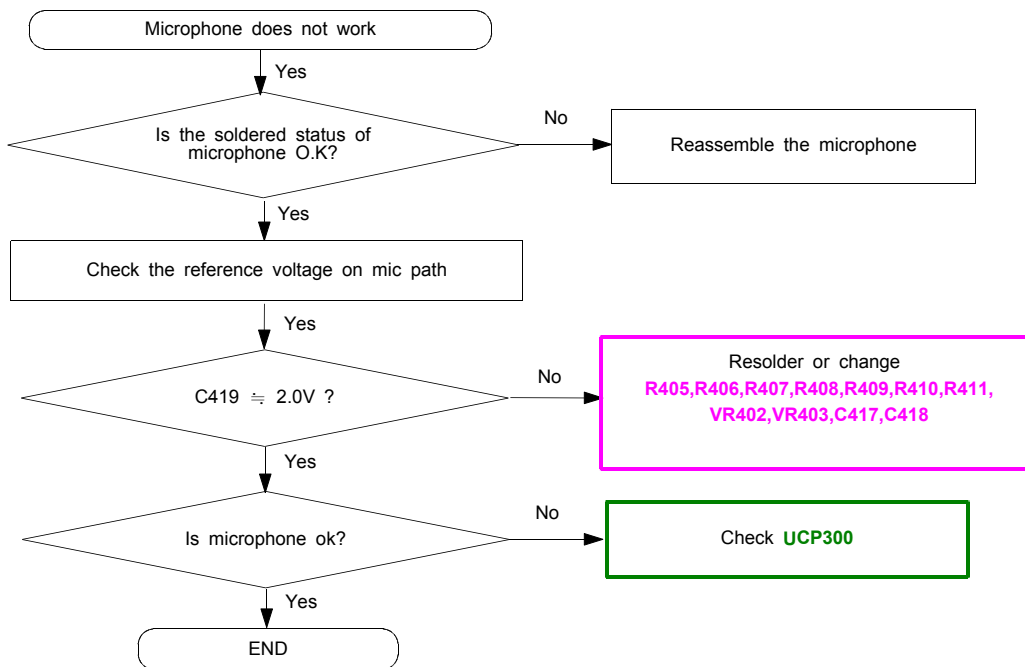


10-1-6. Receiver Part

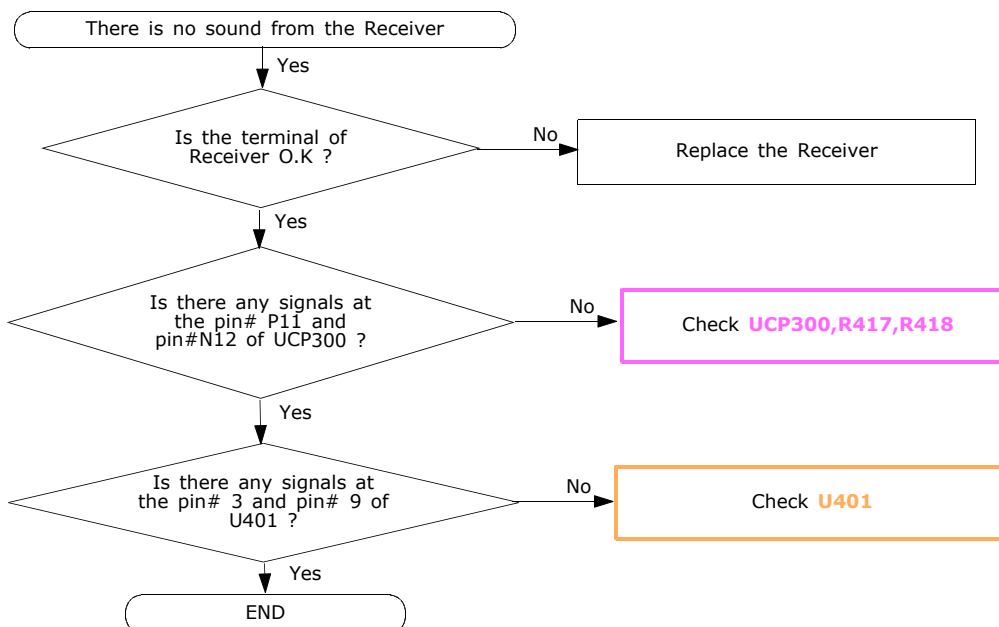


10-1-7. Speaker Part

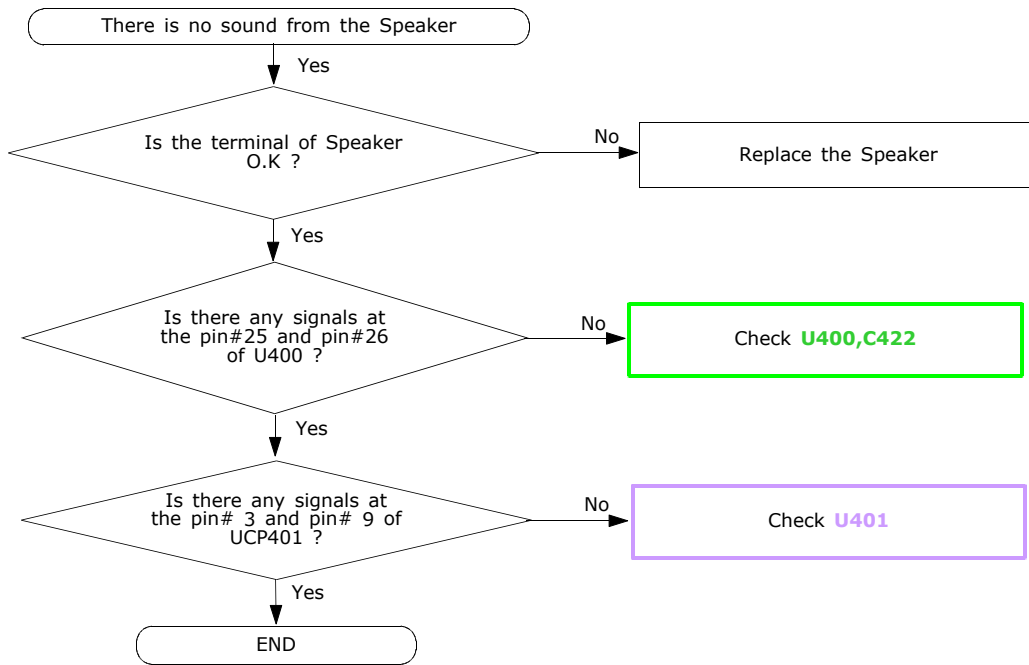


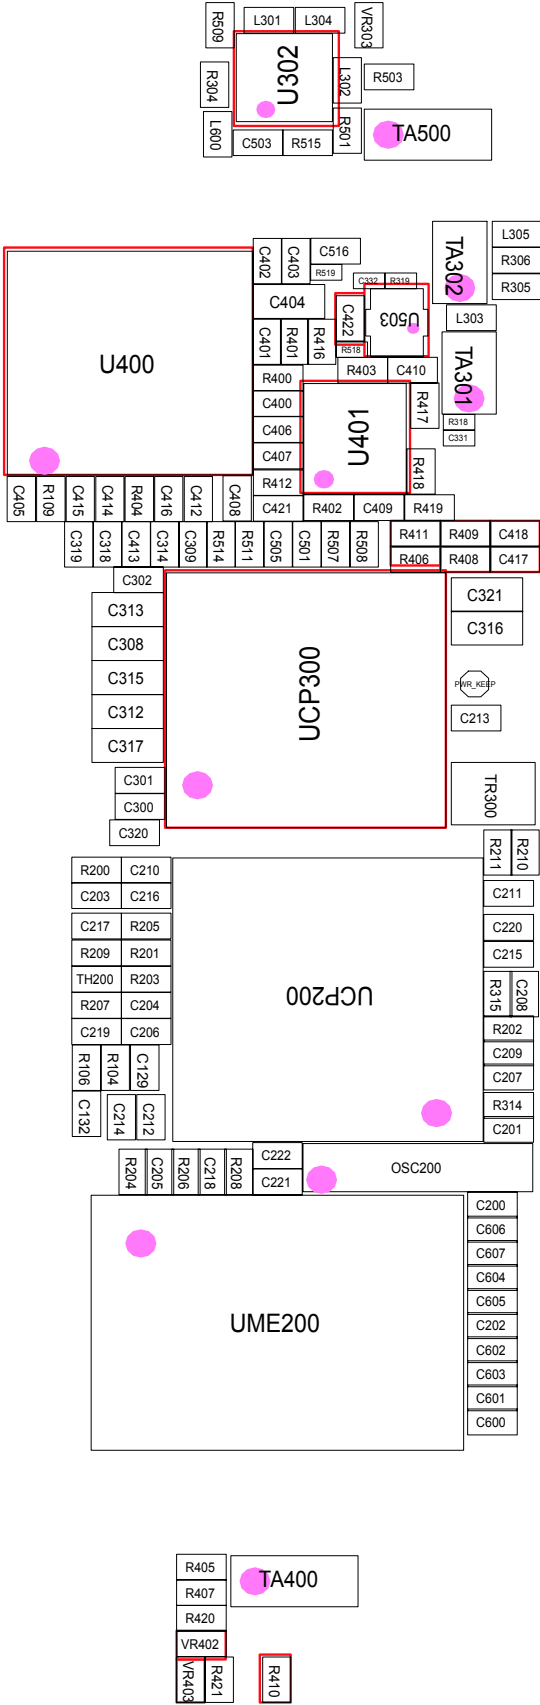






Flow Chart of Troubleshooting

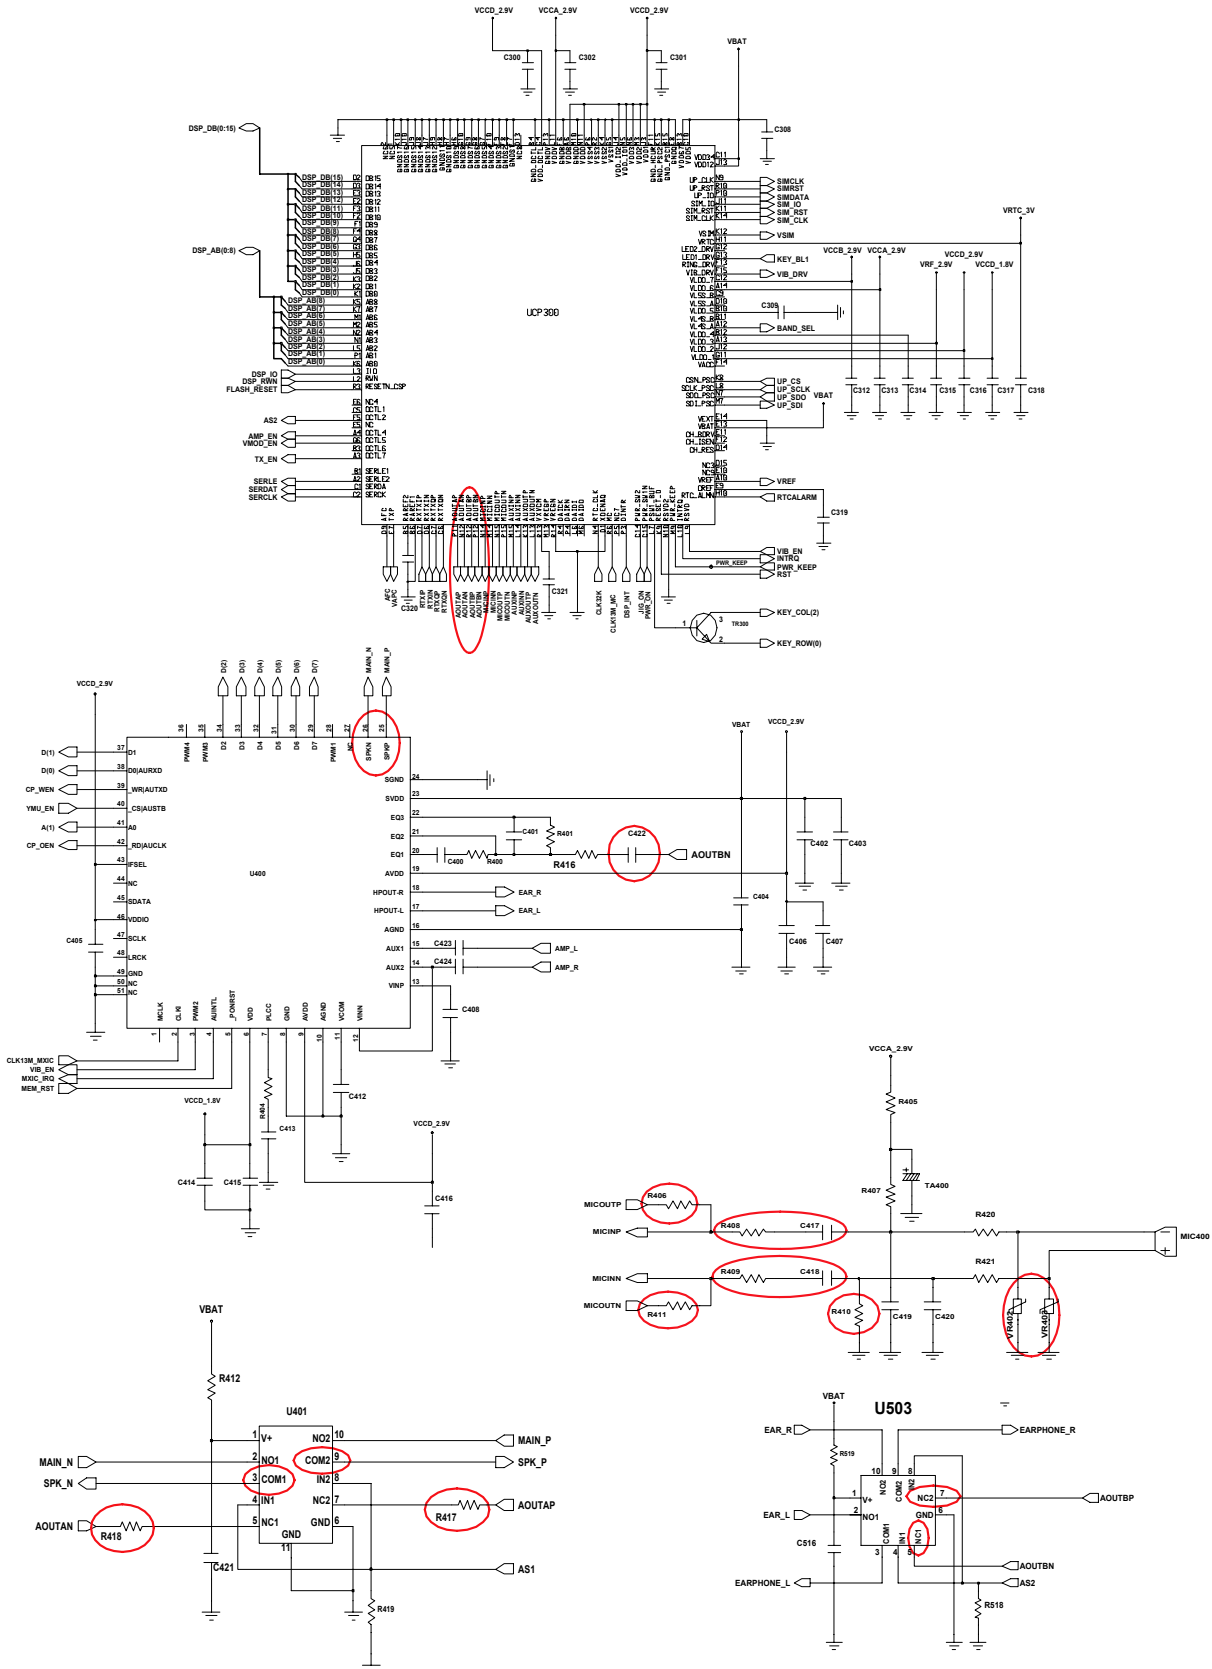


10-1-8. Radio Part

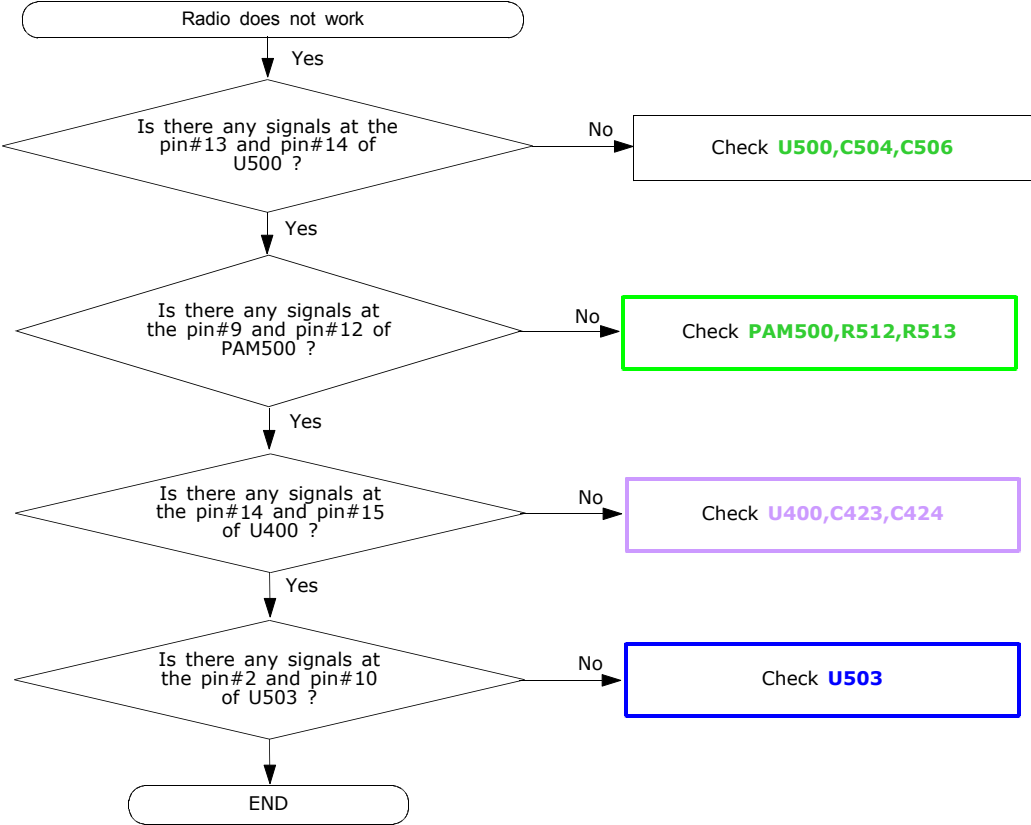

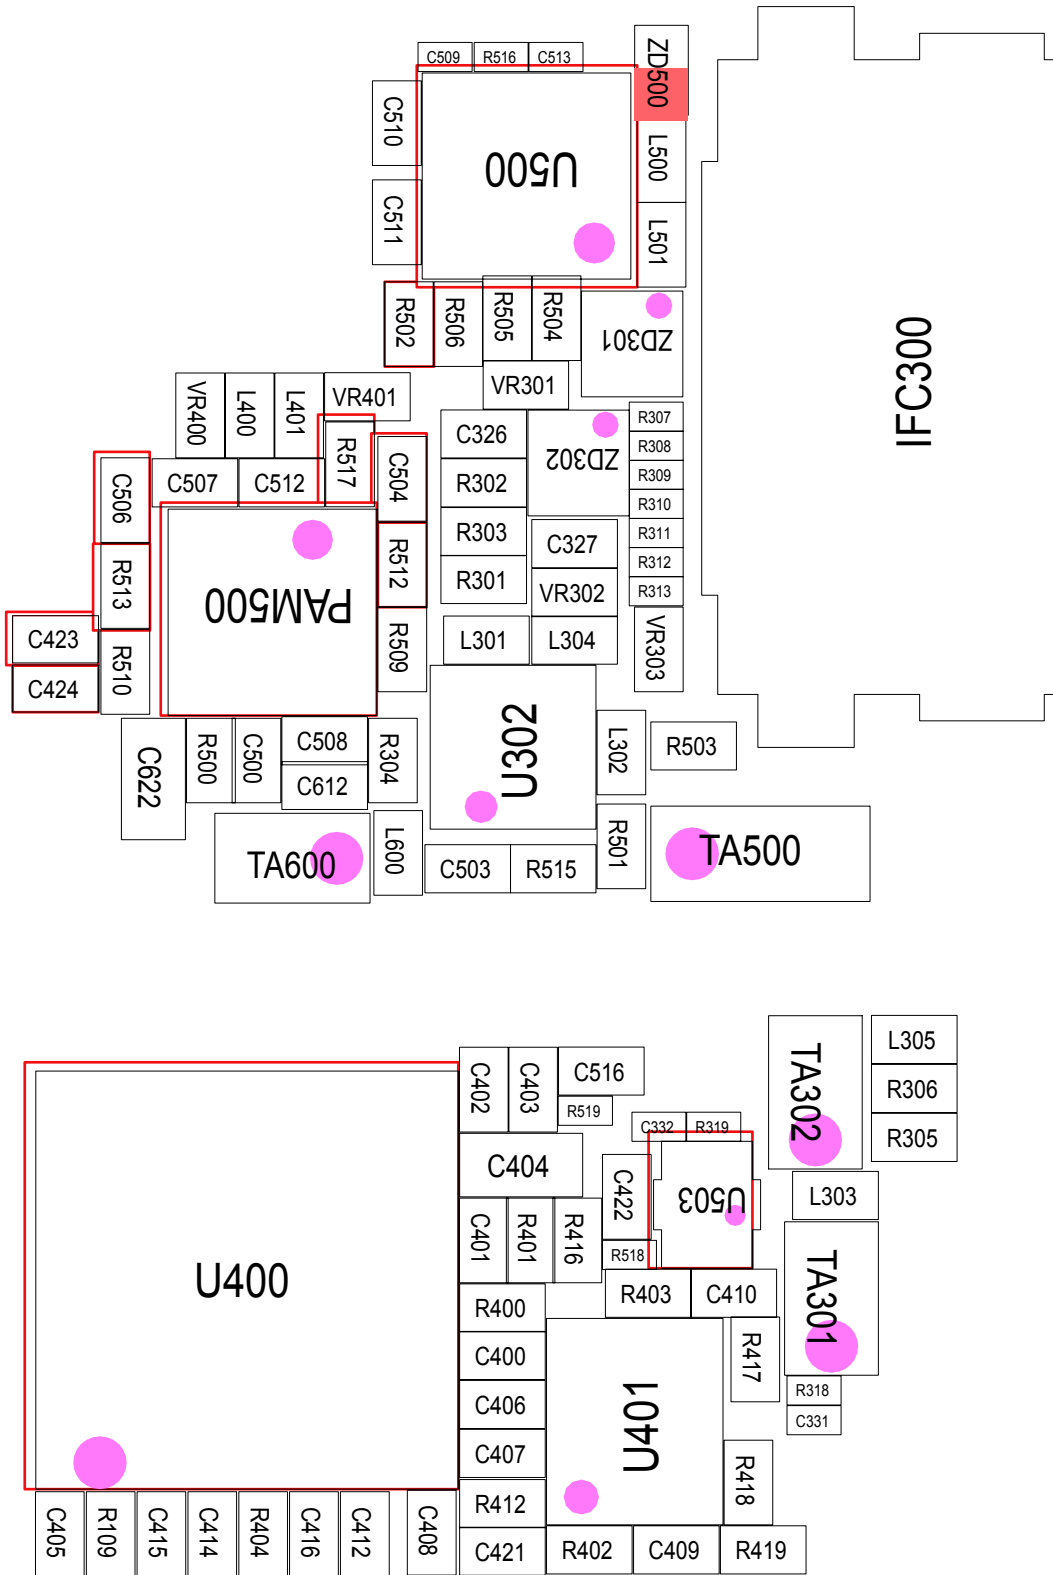


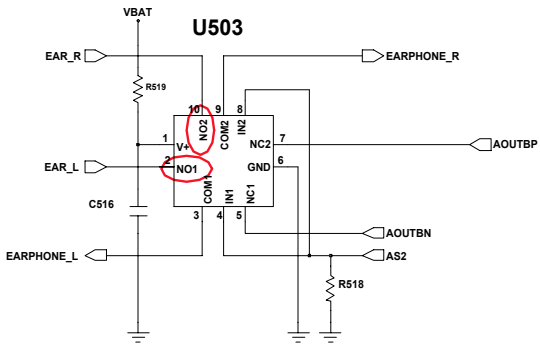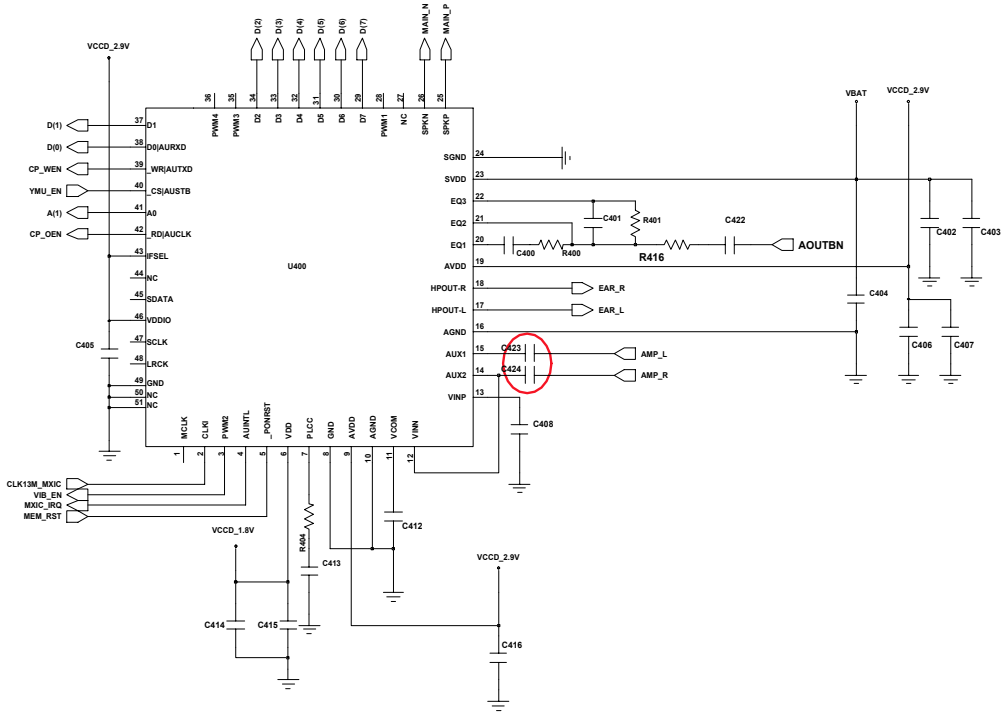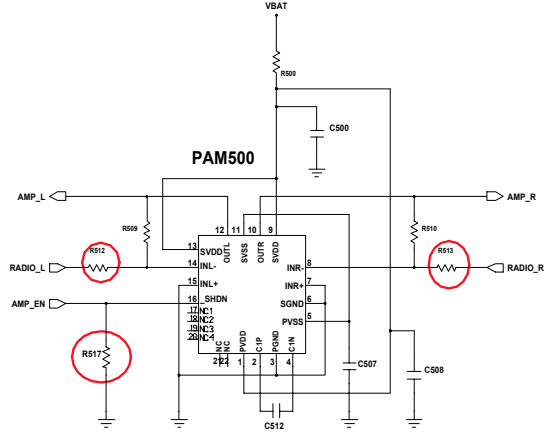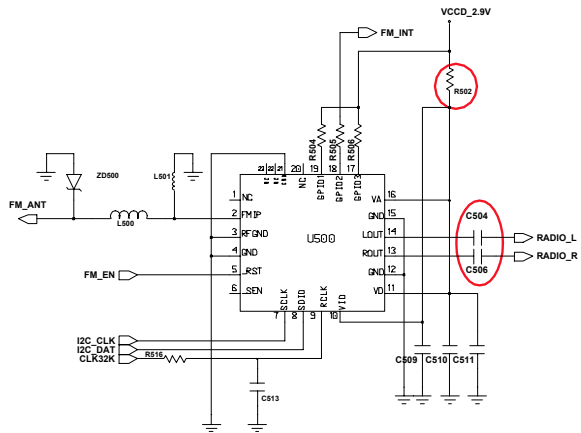


10-1-9. LCD

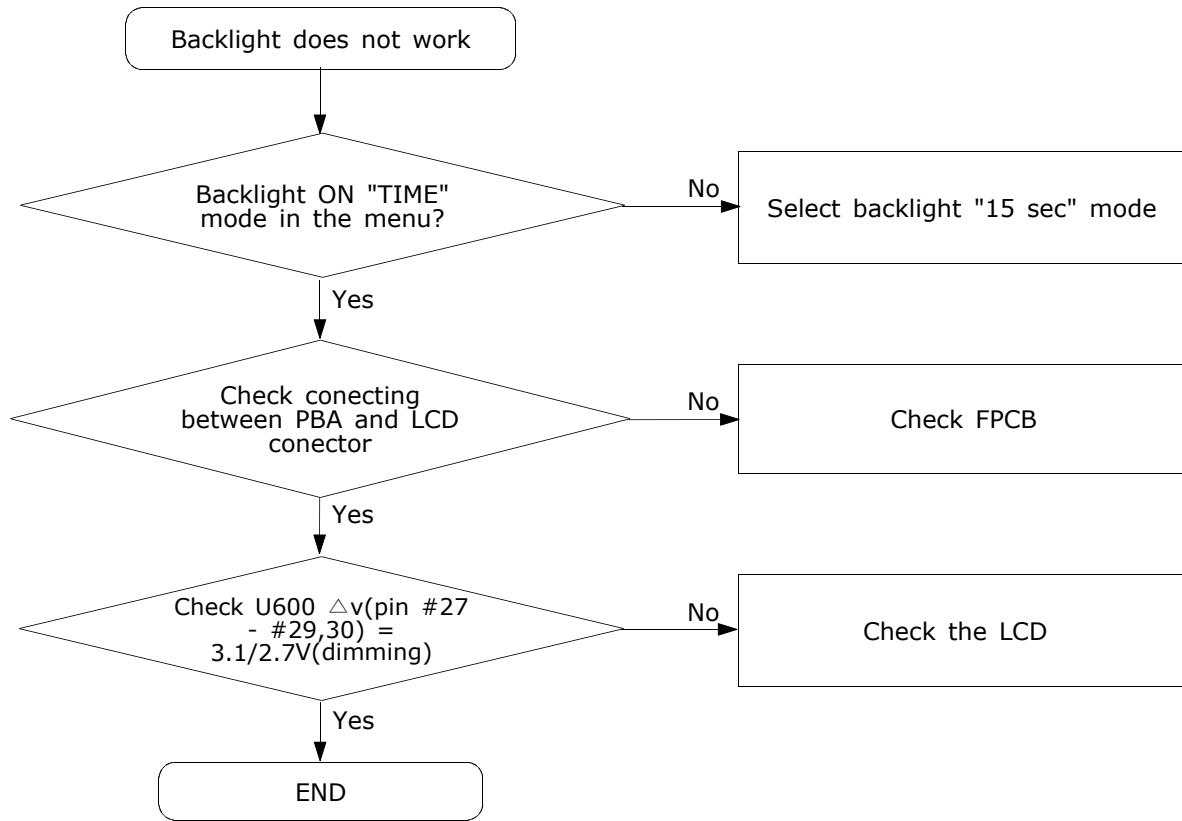


10-2.RF
10-2-1. EGSM Rx

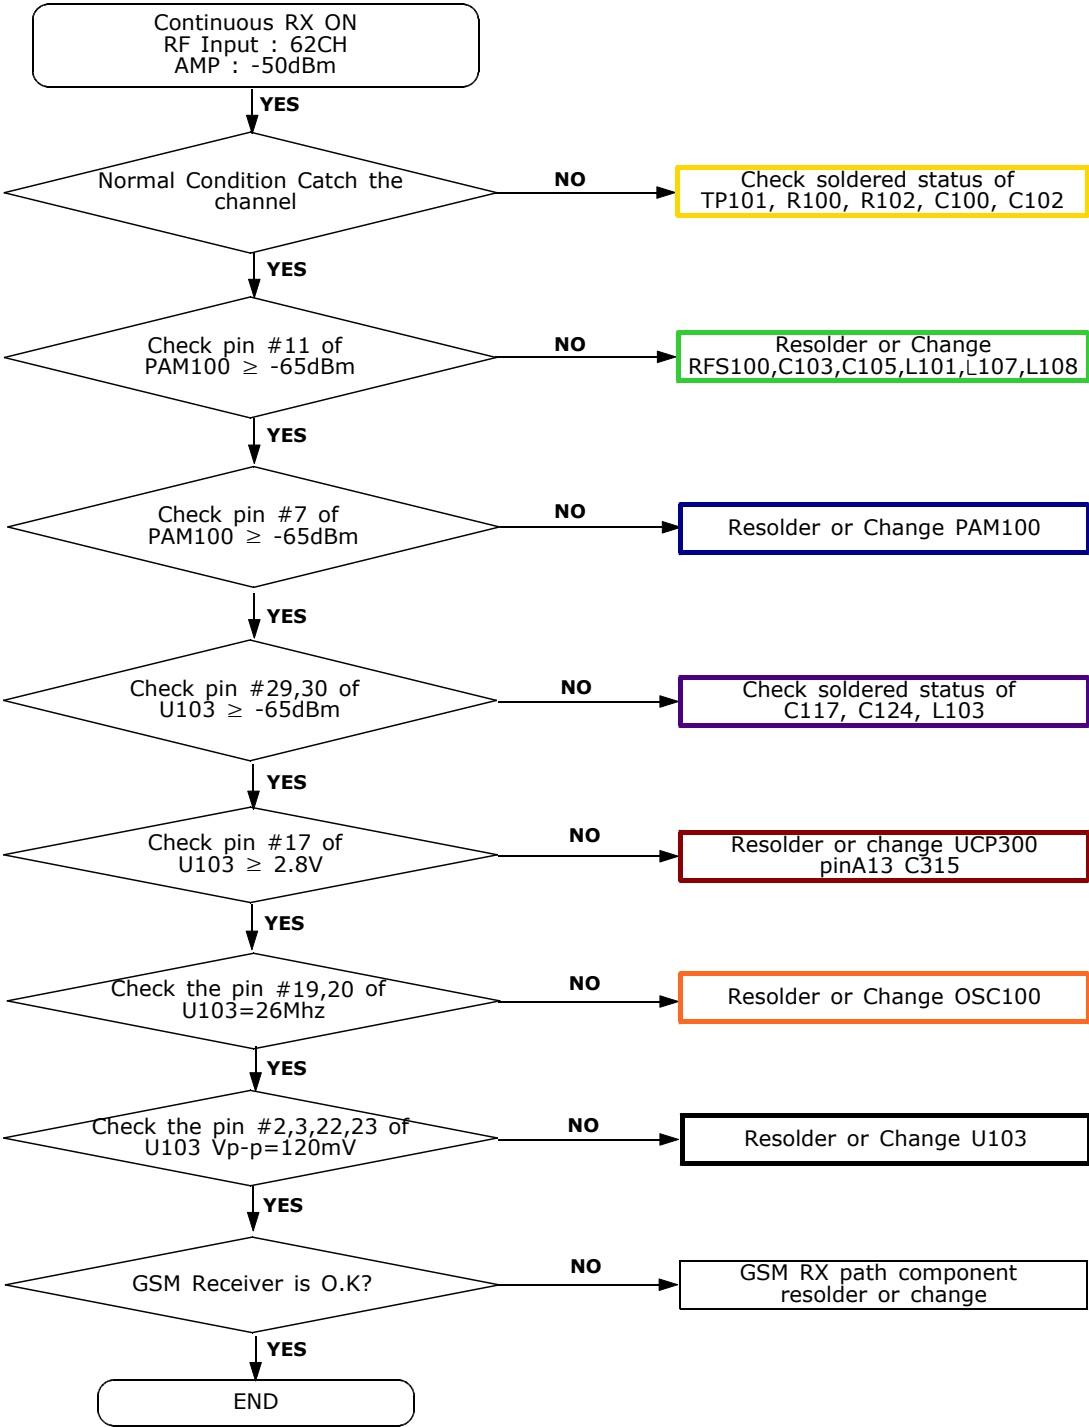


10-2-2. DCS Rx



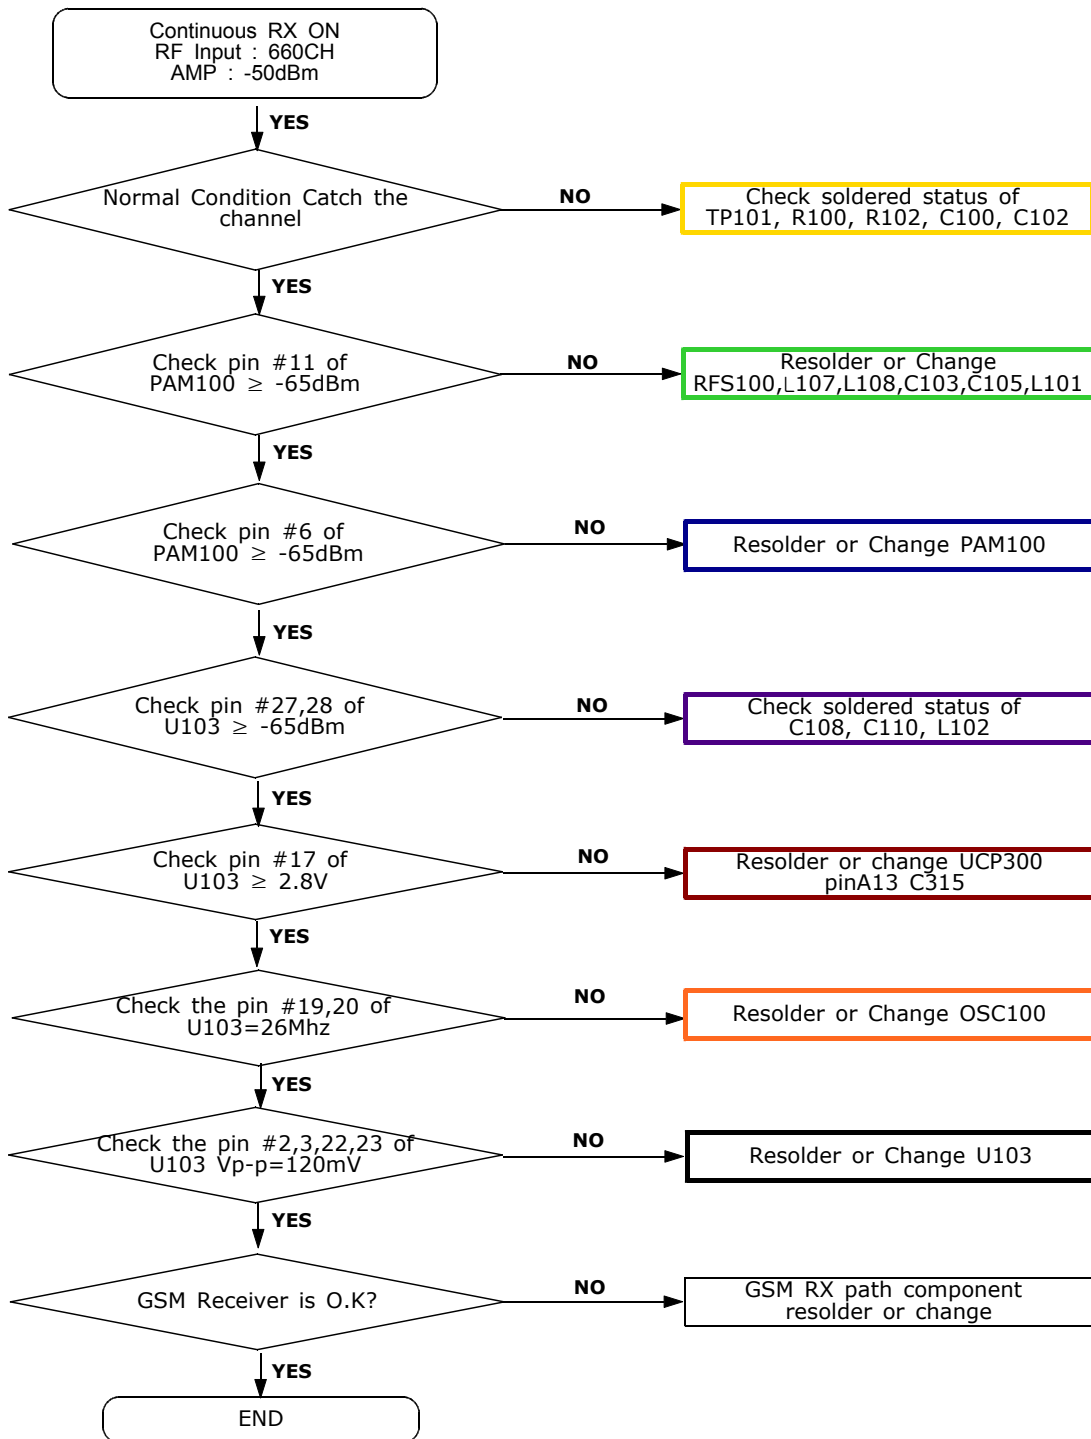


10-2-3. EGSM Tx

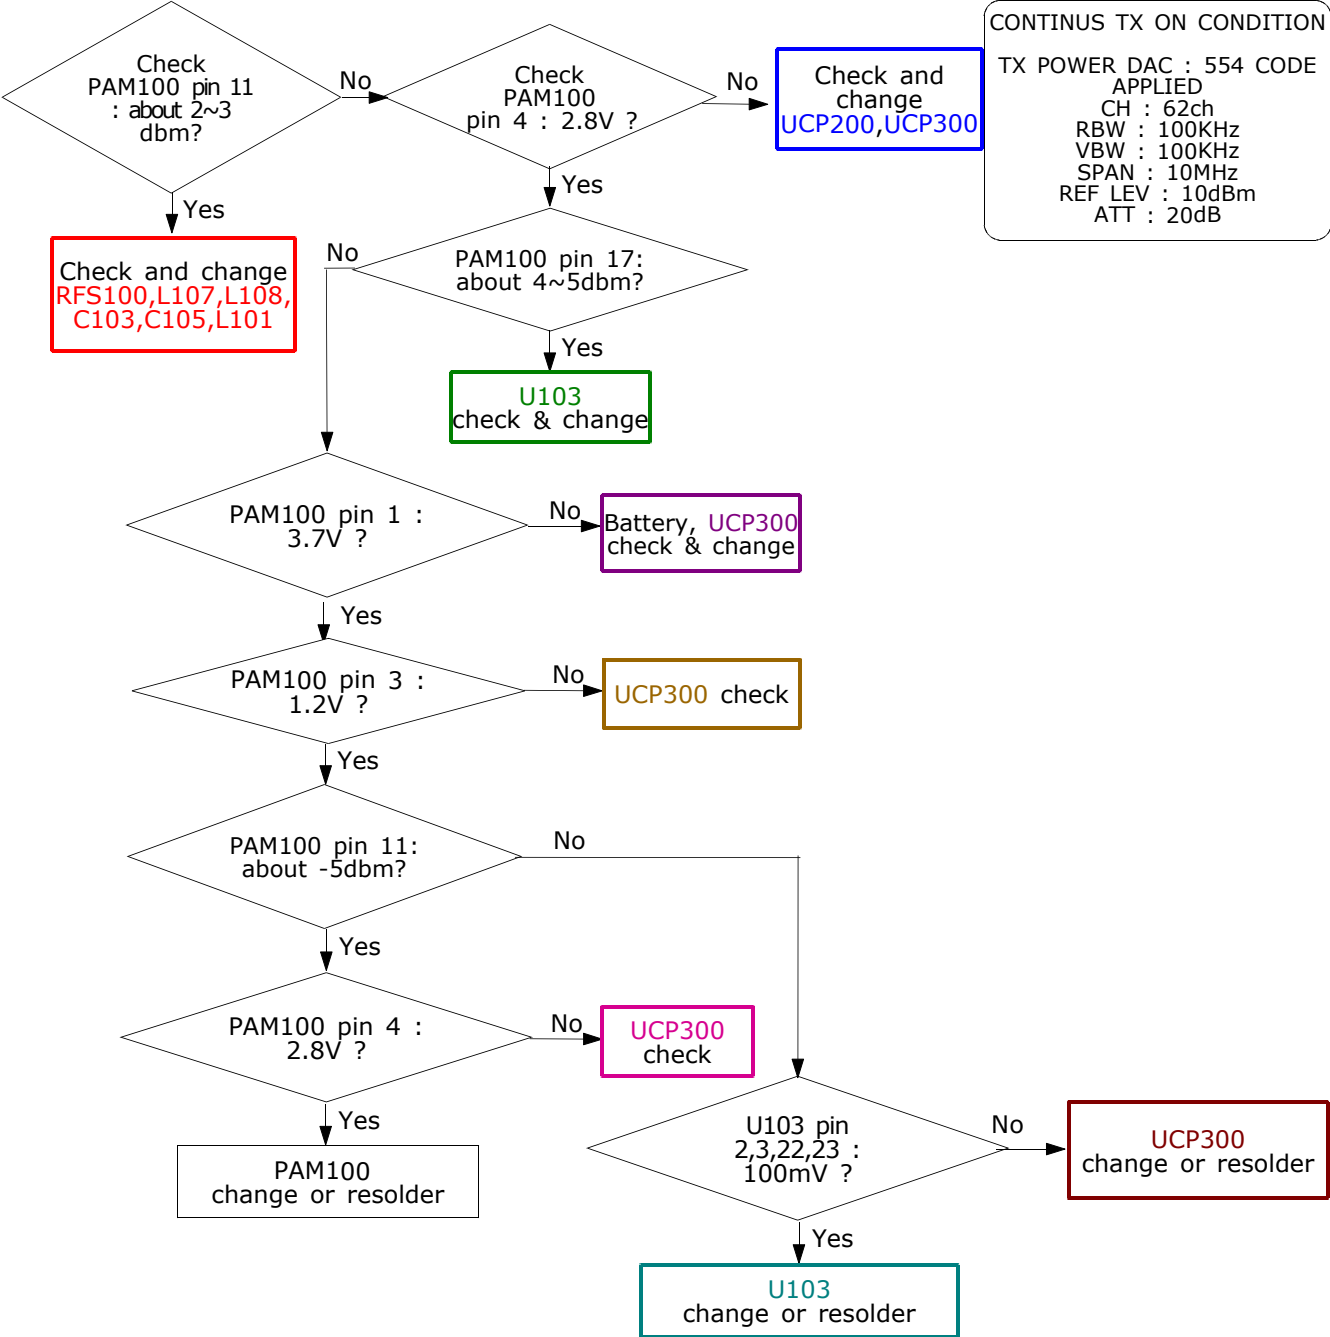

10-2-4. DCS Tx

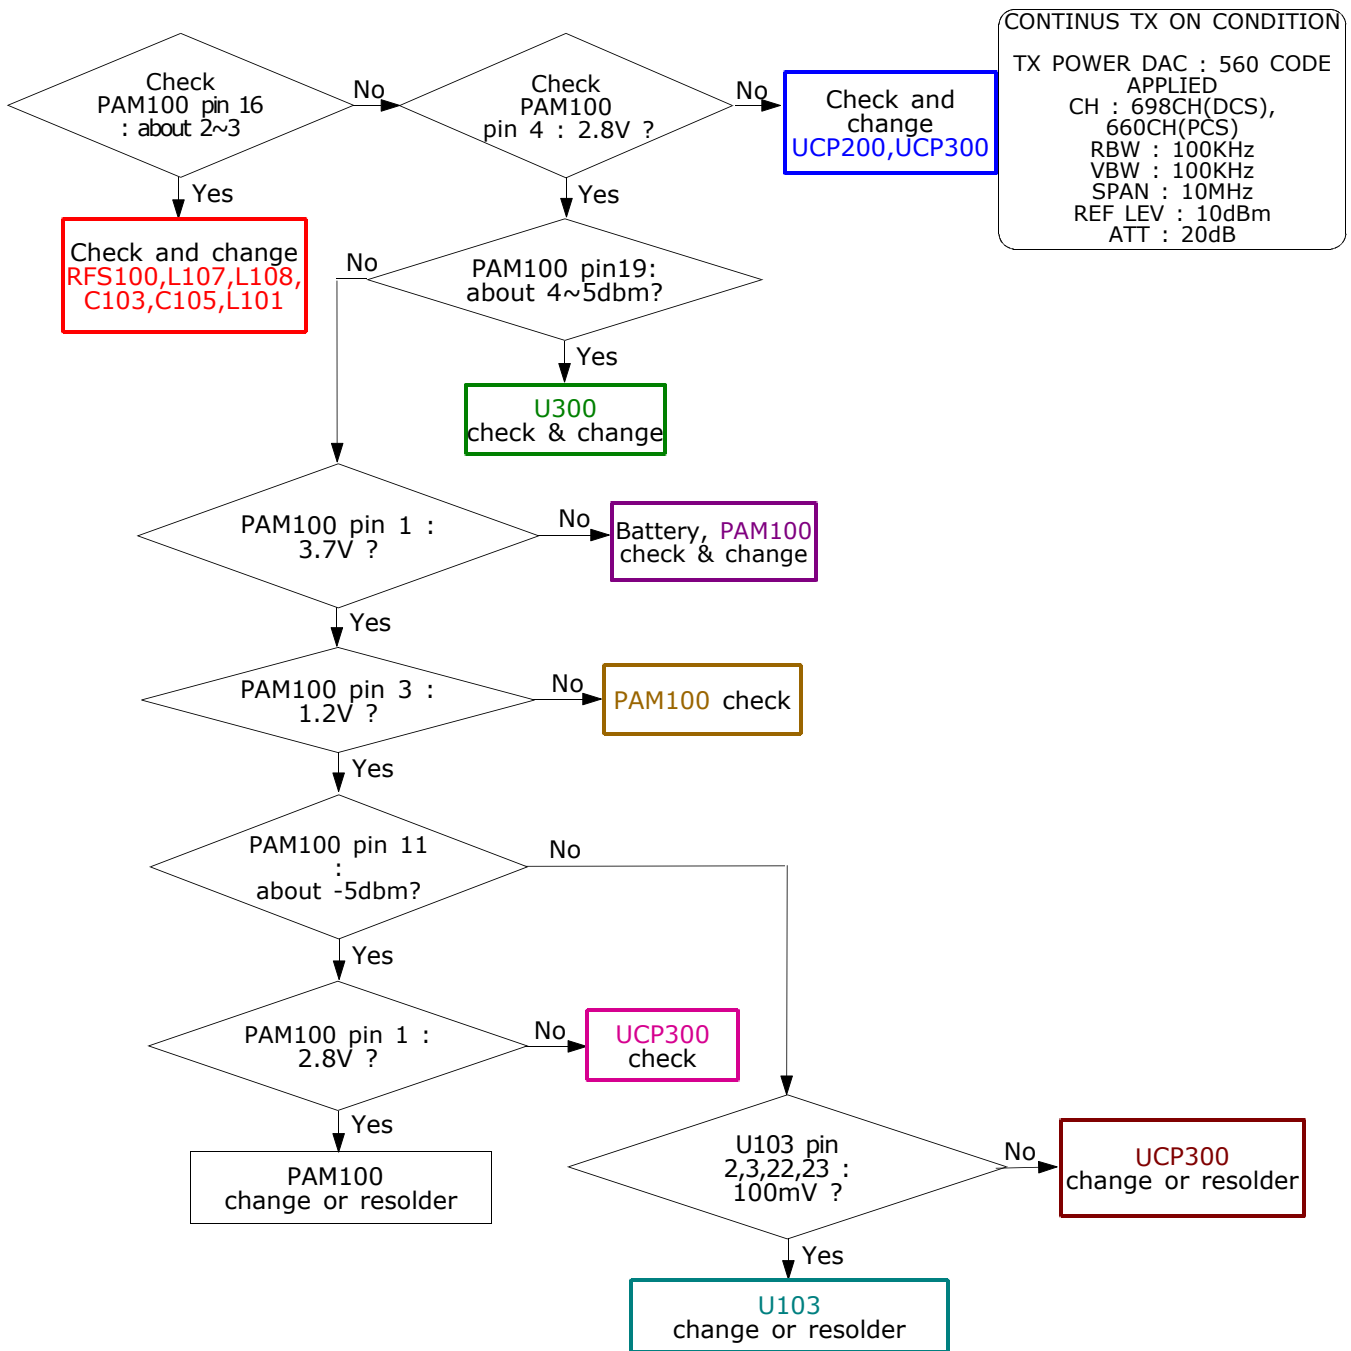

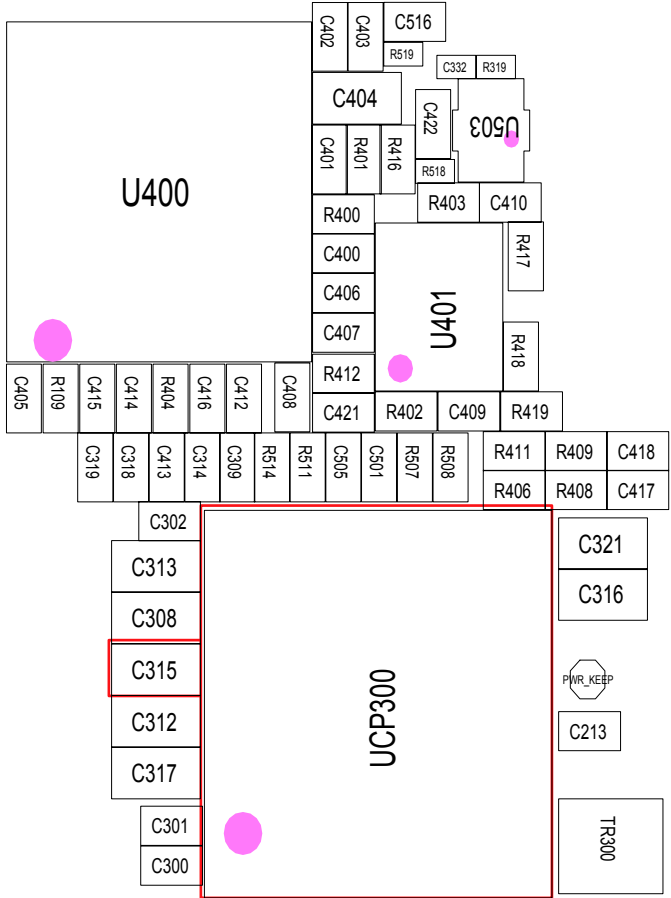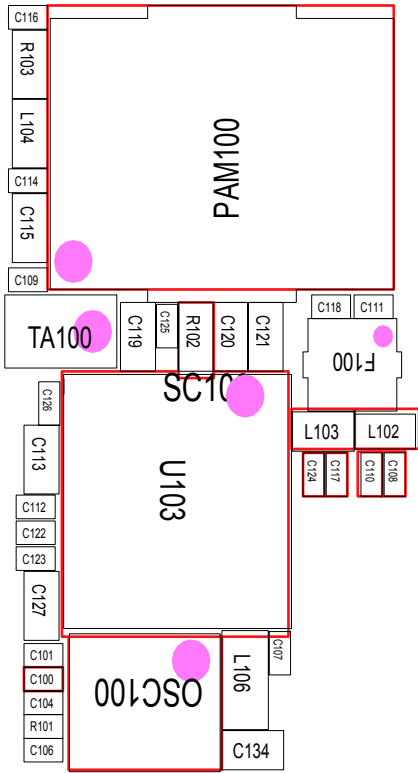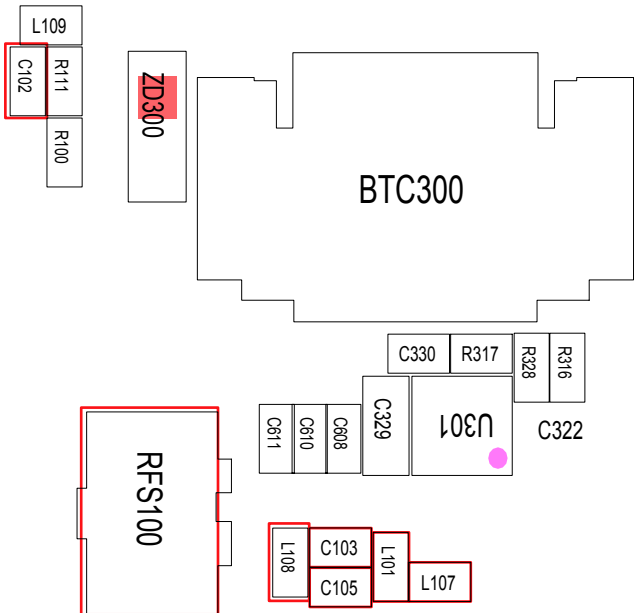

Flow Chart of Troubleshooting

