

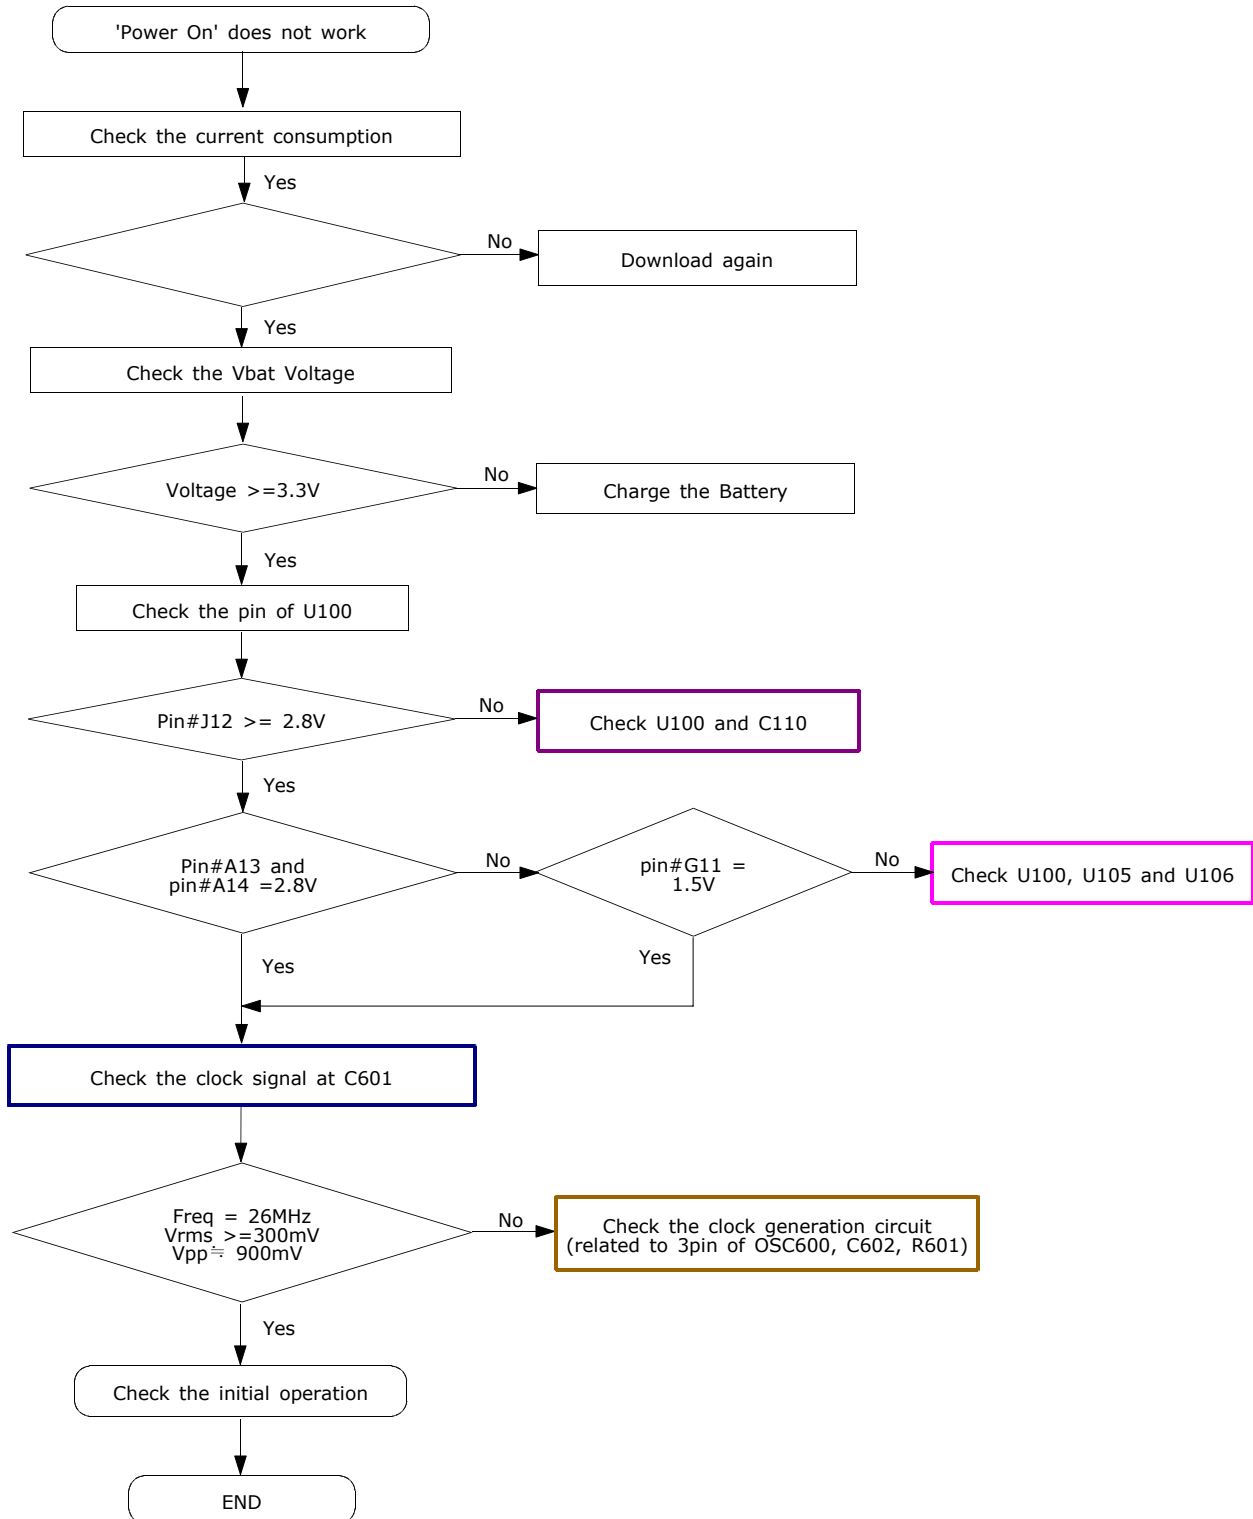
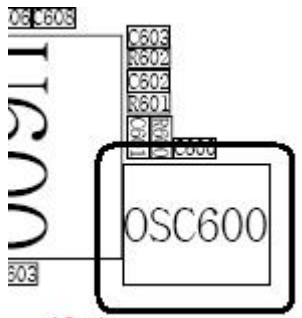





9. Flow Chart of Troubleshooting

9-1. Baseband


9-1-1. Power ON


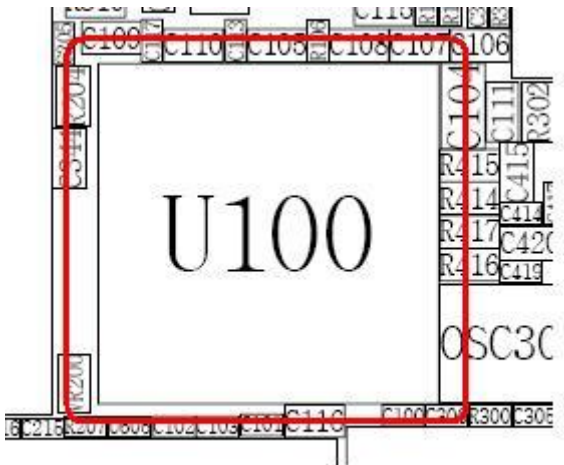


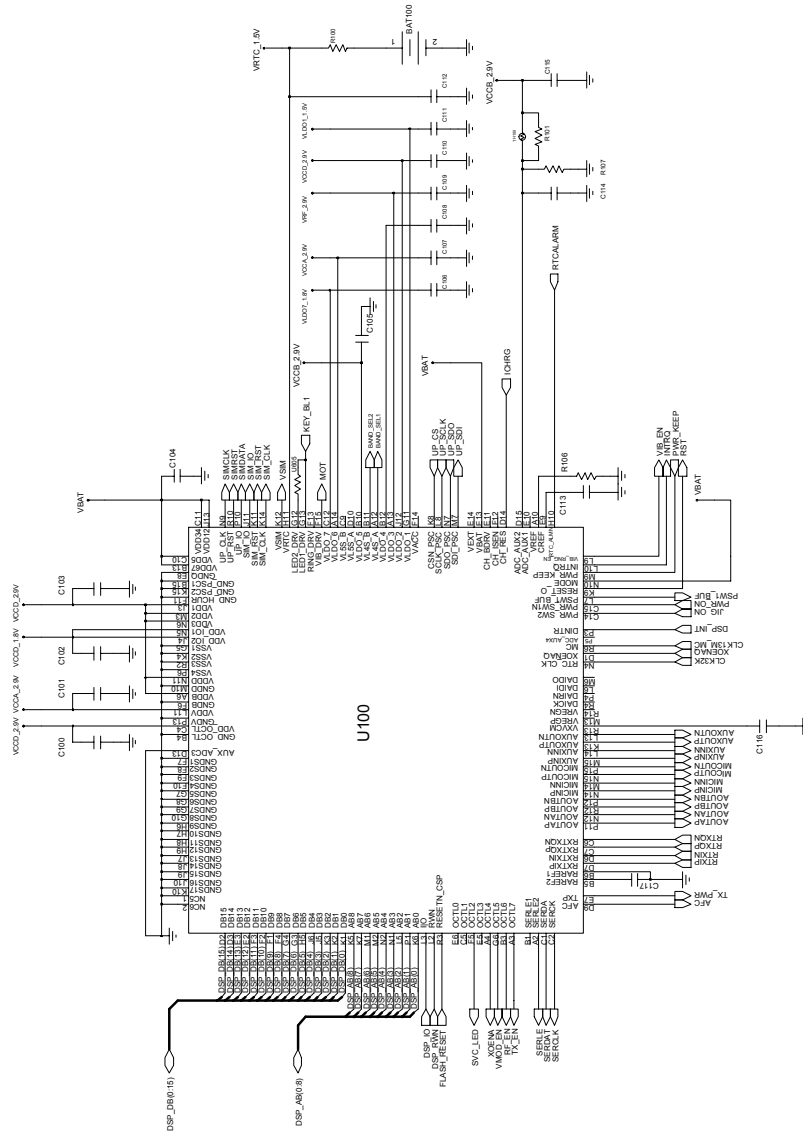

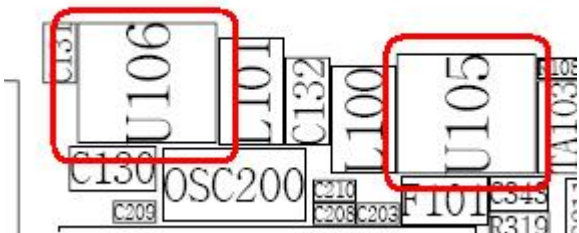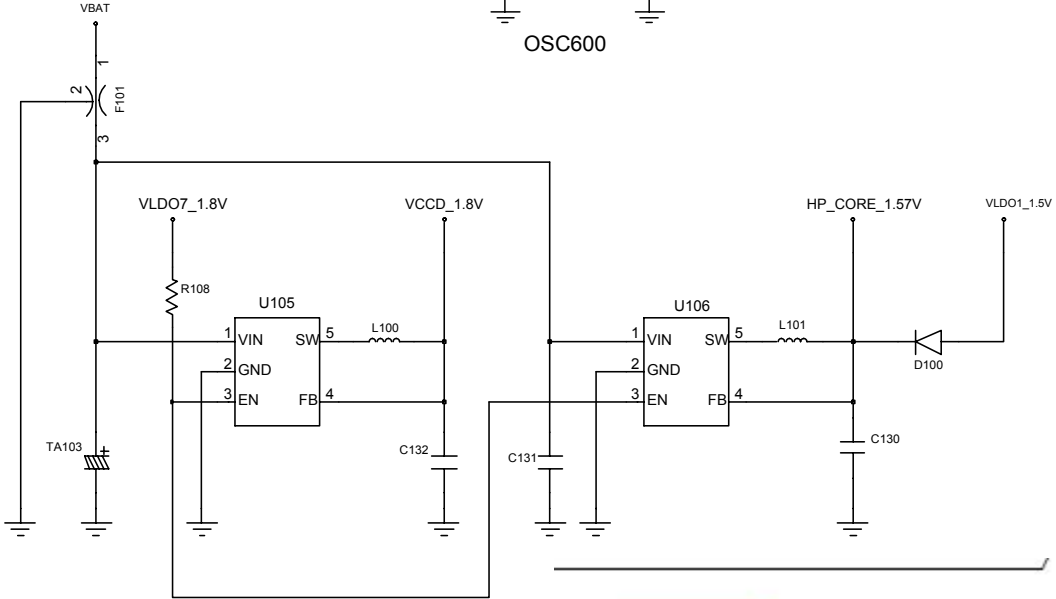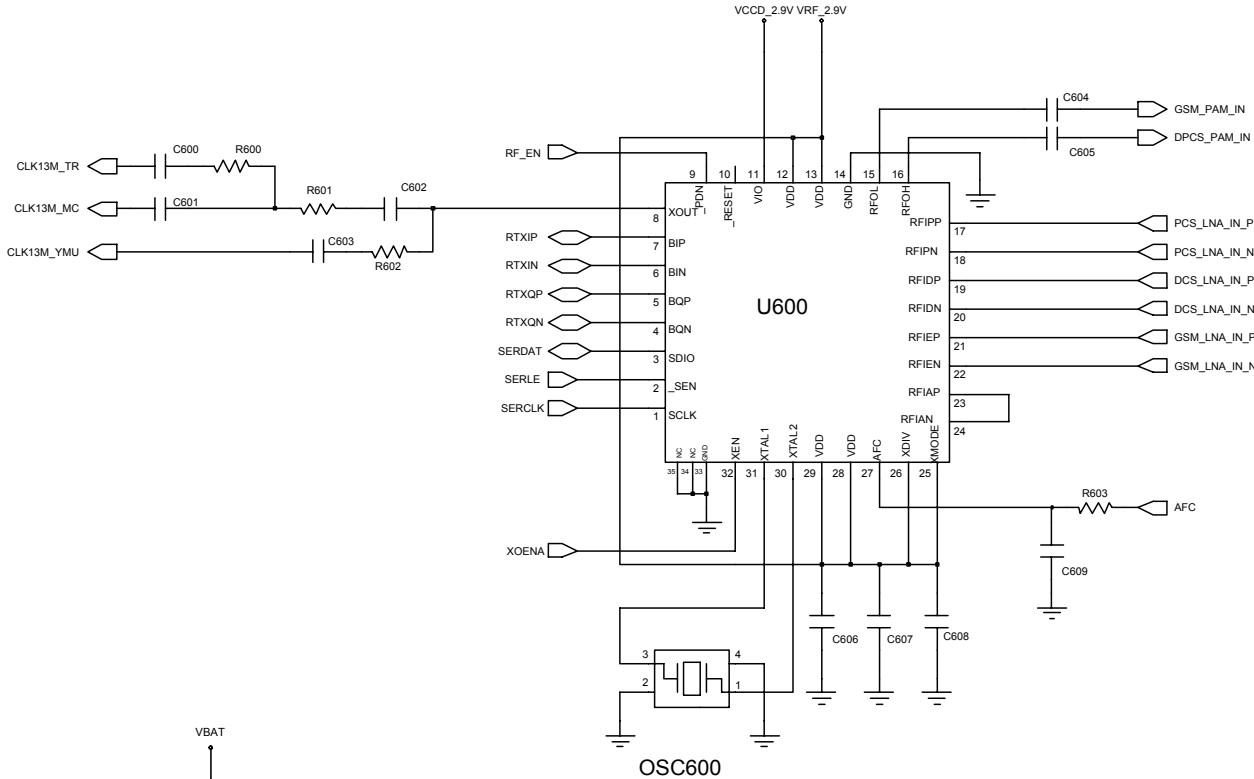


9-1-2. Initial


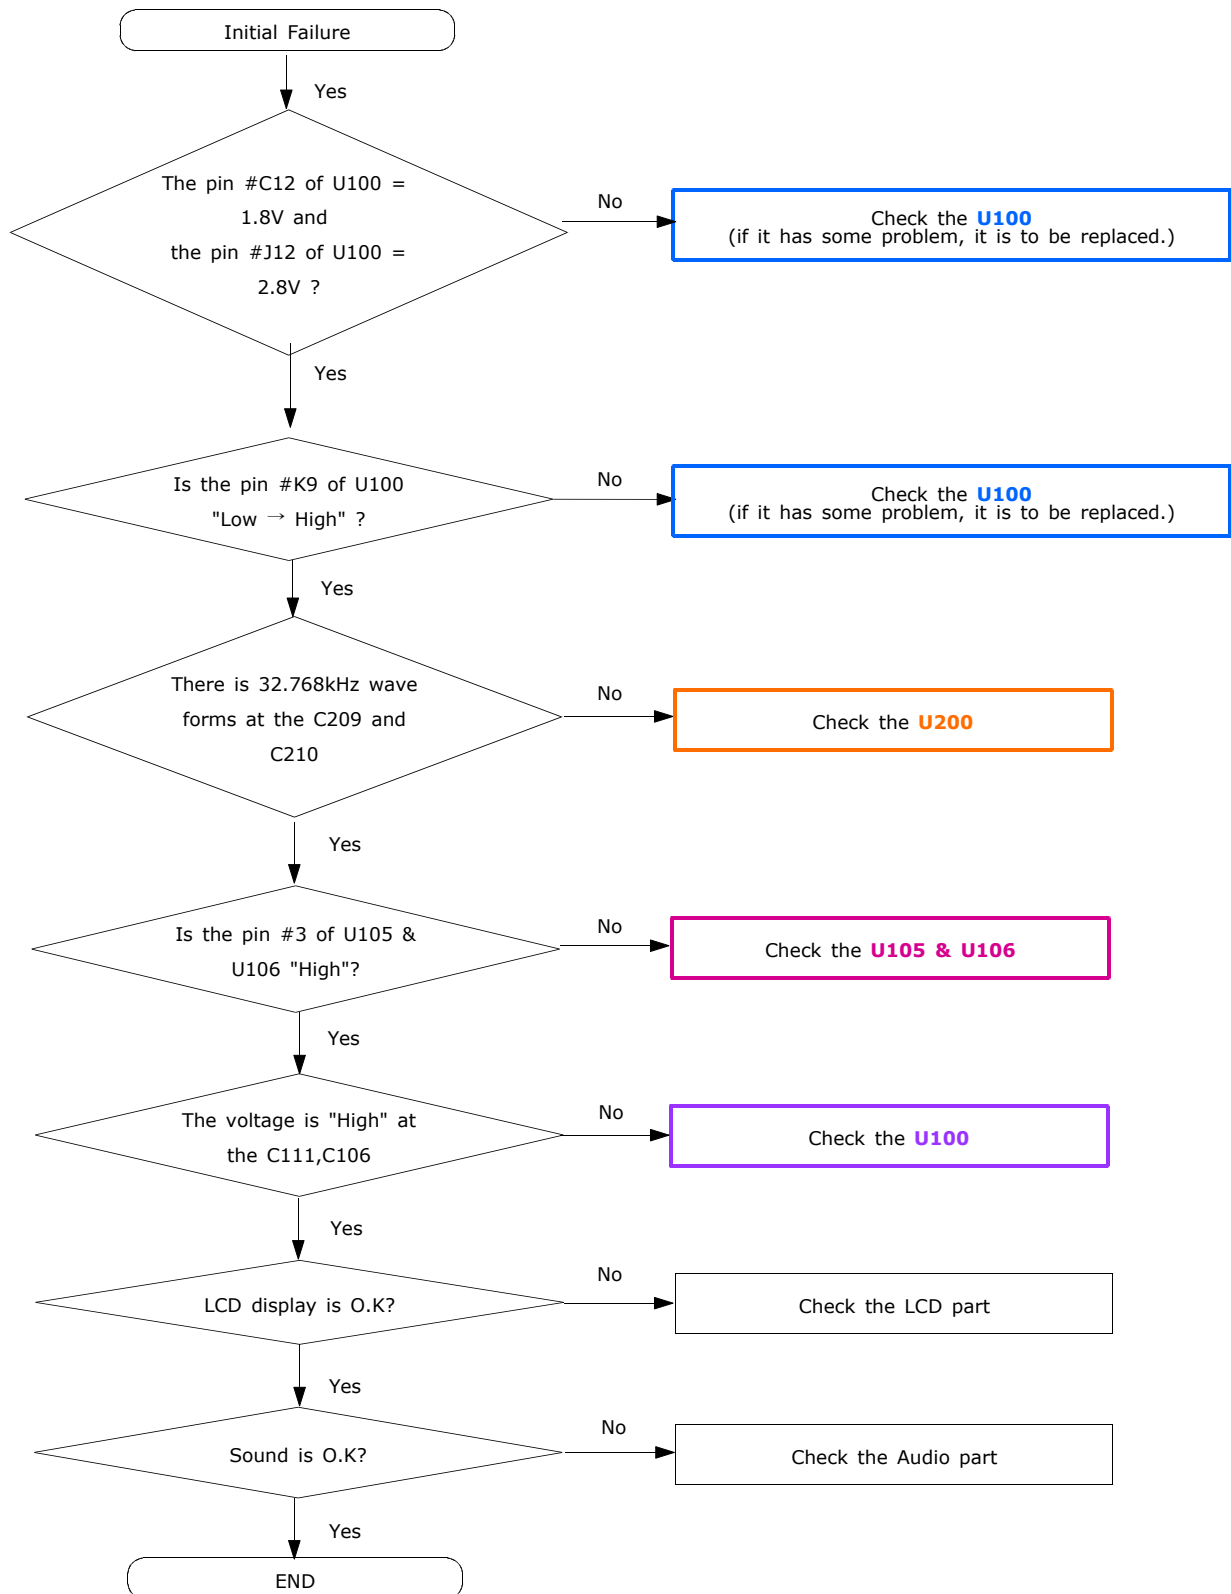


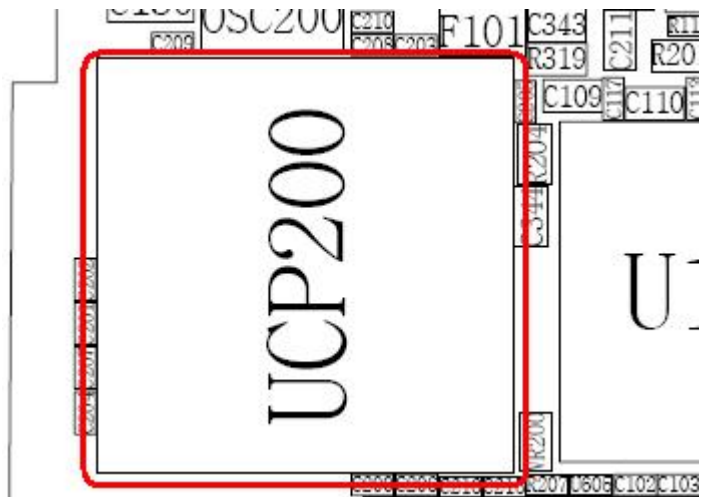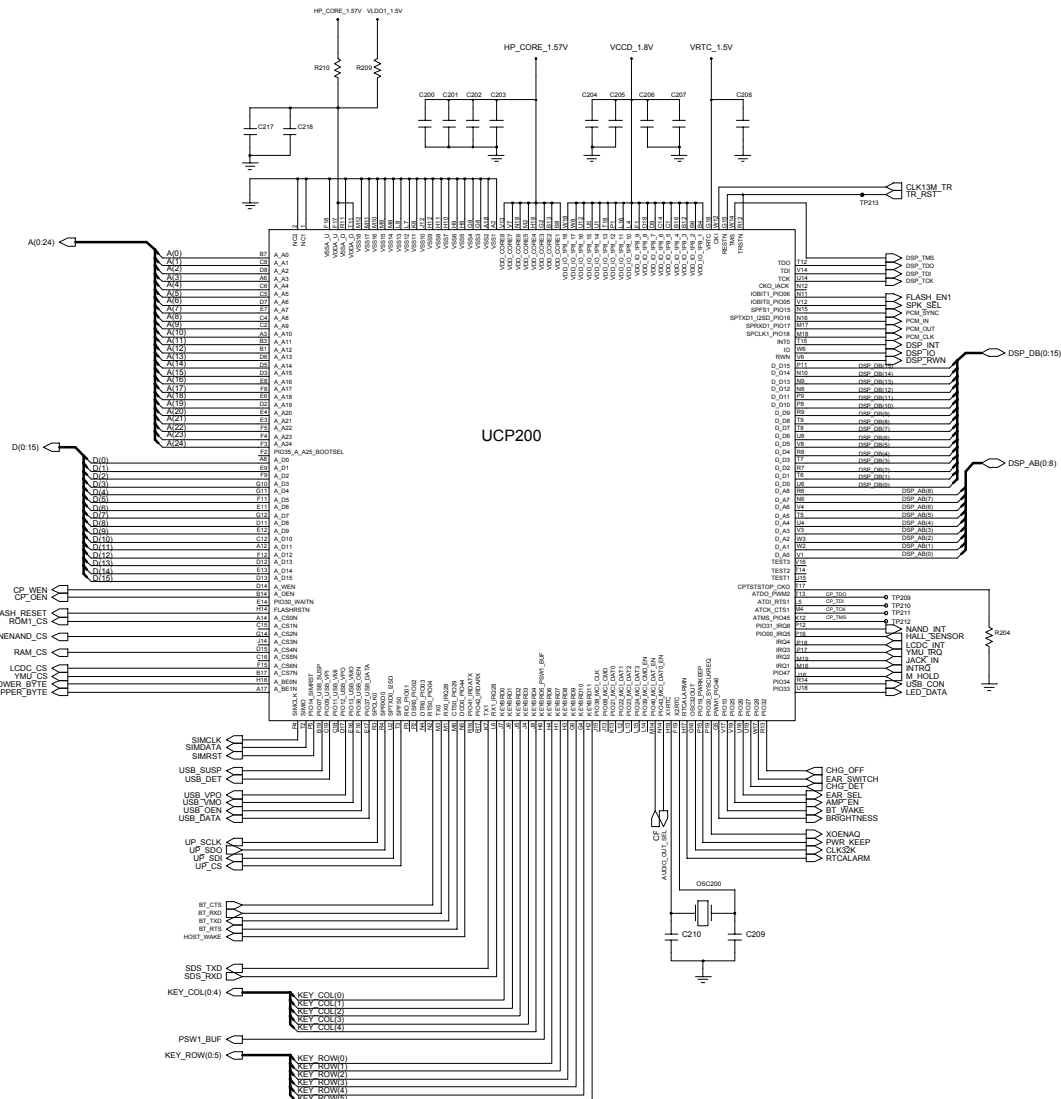


9-1-3. Sim Part



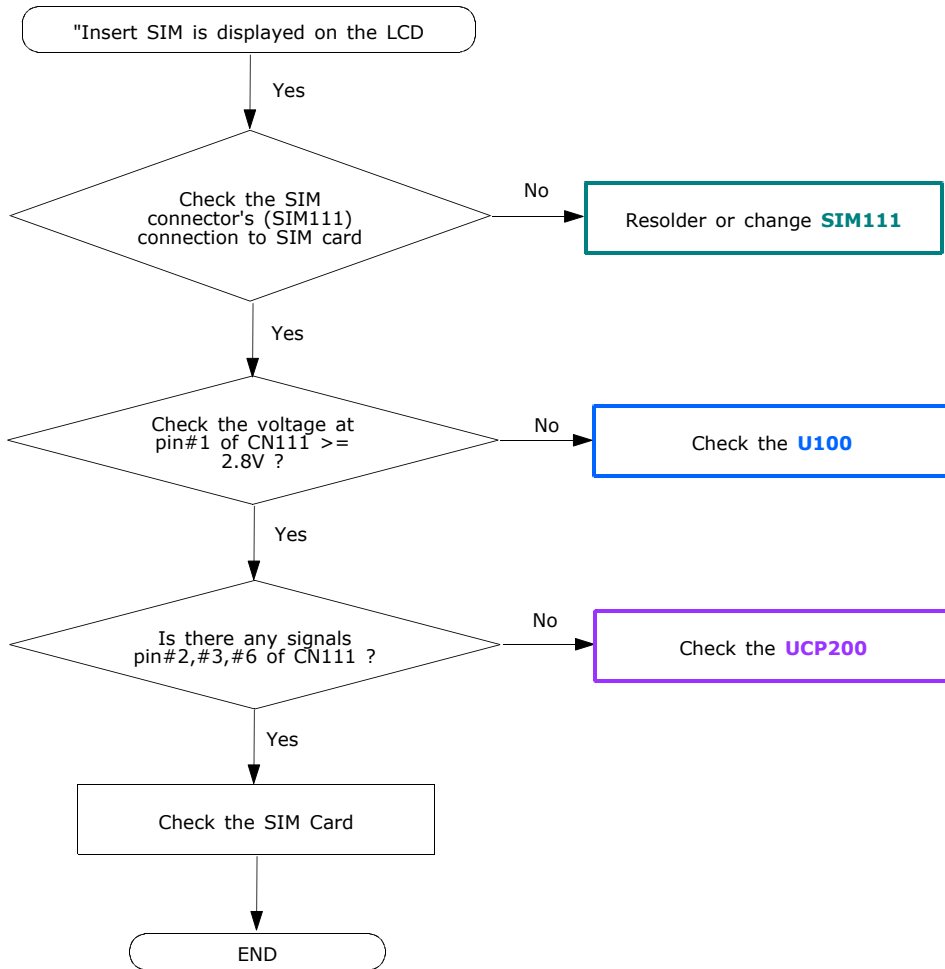


9-1-4. Microphone Part

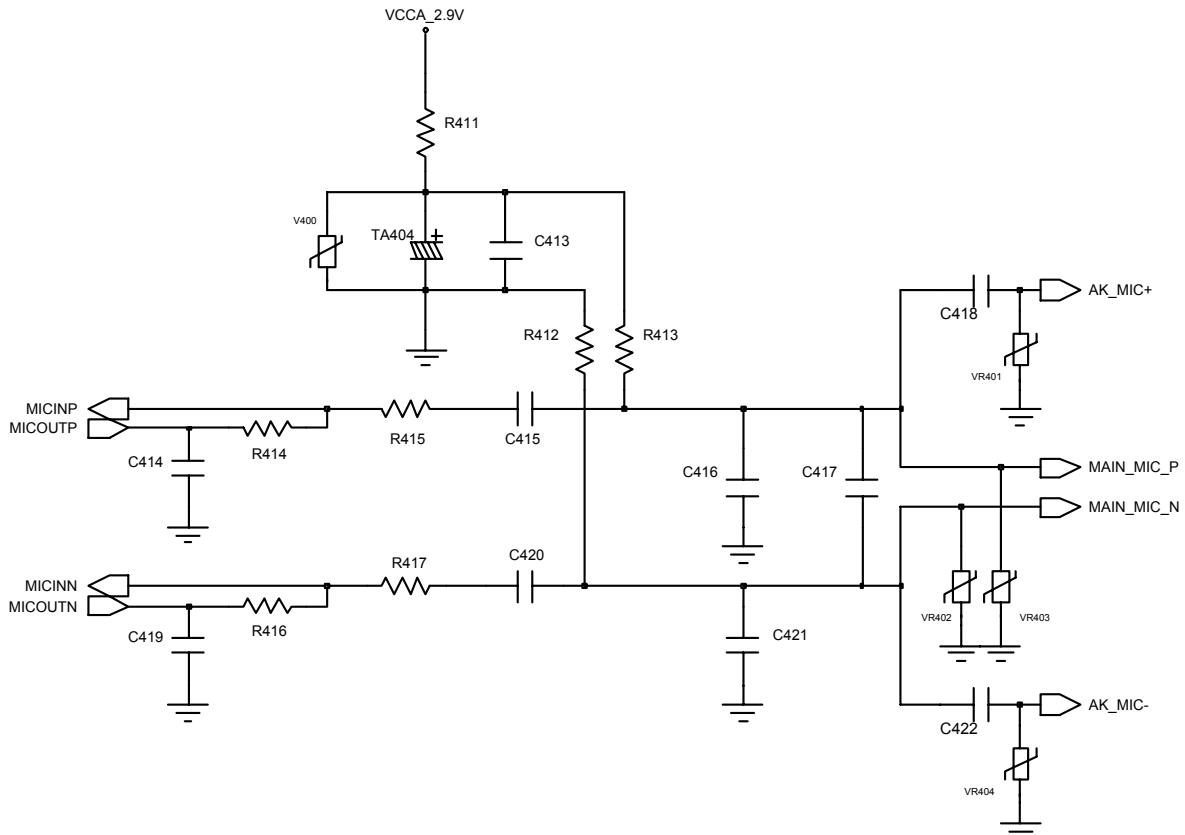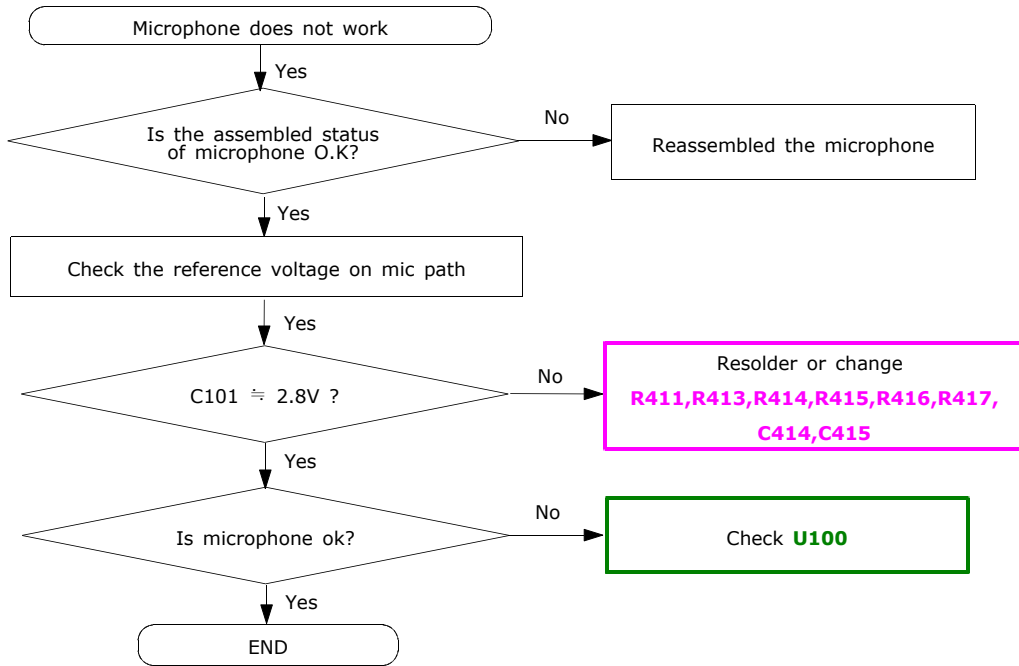


9-1-5. Speaker Part_1(MP3, SPEAKER PHONE)

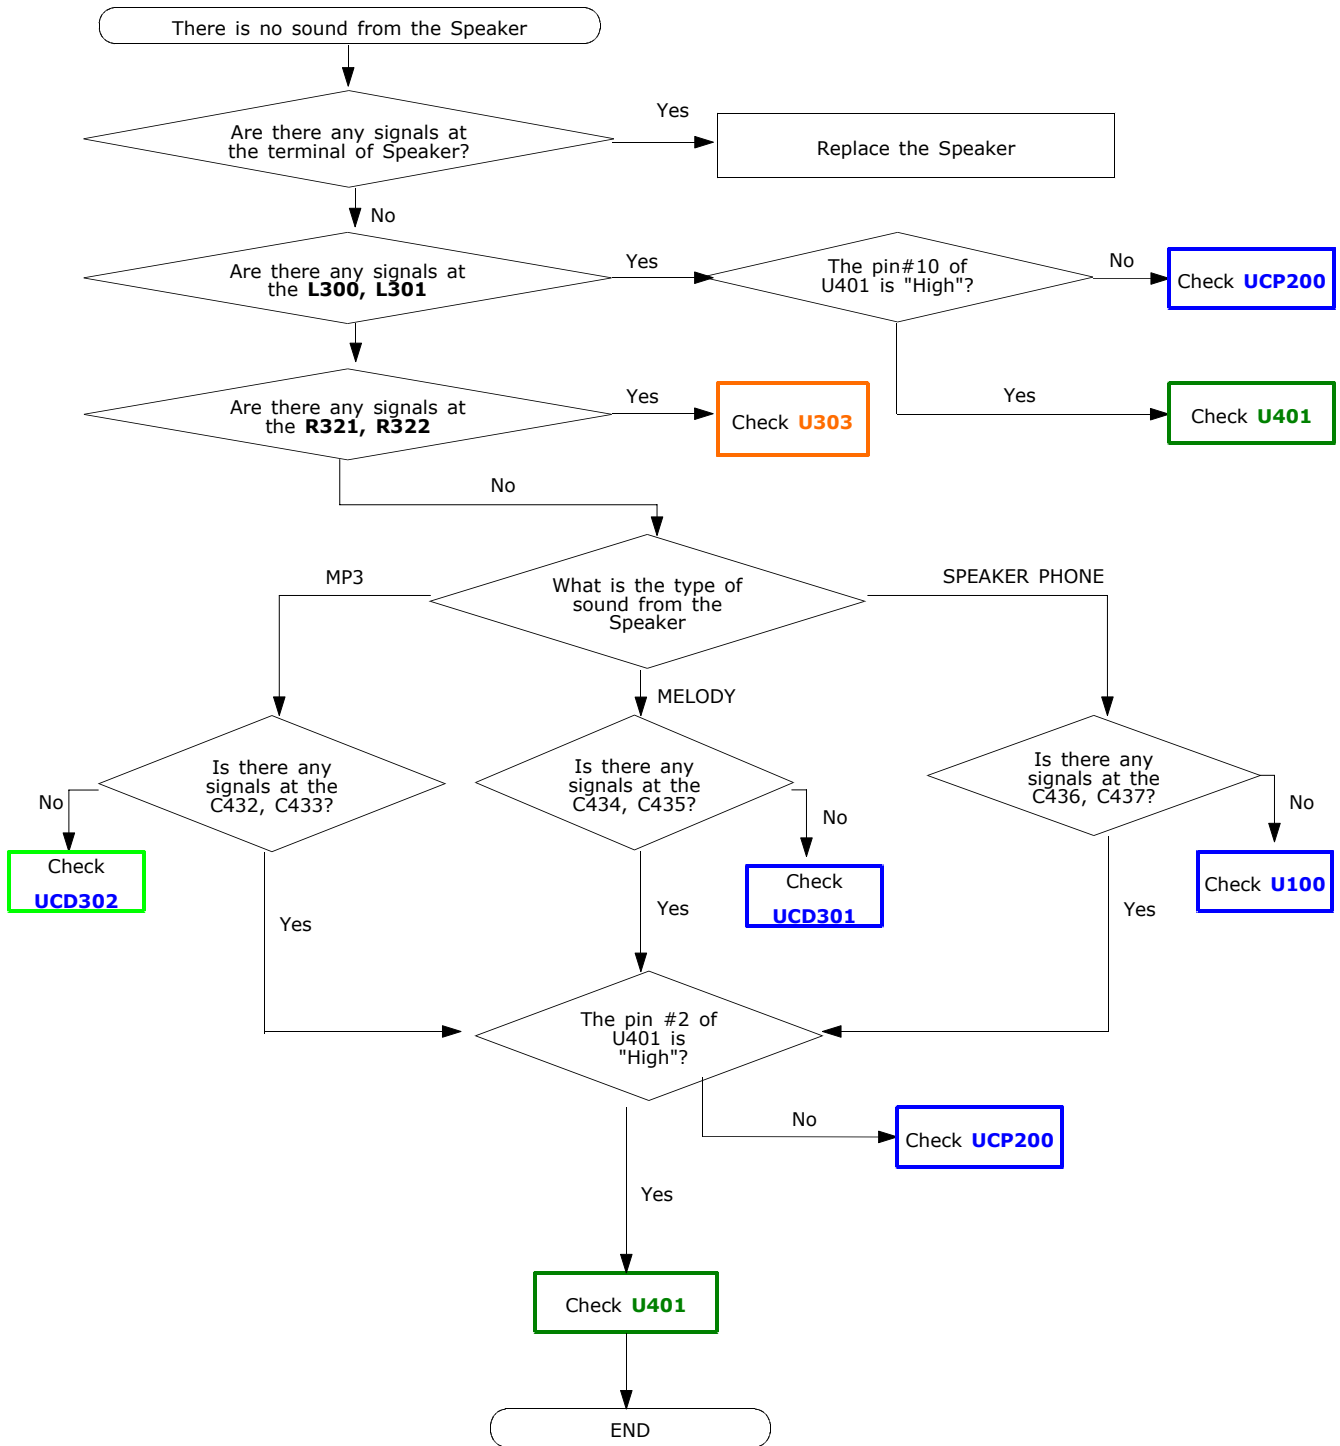


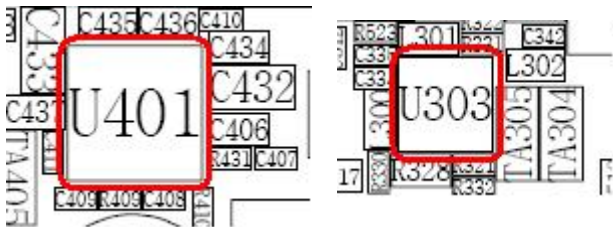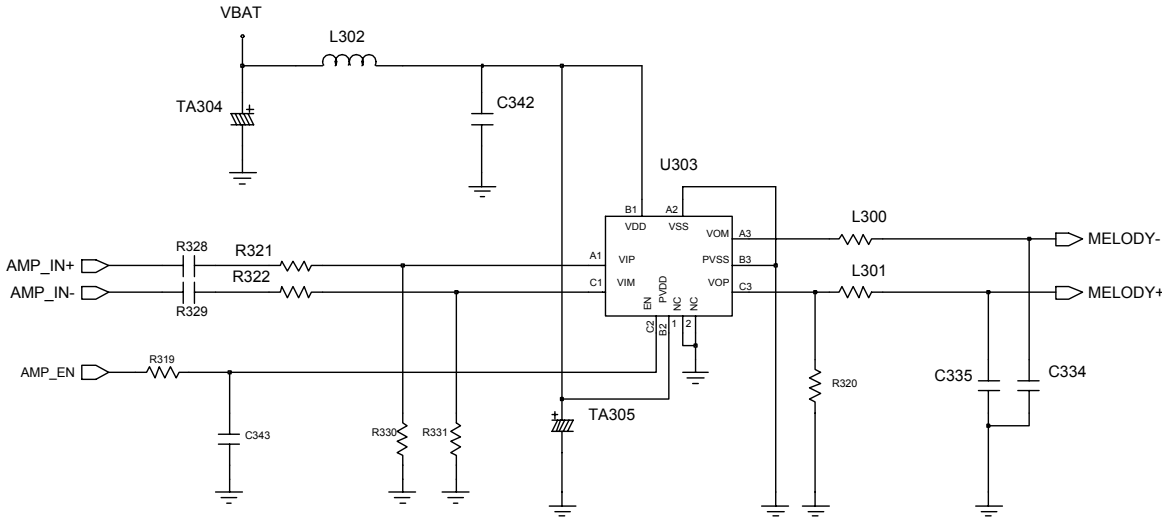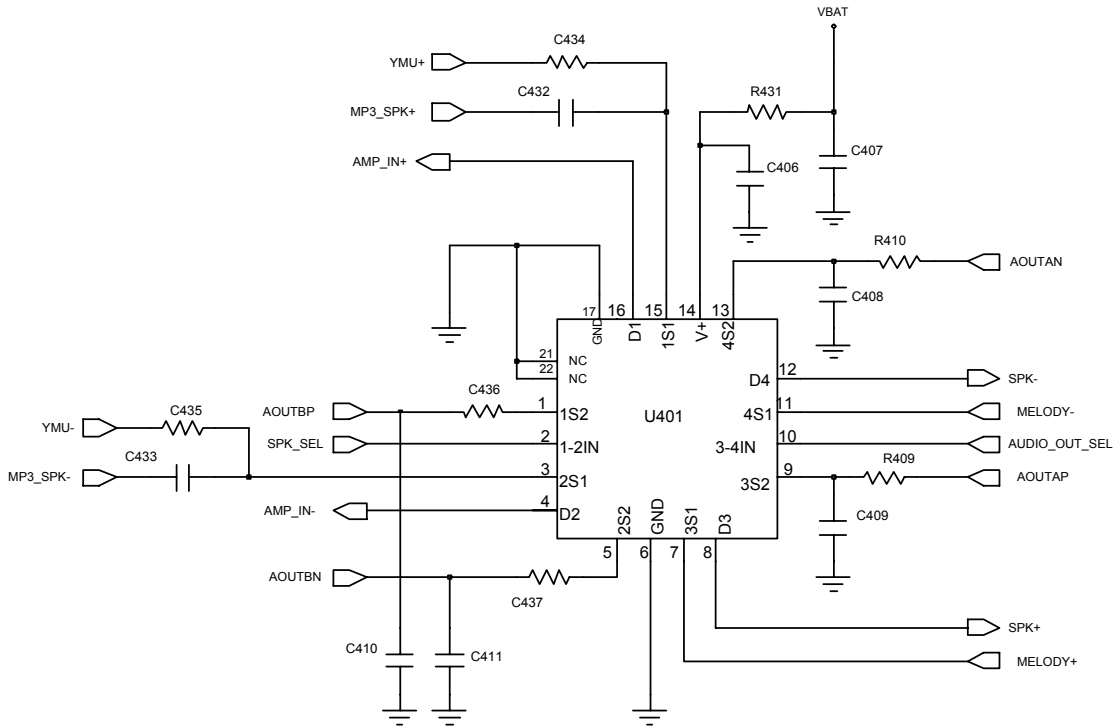



9-1-6. Speaker Part_2(RECEIVER)

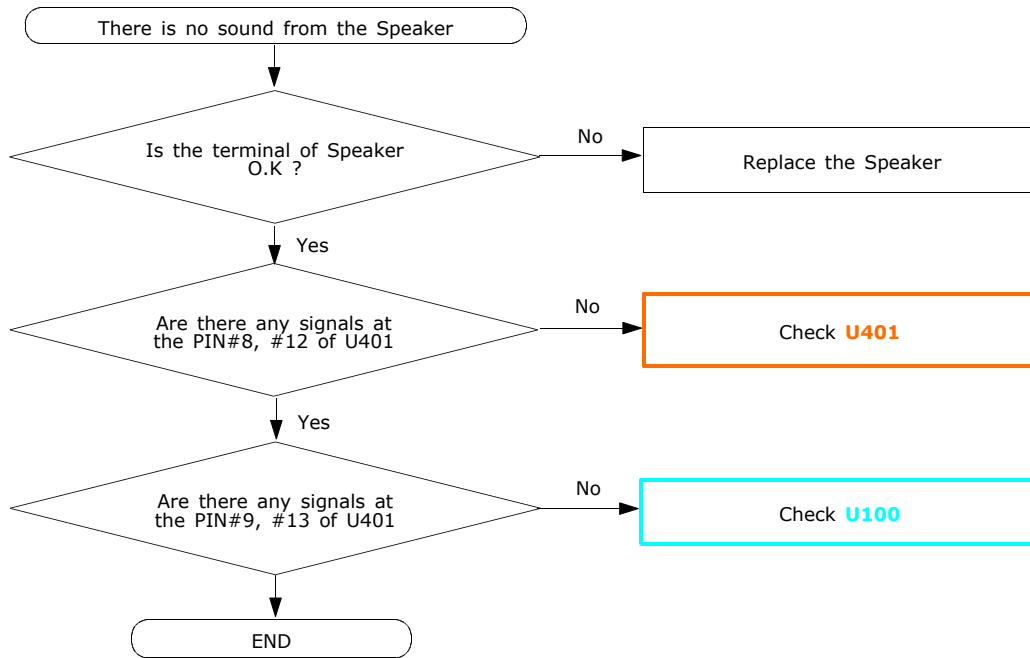

9-1-7. Charging Part

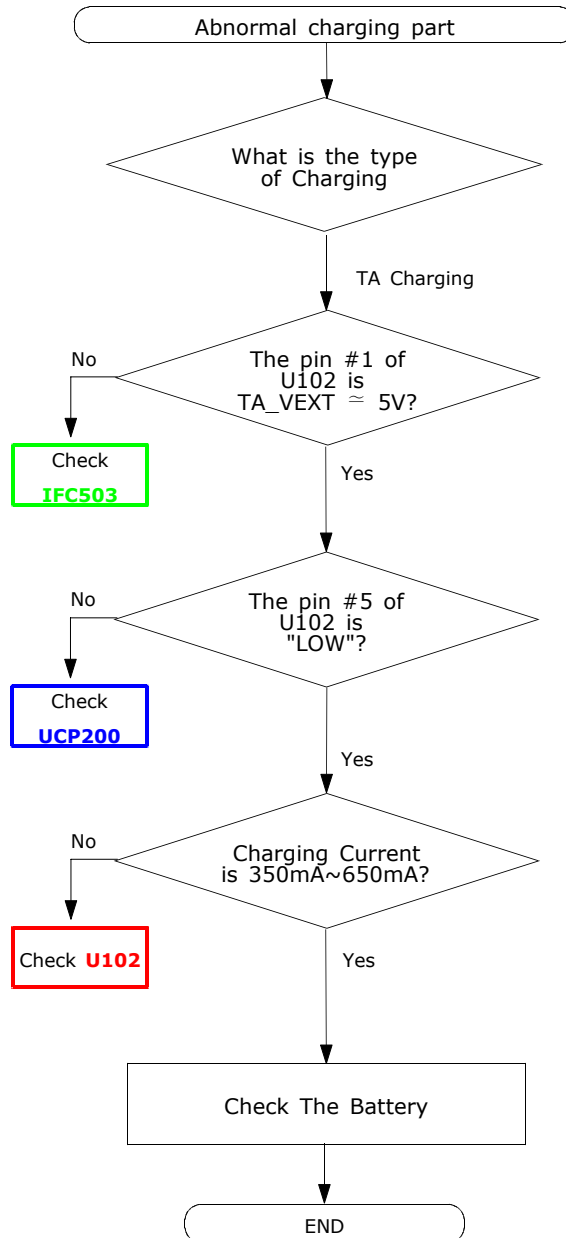




Flow Chart of Troubleshooting

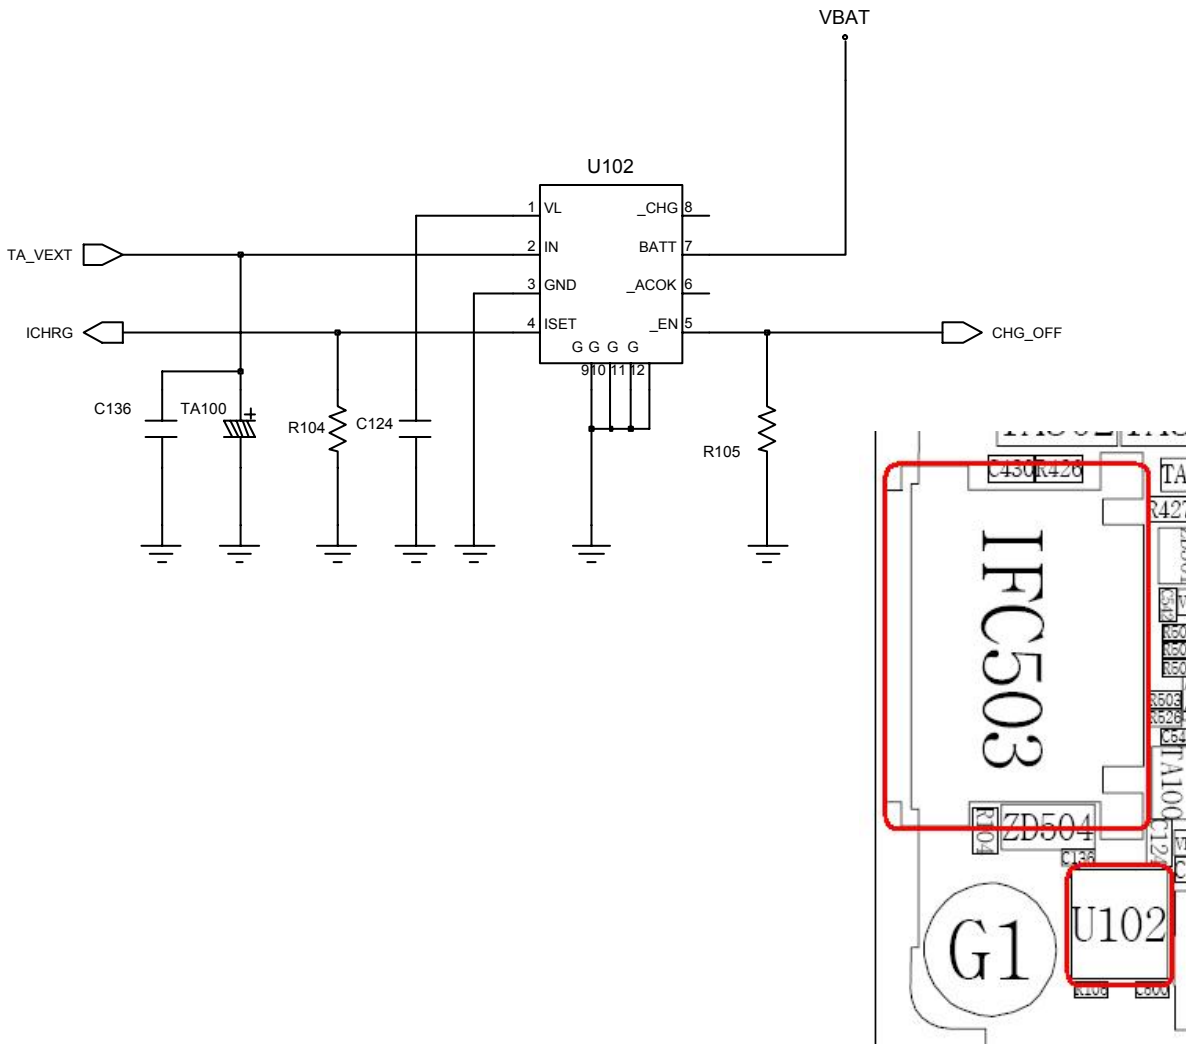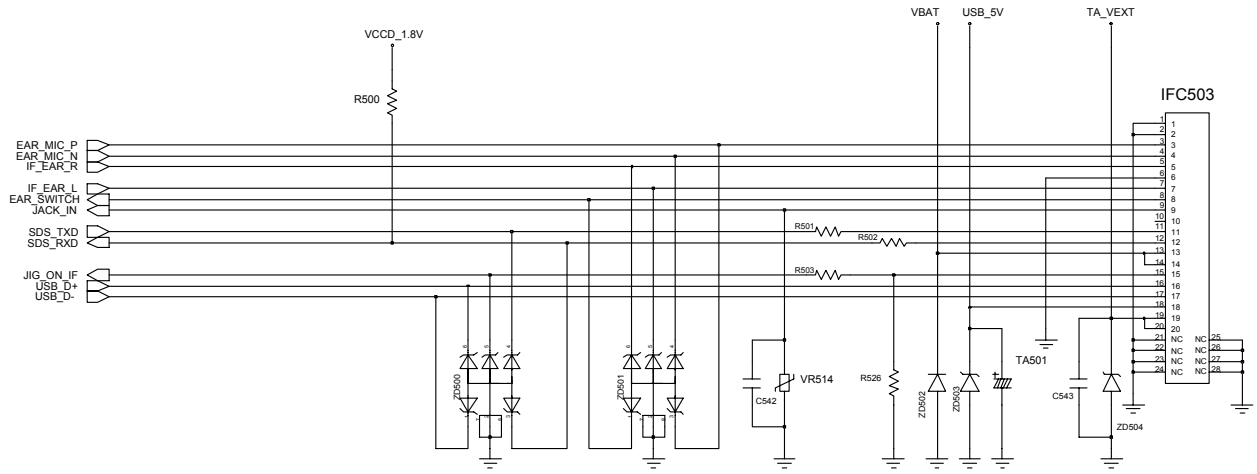


9-2. RF

9-2-1. EGSM RX

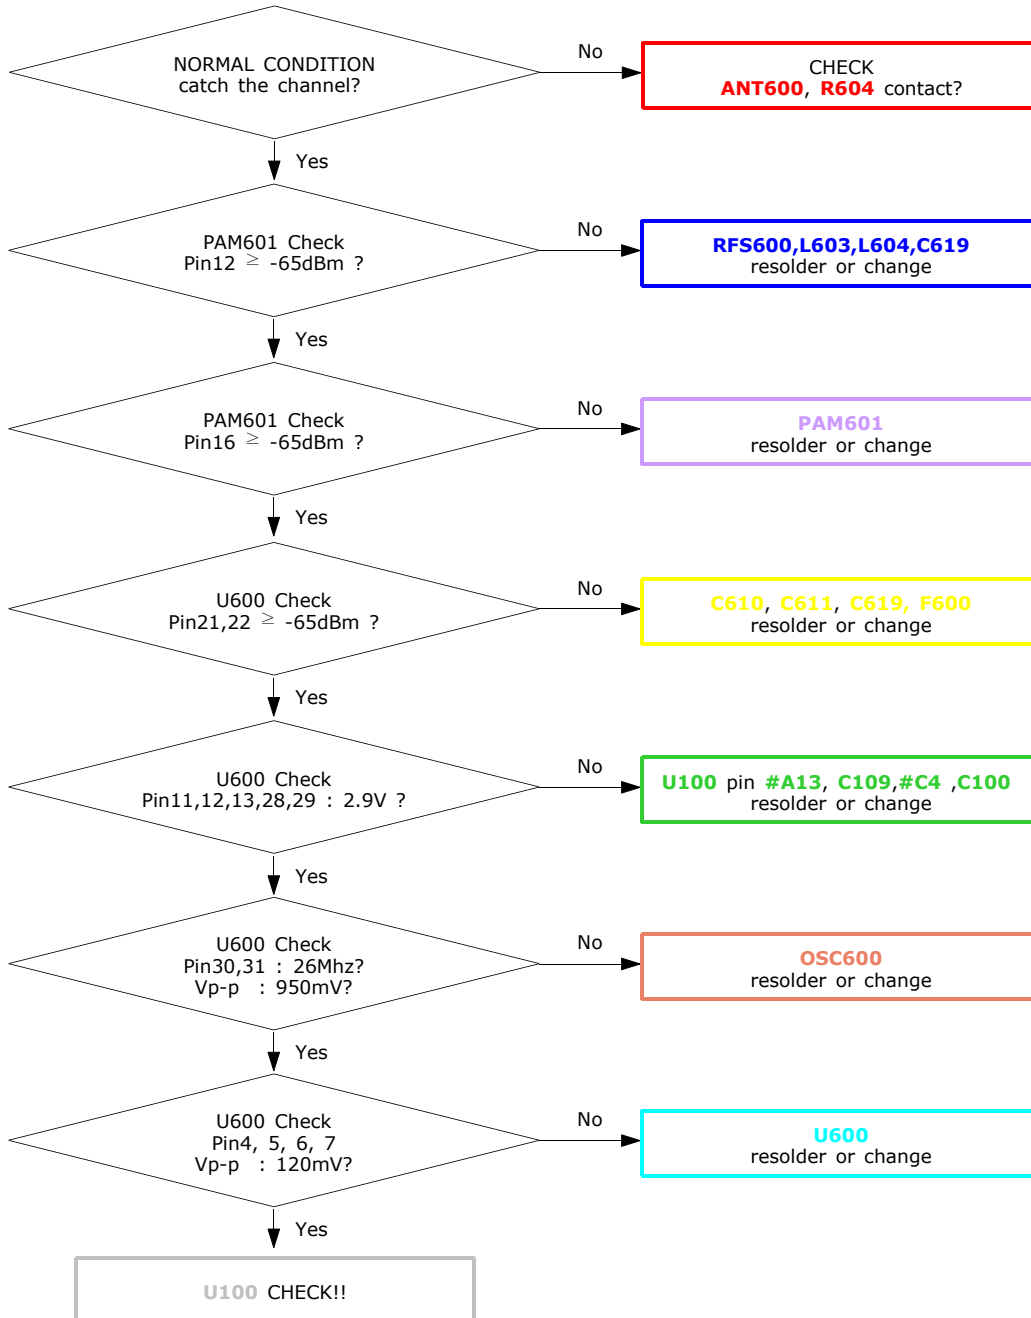


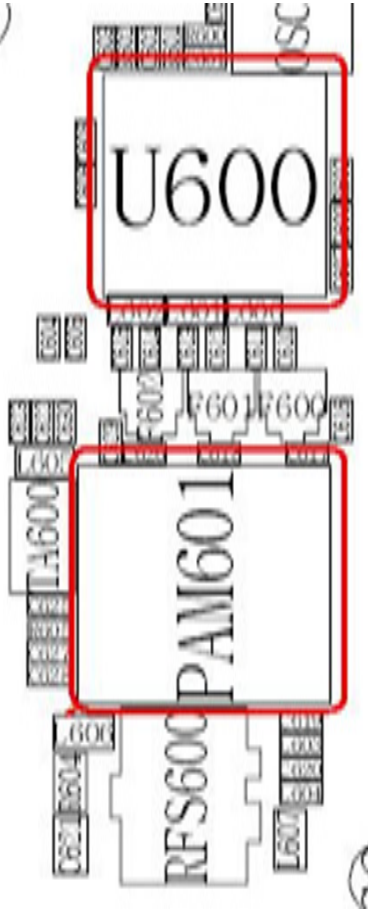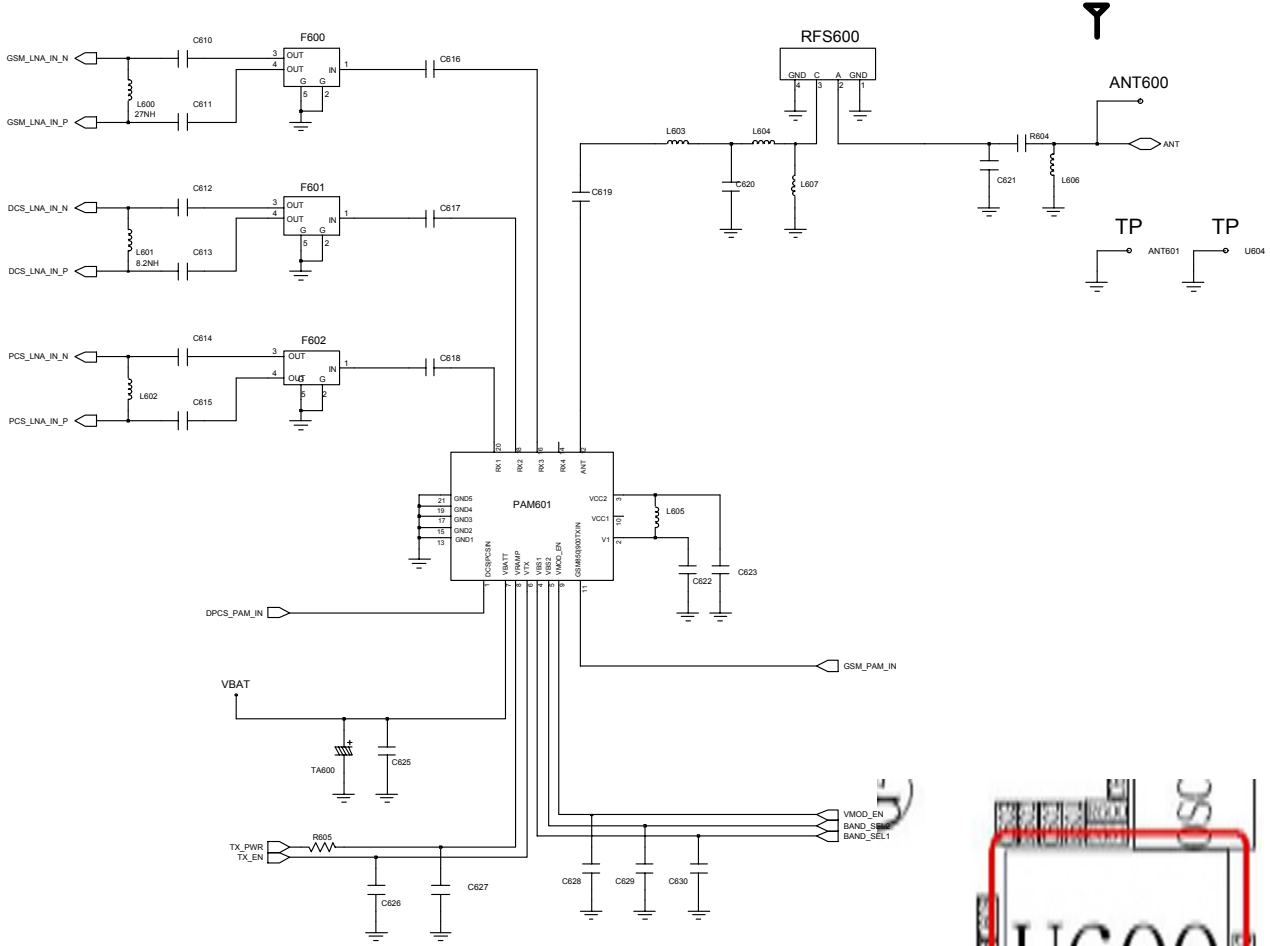


9-2-2. DCS RX

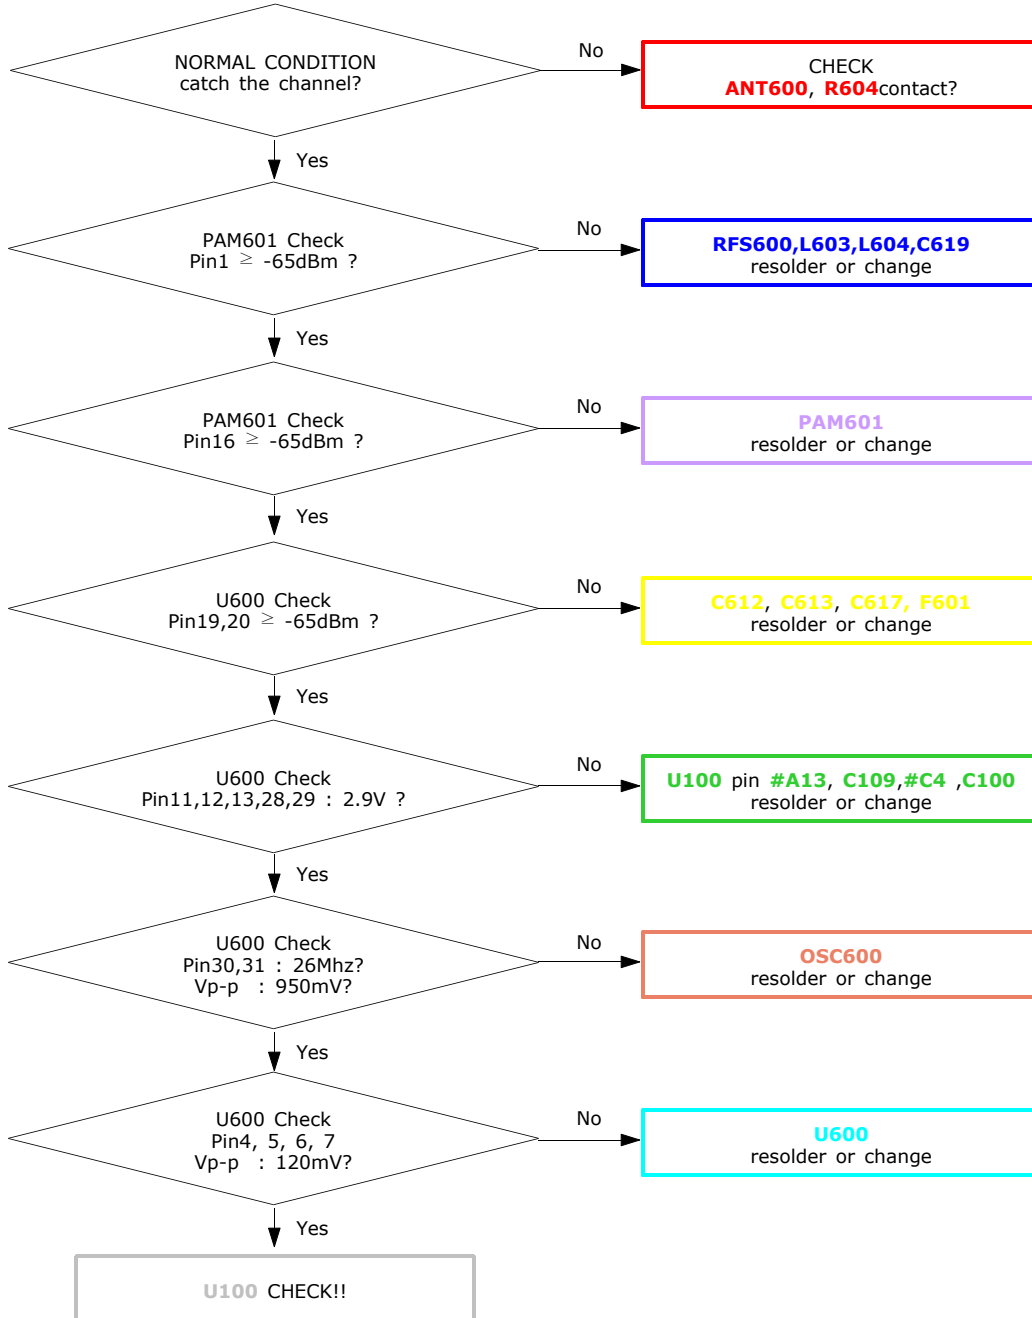


9-2-3. PCS RX

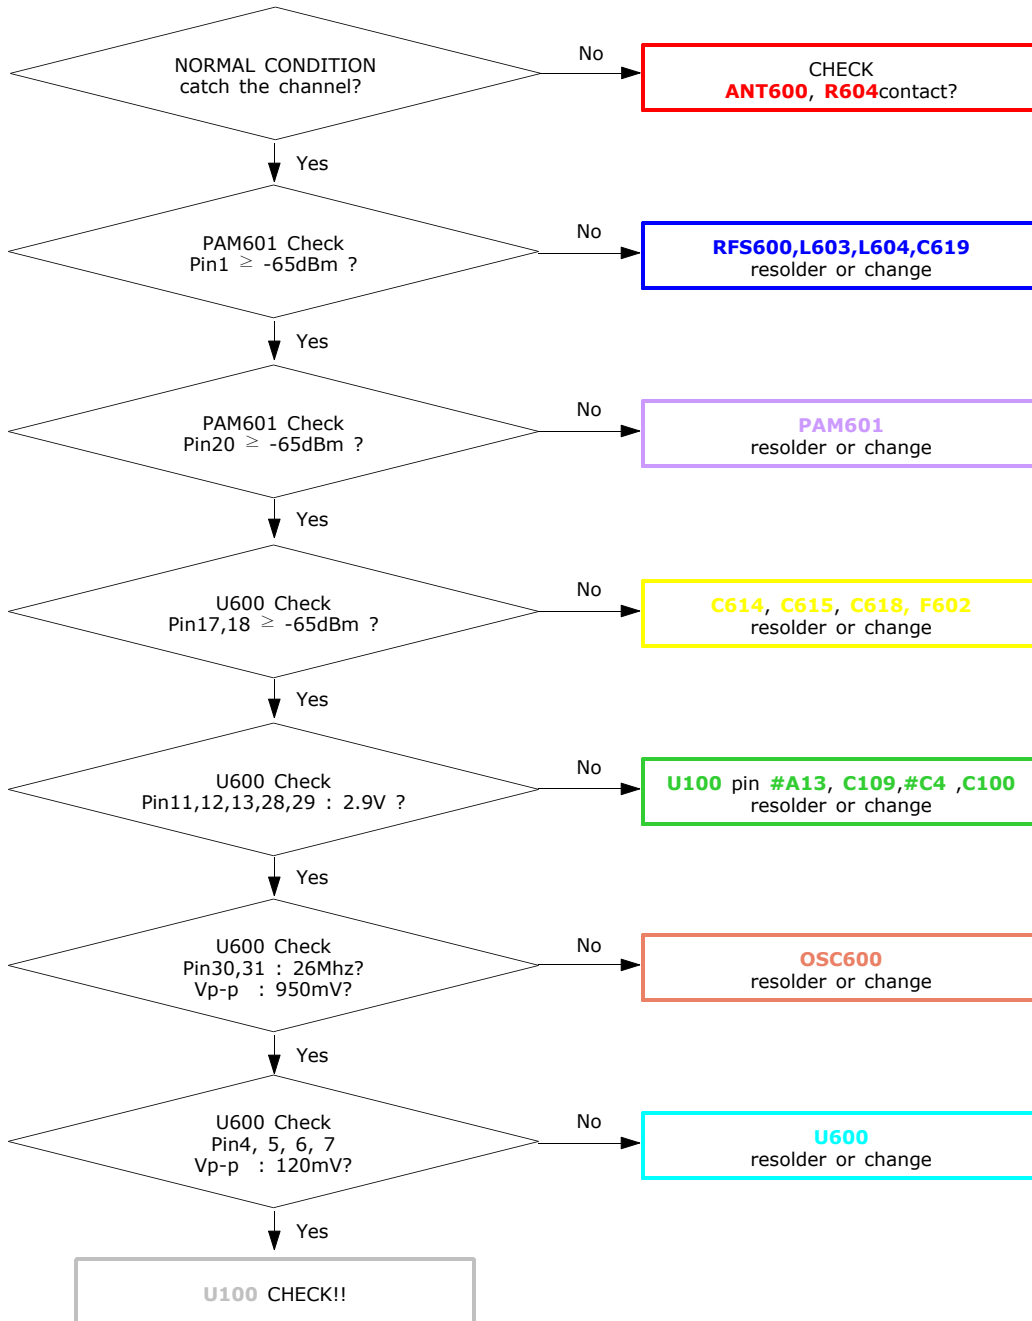

9-2-4. EGSM TX

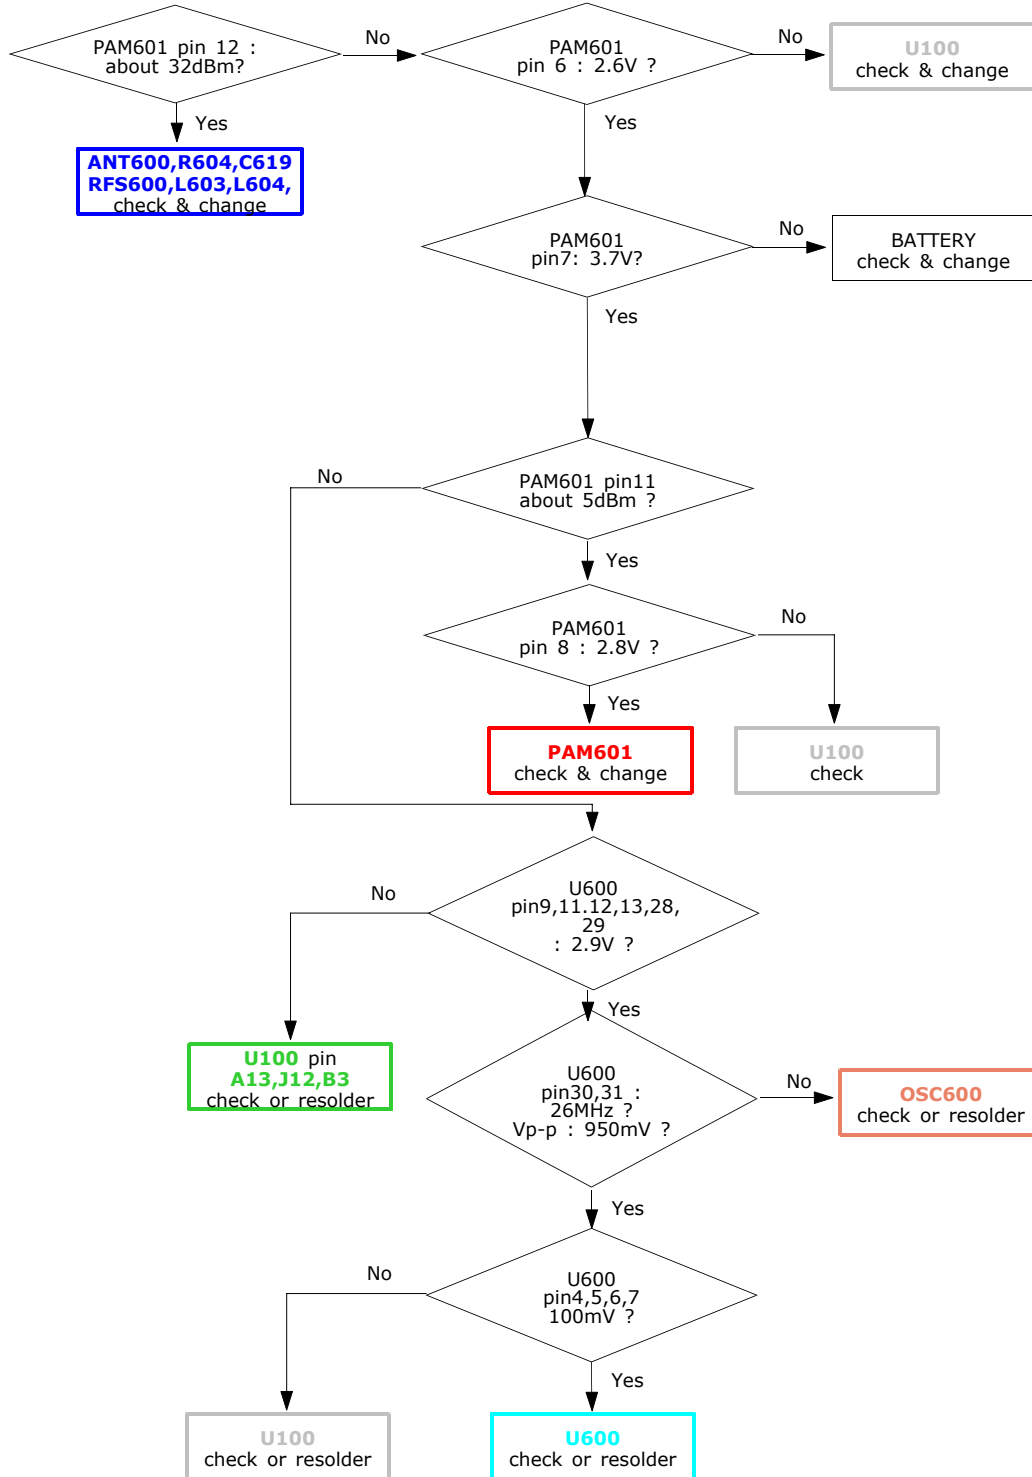

9-2-5. DCS TX

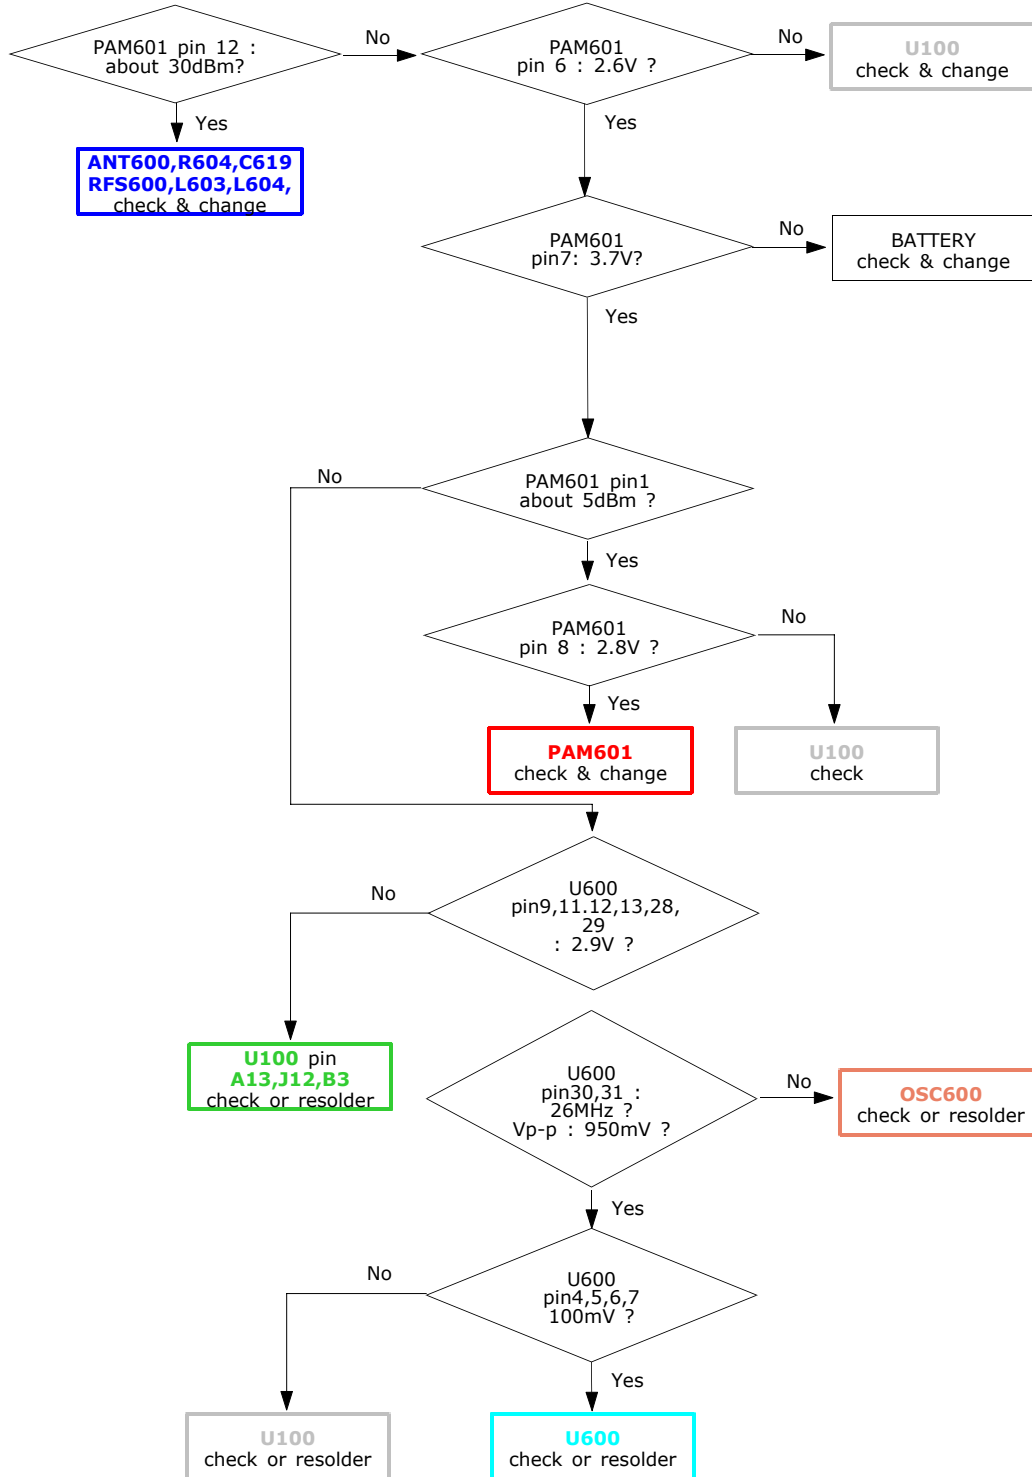

9-2-6. PCS TX

