

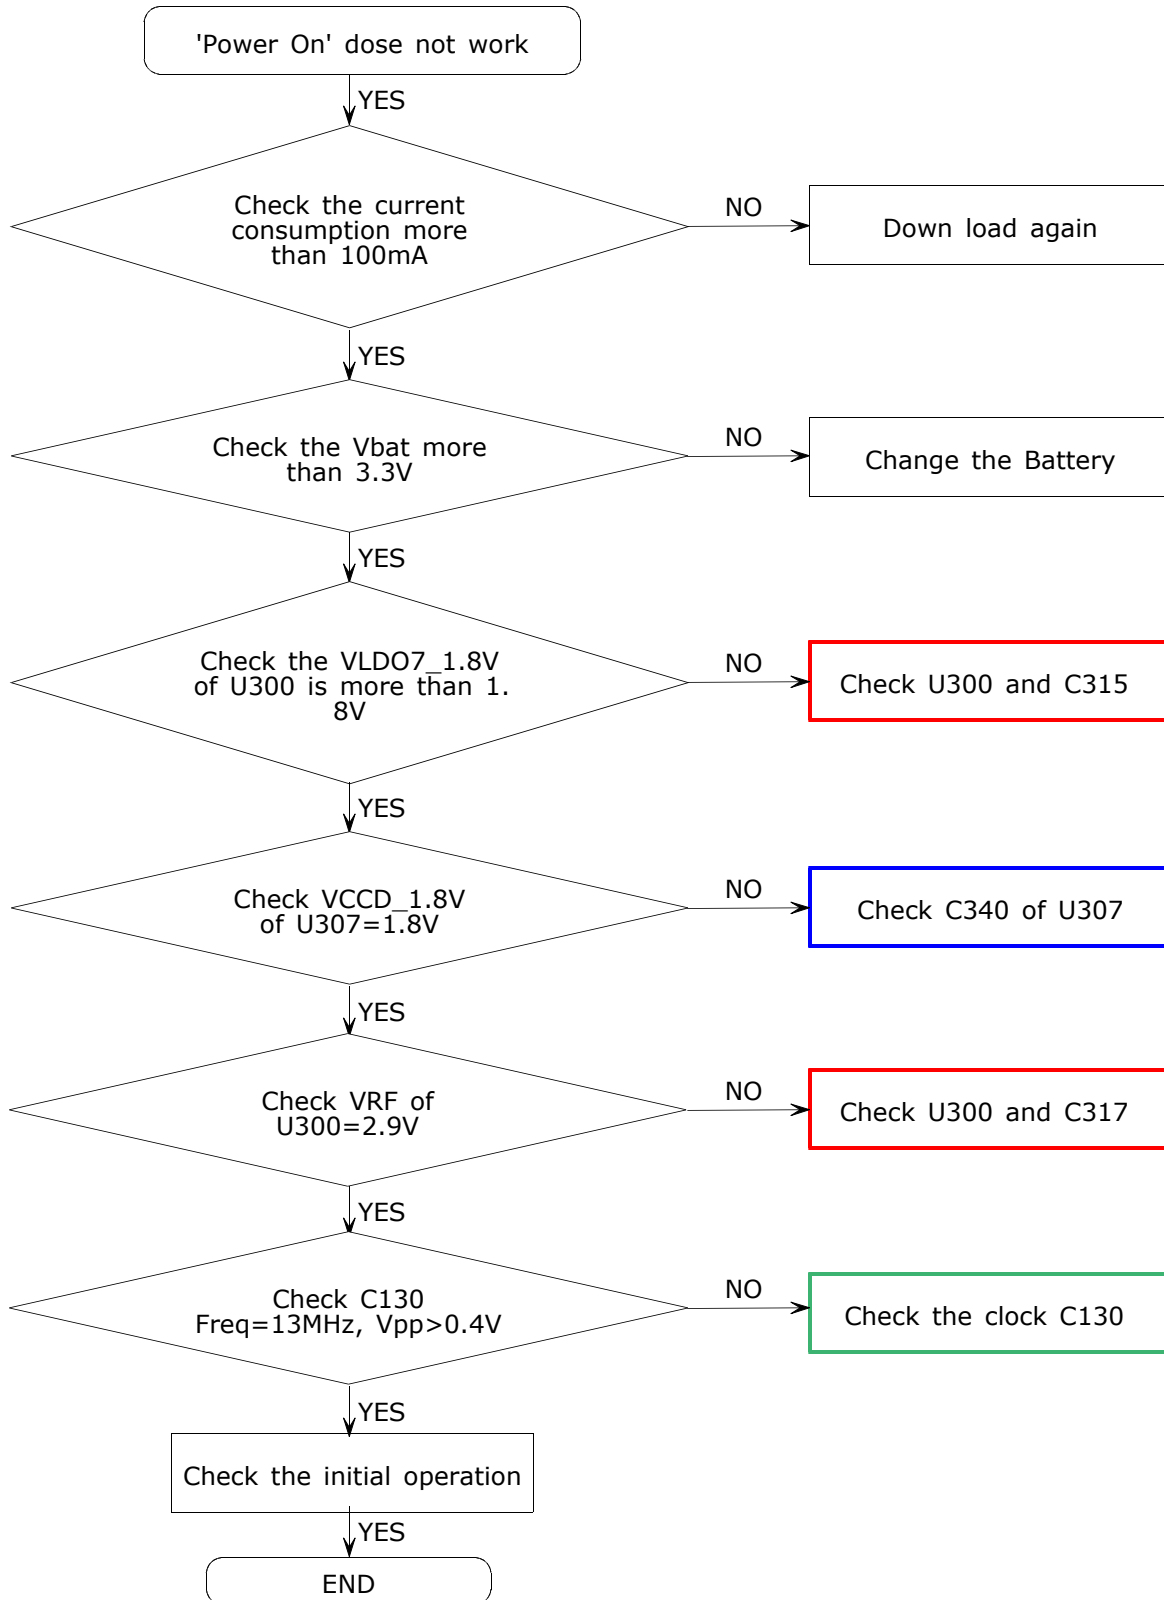




# 9. Flow Chart of Troubleshooting

## 9-1.Baseband




### 9-1-1. Power ON

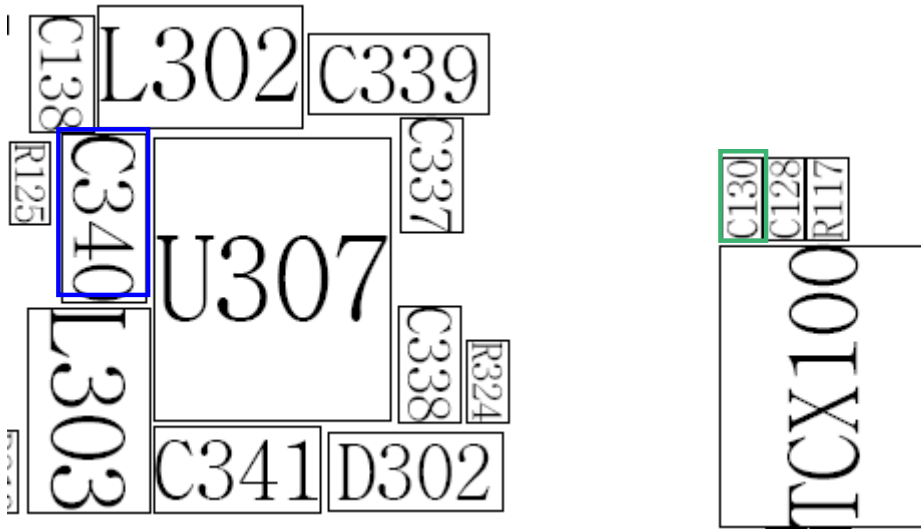


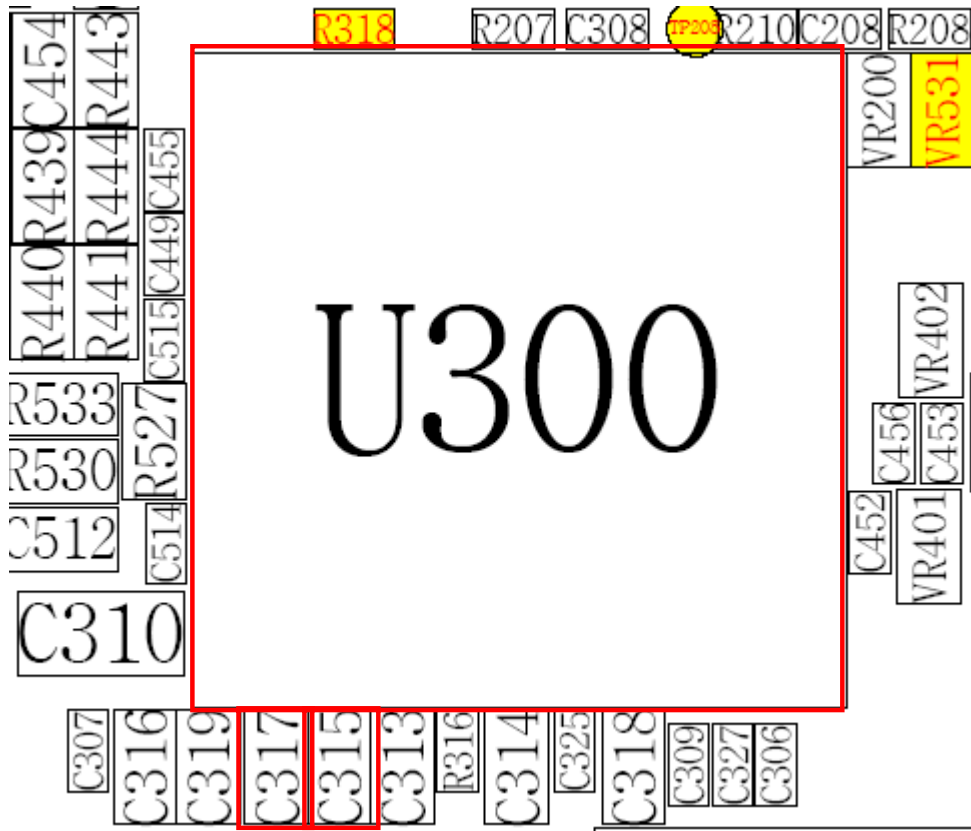


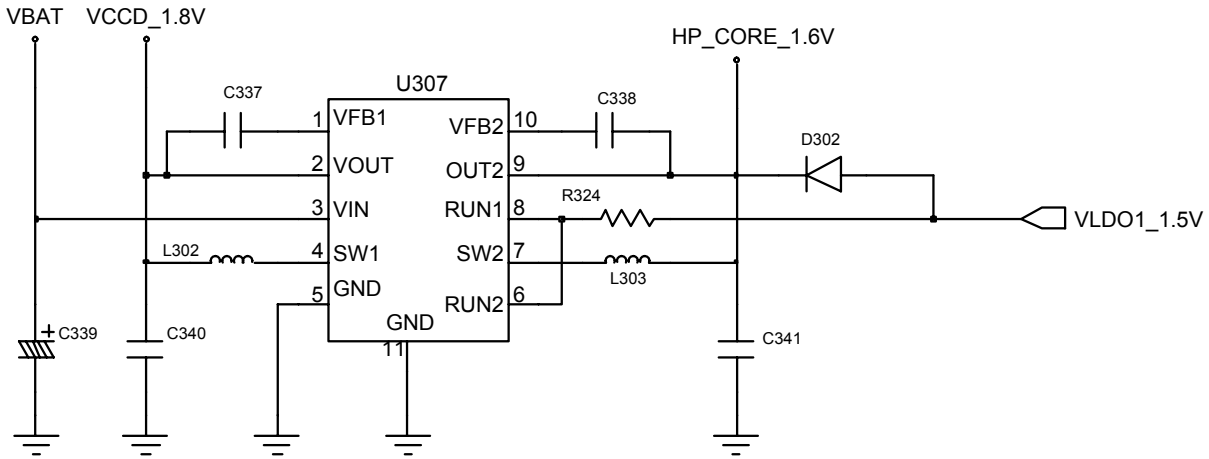
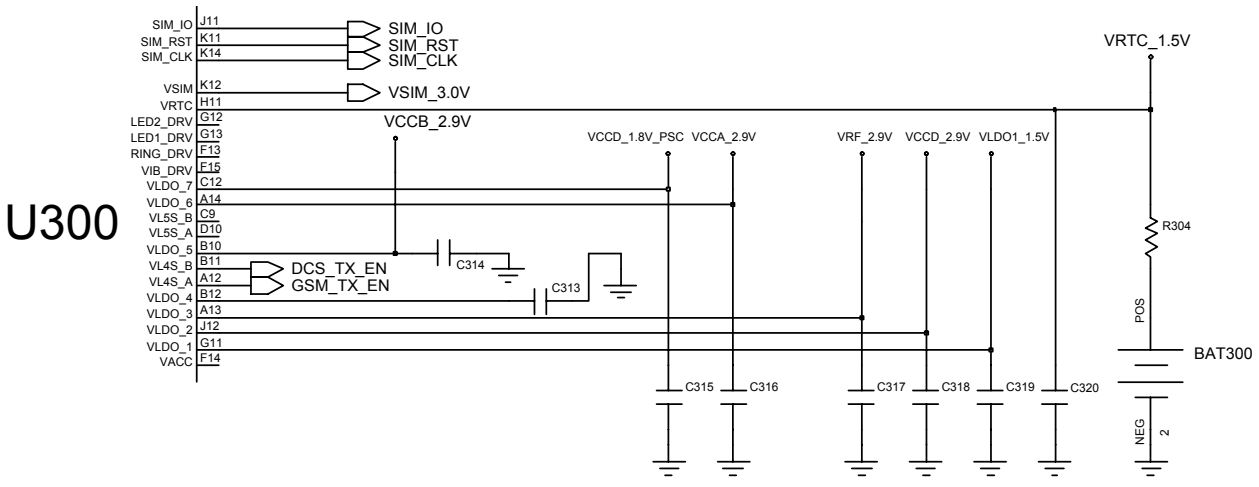


**9-1-2. Initial**

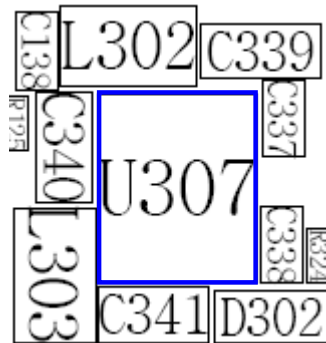
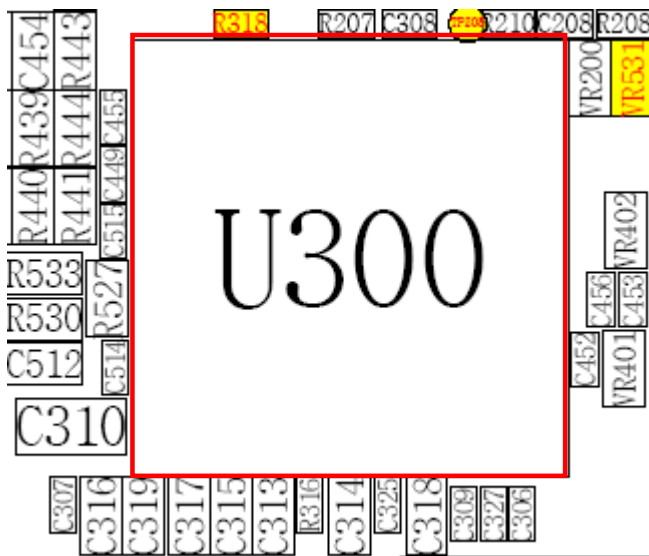
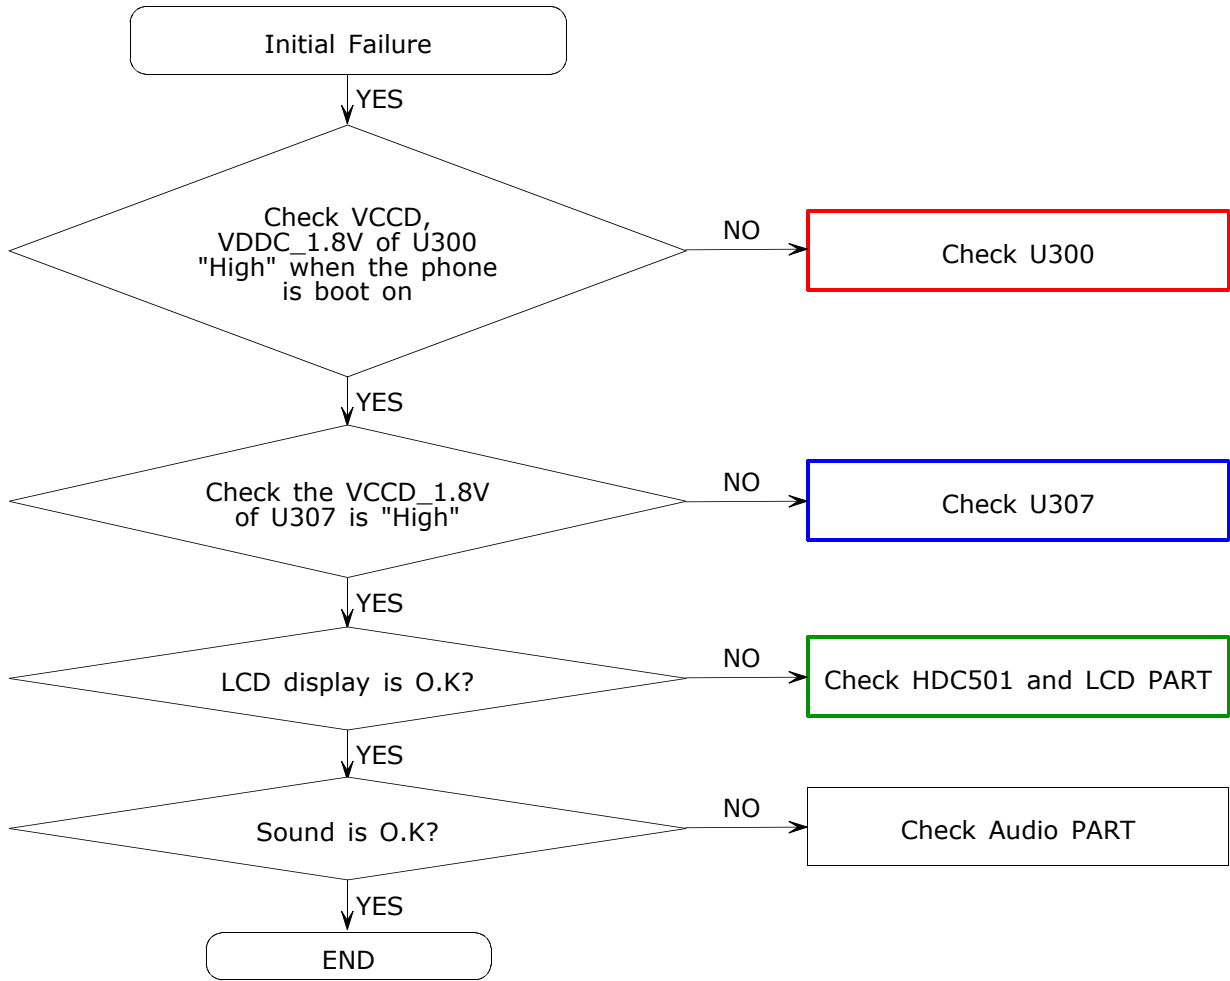


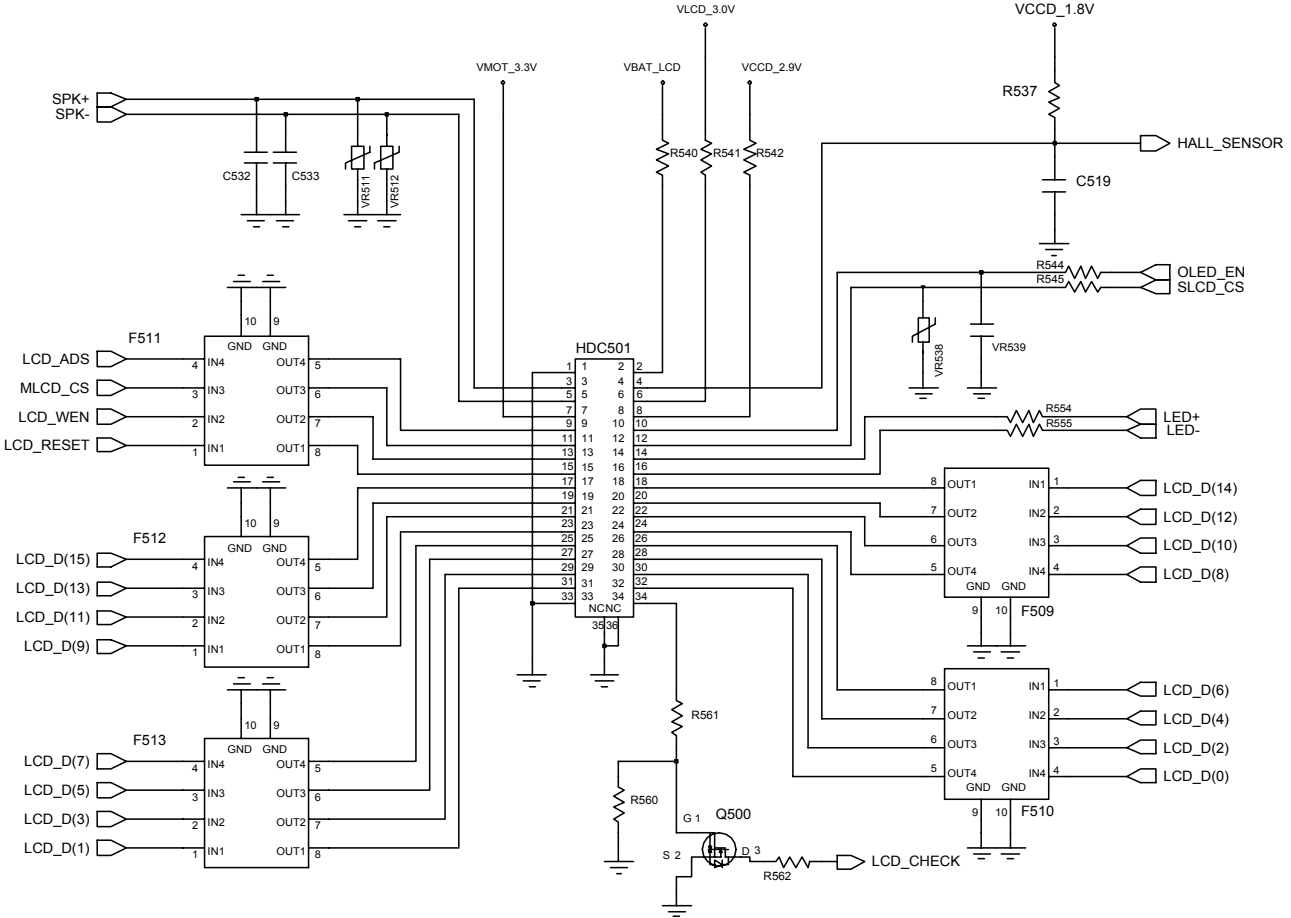



### 9-1-3. Sim Part

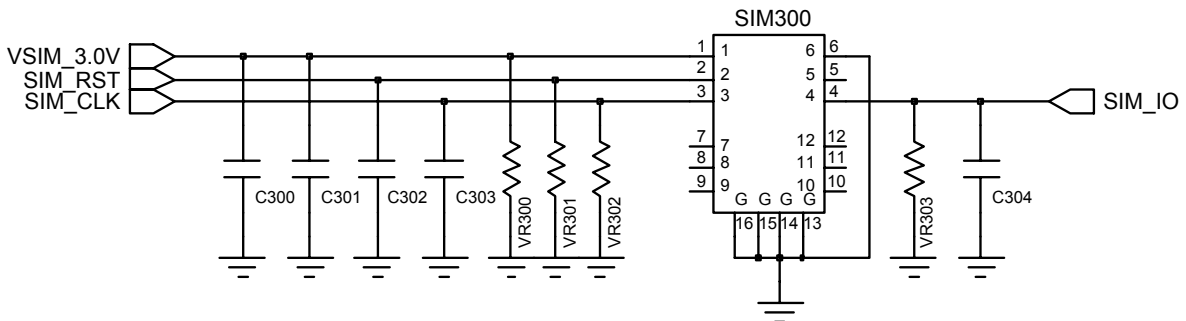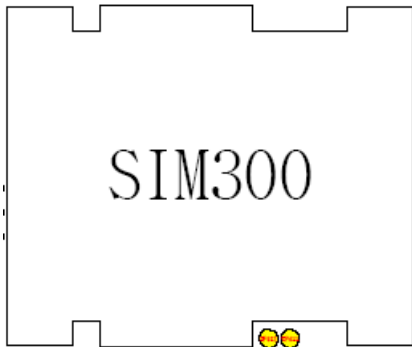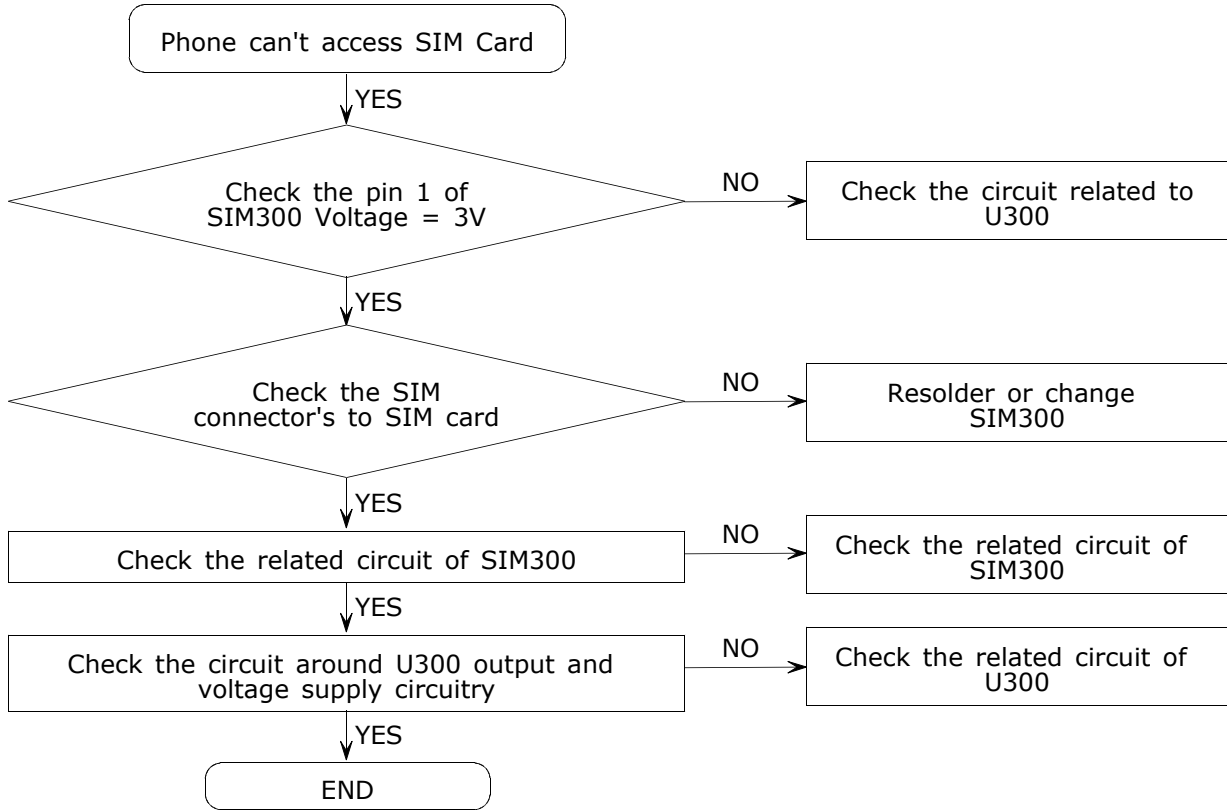



### 9-1-4. Charging Part

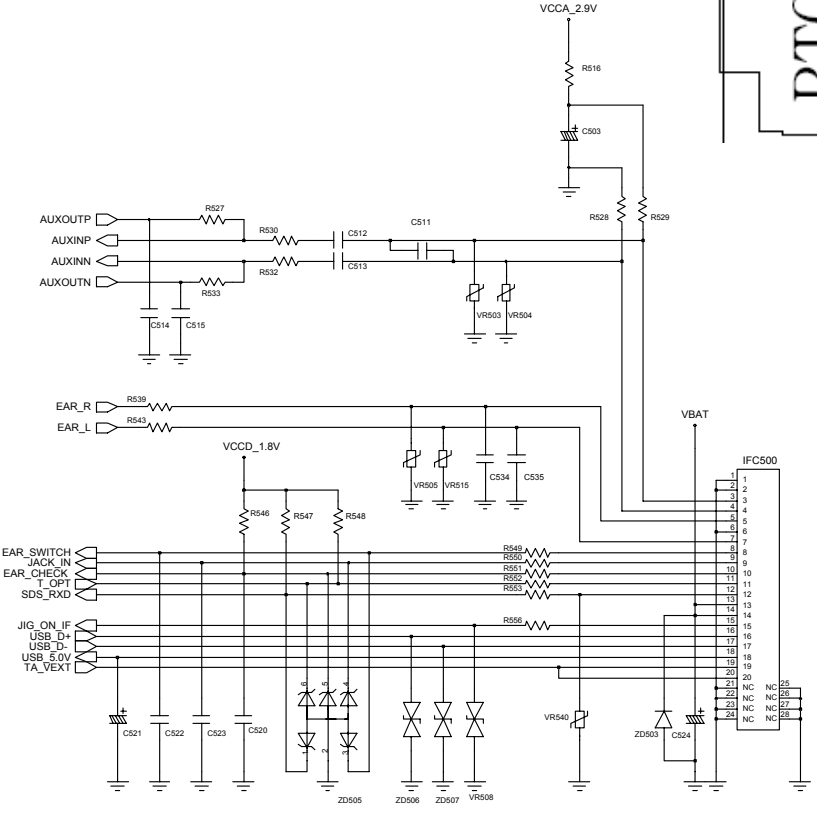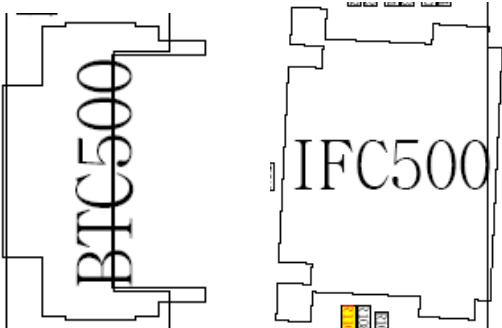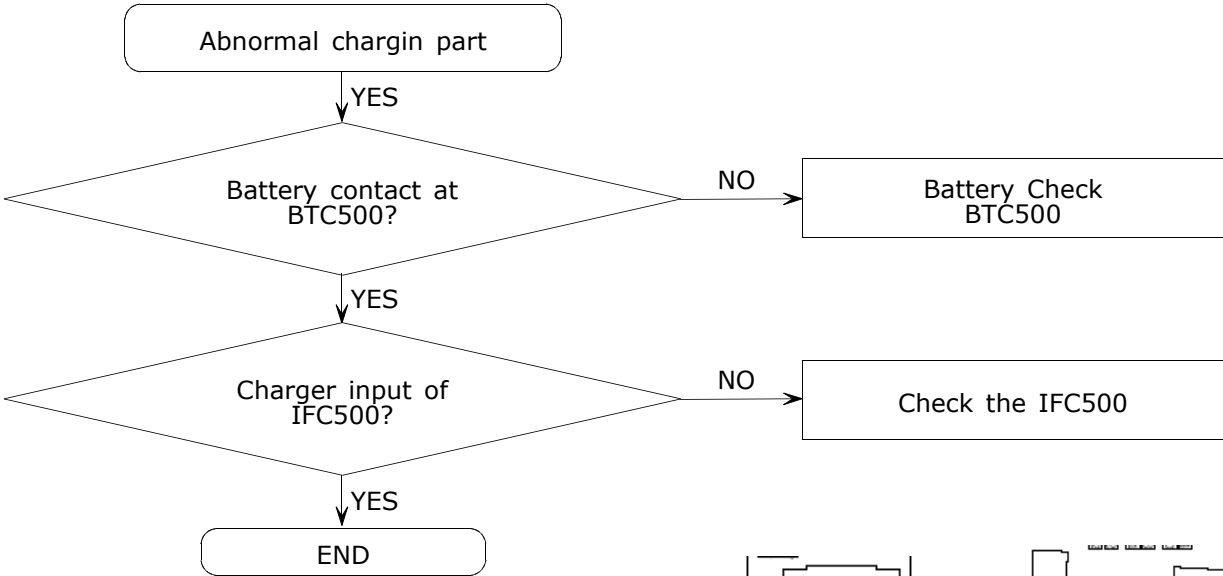


### 9-1-5. Microphone Part

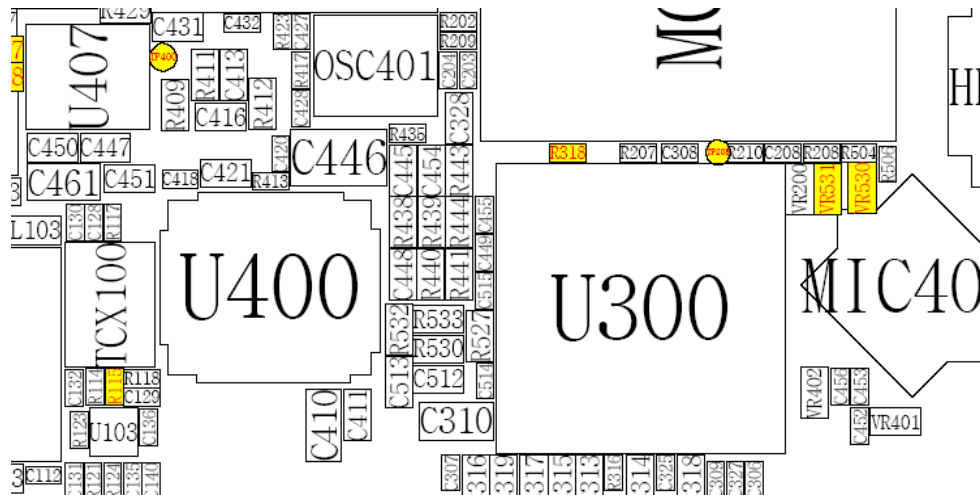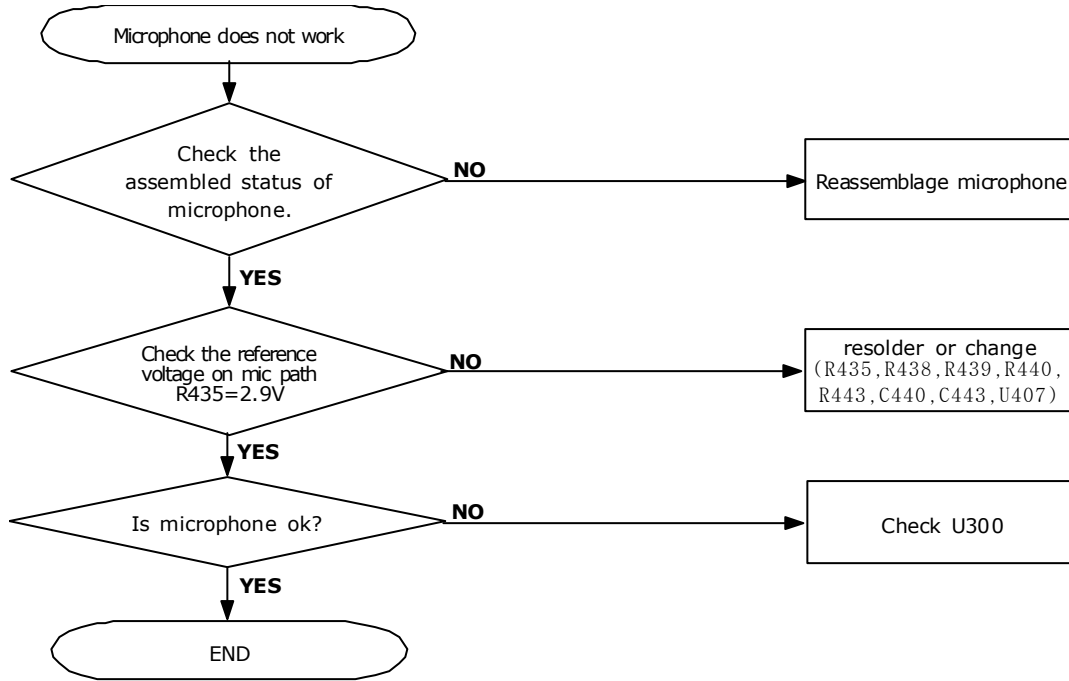




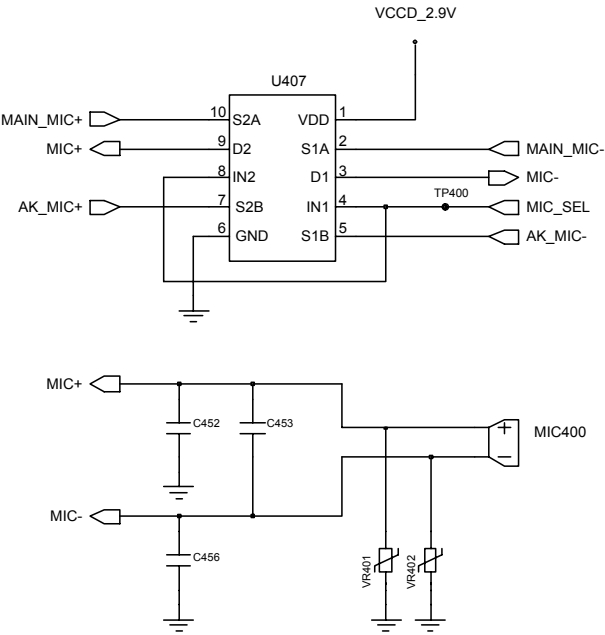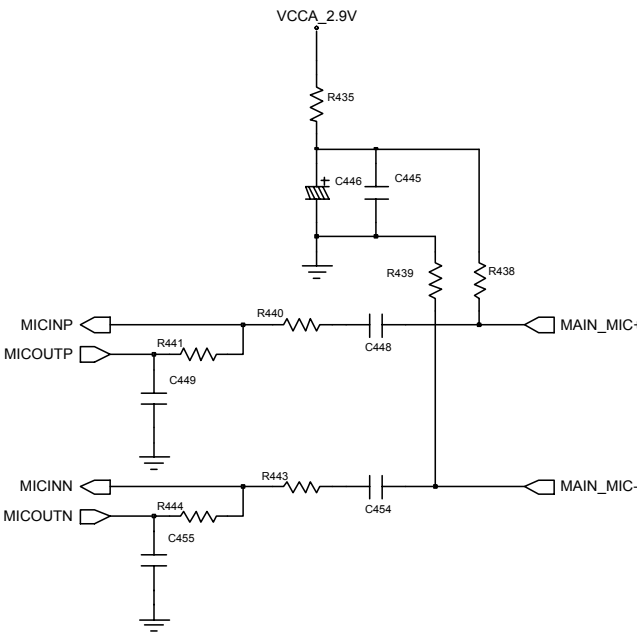


### 9-1-6. Speaker Part

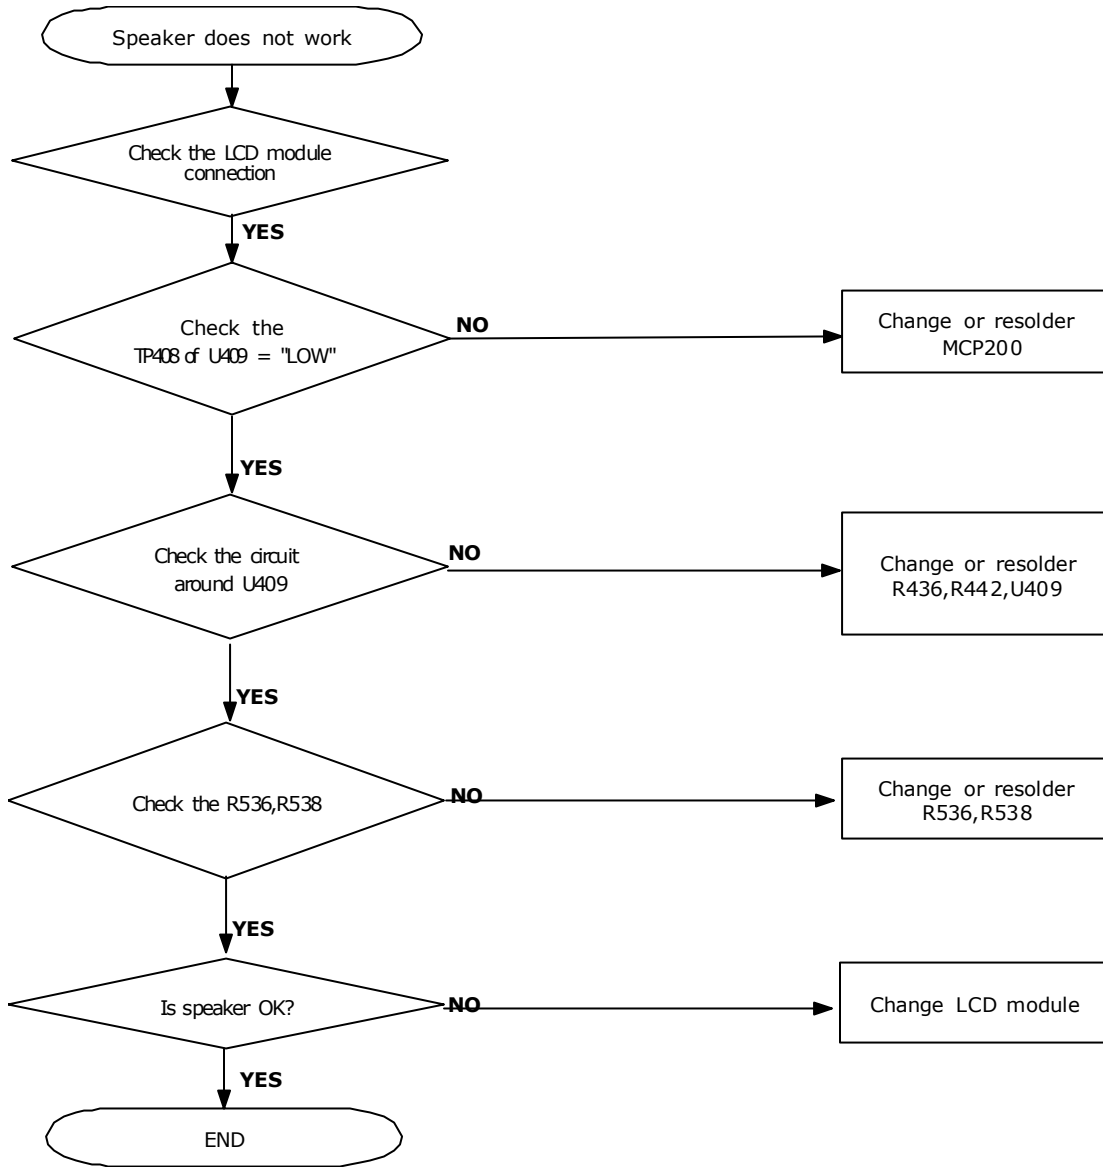






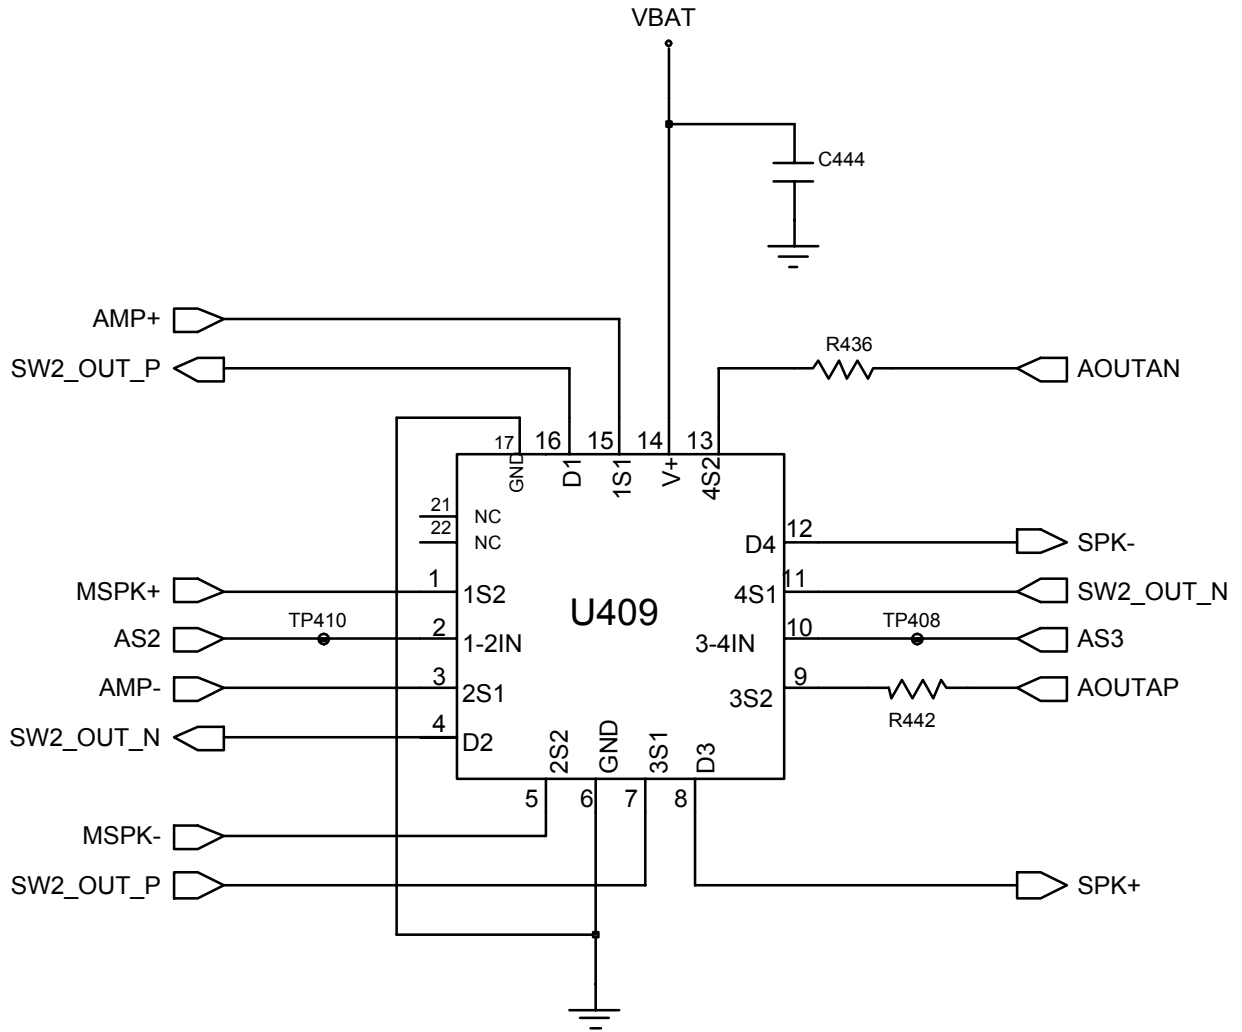




### 9-1-7. Camera Part

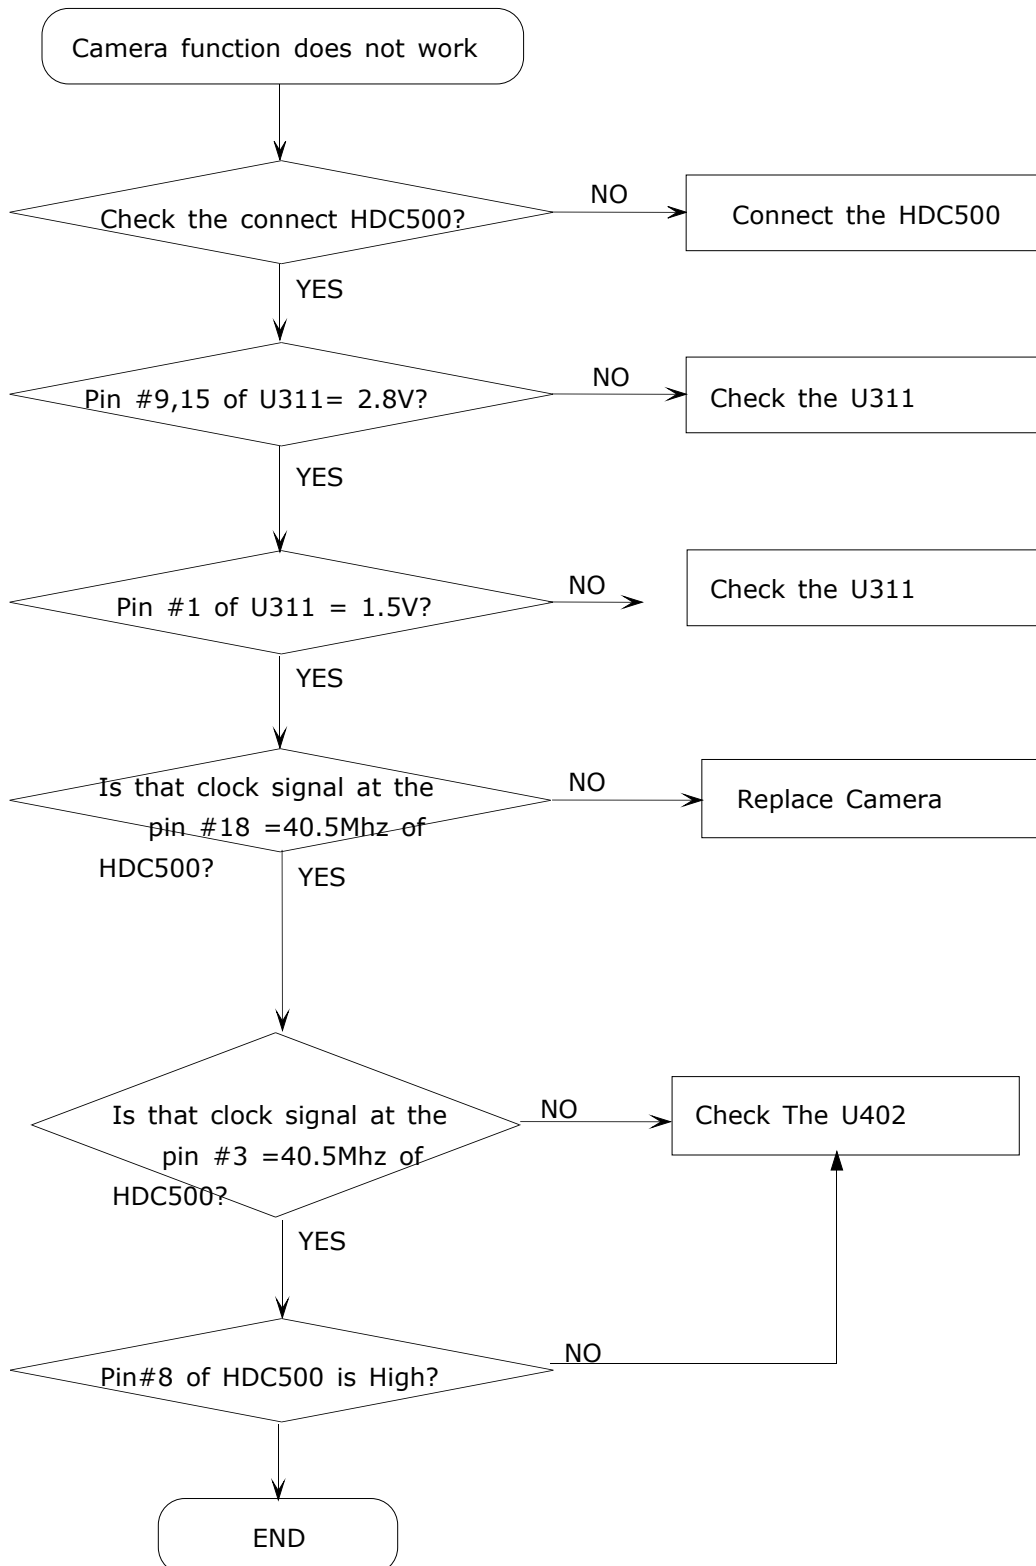

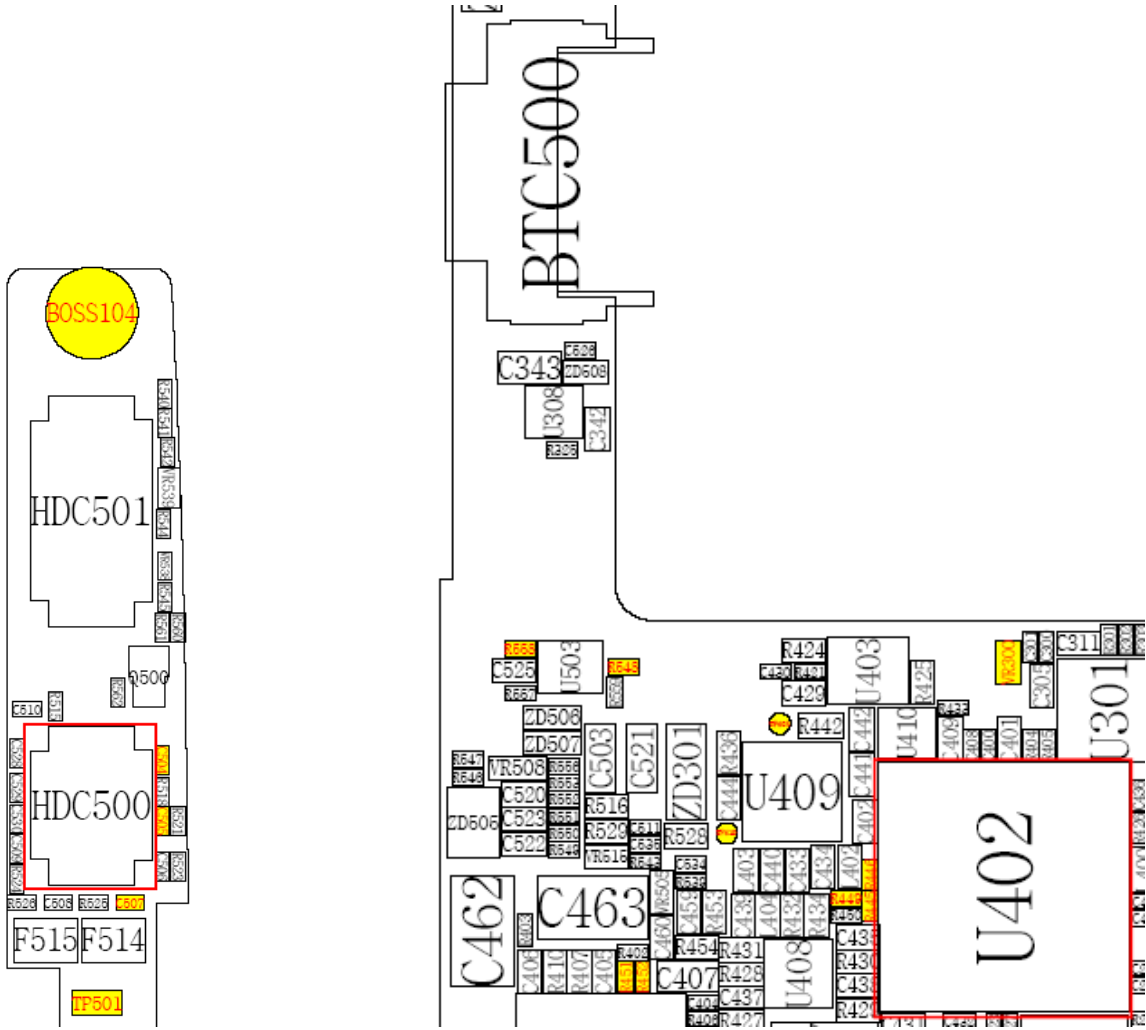


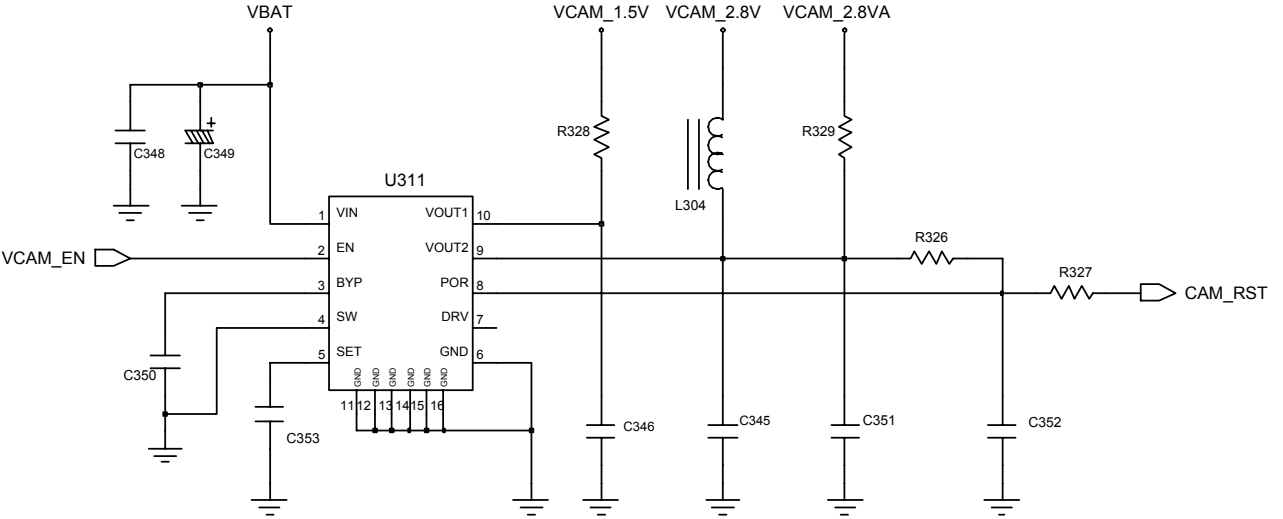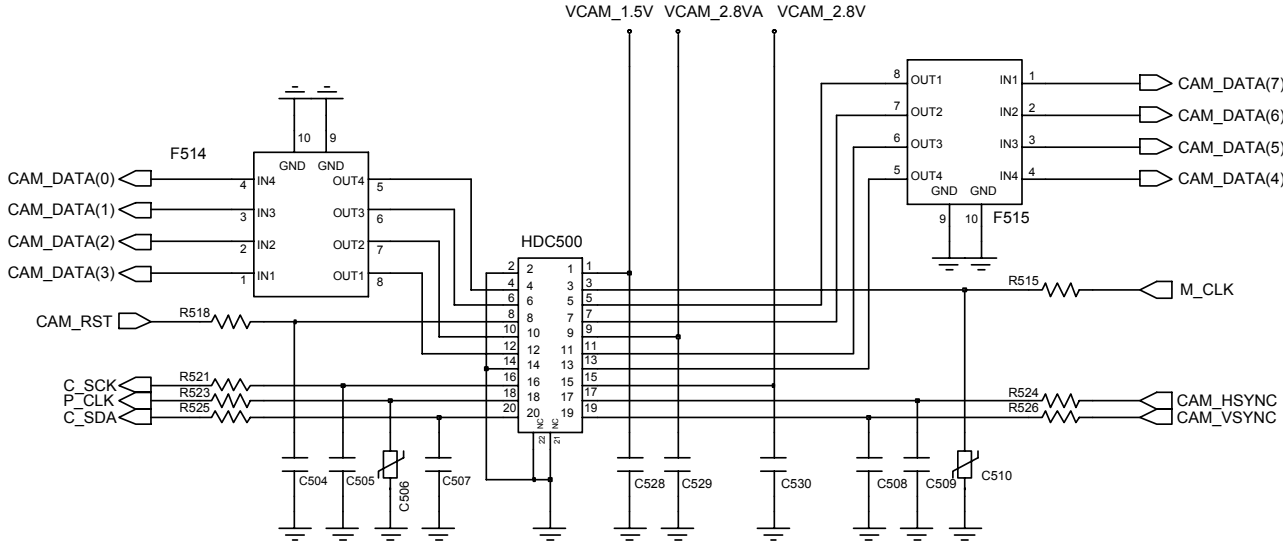

### 9-1-8. LCD

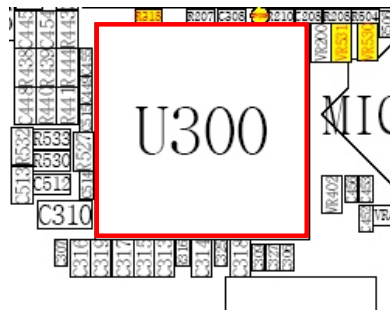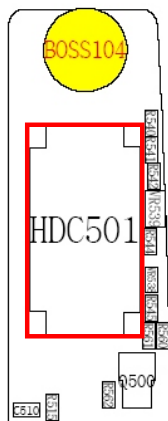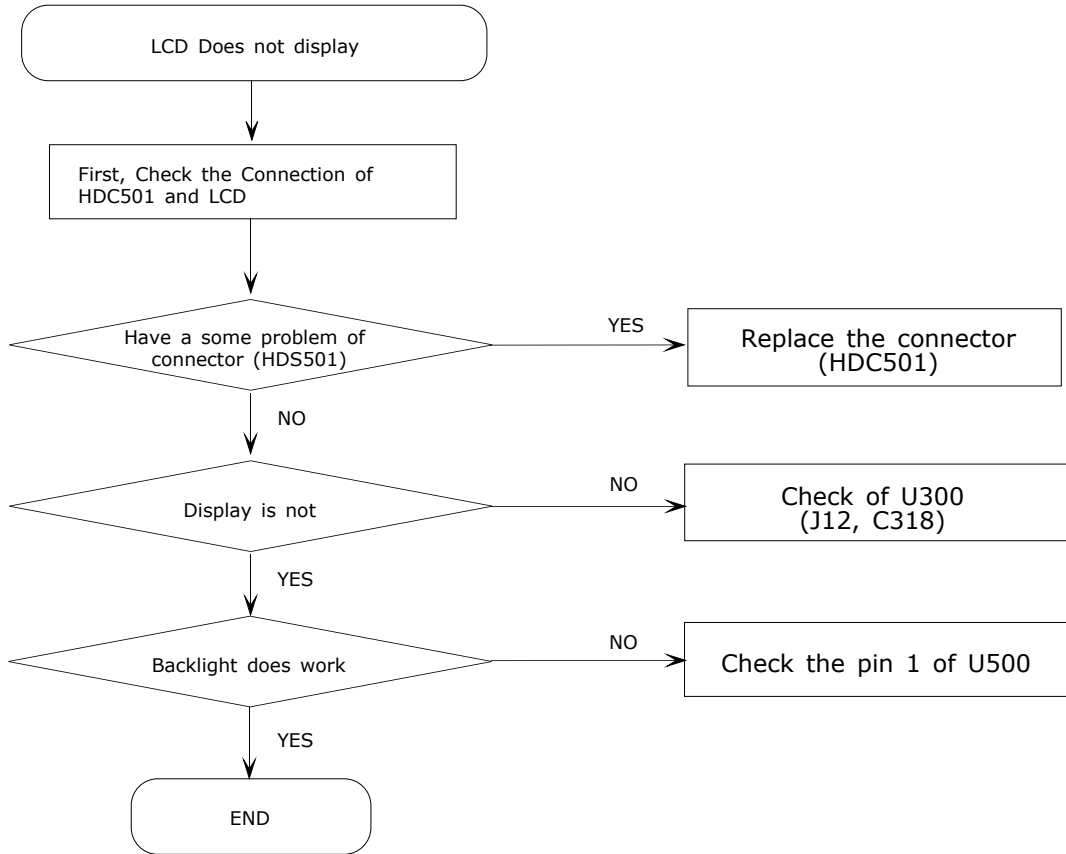




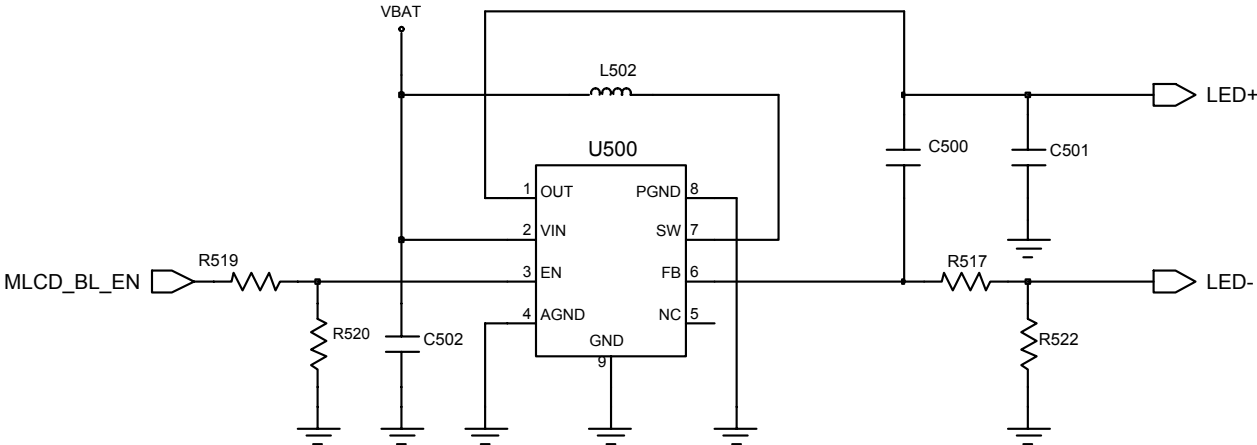


## 9-2.RF


### 9-2-1. EGSM RX


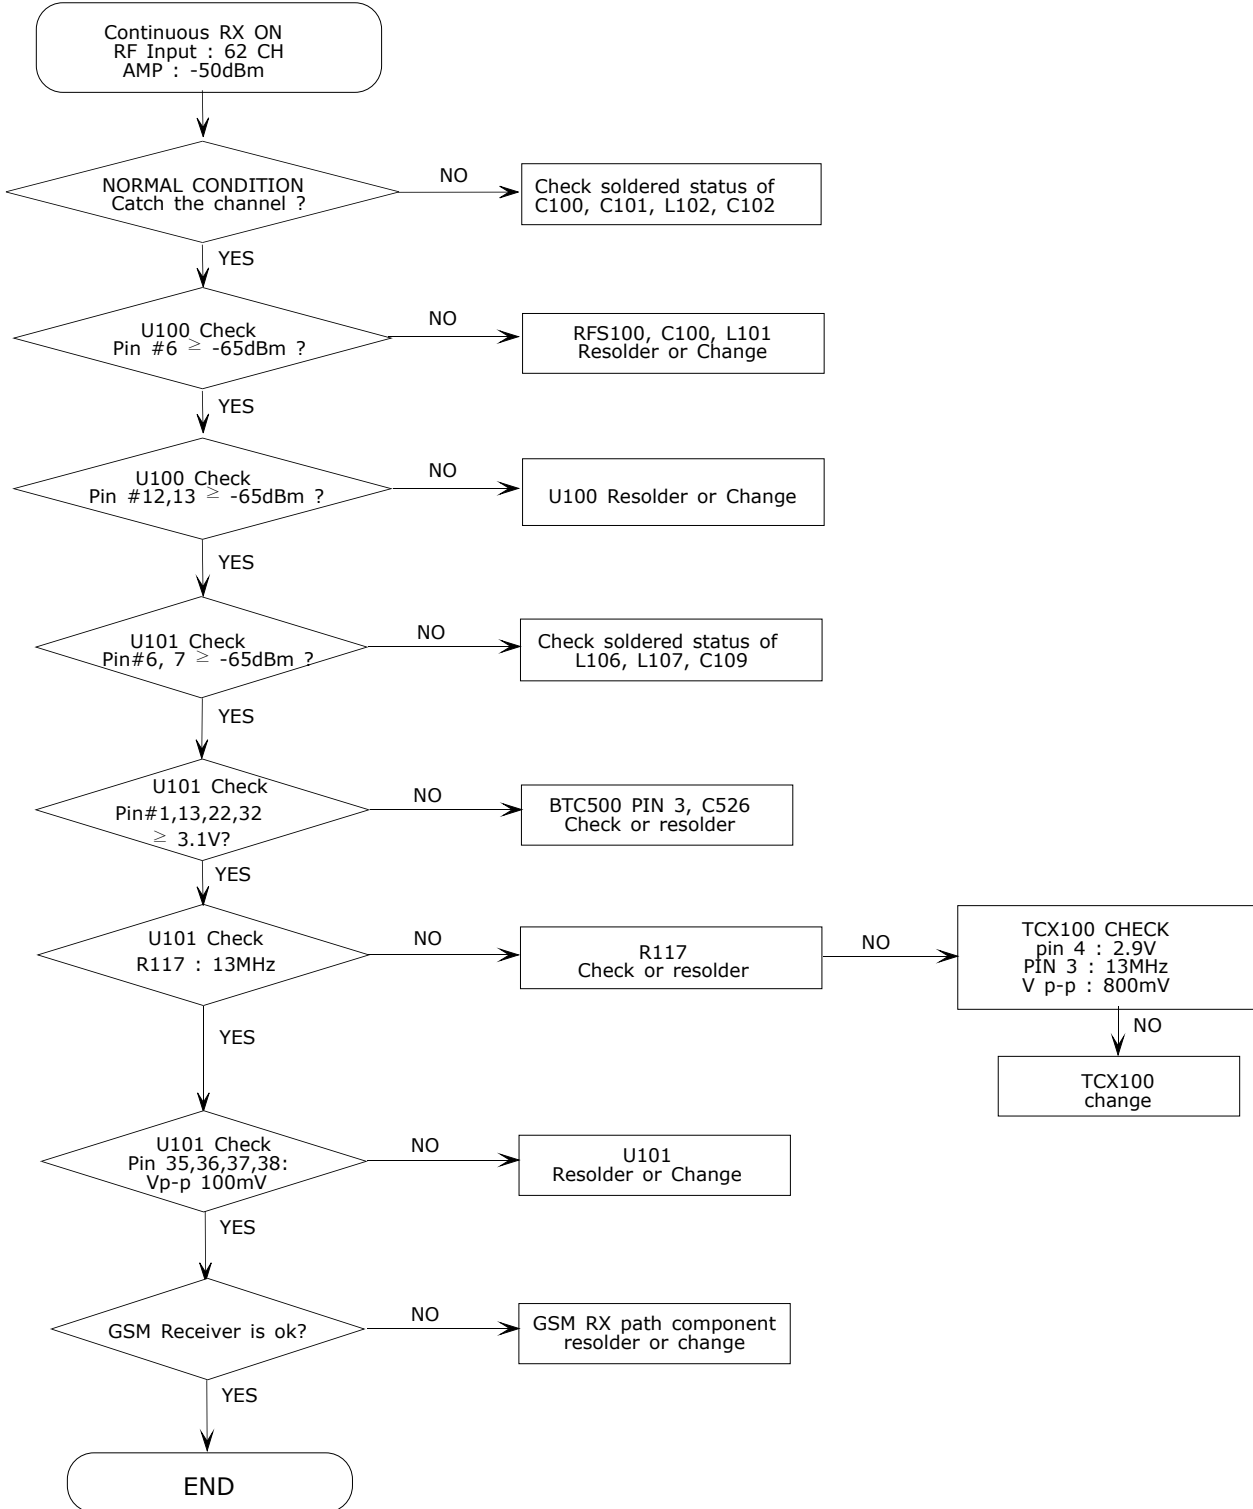


### 9-2-2. DCS RX

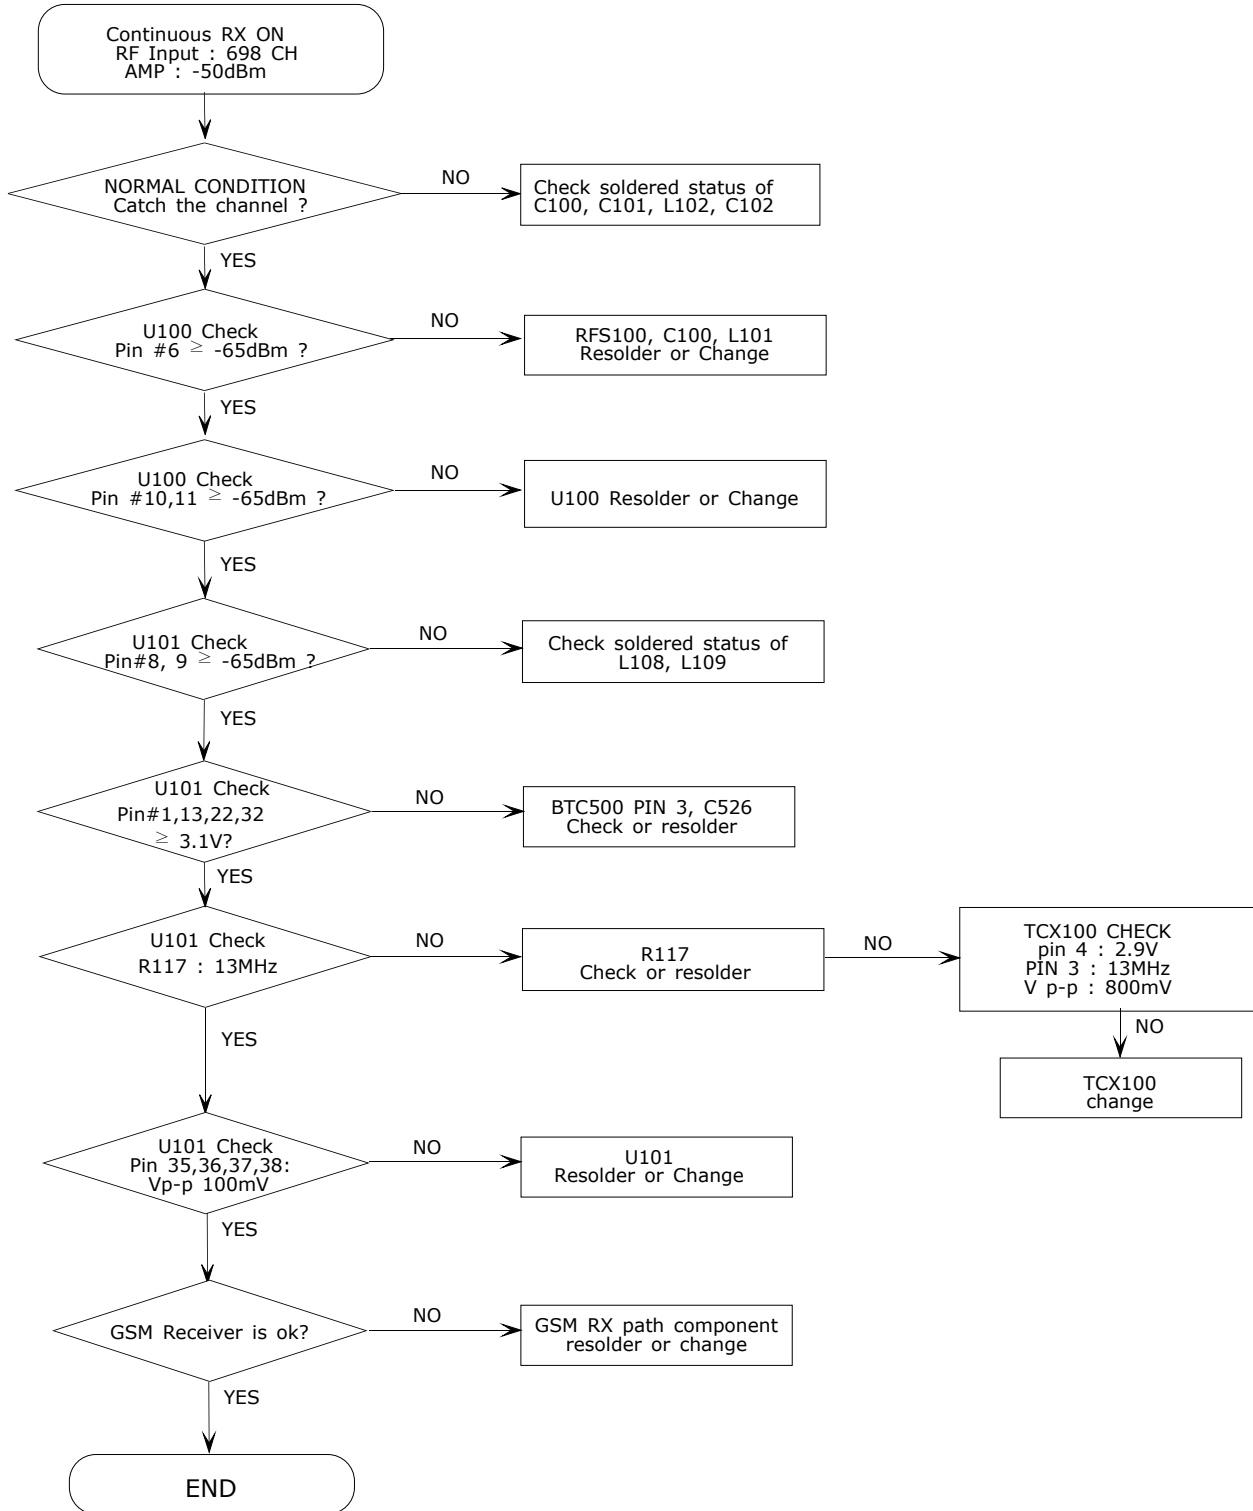


### 9-2-3. PCS RX

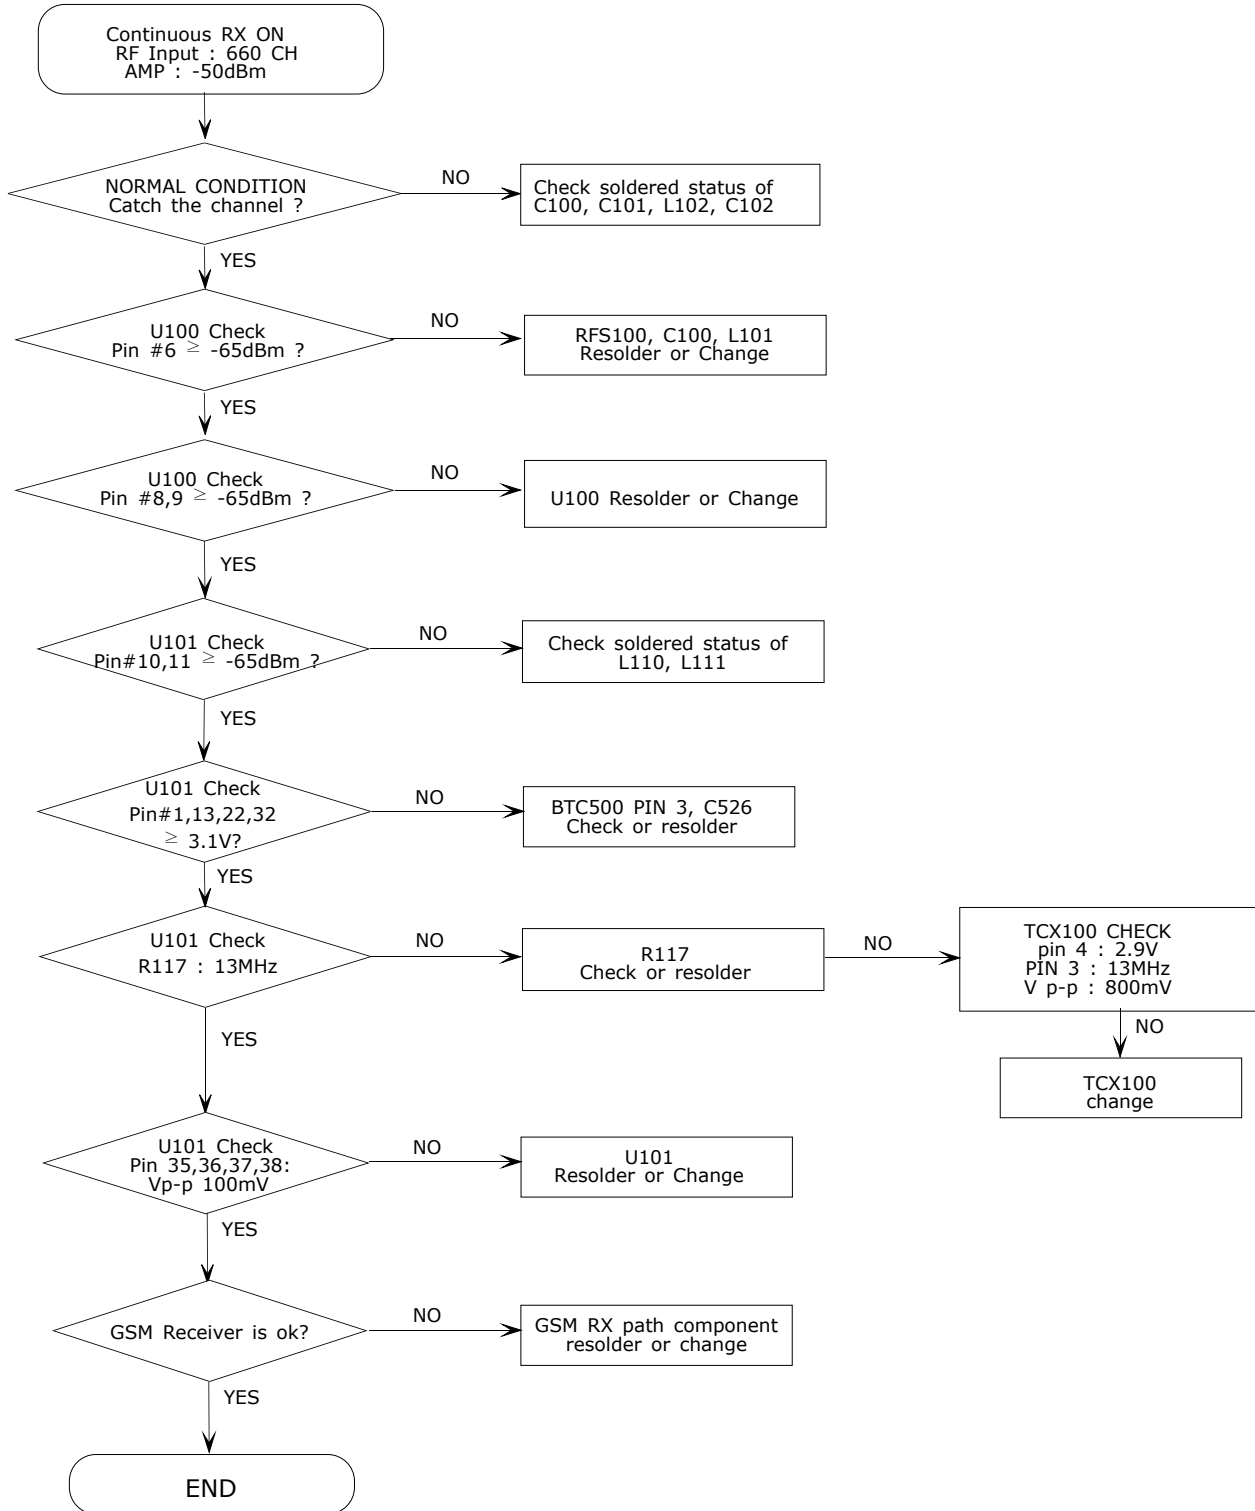


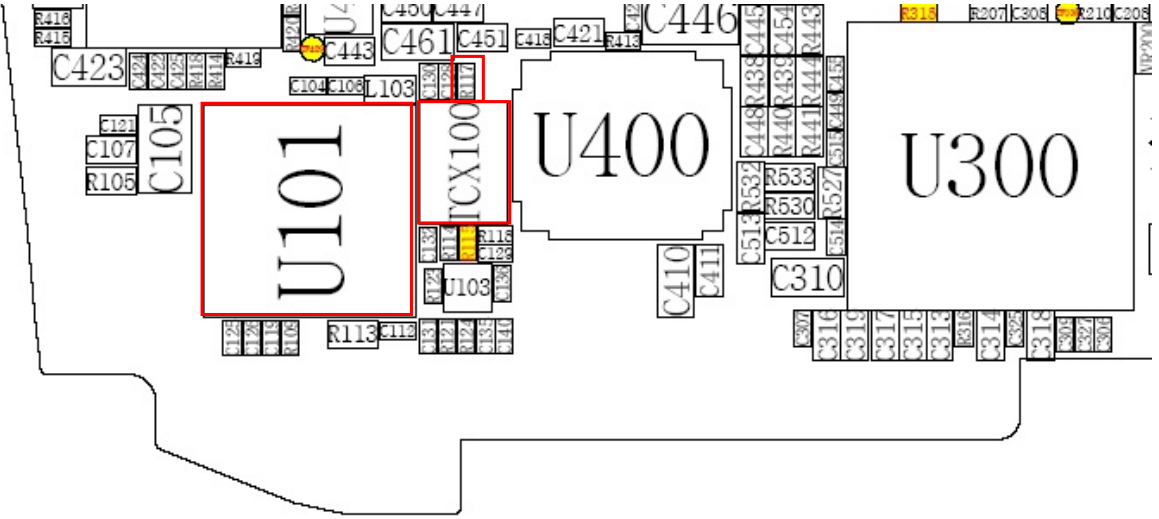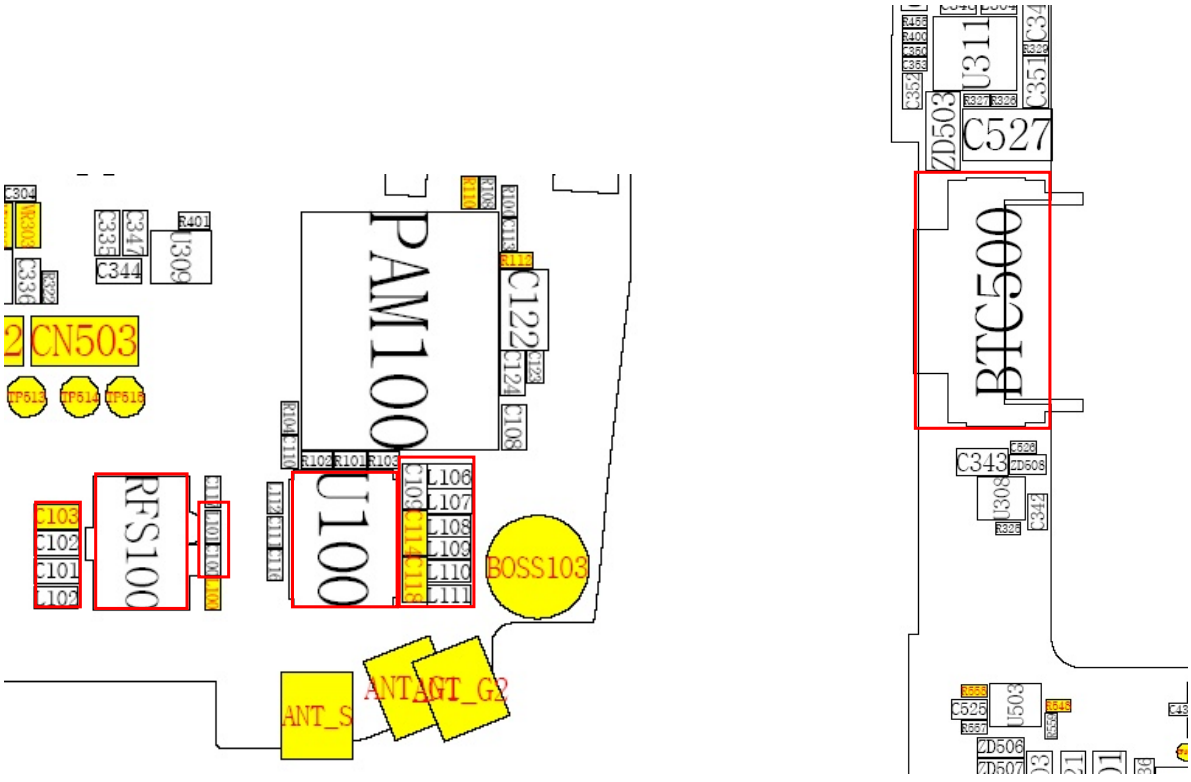

### 9-2-4. EGSM TX

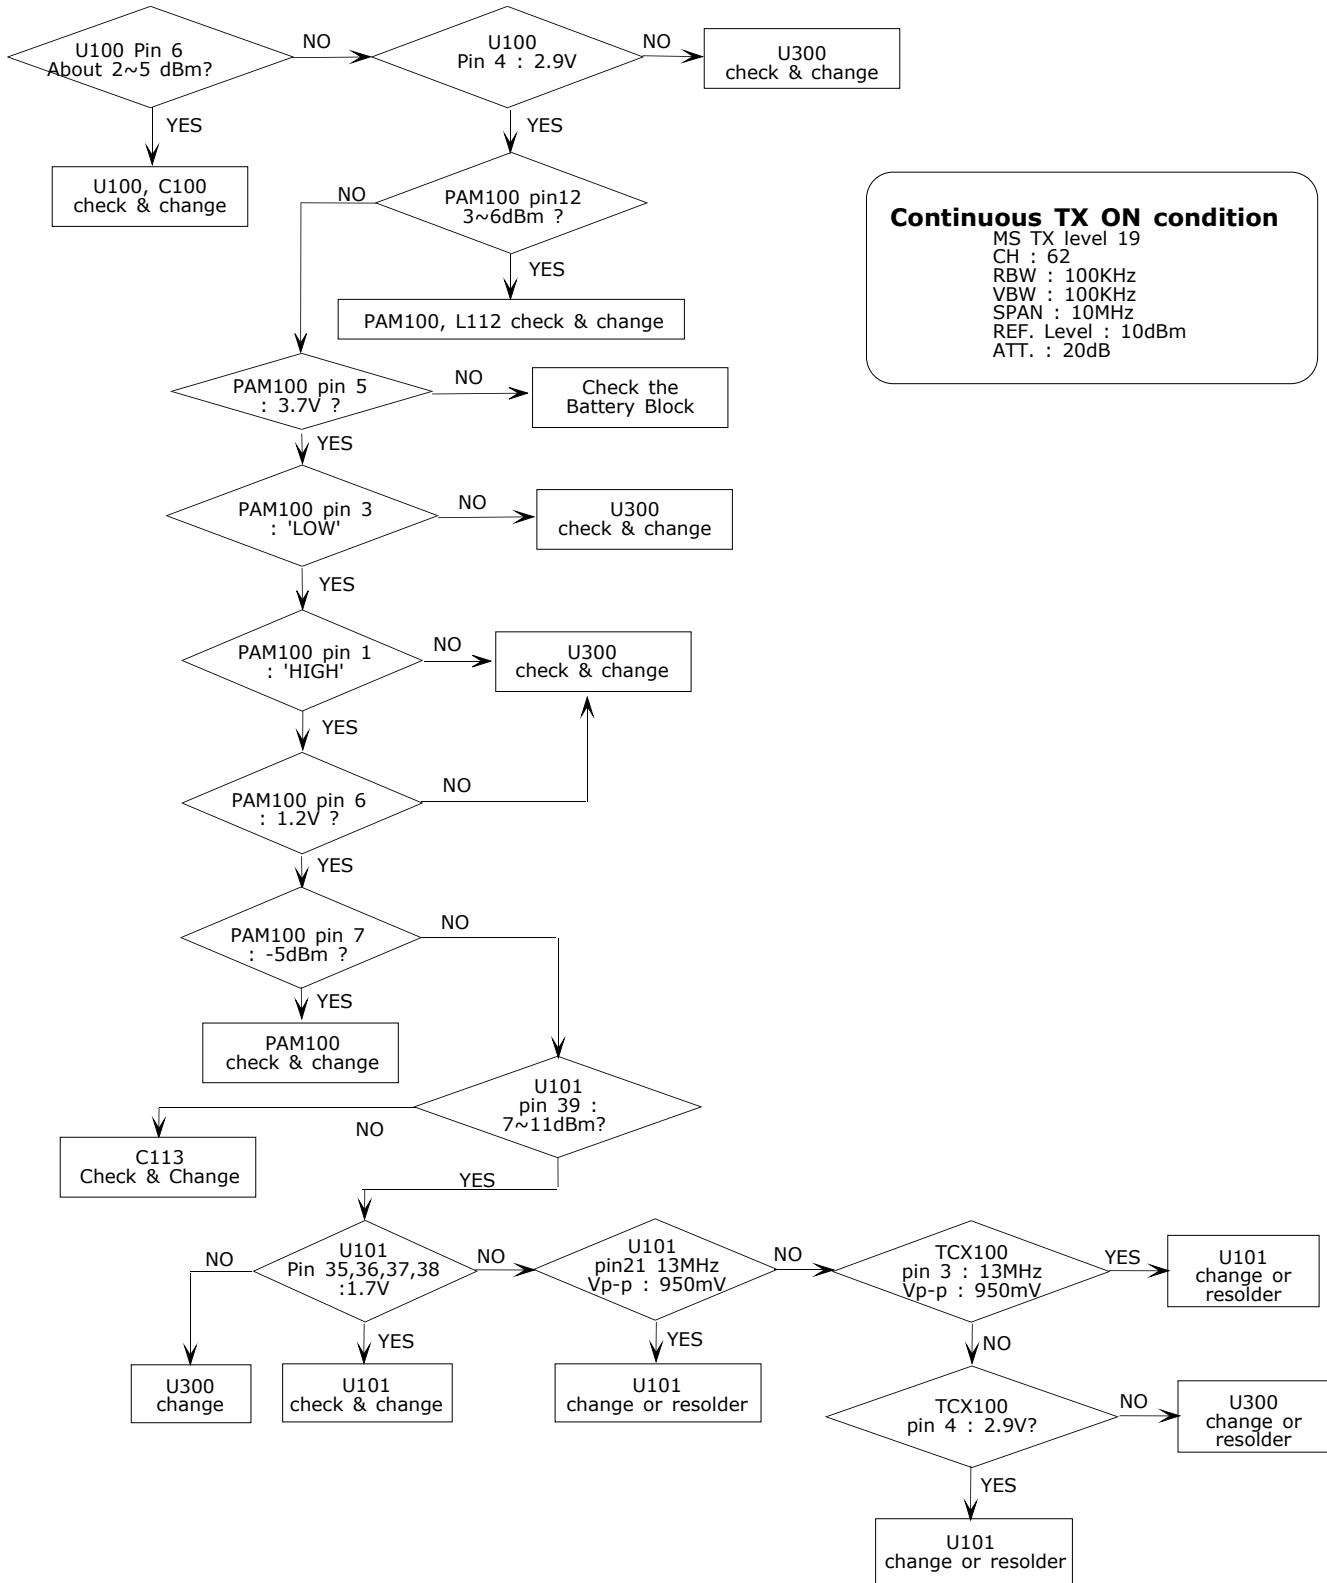


### 9-2-5. DCS & PCS TX

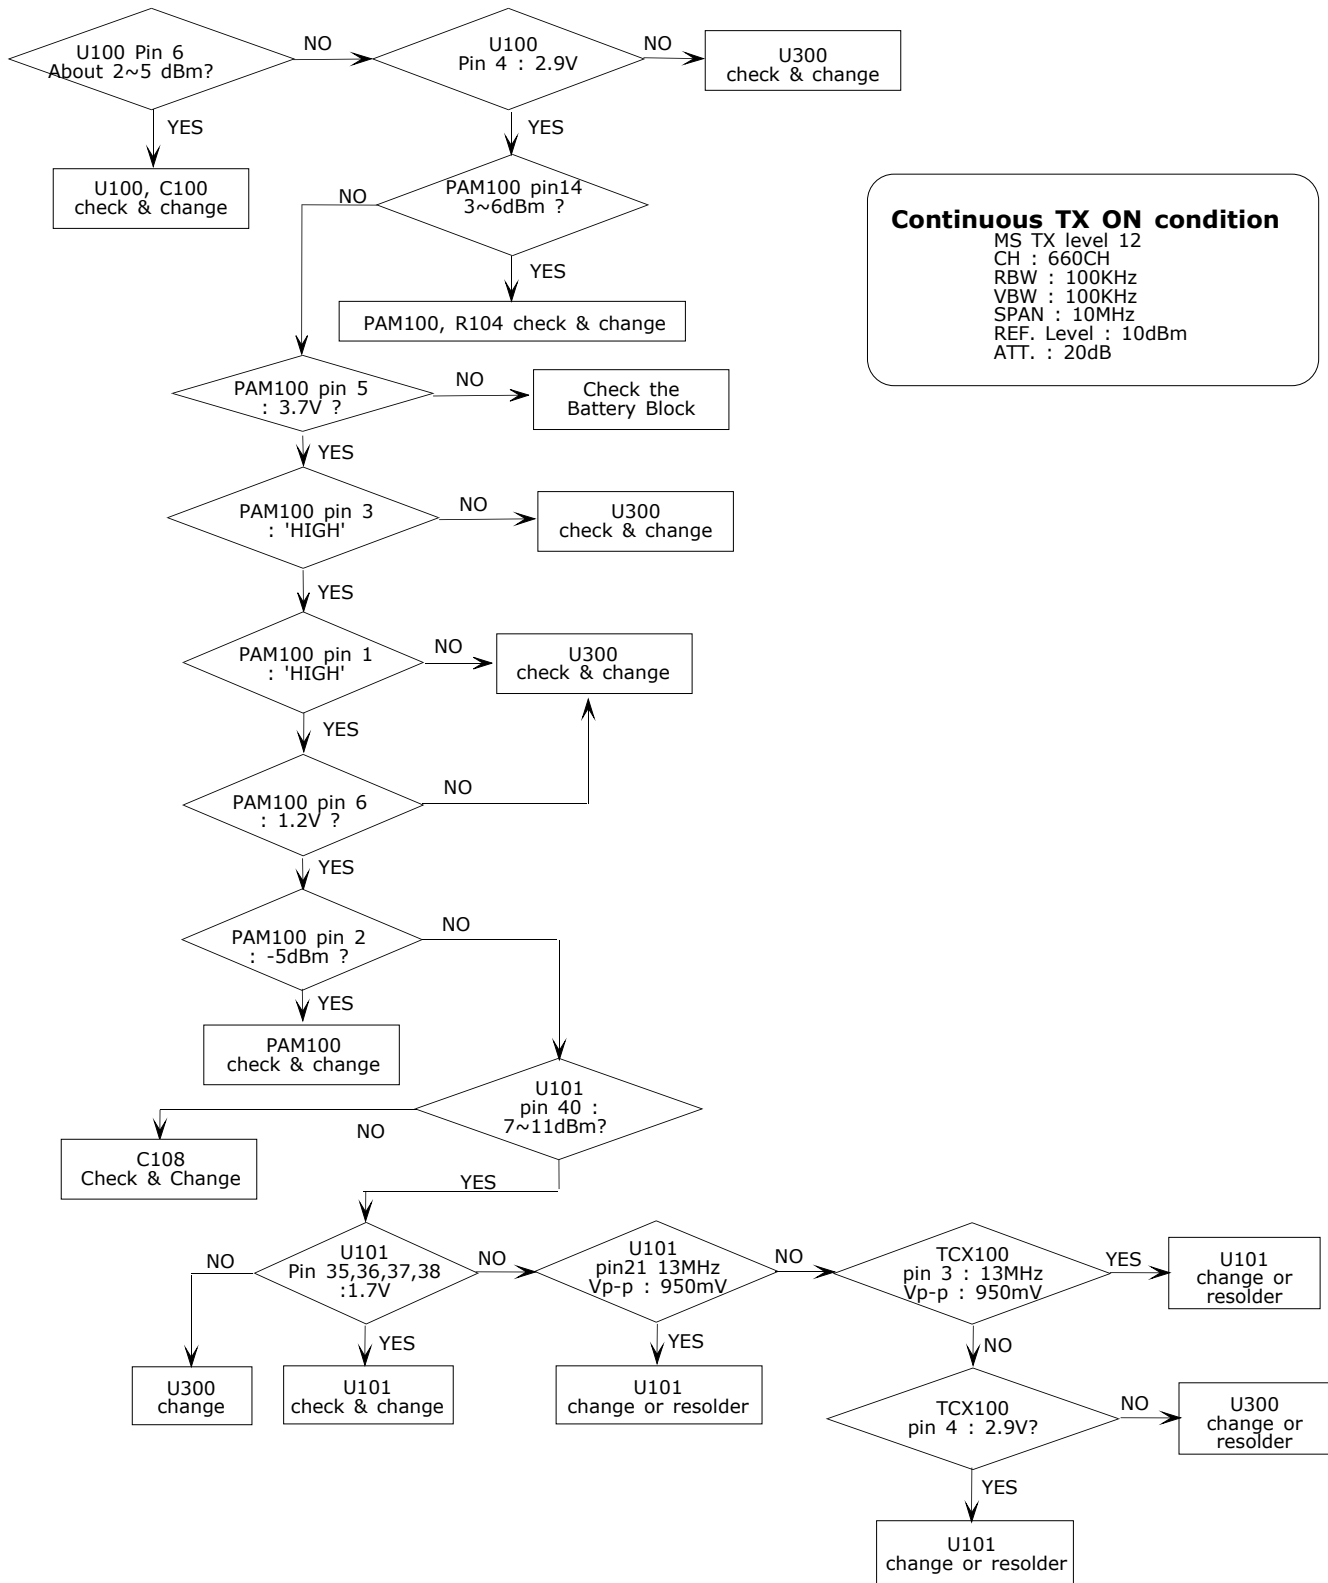







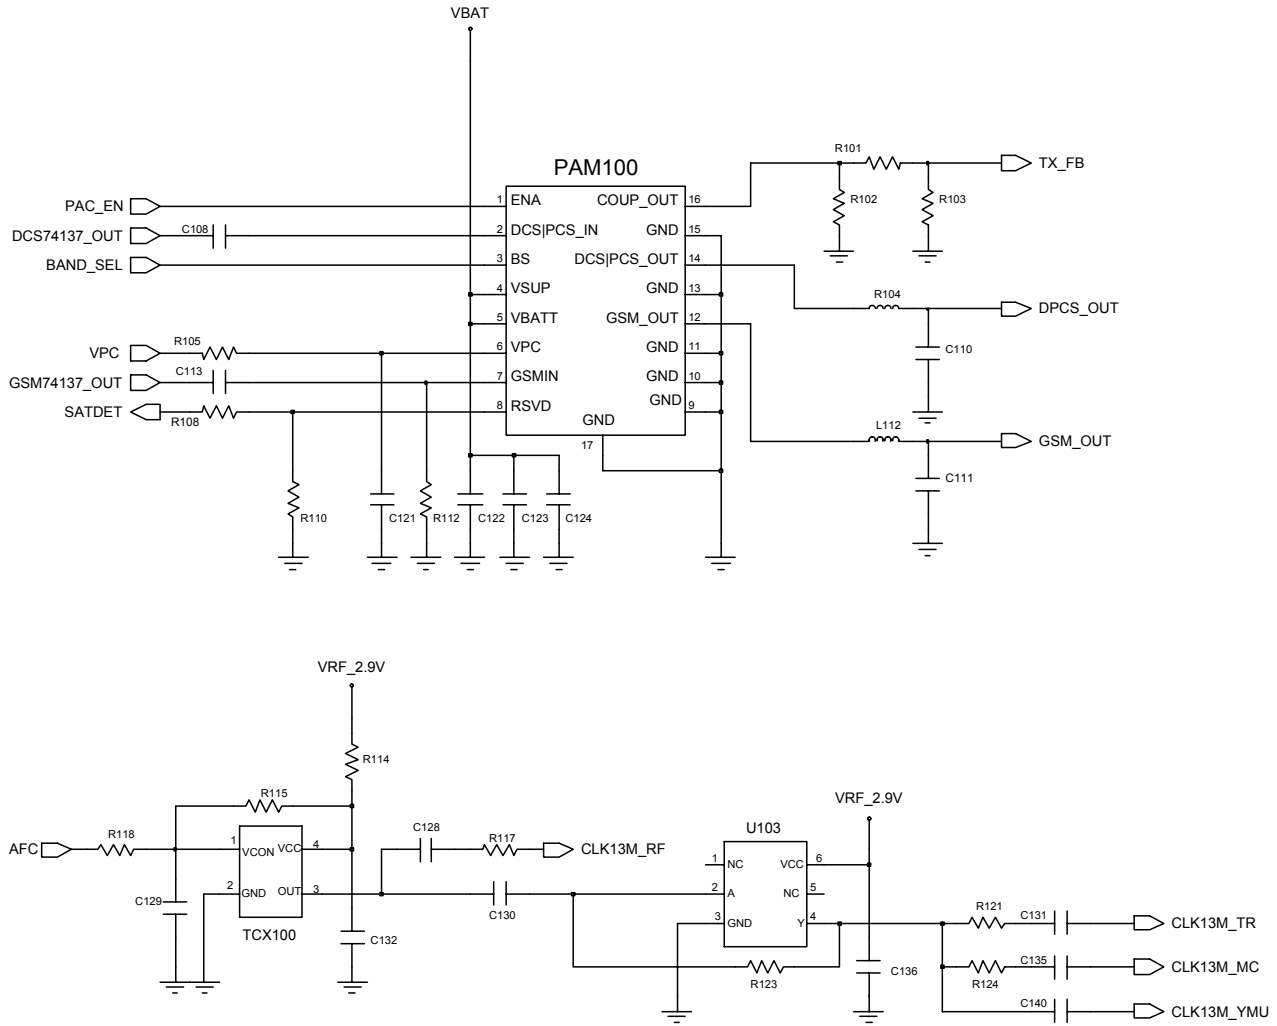

**9-2-6. BLUETOOTH**

