


5. Exploded View and Parts List

5-1. Cellular phone Exploded View

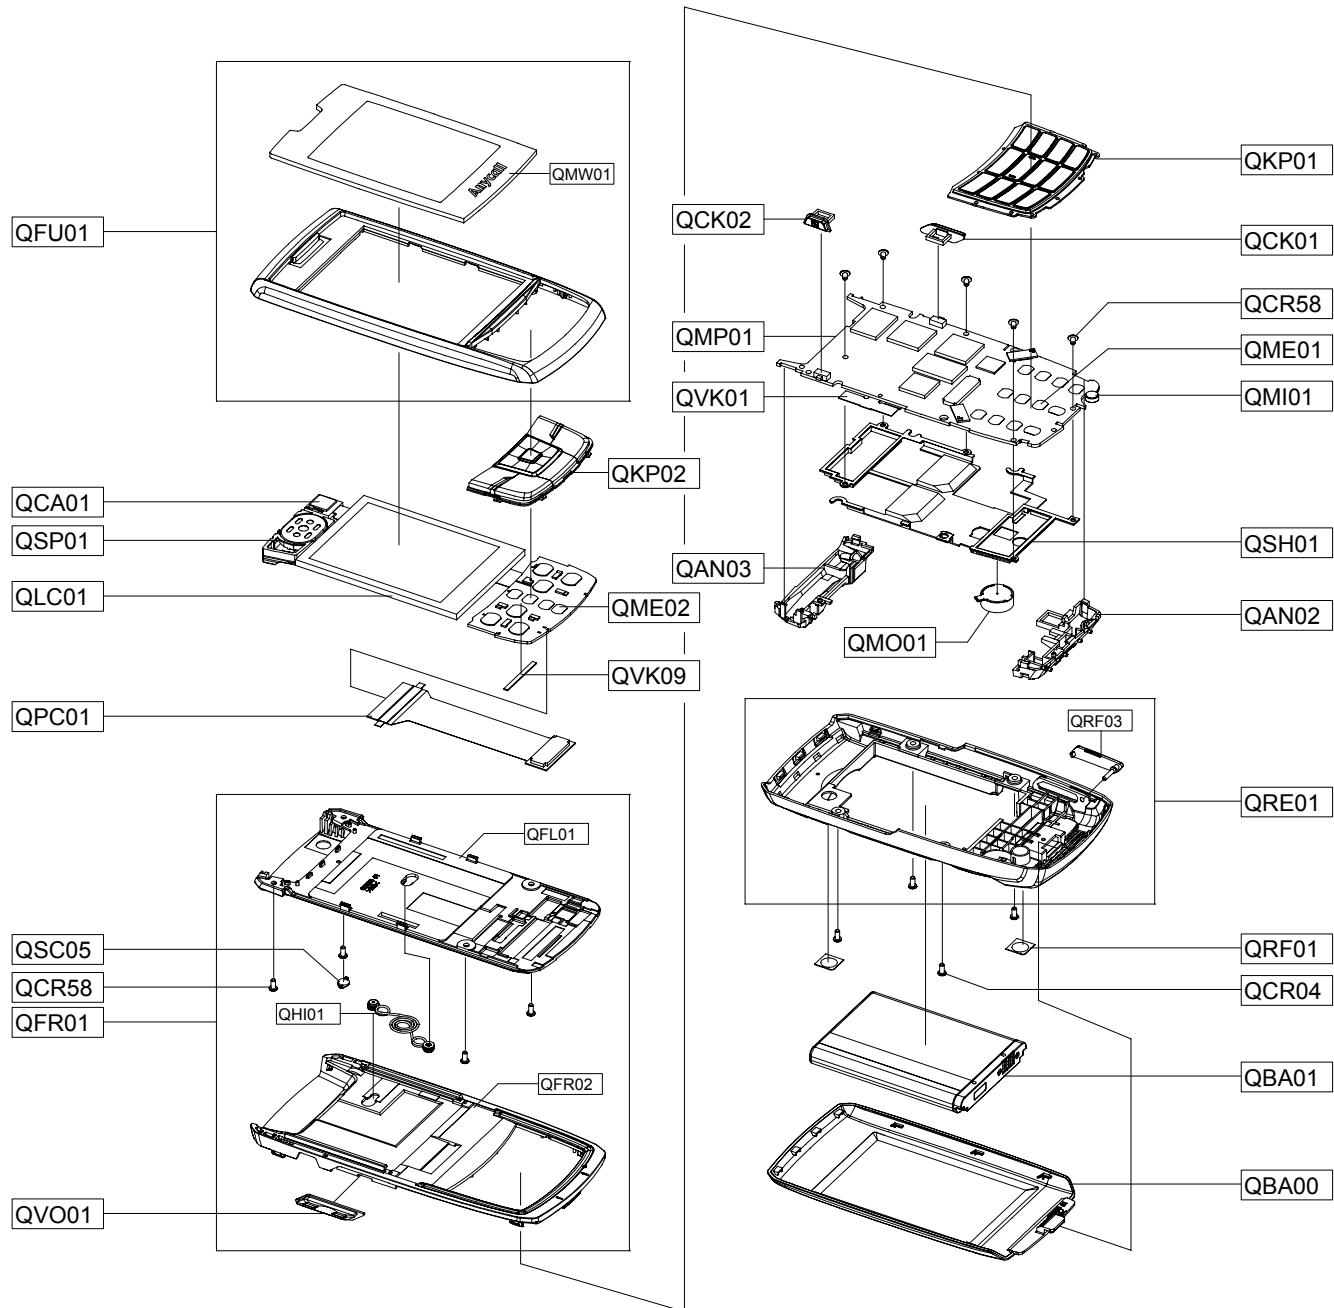

5-2. Cellular phone Parts List

Design LOC	Description	SEC CODE
QAN02	INTENNA-SGHD888 MASTER	GH42-01277A
QAN03	INTENNA-SGHD888 SLAVE	GH42-01278A
QBA00	PMO COVER-BATT	GH72-43208A
QBA01	INNER BATTERY PACK-1200MAH,BLK	GH43-02570A
QCA01	CAMERA MODULE	GH59-04686A
QCK01	PMO KEY-CAMERA	GH72-42702A
QCK02	PMO KEY-SWITCH	GH72-42704B
QCR04	SCREW-MACHINE	6001-001479
QCR58	SCREW-MACHINE	6001-001870
QCR58	SCREW-MACHINE	6001-001870
QKP01	ASSY KEYPAD-MAIN(SER/BLK)	GH98-06250A
QKP02	ASSY KEYPAD-SUB(EU/BLK)	GH98-06251A
QLC01	ELA ETC-SGHD888 LCD MODULE	GH96-02740A
QME01	DOME SHEET-DOME SHEET 12KEY(MA	GH59-04694A
QME02	DOME SHEET-DOME SHEET 10KEY(SU	GH59-04695A
QMI01	MICROPHONE-ASSY-SGHD888	GH30-00400A
QMO01	MOTOR DC	GH31-00303A
QMP01	PBA MAIN-SGHD880	GH92-03970A
QPC01	MEA-SLIDER FPCB KIT(D880)	GH97-08361A
QRF01	TAPE-RF COVER	GH74-34624B
QSC05	RMO COVER-LOWER SCREW L	GH73-10853A
QSH01	ASSY COVER-SHIELD CAN	GH98-05452A
QSP01	ASSY ETC-MODULE SPEAKER	GH59-04744A
QVK01	KEY FPCB-VOLUME 2KEY	GH59-05174A
QVK09	FPC-SINGLE SIDE FPC(D888)	GH41-01987A
QVO01	PMO KEY-VOL	GH72-42703A
QRE01	ASSY CASE-REAR	GH98-05698A
QRF03	PMO COVER-EAR IF	GH72-42701B
QFU01	ASSY CASE-UPPER	GH98-06403A
QMW01	ASSY COVER-MAIN WINODW(SER)	GH98-07047A

Design LOC	Description	SEC CODE
QFR01	ASSY CASE-FRONT SLIDE LOWER	GH98-06450B
QFL01	ASSY CASE-LOWER	GH98-05430B
QFR02	ASSY CASE-FRONT	GH98-05429B
QHI01	ASSY HINGE-MULTI TORSION SPRIN	GH98-05822A

Description	SEC CODE
BAG PE	6902-000634
CBF INTERFACE-DLC APCBS10BBE(S)	GH39-00922A
ADAPTOR-ATADS10EBE,BLK,EU	GH44-01702A
S/W CD-SGHD880 PC LINK CD	GH46-00535A
EARPHONE-AAEP405QBE,S20P,EU	GH59-05296A
LABEL(P)-UNIT SEAL	GH68-00518B
MANUAL-SFC	GH68-04336A
LABEL(R)-WATER SOAK	GH68-09361A
LABEL(R)-MAIN(SER)	GH68-16409A
MANUAL USERS-EU RUSSIAN	GH68-16604A
BOX-UNIT(SER)	GH69-06063A
CUSHION-CASE(EU)	GH69-06065A
TAPE INSU	GH74-30410A
TAPE INSU	GH74-32729A
TAPE GASK	GH74-33529A
TAPE GASK-SUB PCB1	GH74-34627A
TAPE INSU-SUB PCB	GH74-34629A
TAPE INSU	GH74-34677A
TAPE GASK	GH74-34813A
TAPE-REMOVE	GH74-35112A
TAPE GASK	GH74-35775A
VINYL-BOHO UPPER	GH74-36200A
TAPE INSU-PBA	GH74-36228A
TAPE-UPPER DOWN	GH74-36285A
TAPE GASK-LCD3	GH74-36536A
TAPE GASK-PBA MAIN2	GH74-36537A
TAPE-LCD	GH74-36538A
TAPE-FPCB	GH74-36539A
VINYL-BOHO SUB KEY	GH74-36626A
SPONGE	GH74-36646A
TAPE-SPK DECO	GH74-36658A