

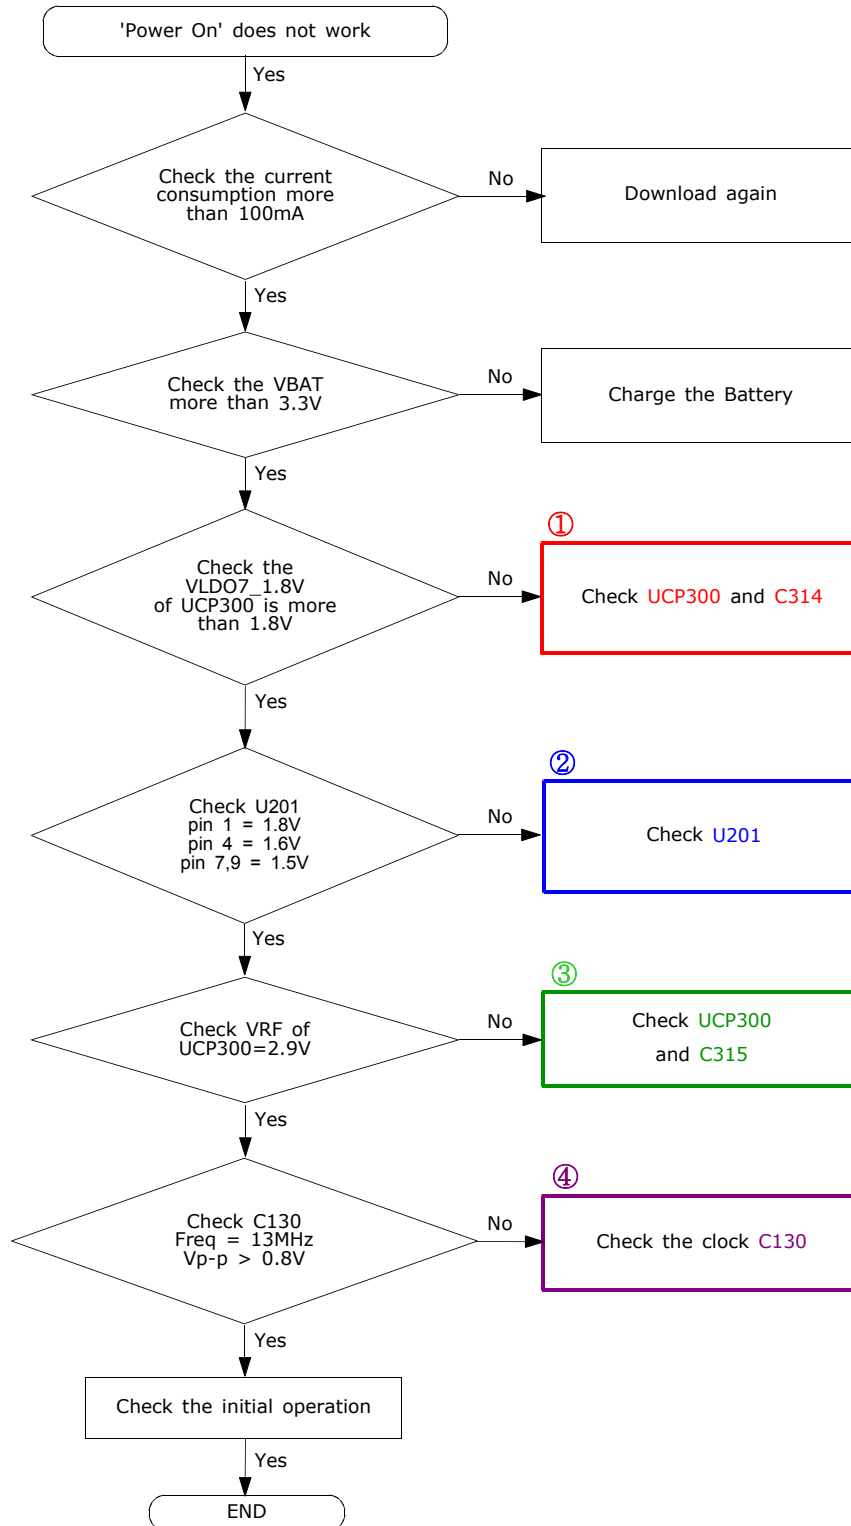



10. Flow Chart of Troubleshooting


10-1 BASEBAND

10-1-1. Power ON

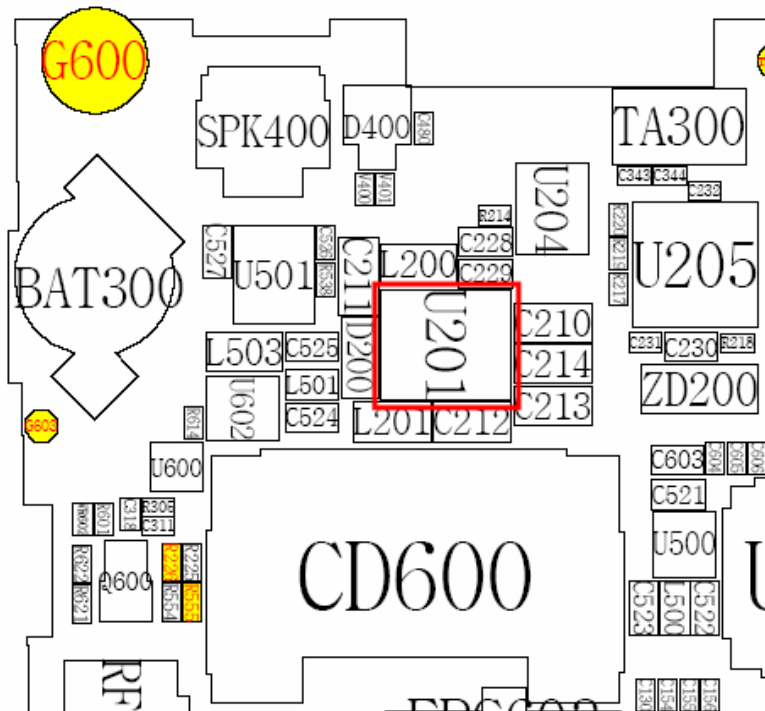


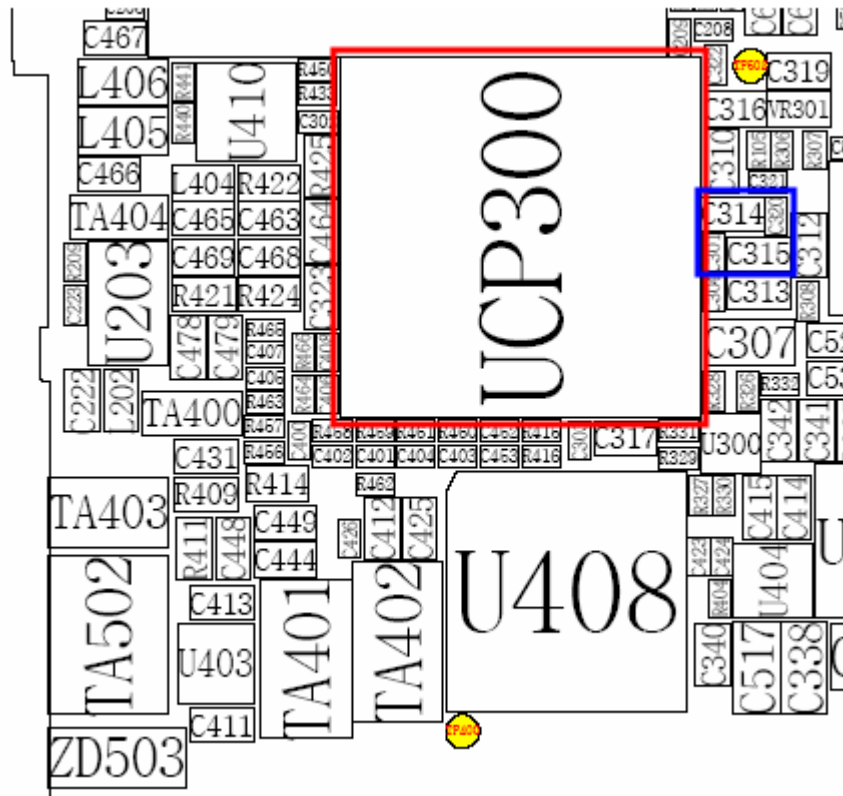


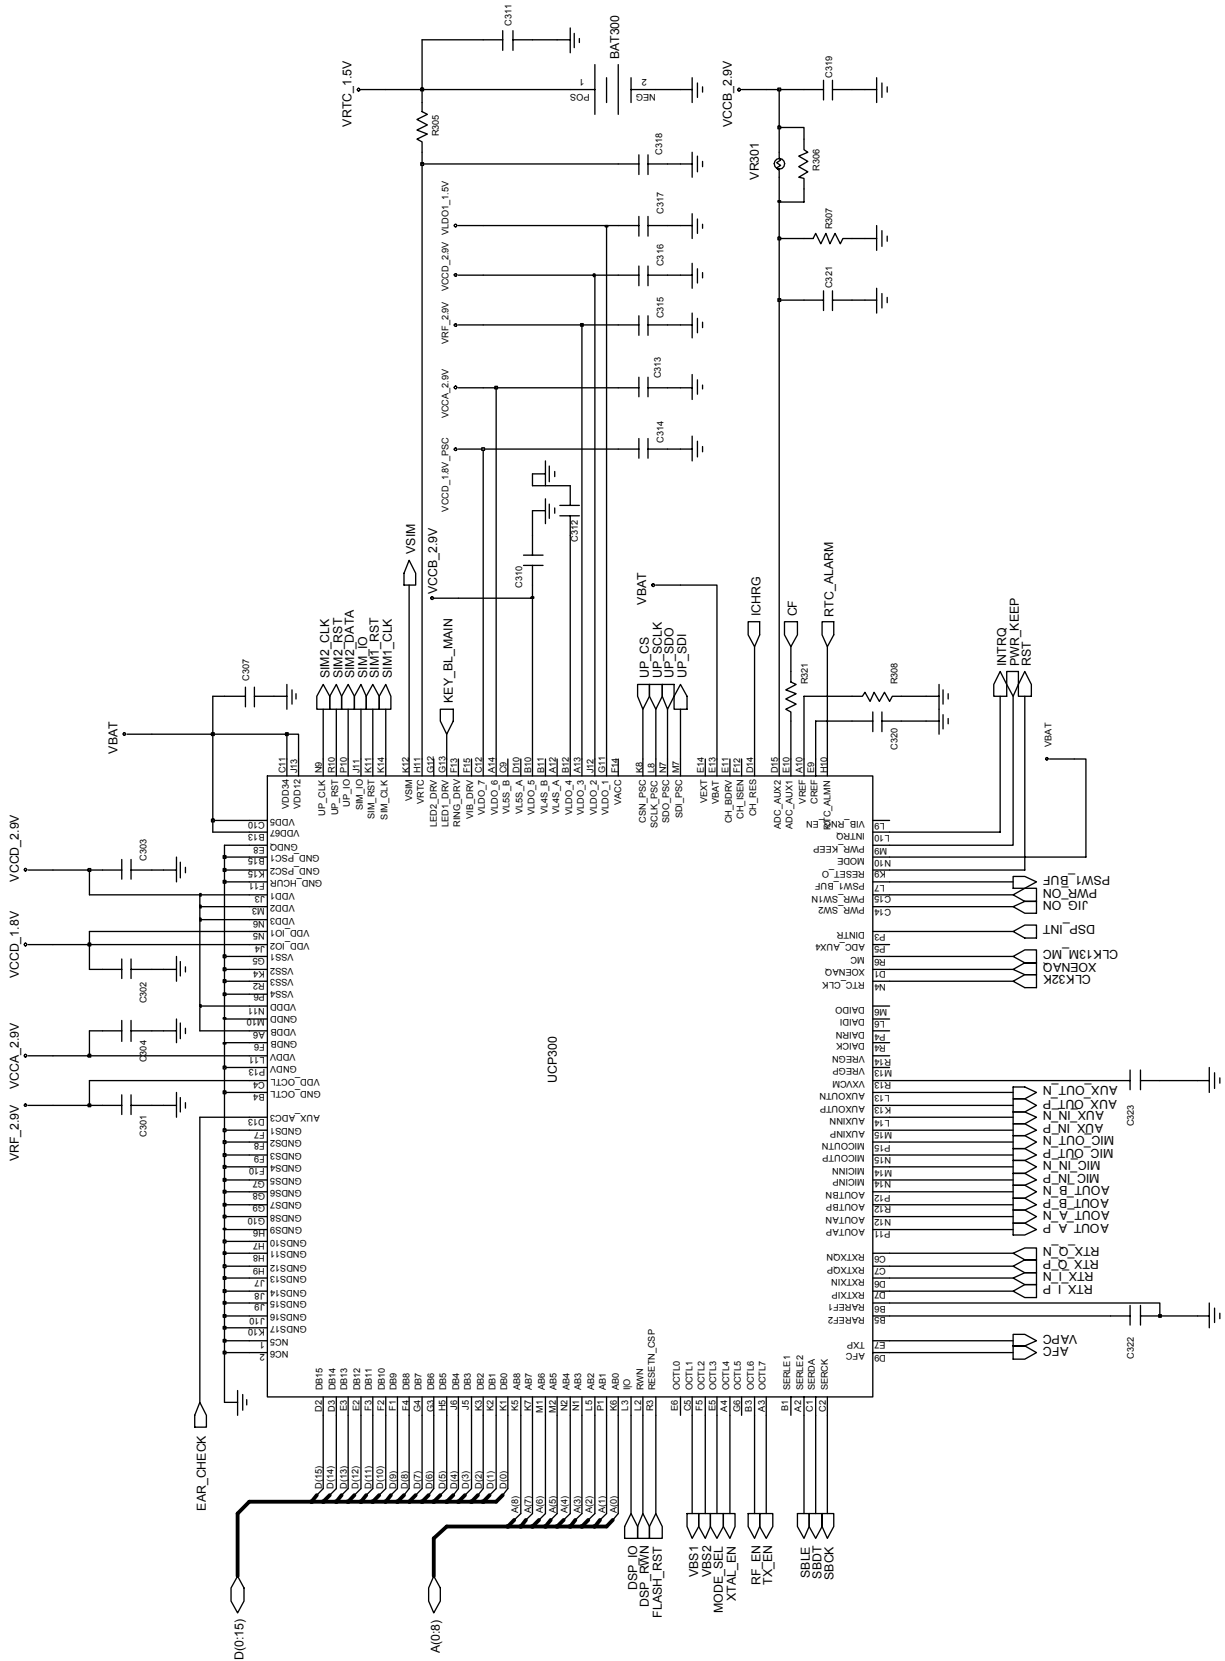

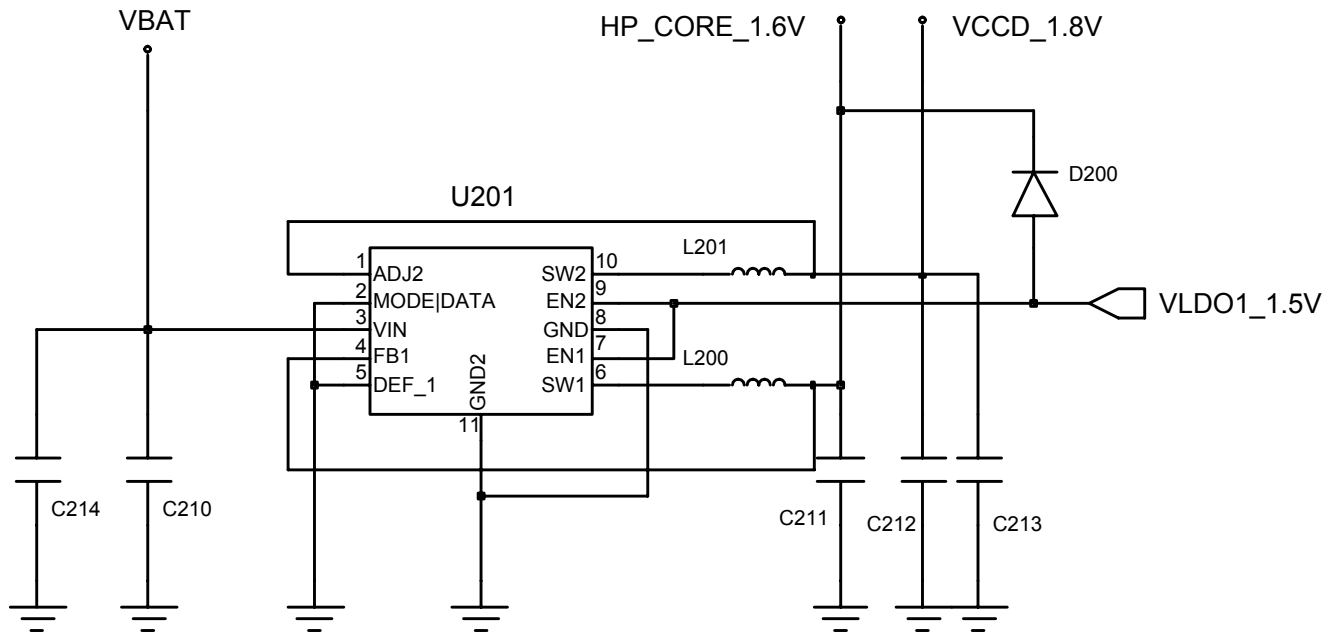




10-2-2. Initial

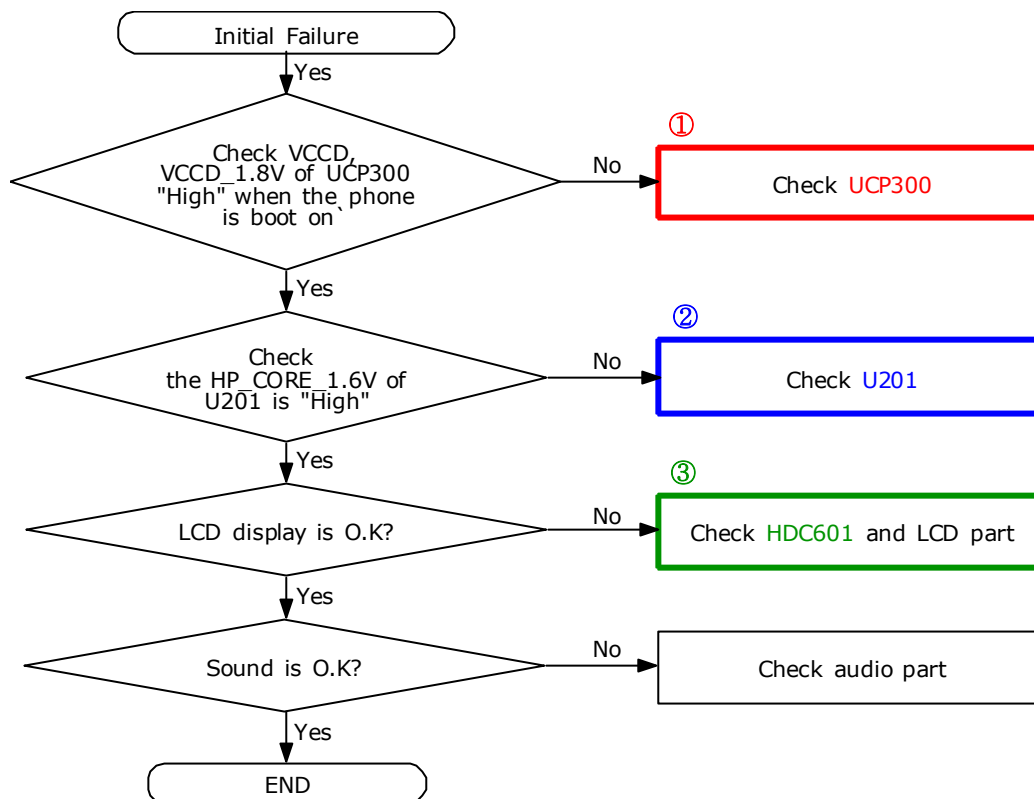



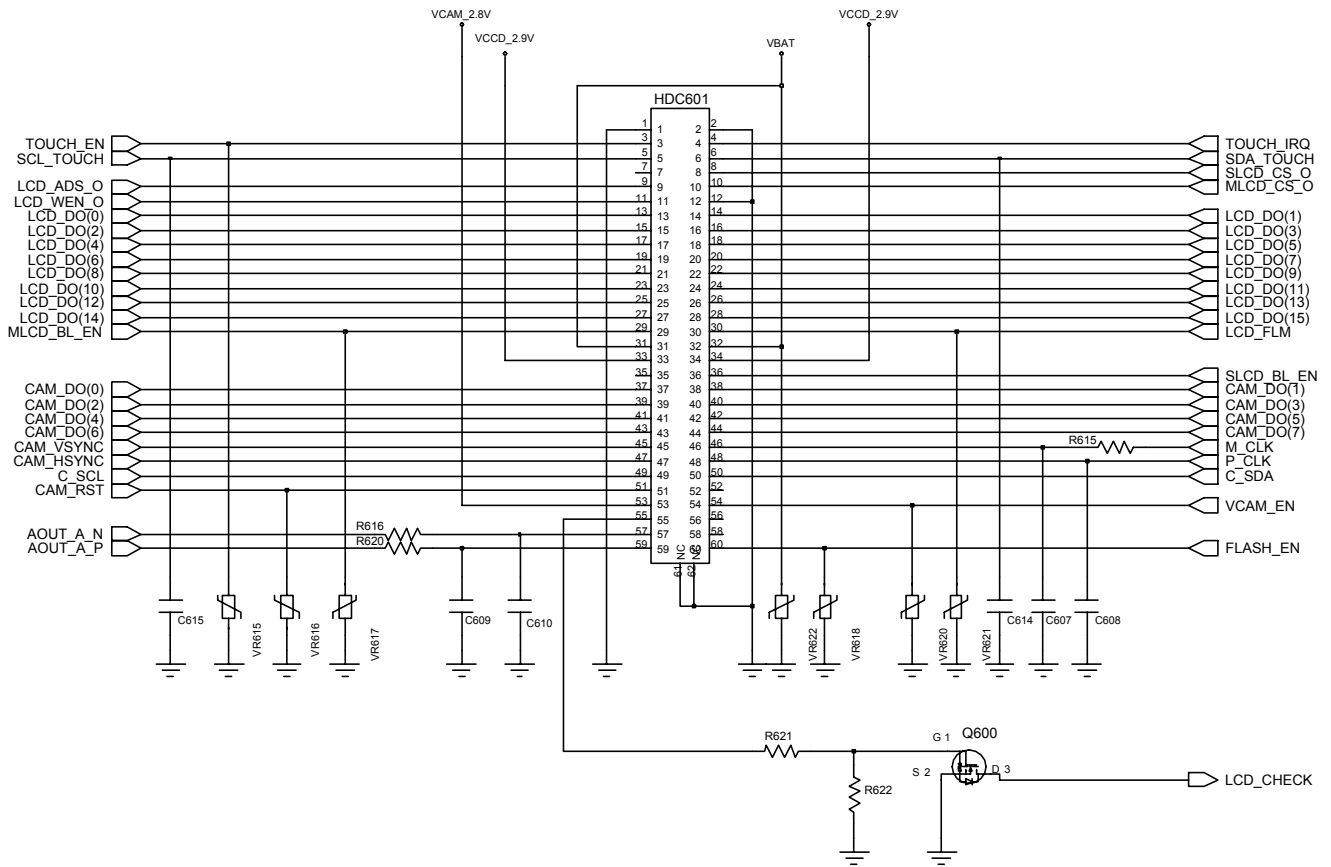




10-1-3. Sim Part

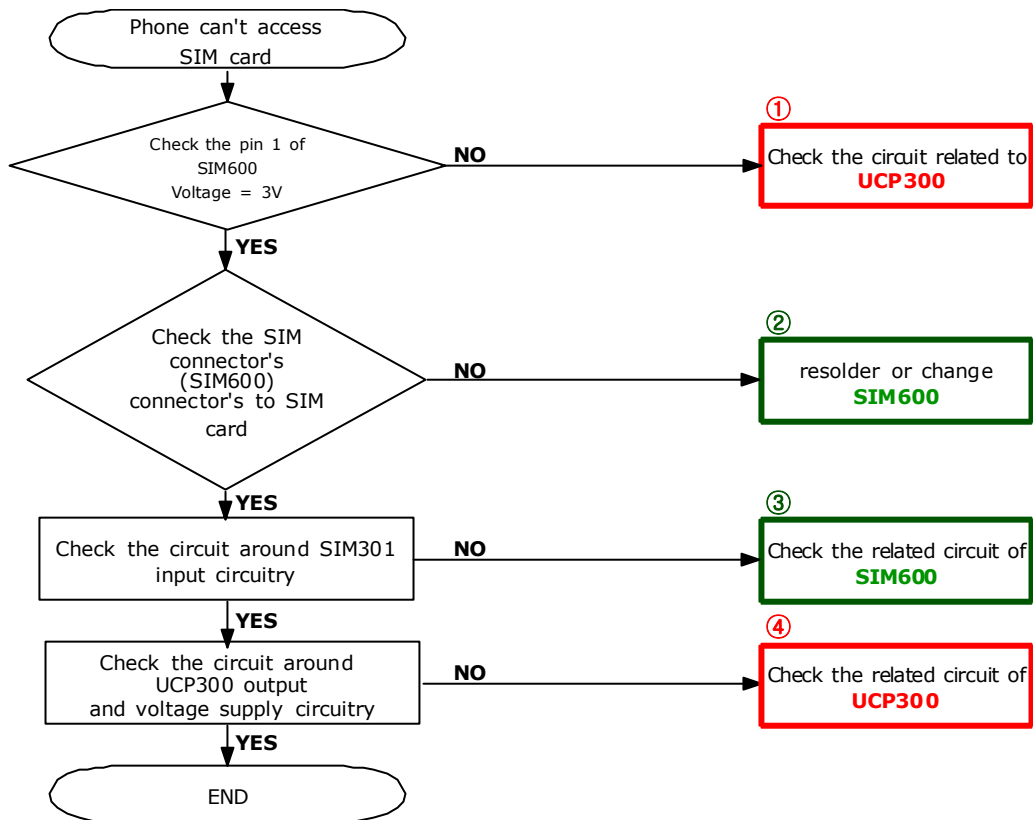

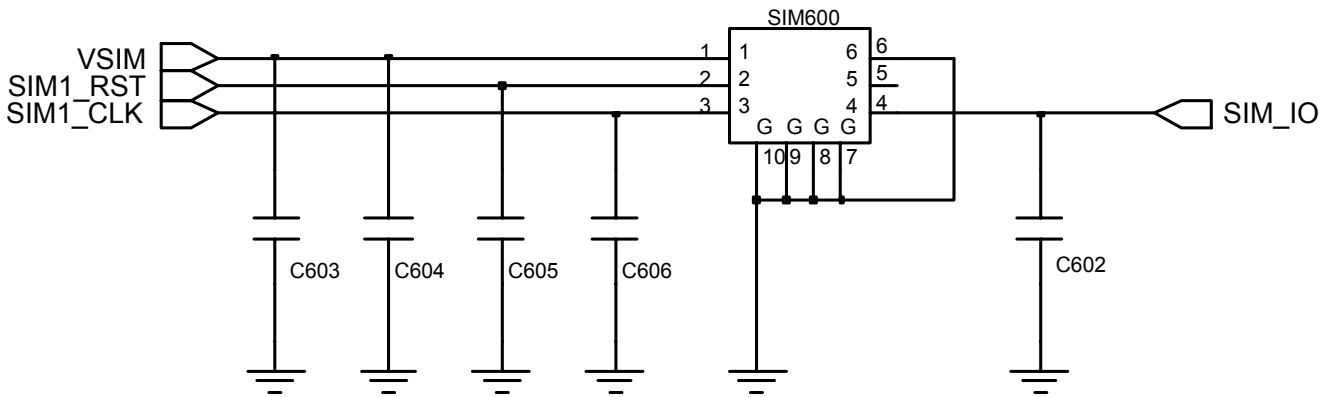
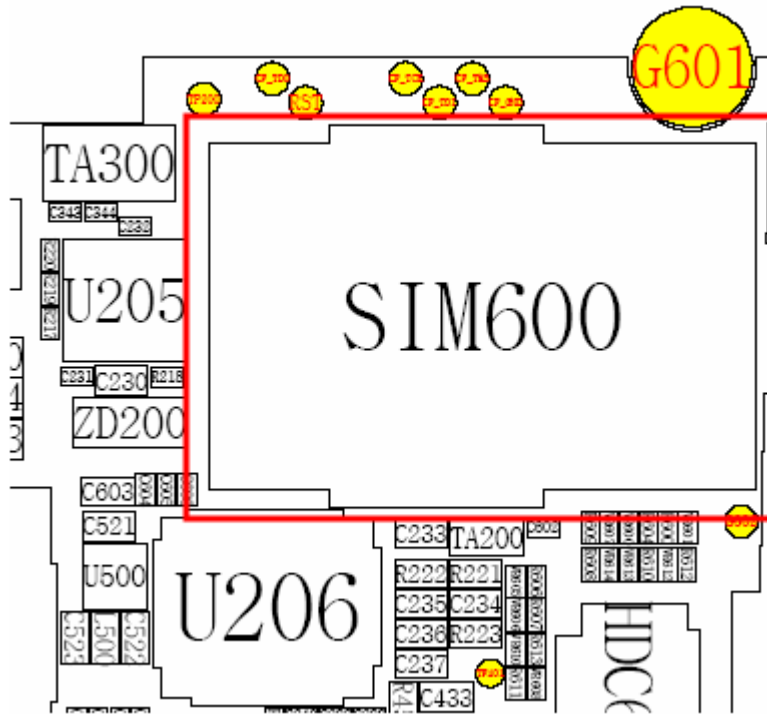




10-1-4. Charging Part

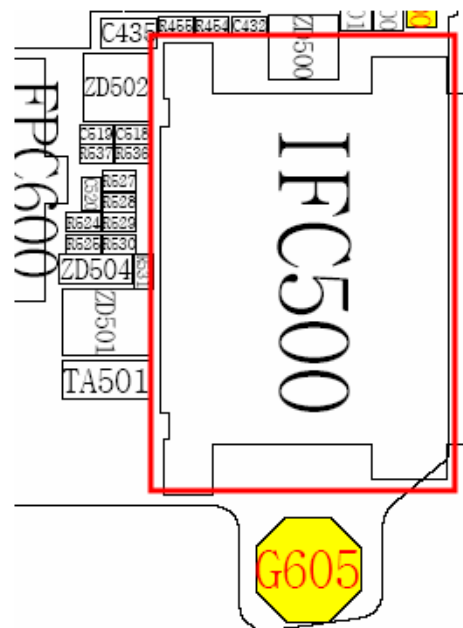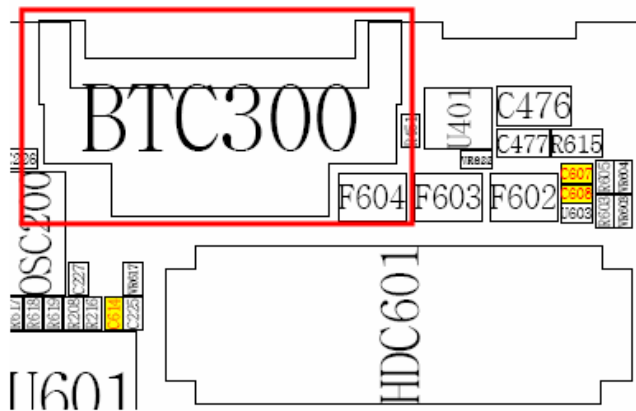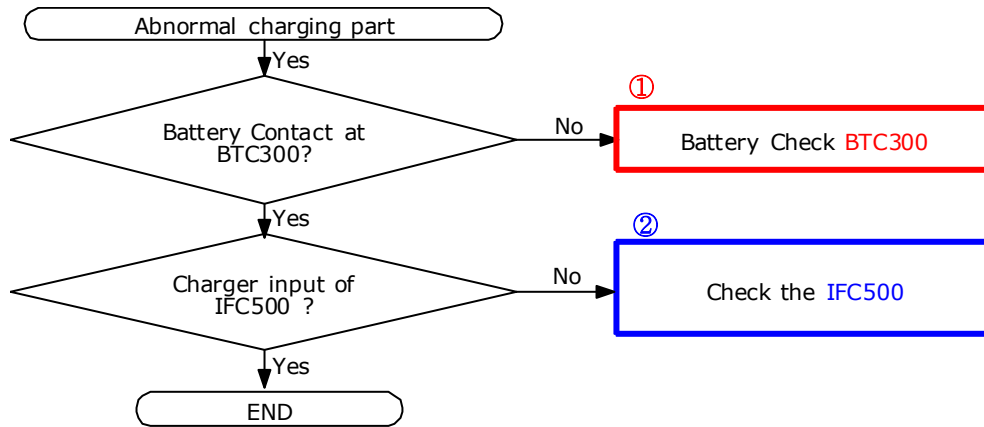

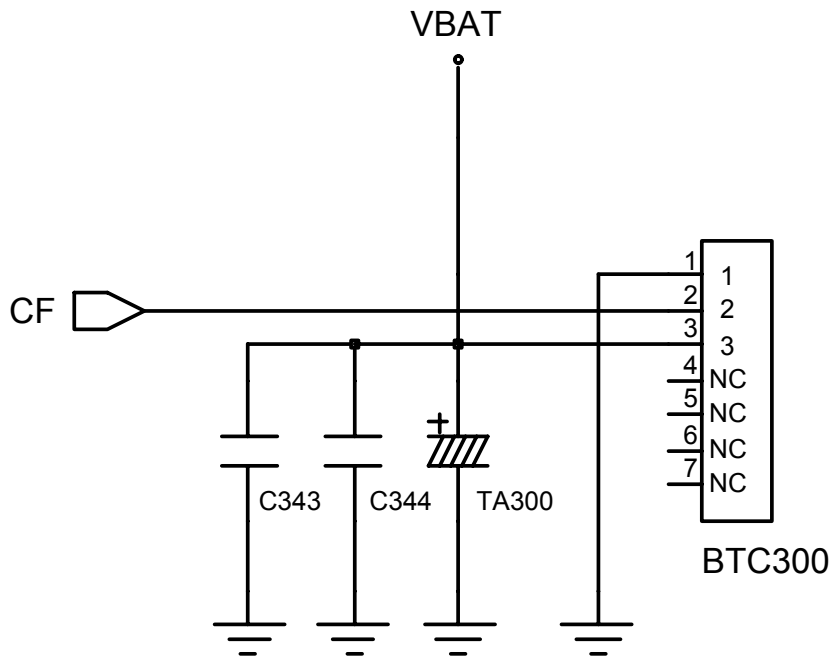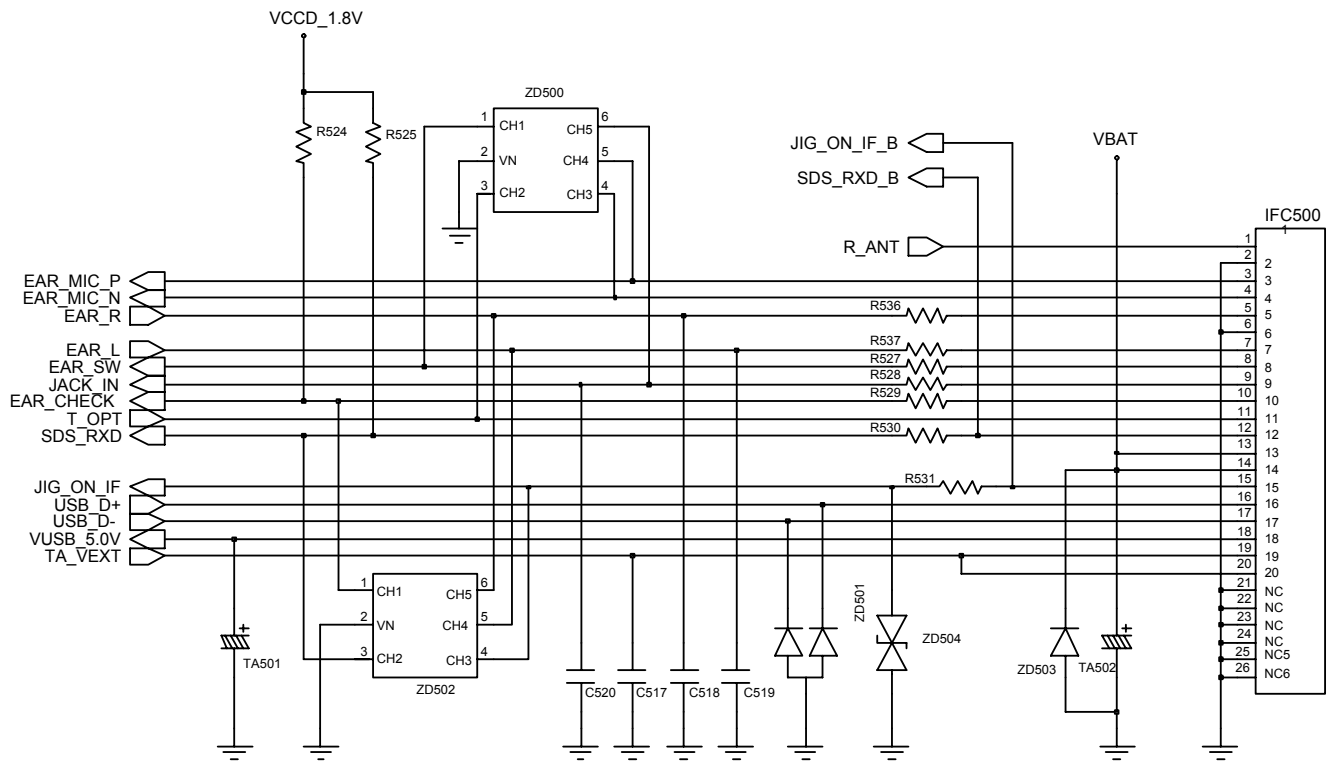




10-1-5. Microphone Part

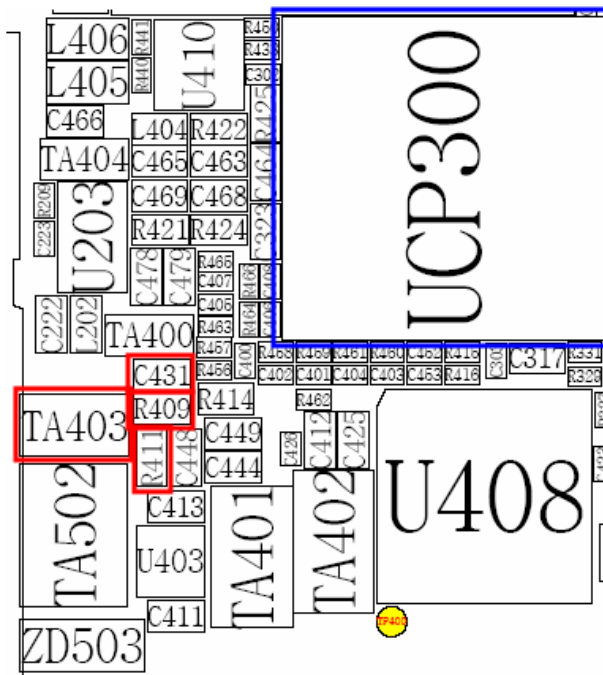
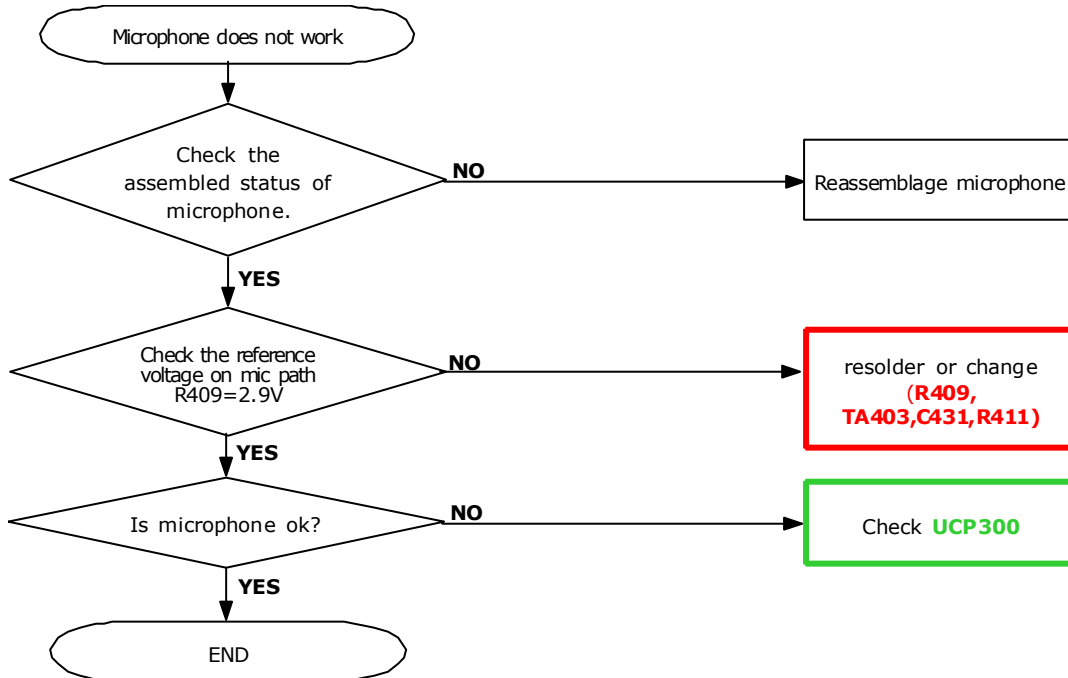


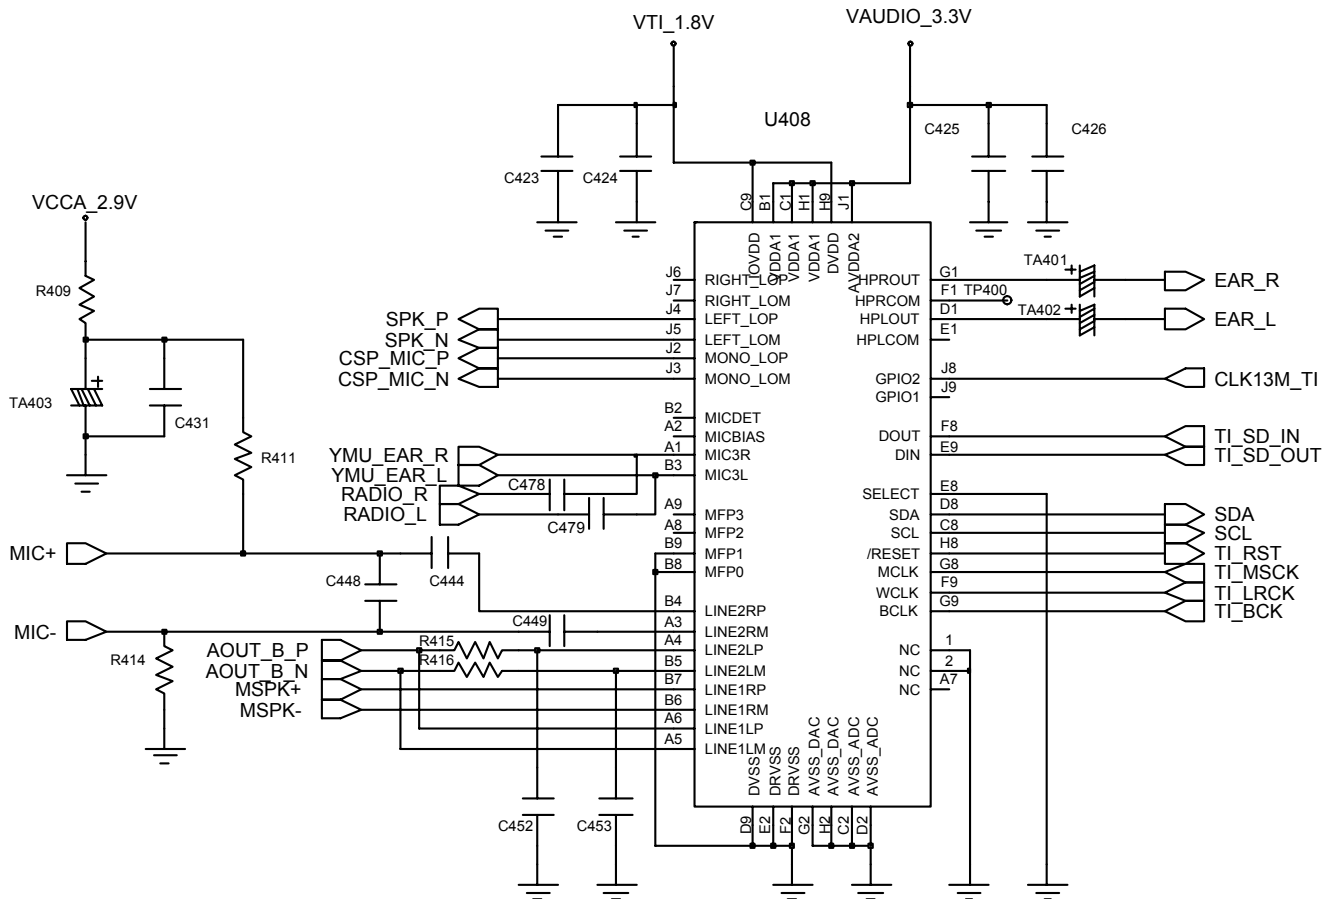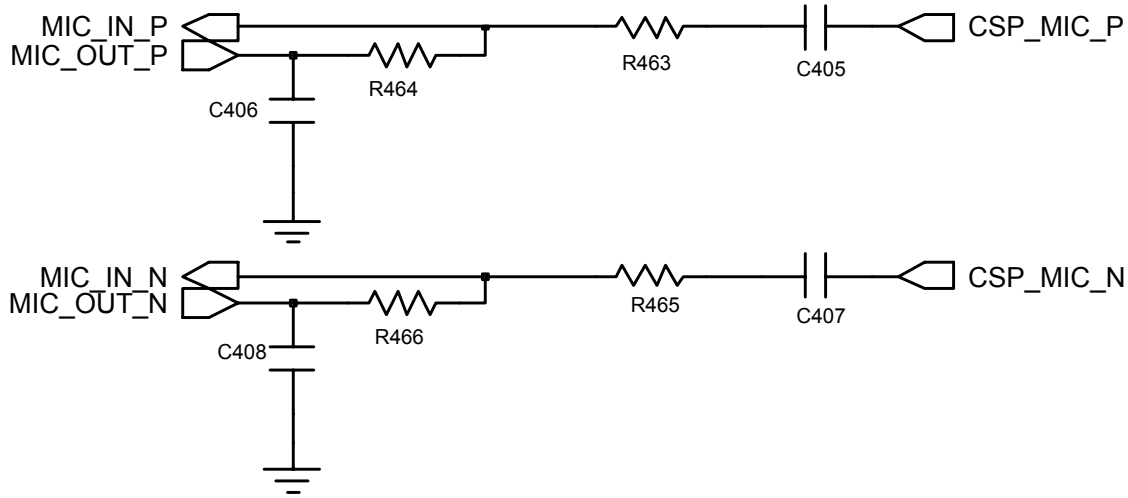


10-1-6. Speaker Part

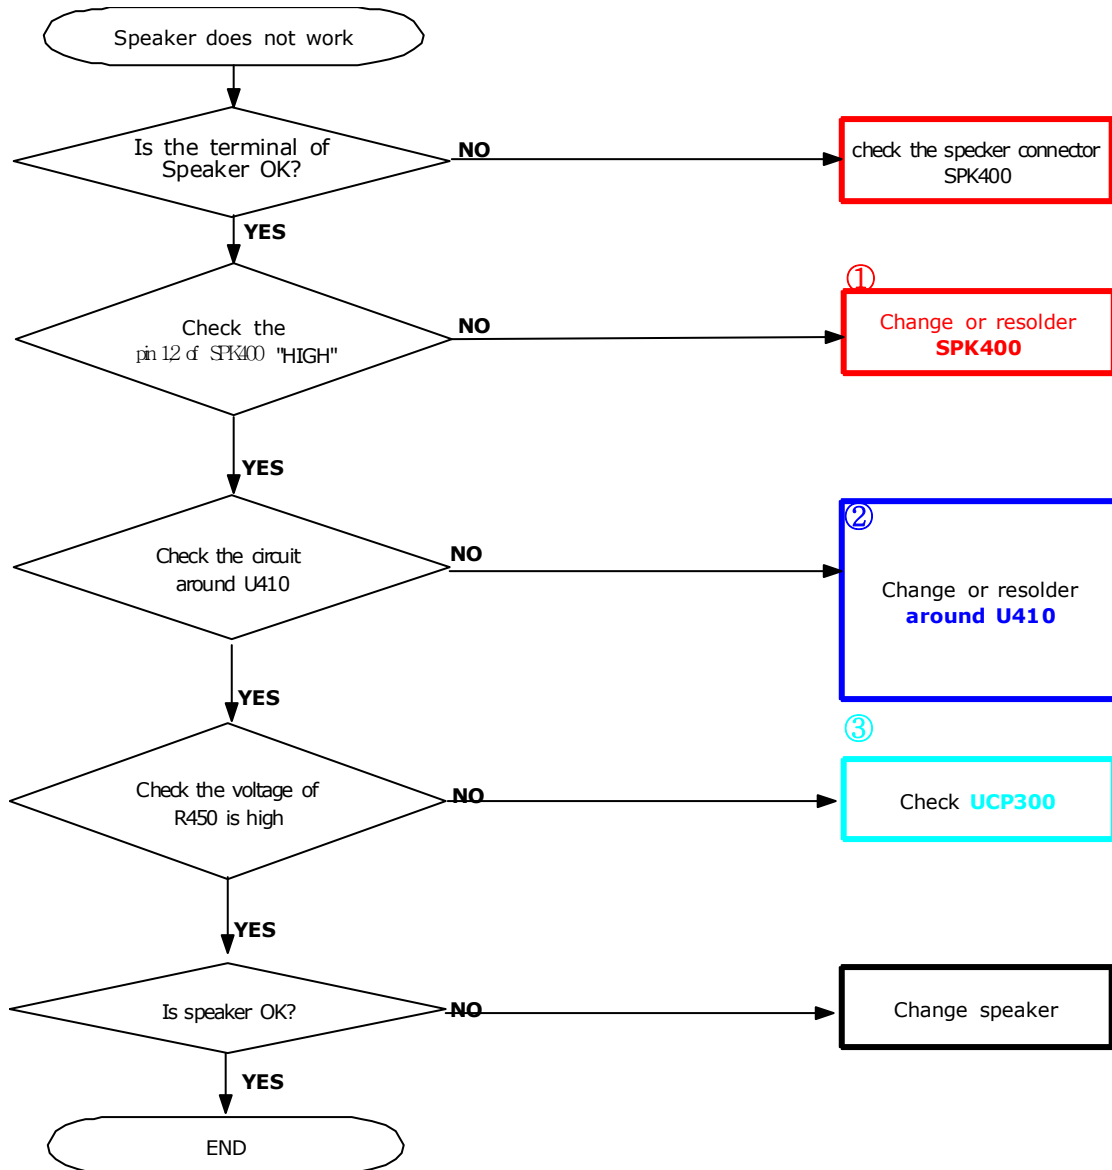


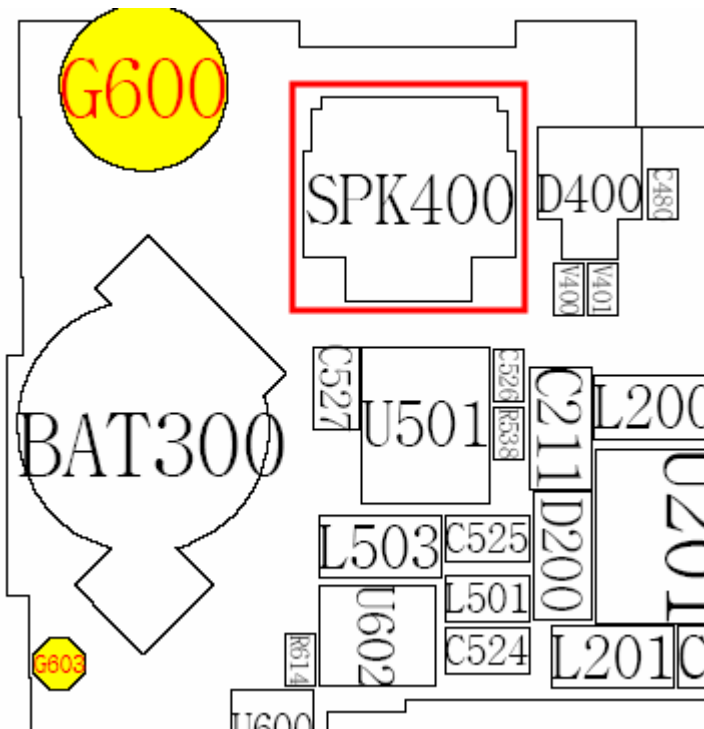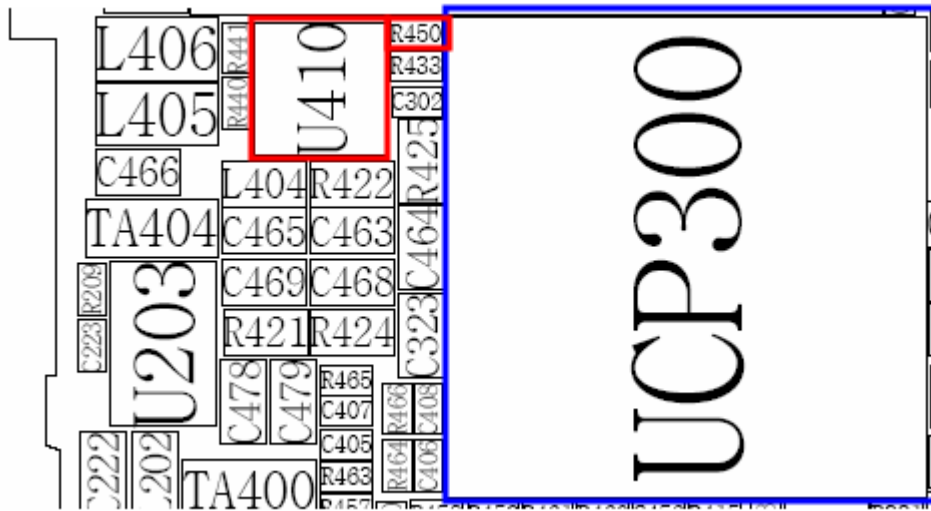


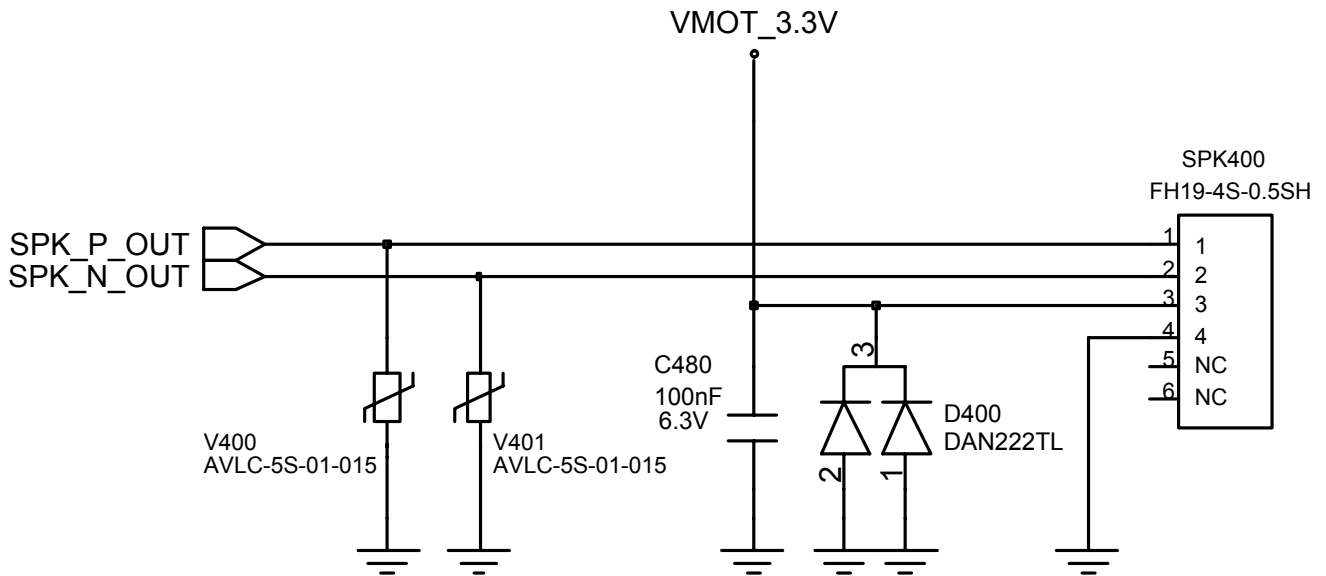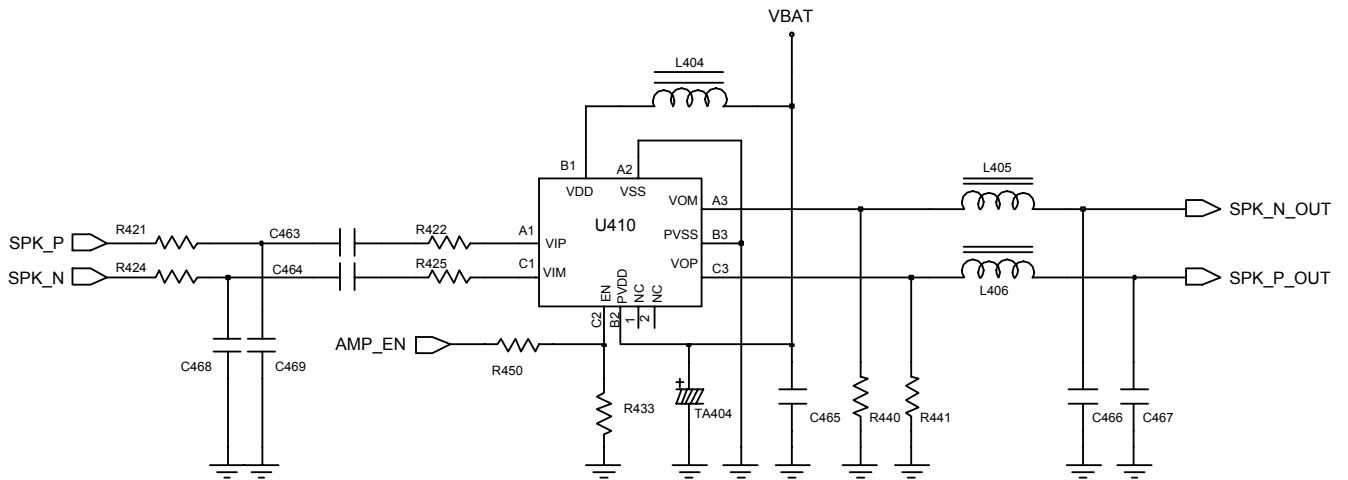


10-1-7. LCD

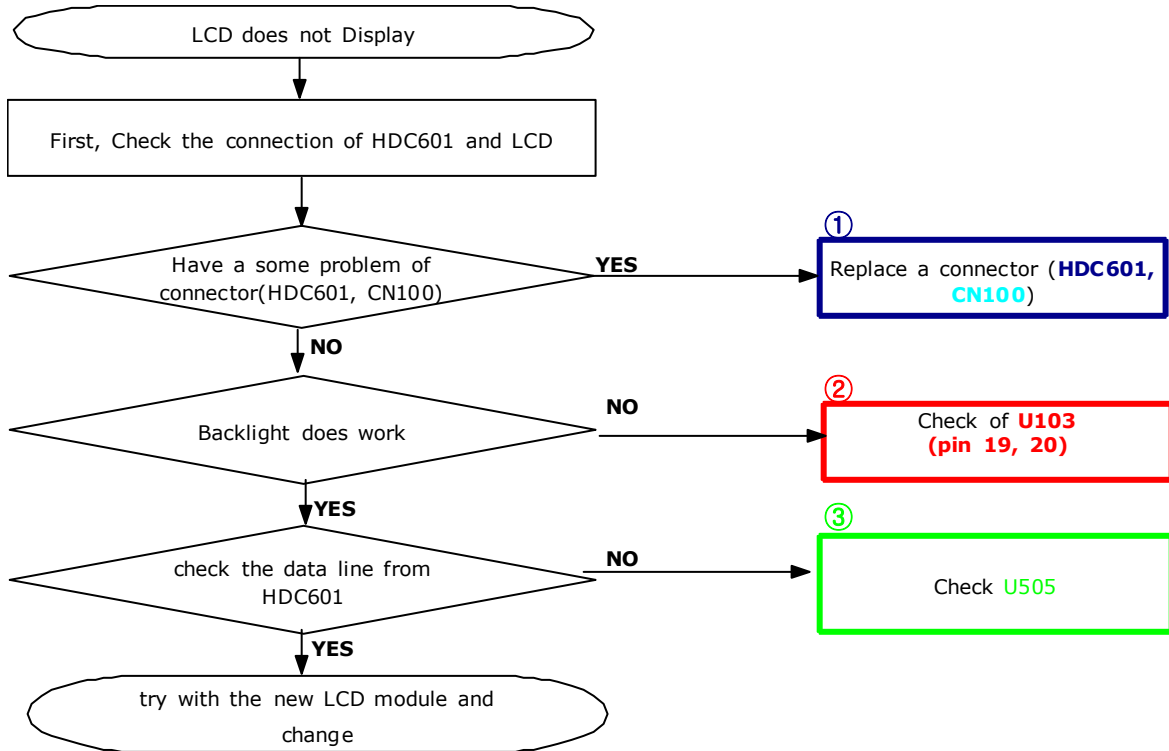


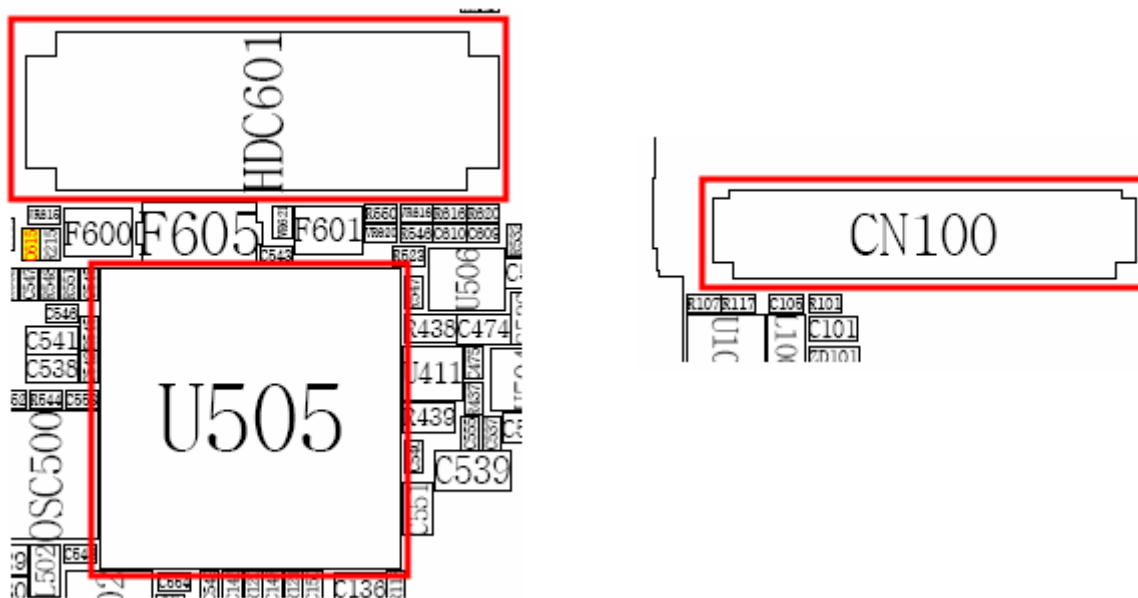

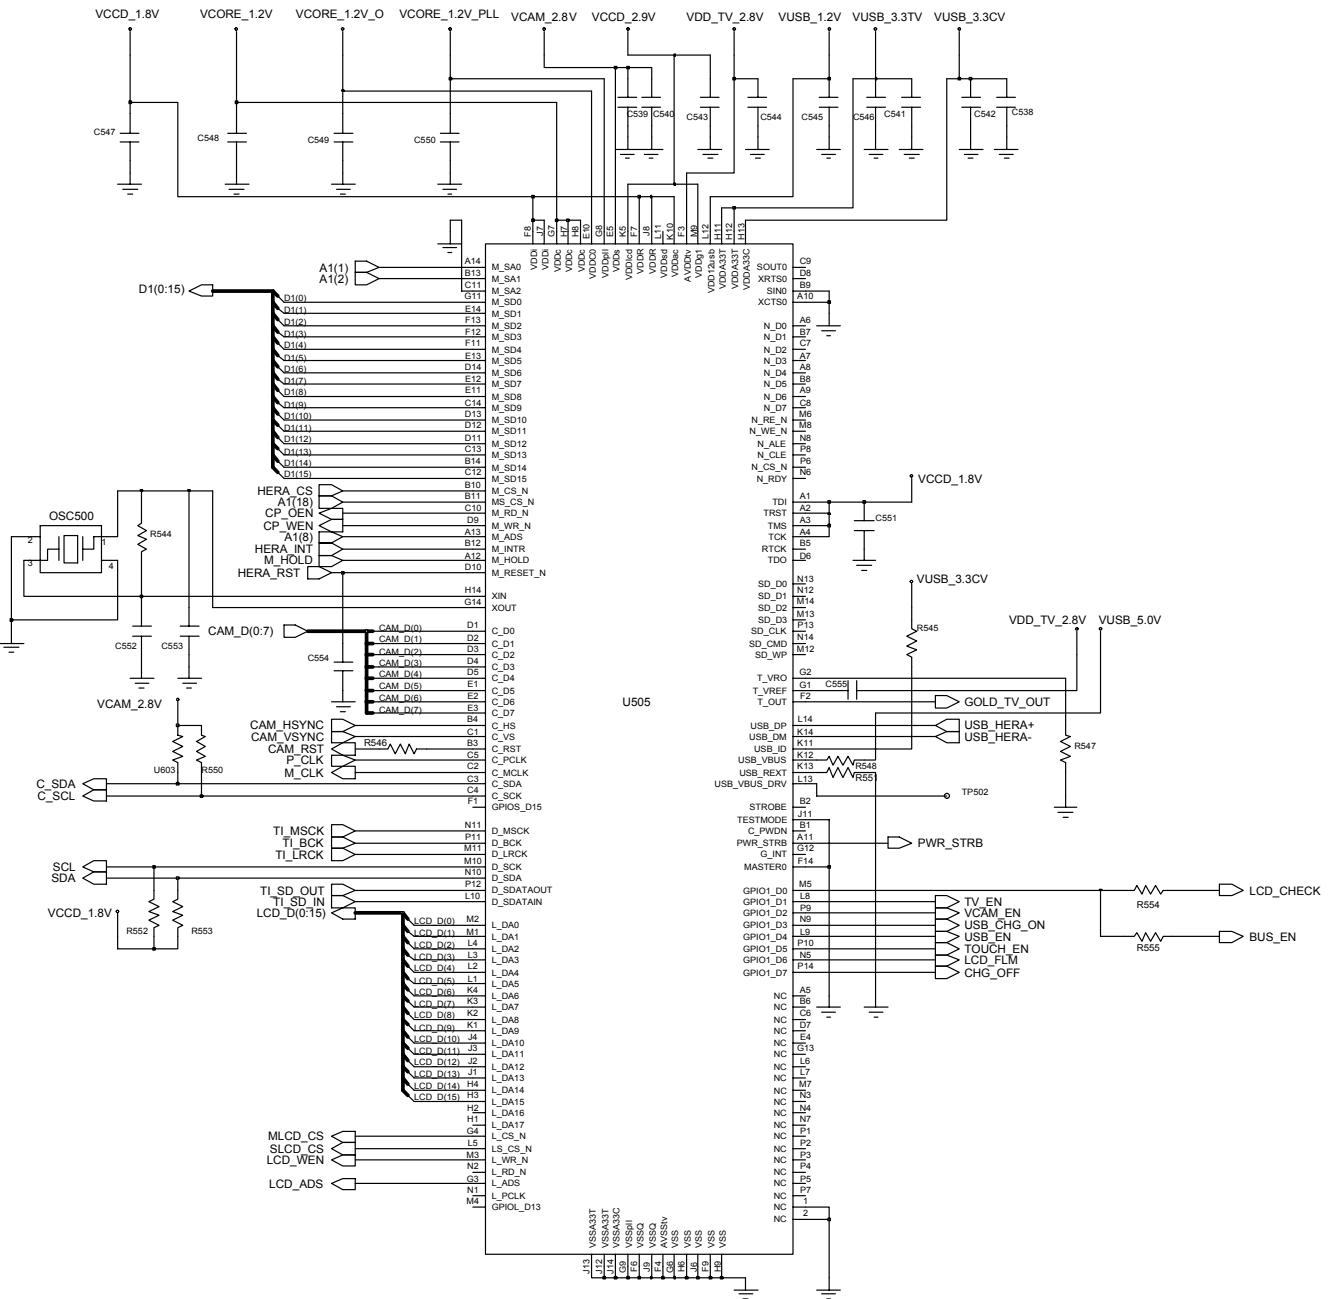


10-1-8. Camera

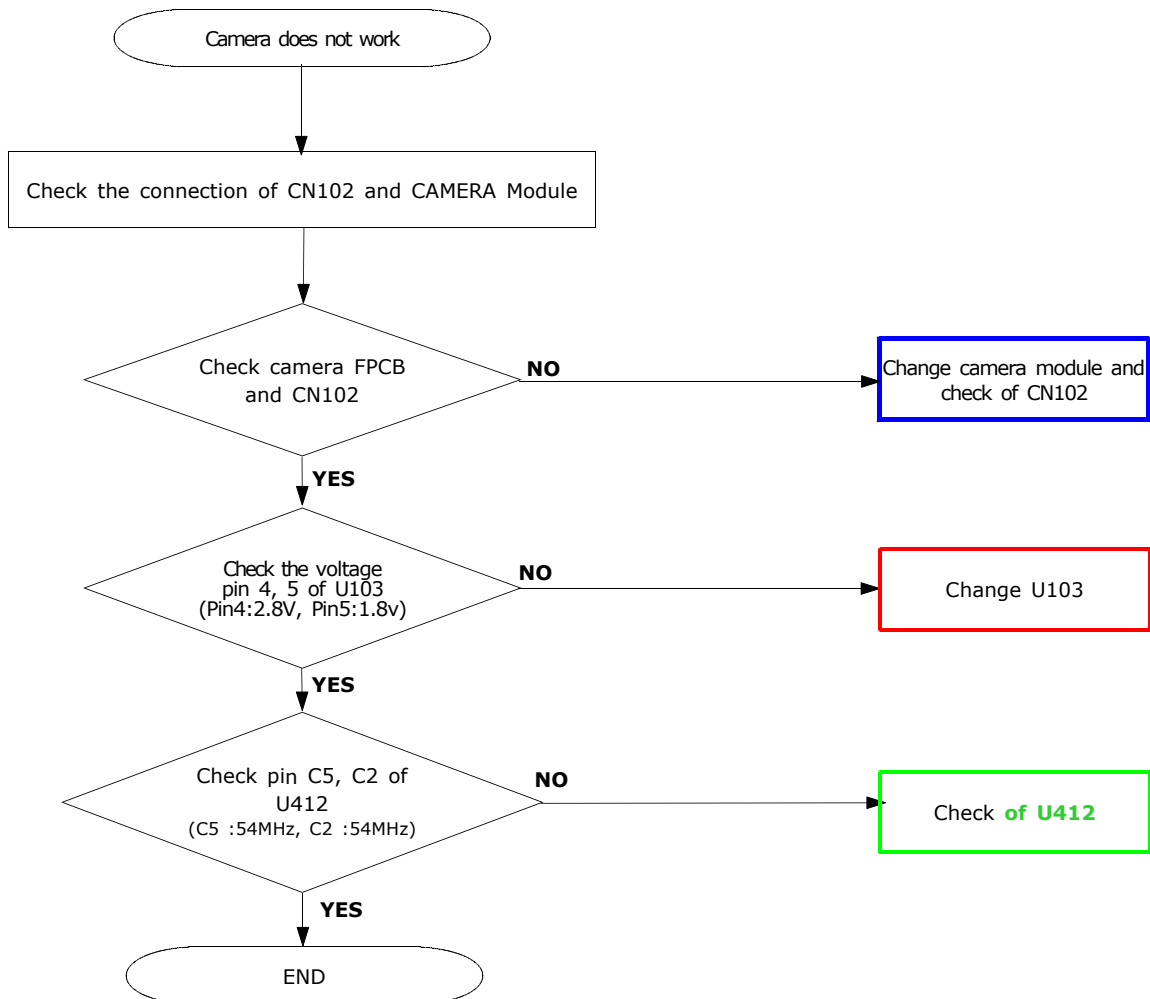

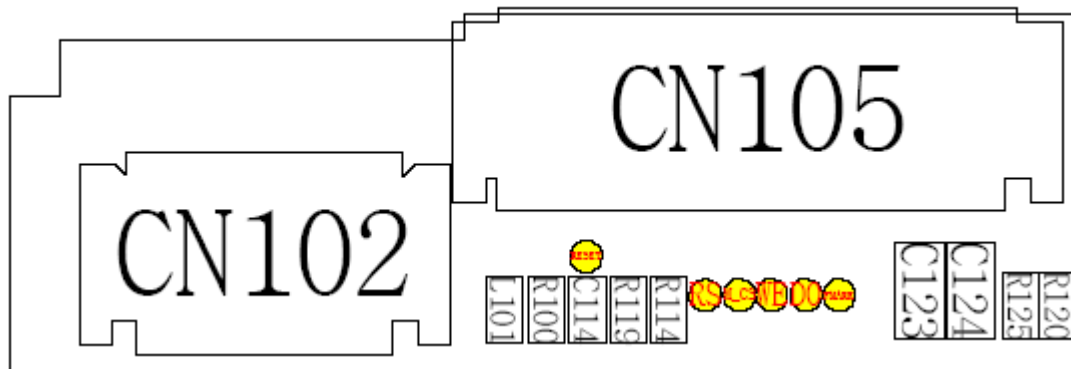


10-2. RF


10-2-1. GSM900 Receiver

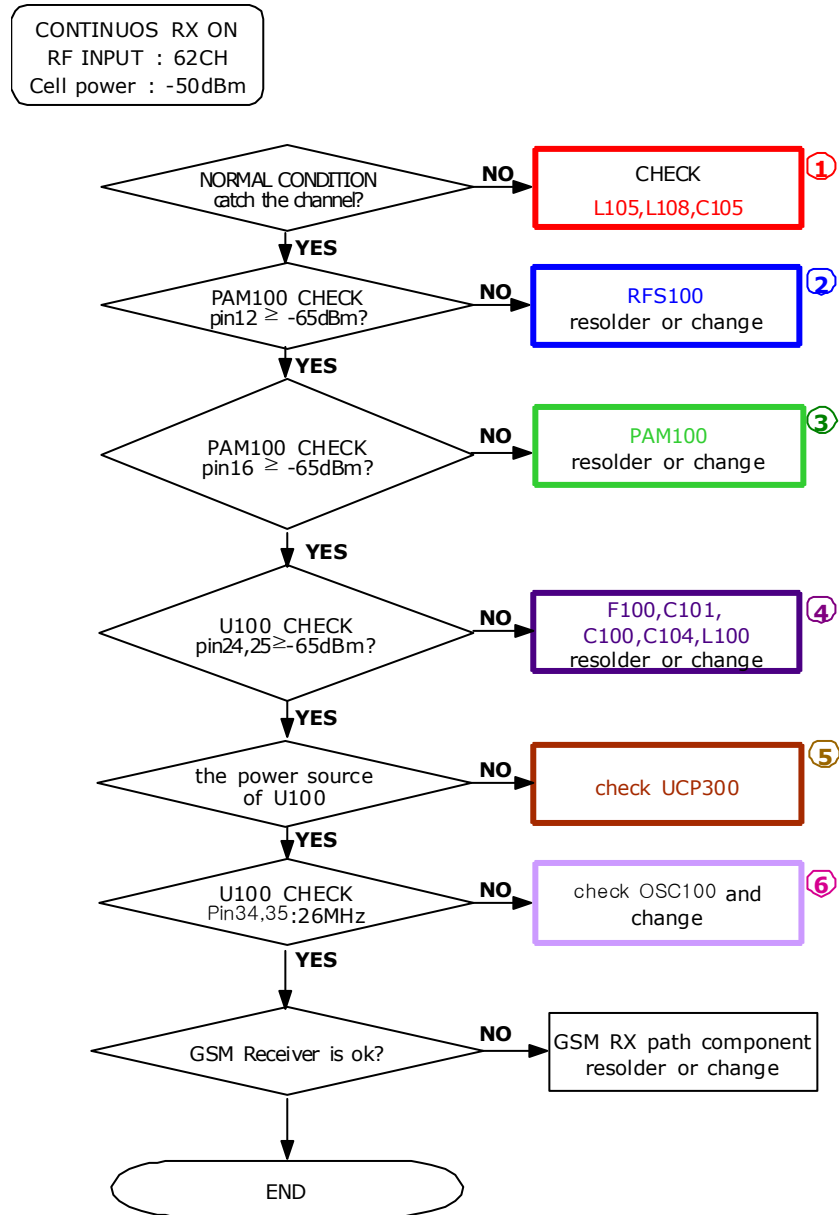



10-2-2. DCS Receiver

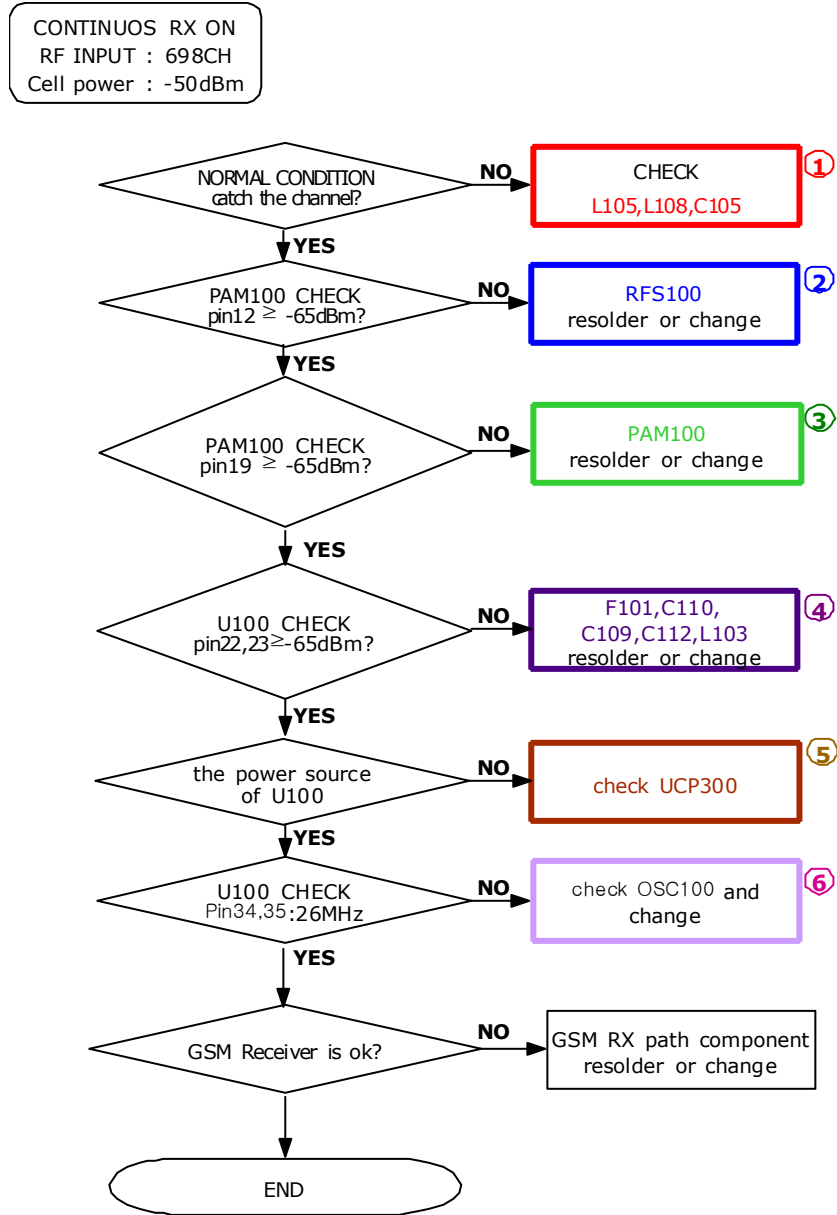


10-2-3. PCS Receiver

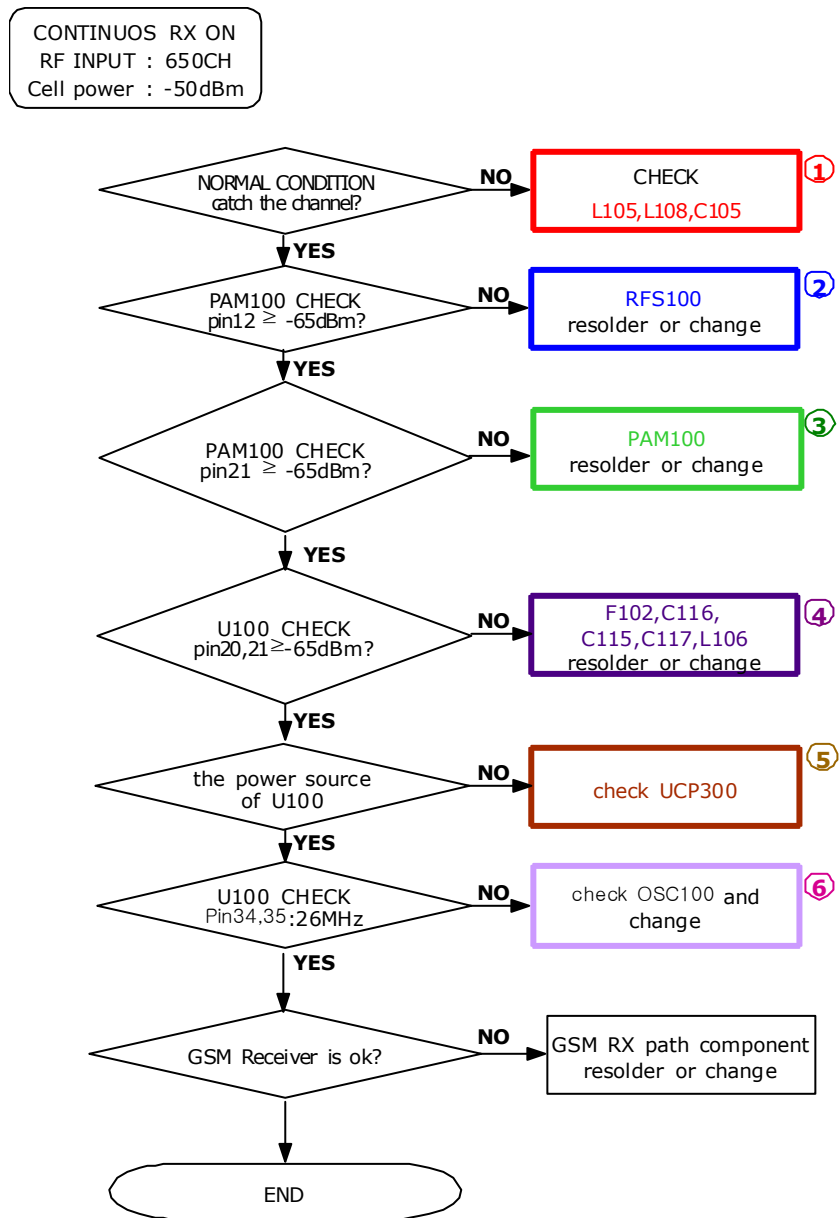


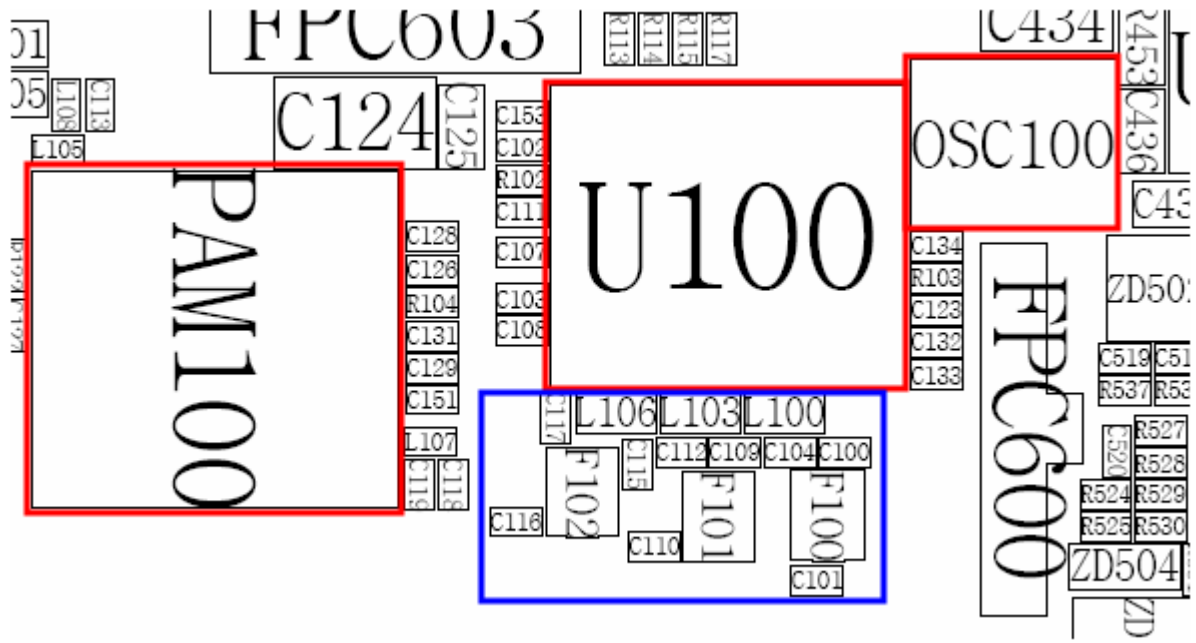

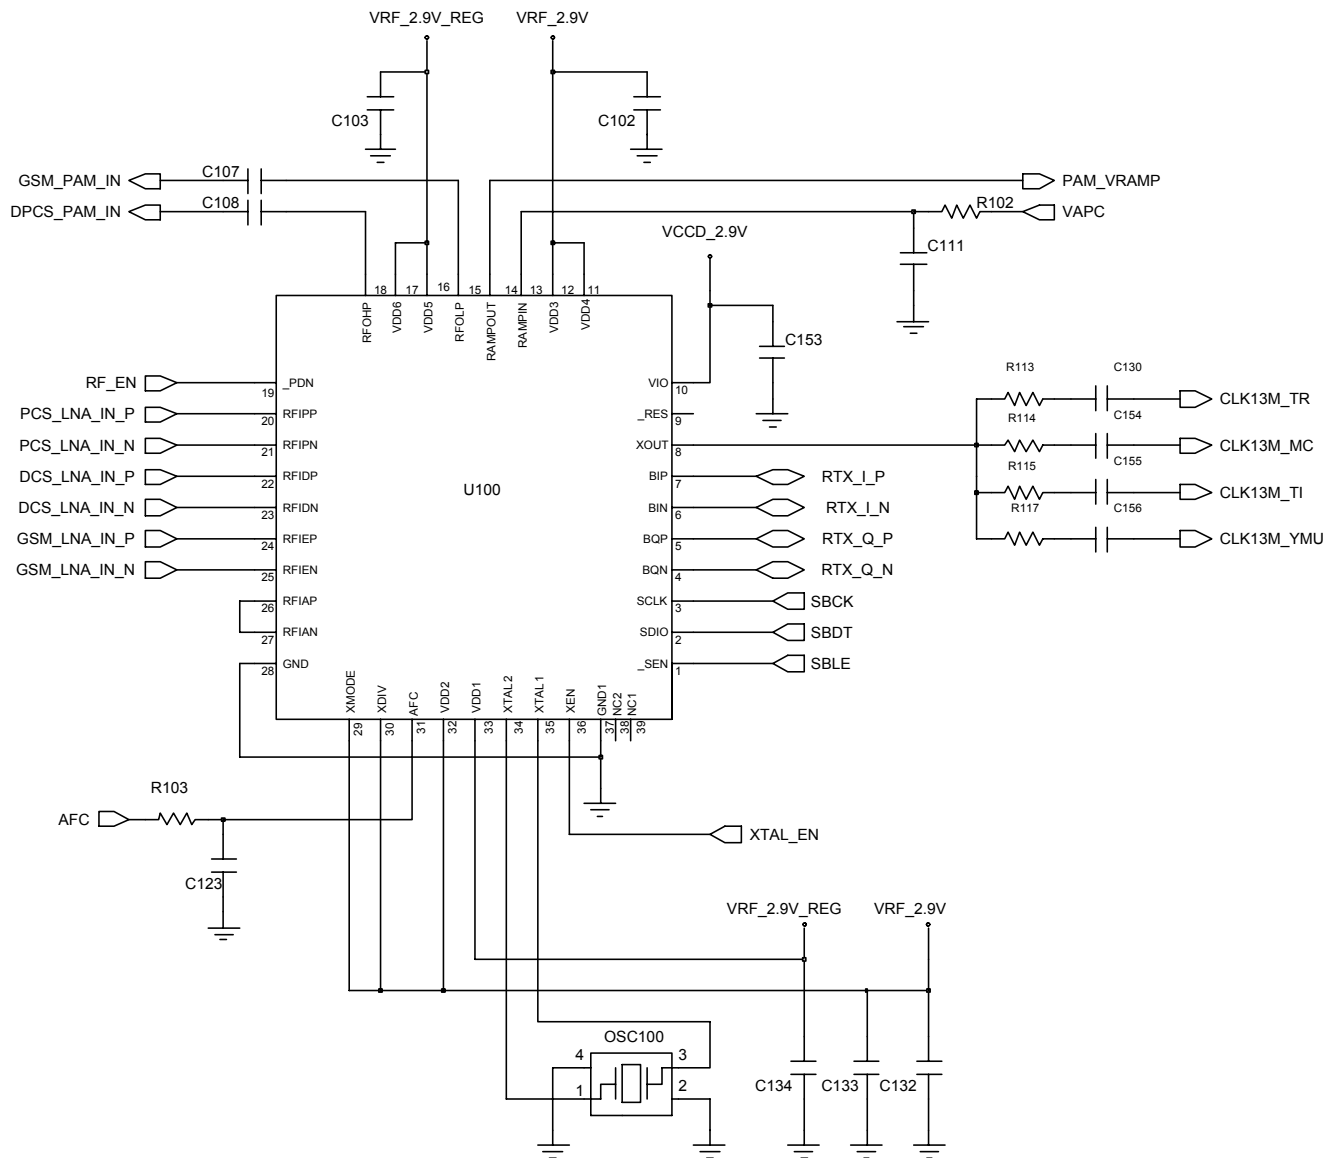

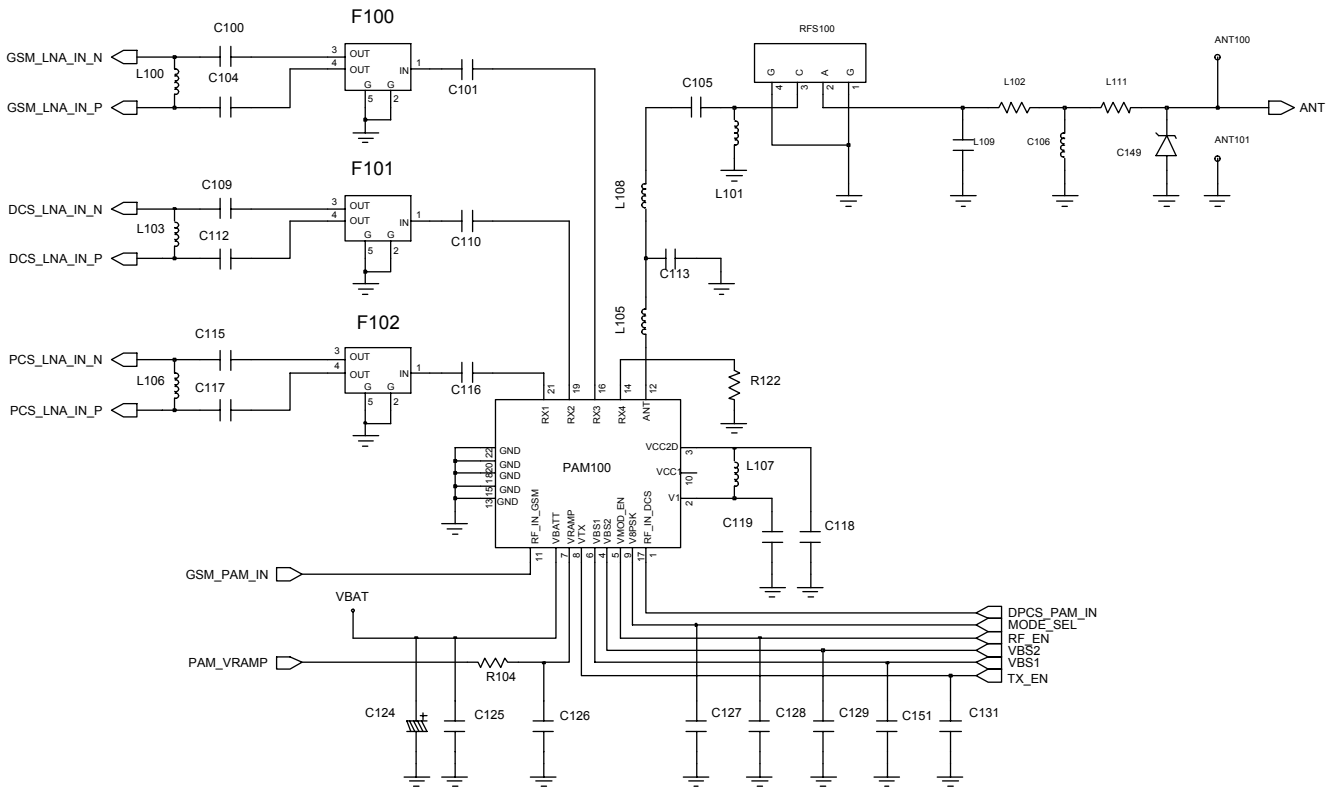


10-2-4. GSM900 Transmitter

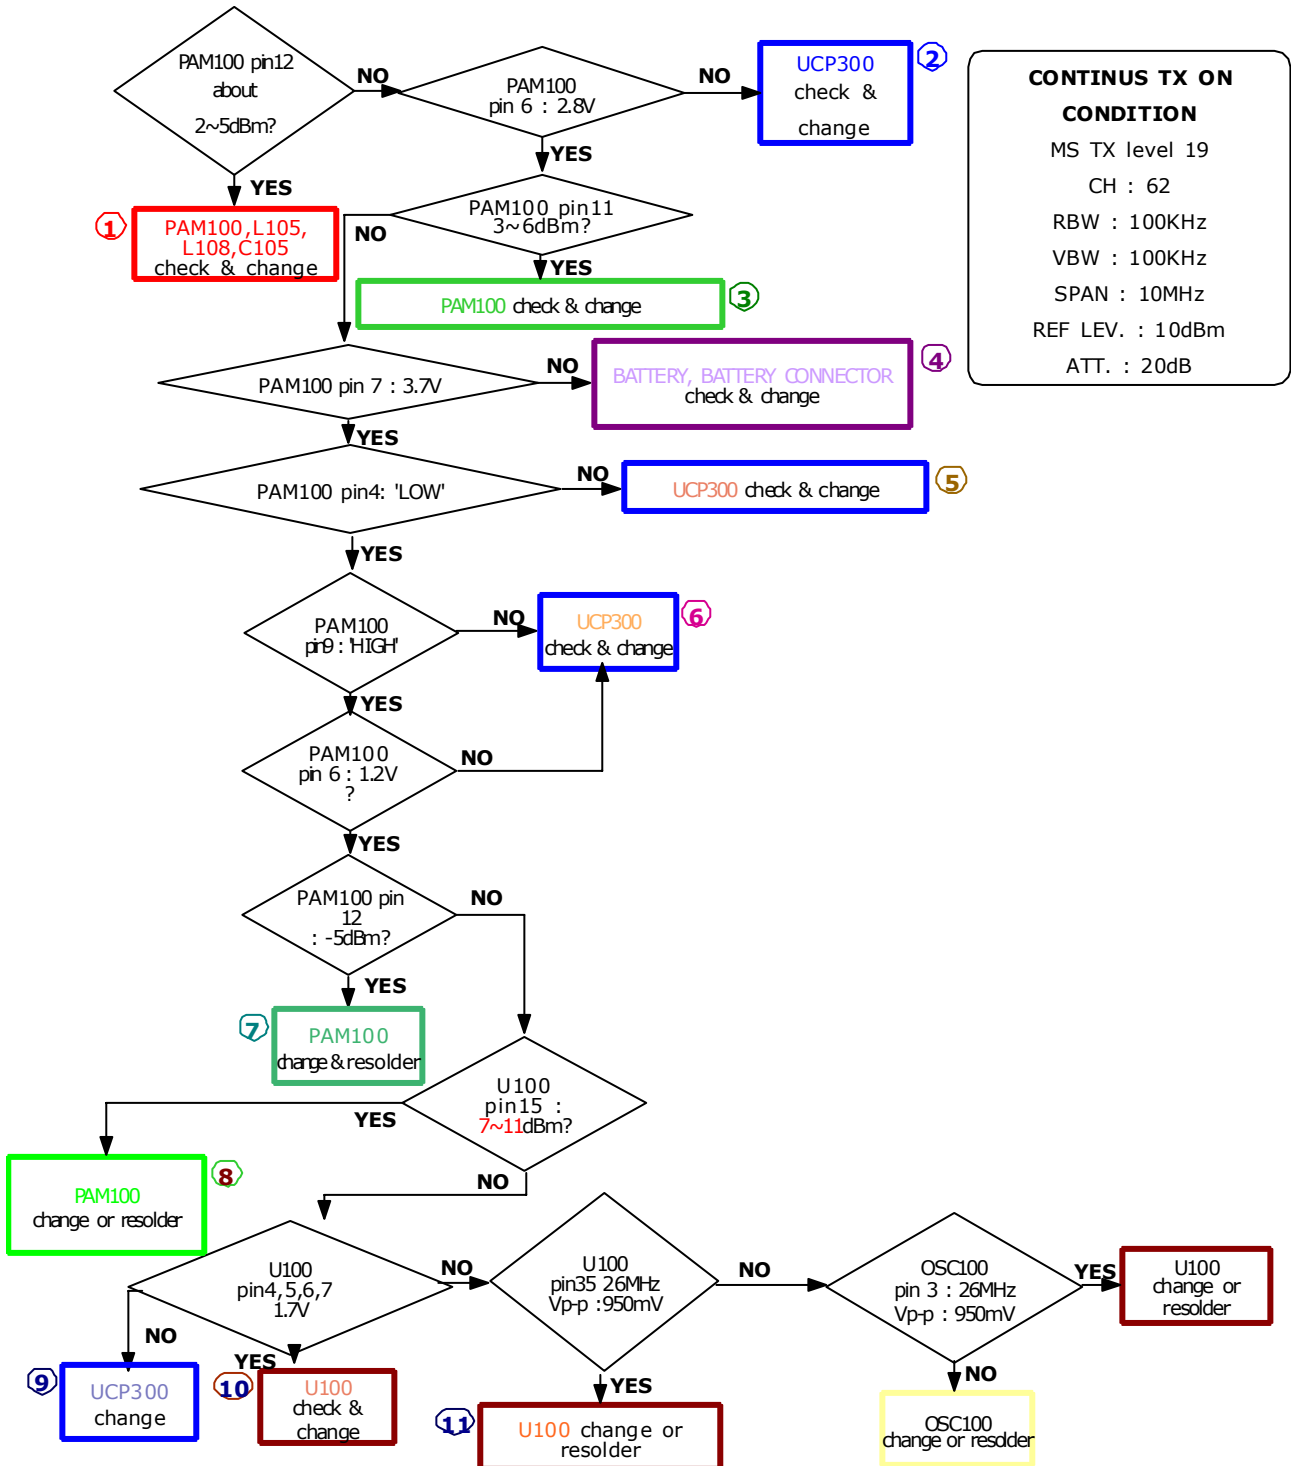


**CONTINUS TX ON
CONDITION**
 MS TX level 19
 CH : 62
 RBW : 100KHz
 VBW : 100KHz
 SPAN : 10MHz
 REF LEV. : 10dBm
 ATT. : 20dB

10-2-5. DCS Transmitter

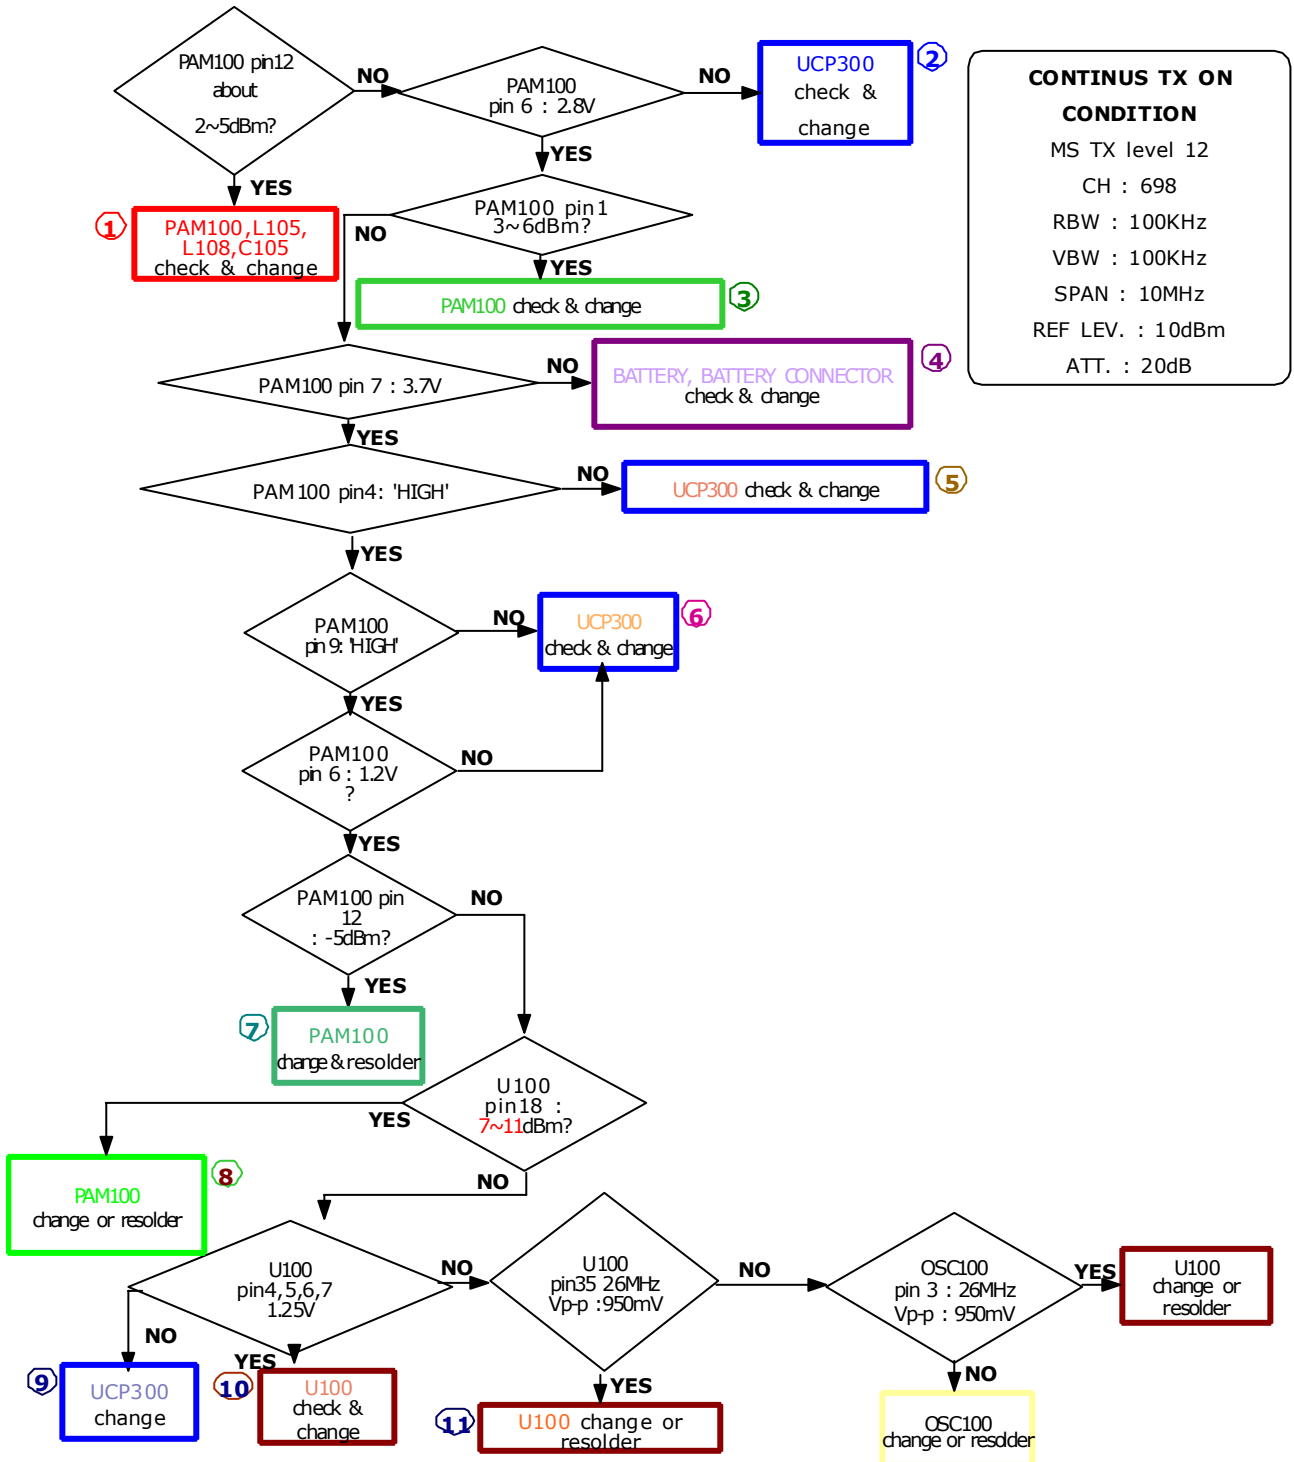

10-2-6. PCS Transmitter

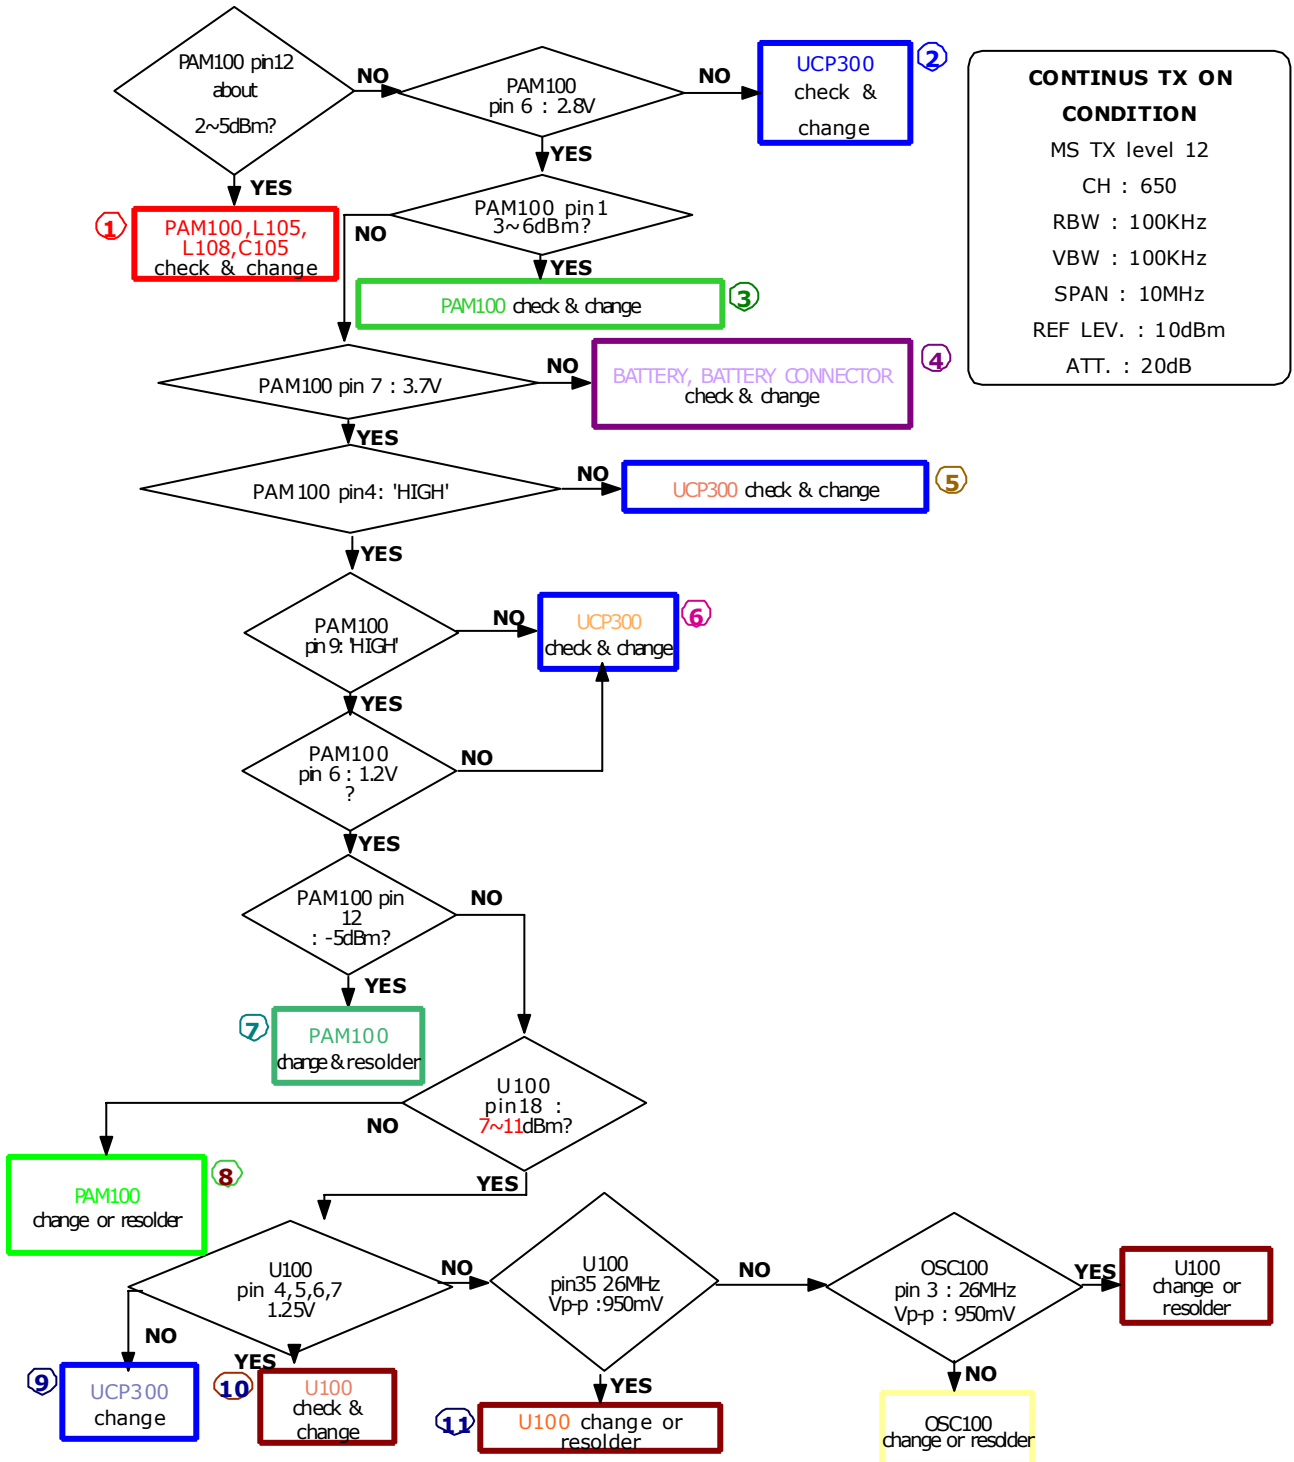

10-2-7. Bluetooth Part

