



9. Chart of Troubleshooting

9-1. Baseband


9-1-1. Power ON


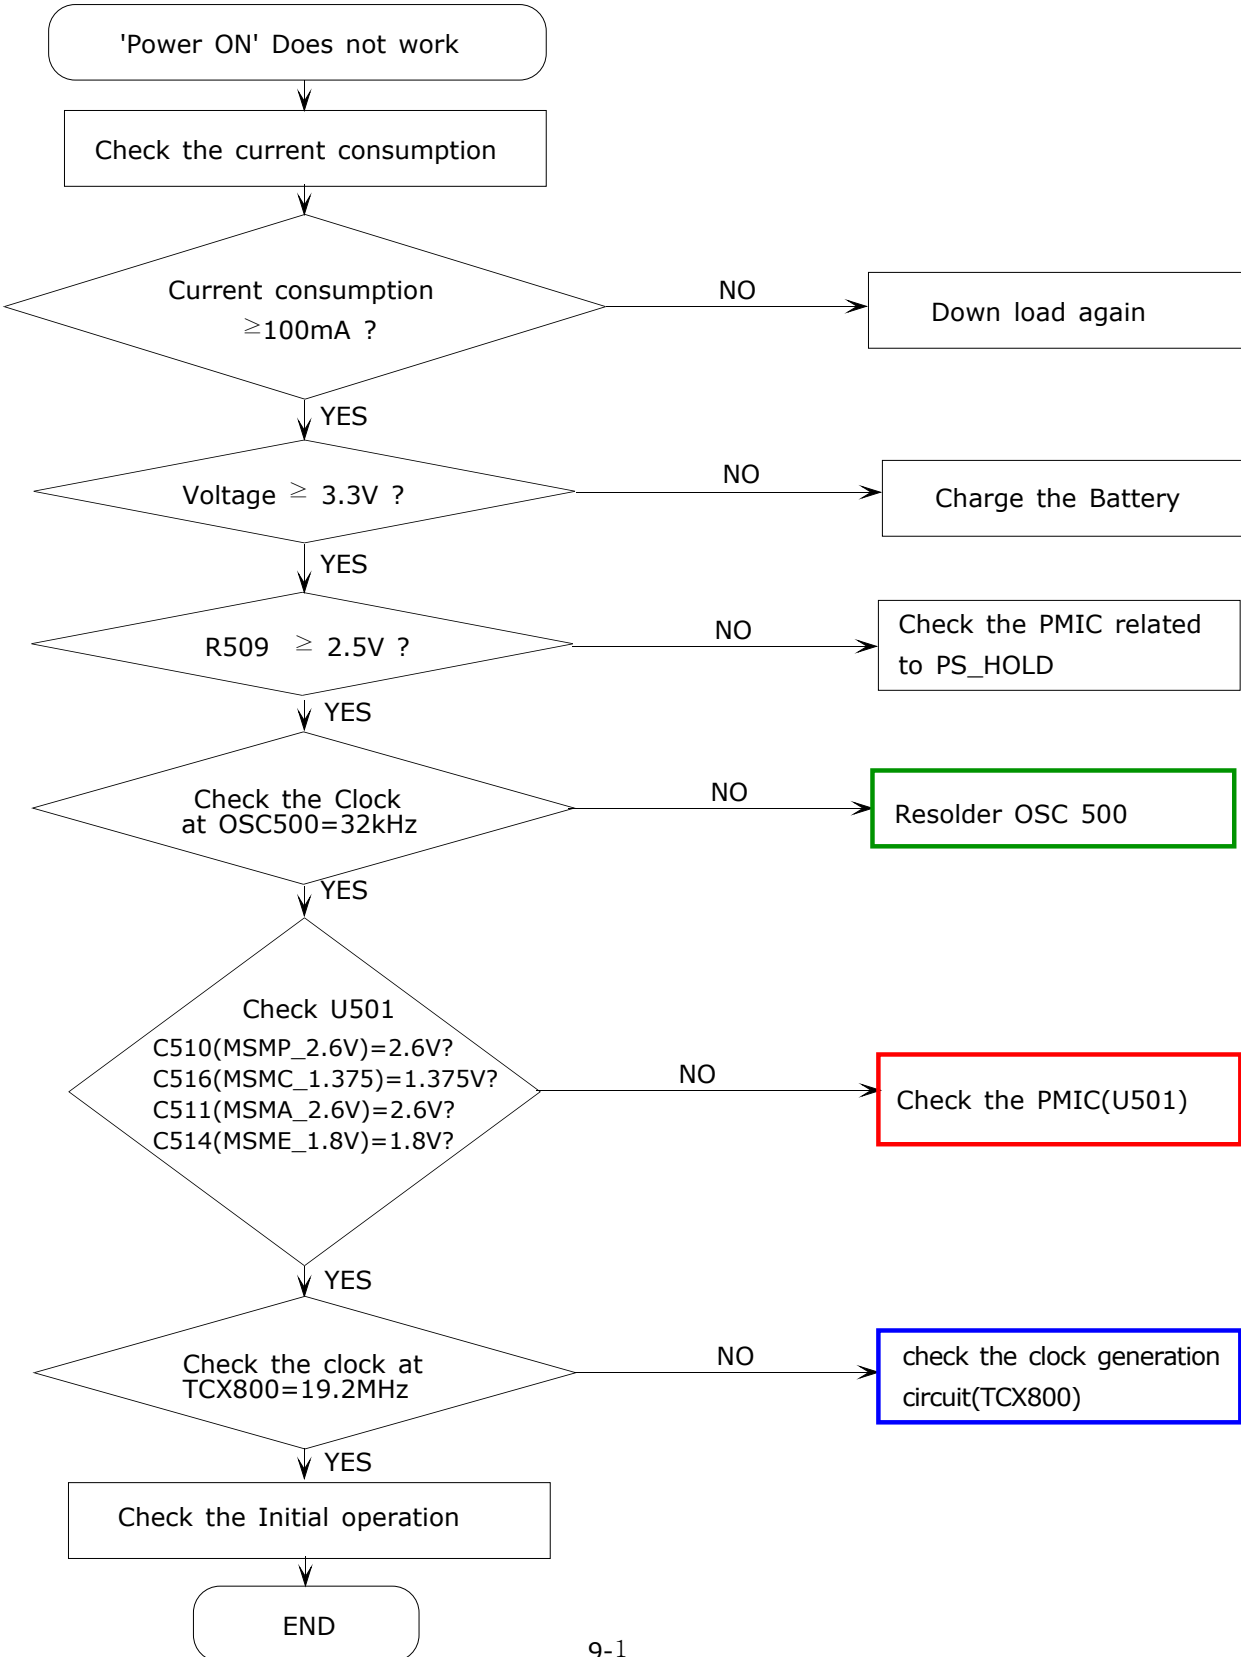



9. Chart of Troubleshooting


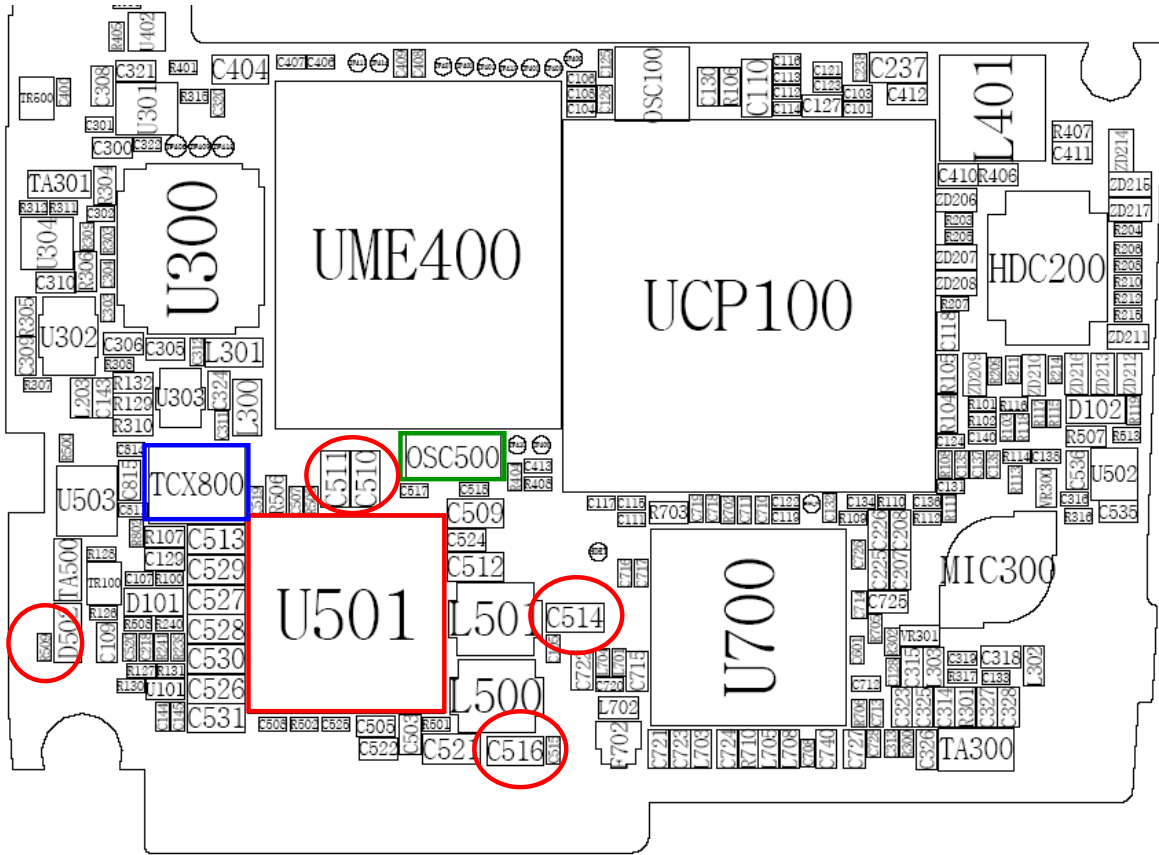



9-1-2. System Initial

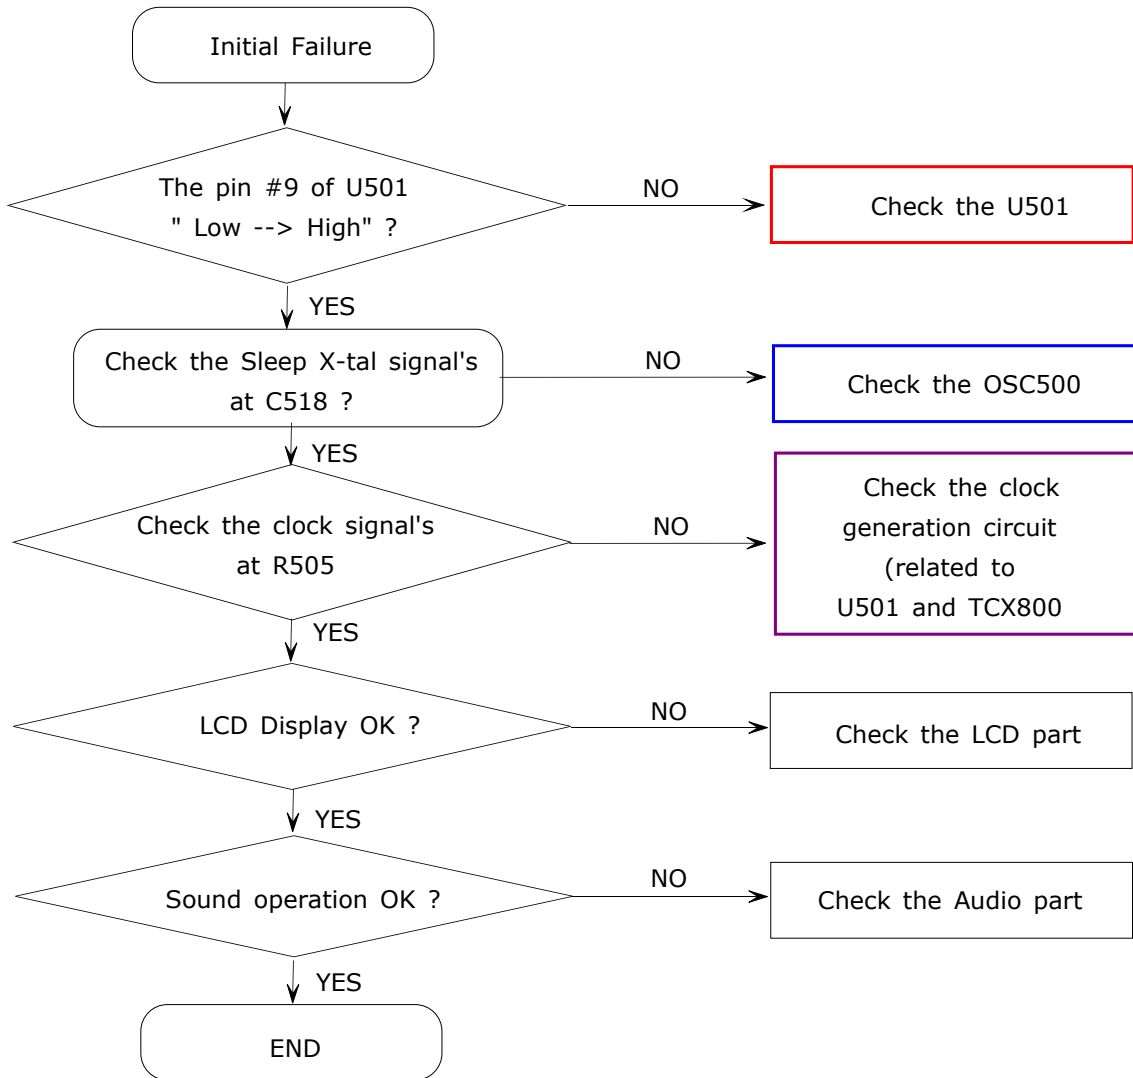

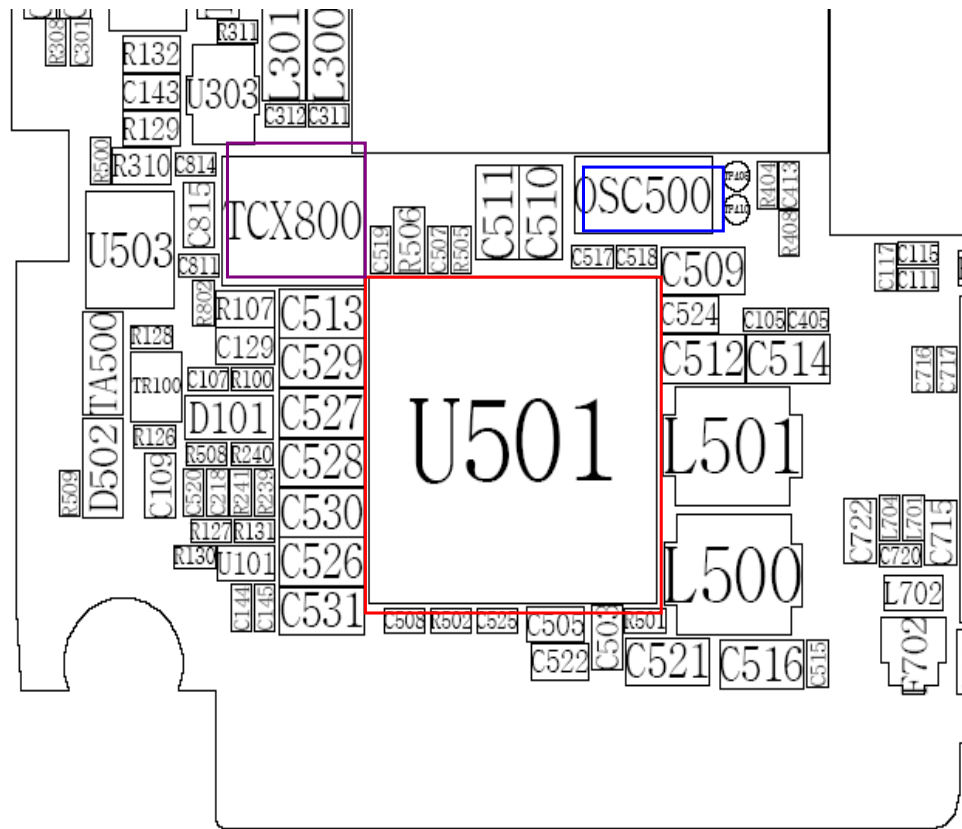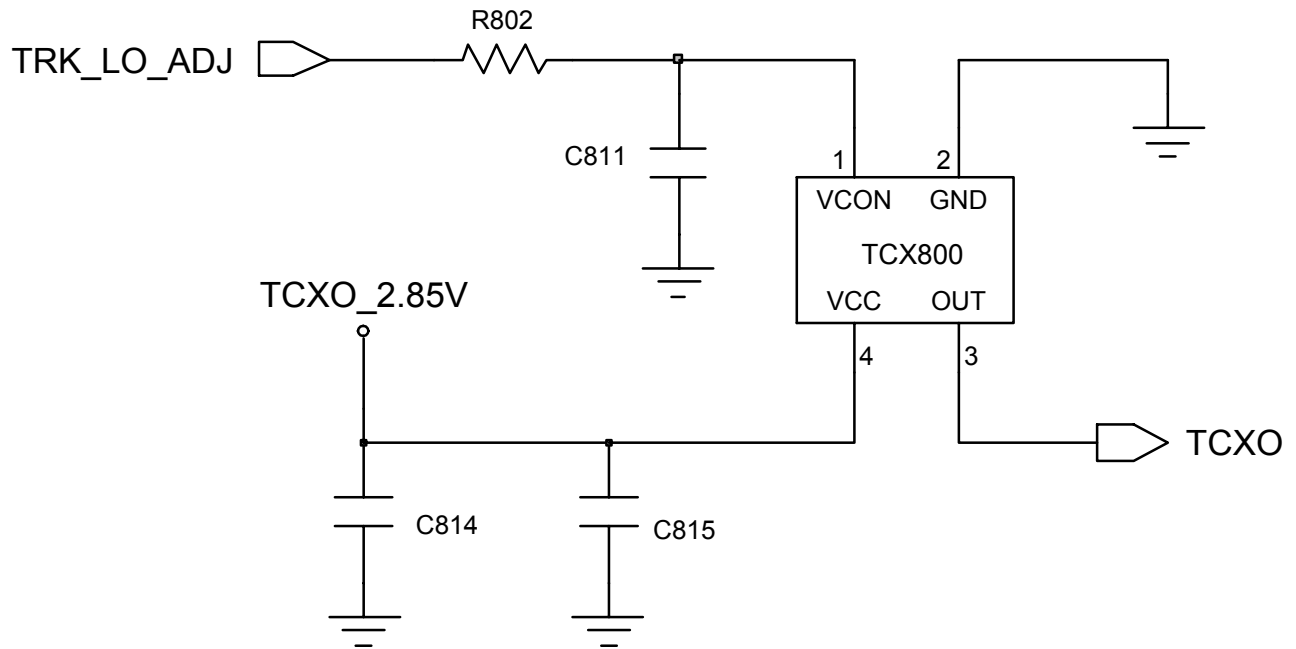


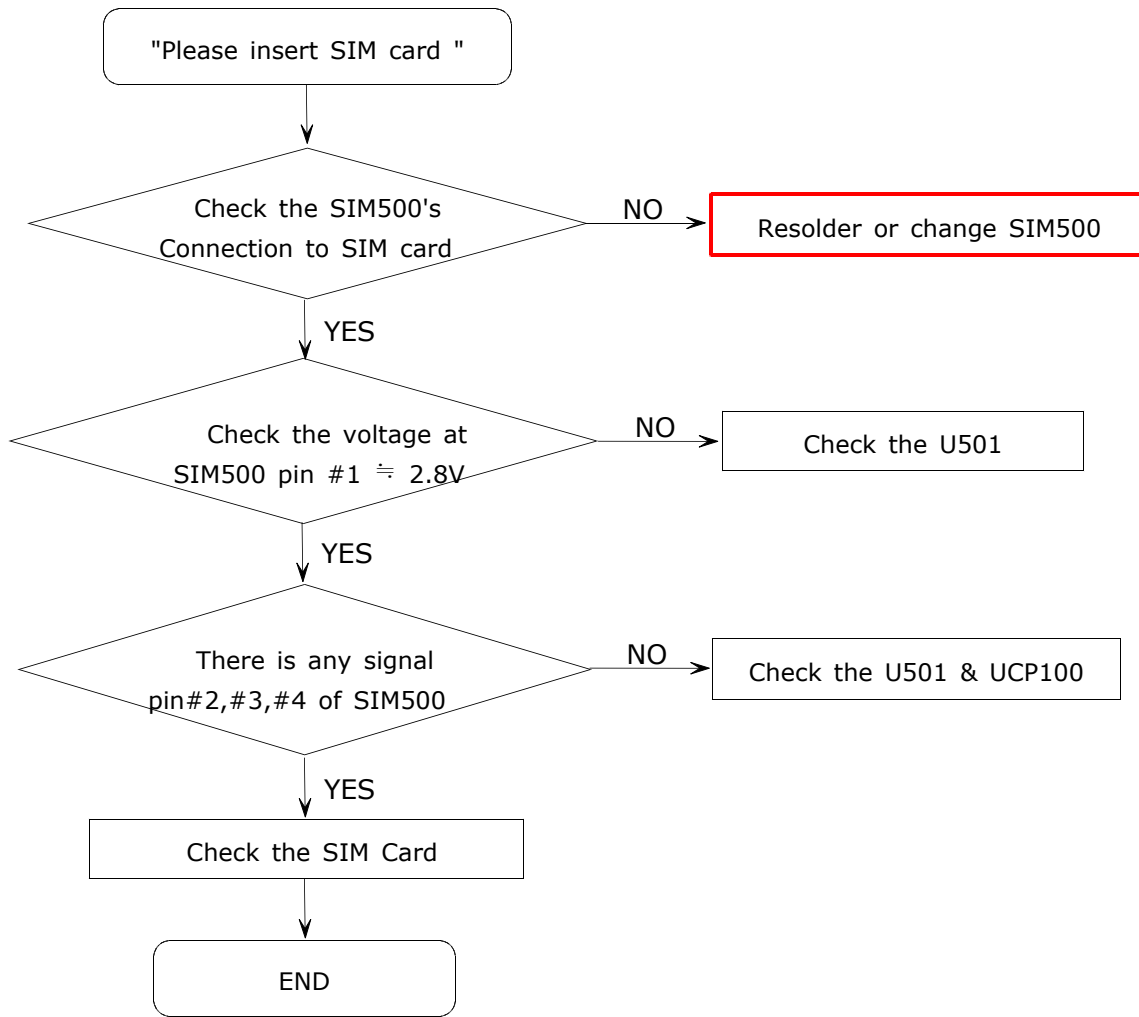
9-1-3. SIM Part

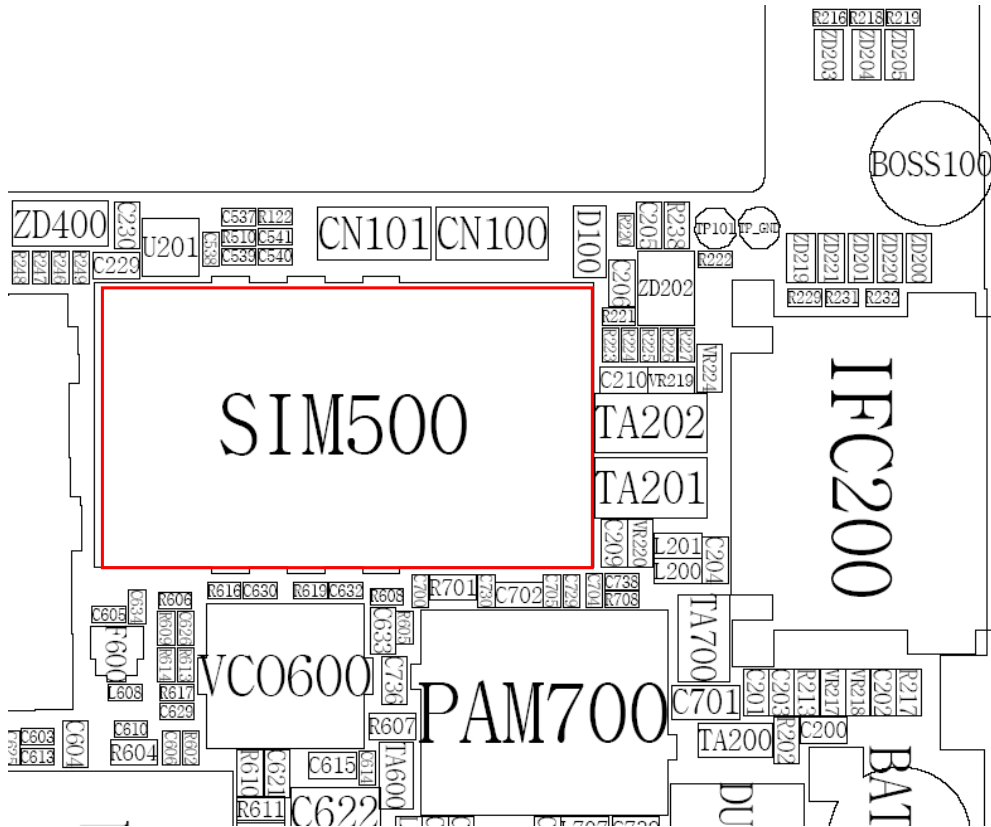
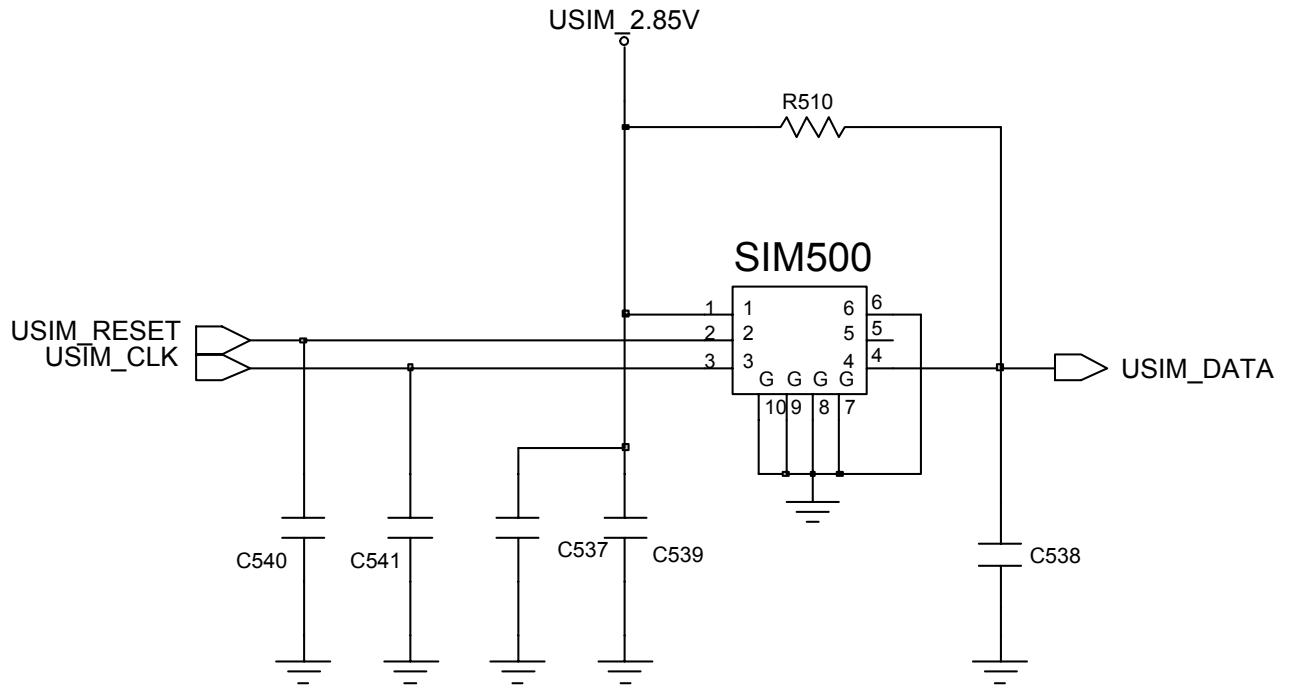


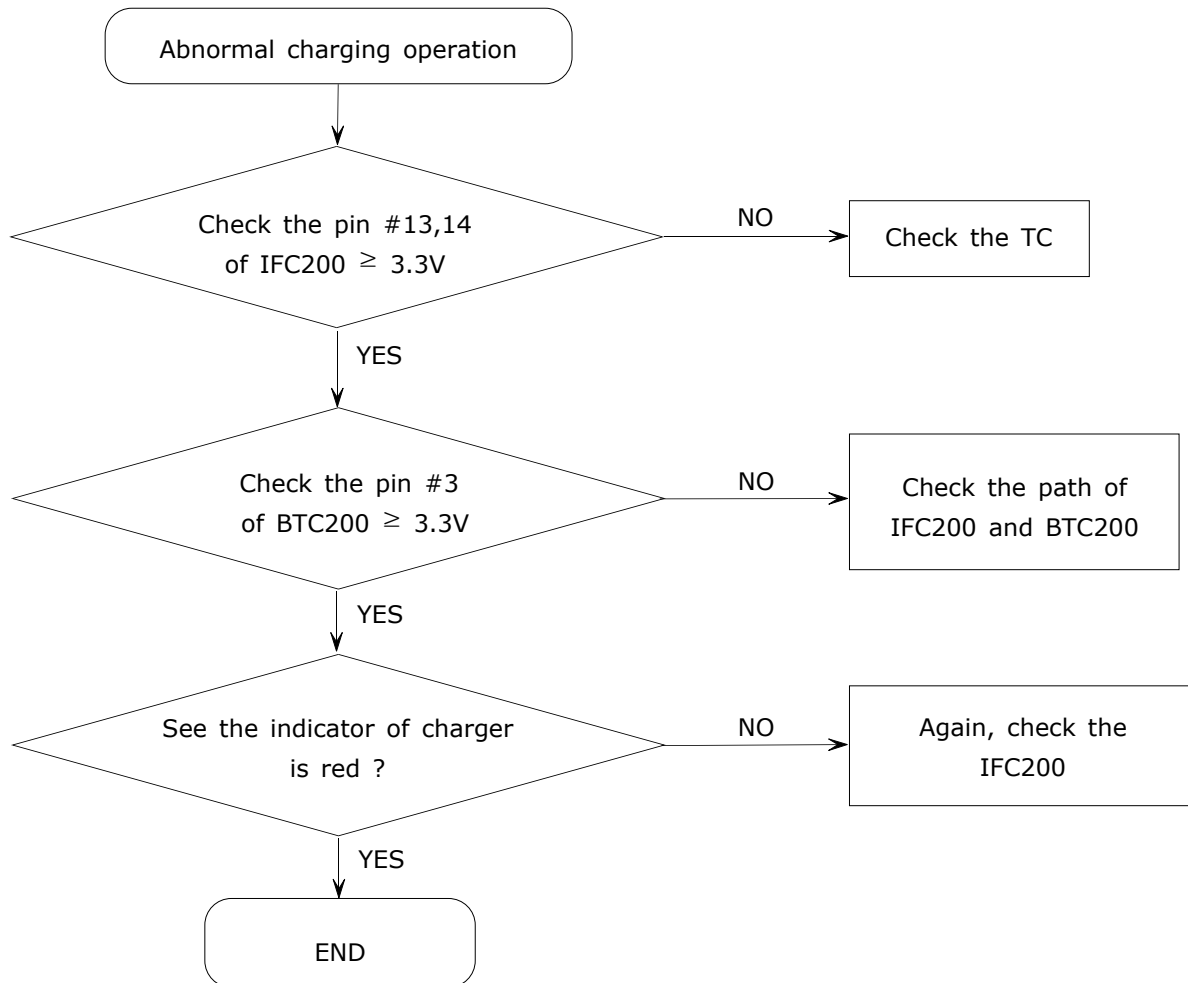9-1-4. Charging Part


Flow Chart of Troubleshooting and Circuit Diagrams


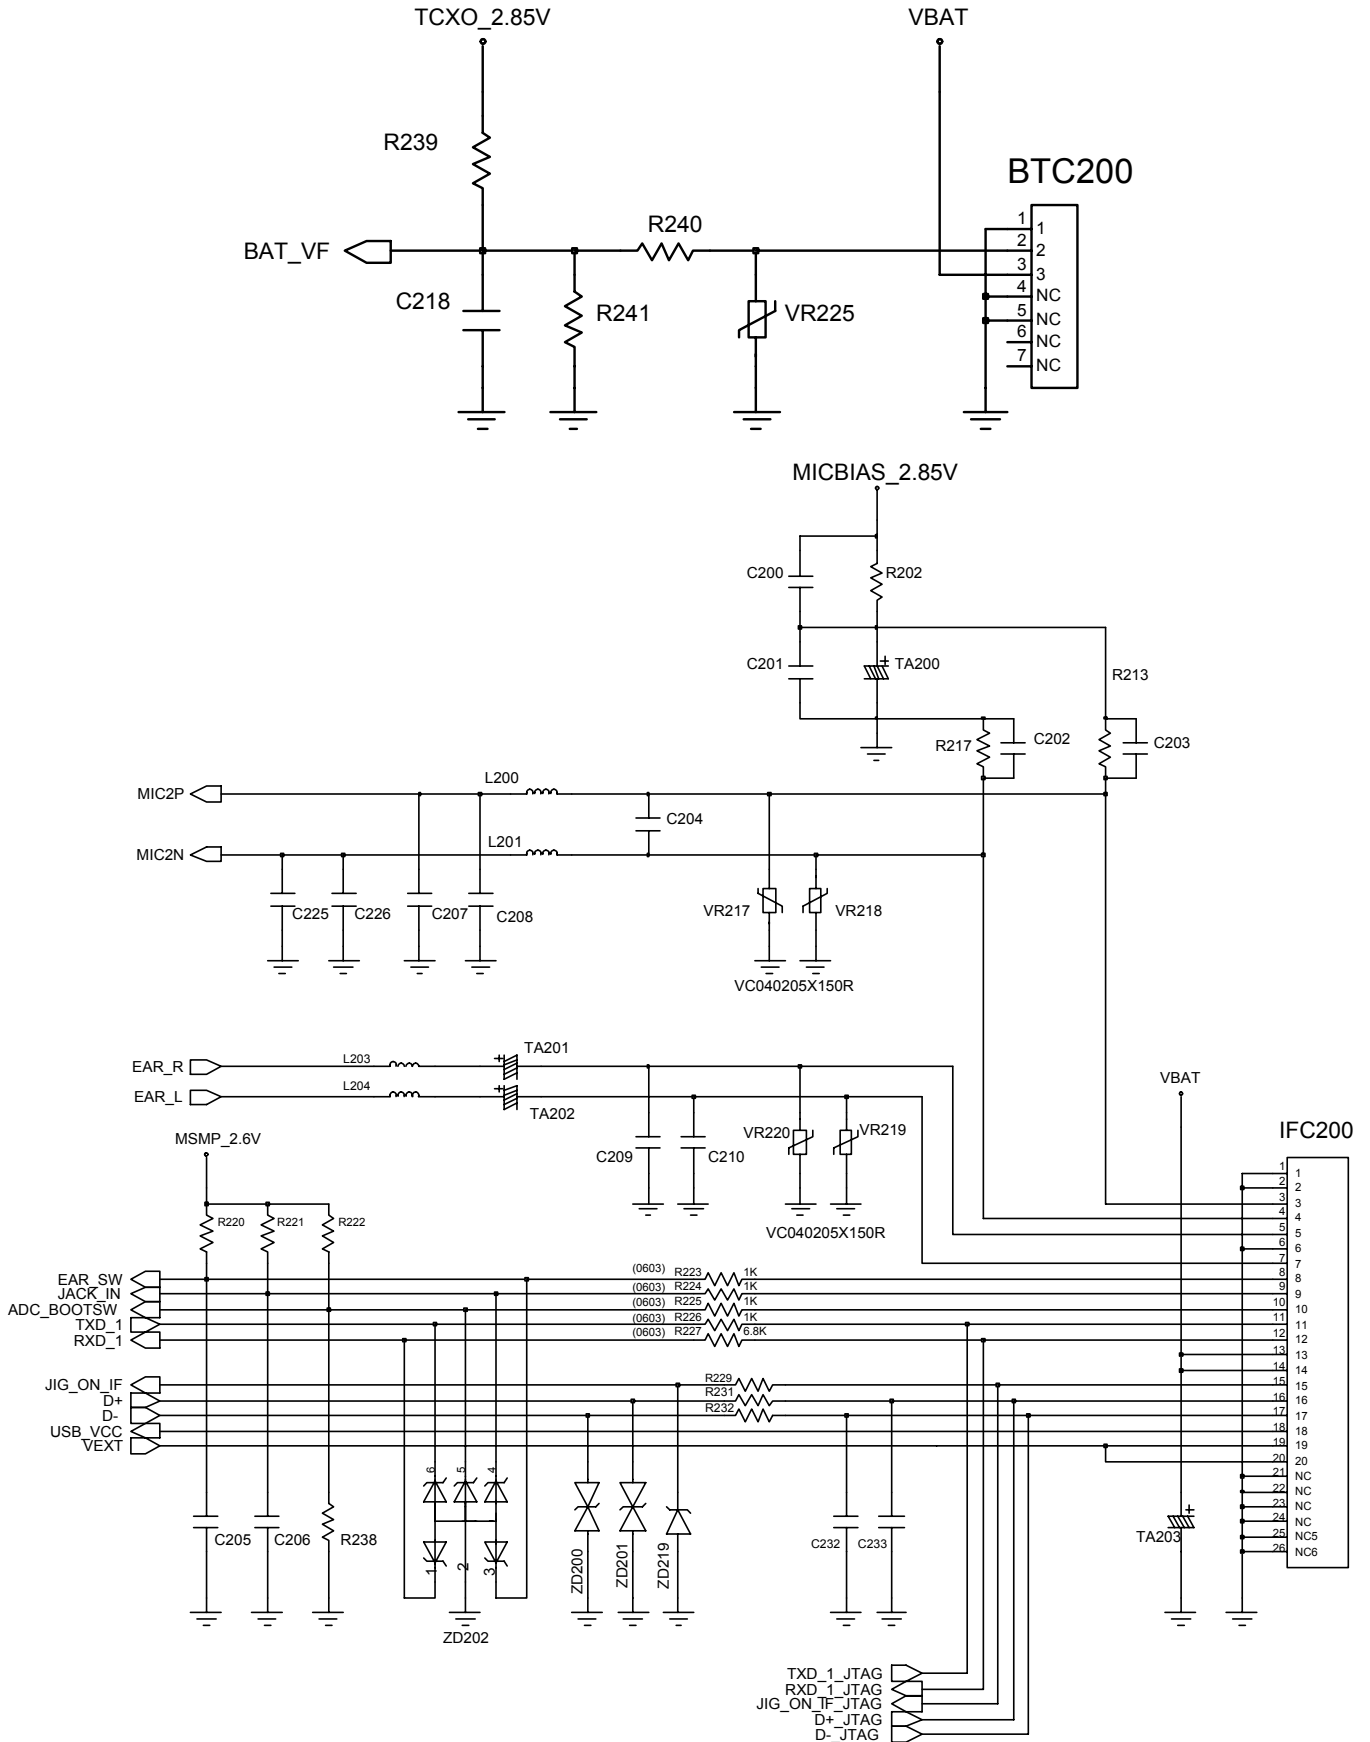



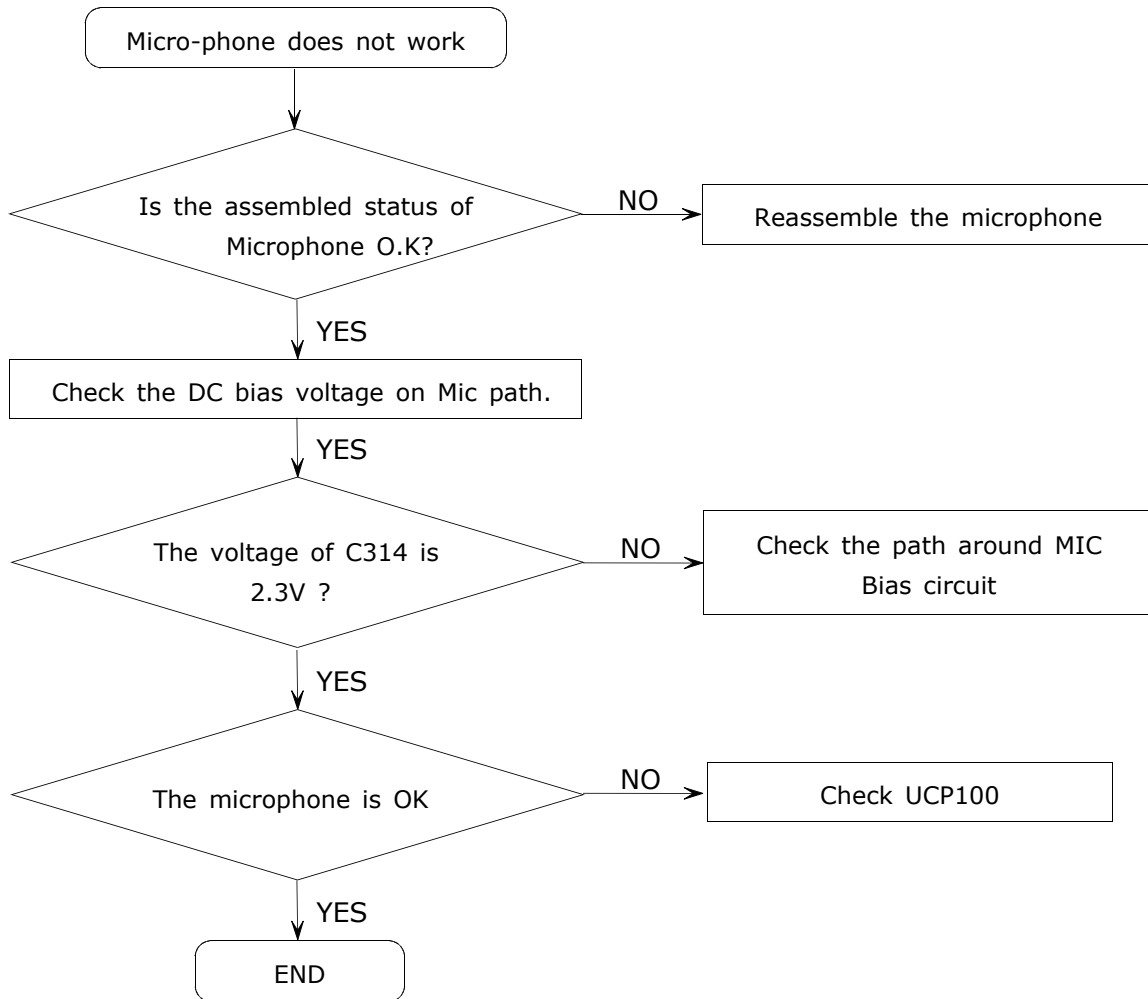
9-1-5. Microphone Part

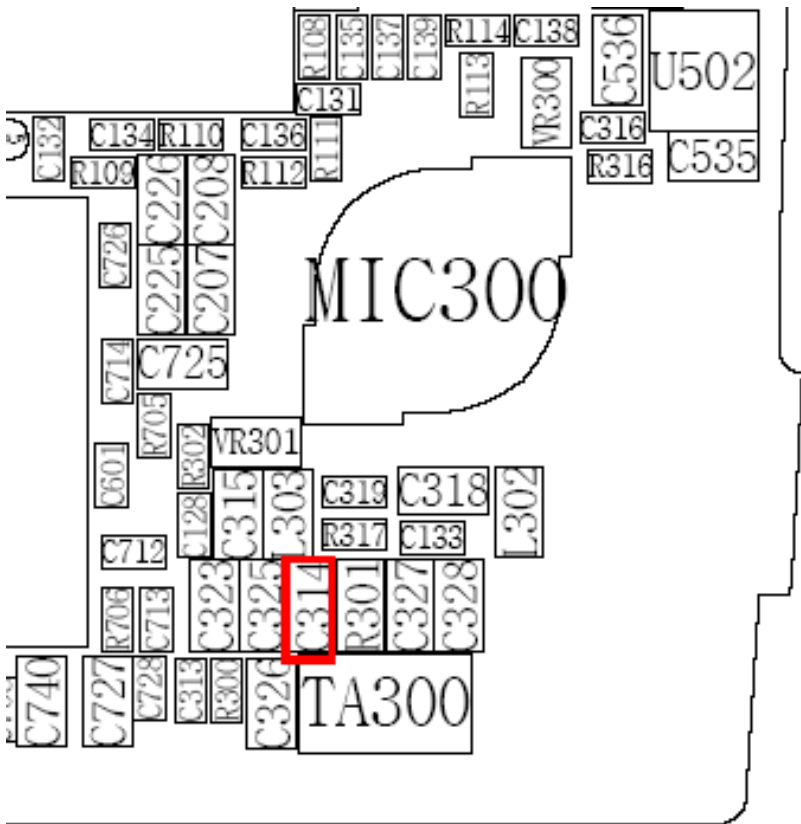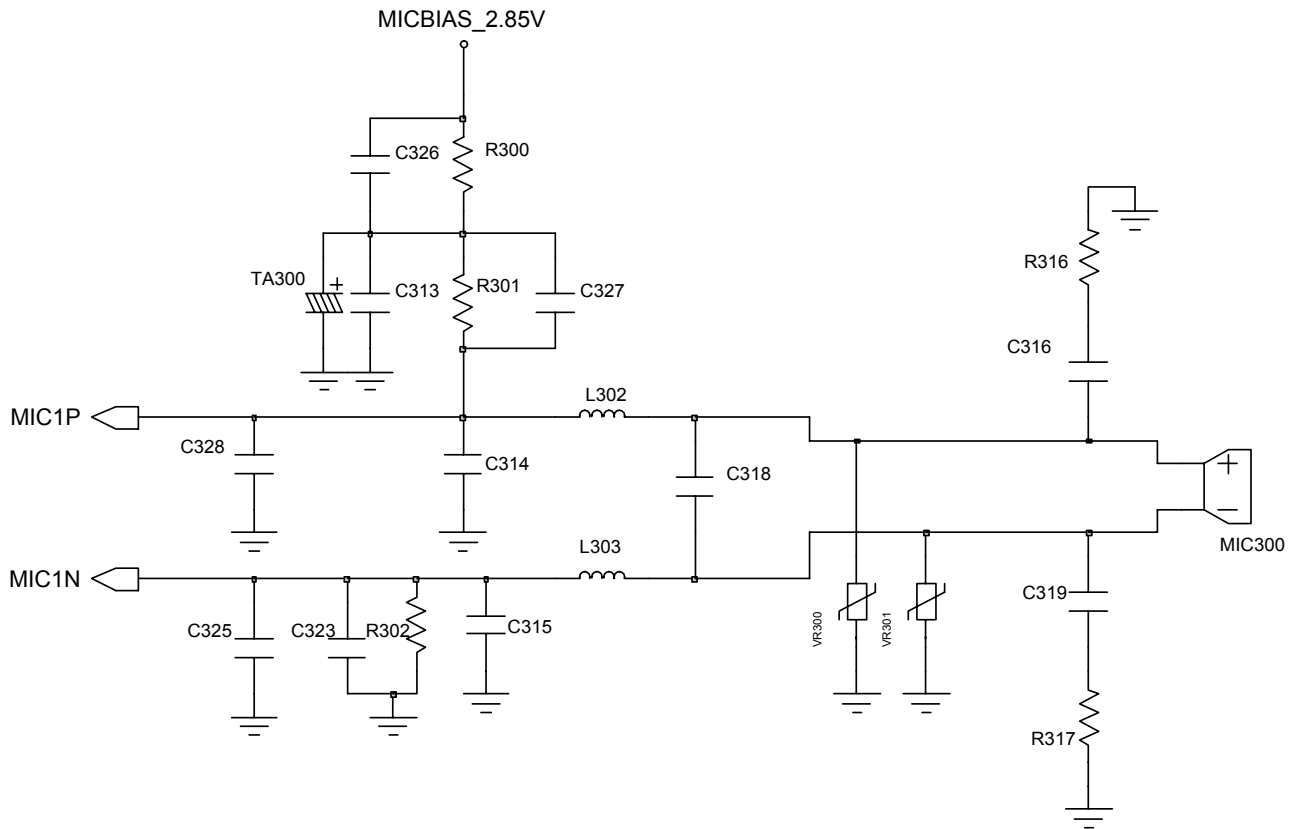



9-1-6. Speaker Part


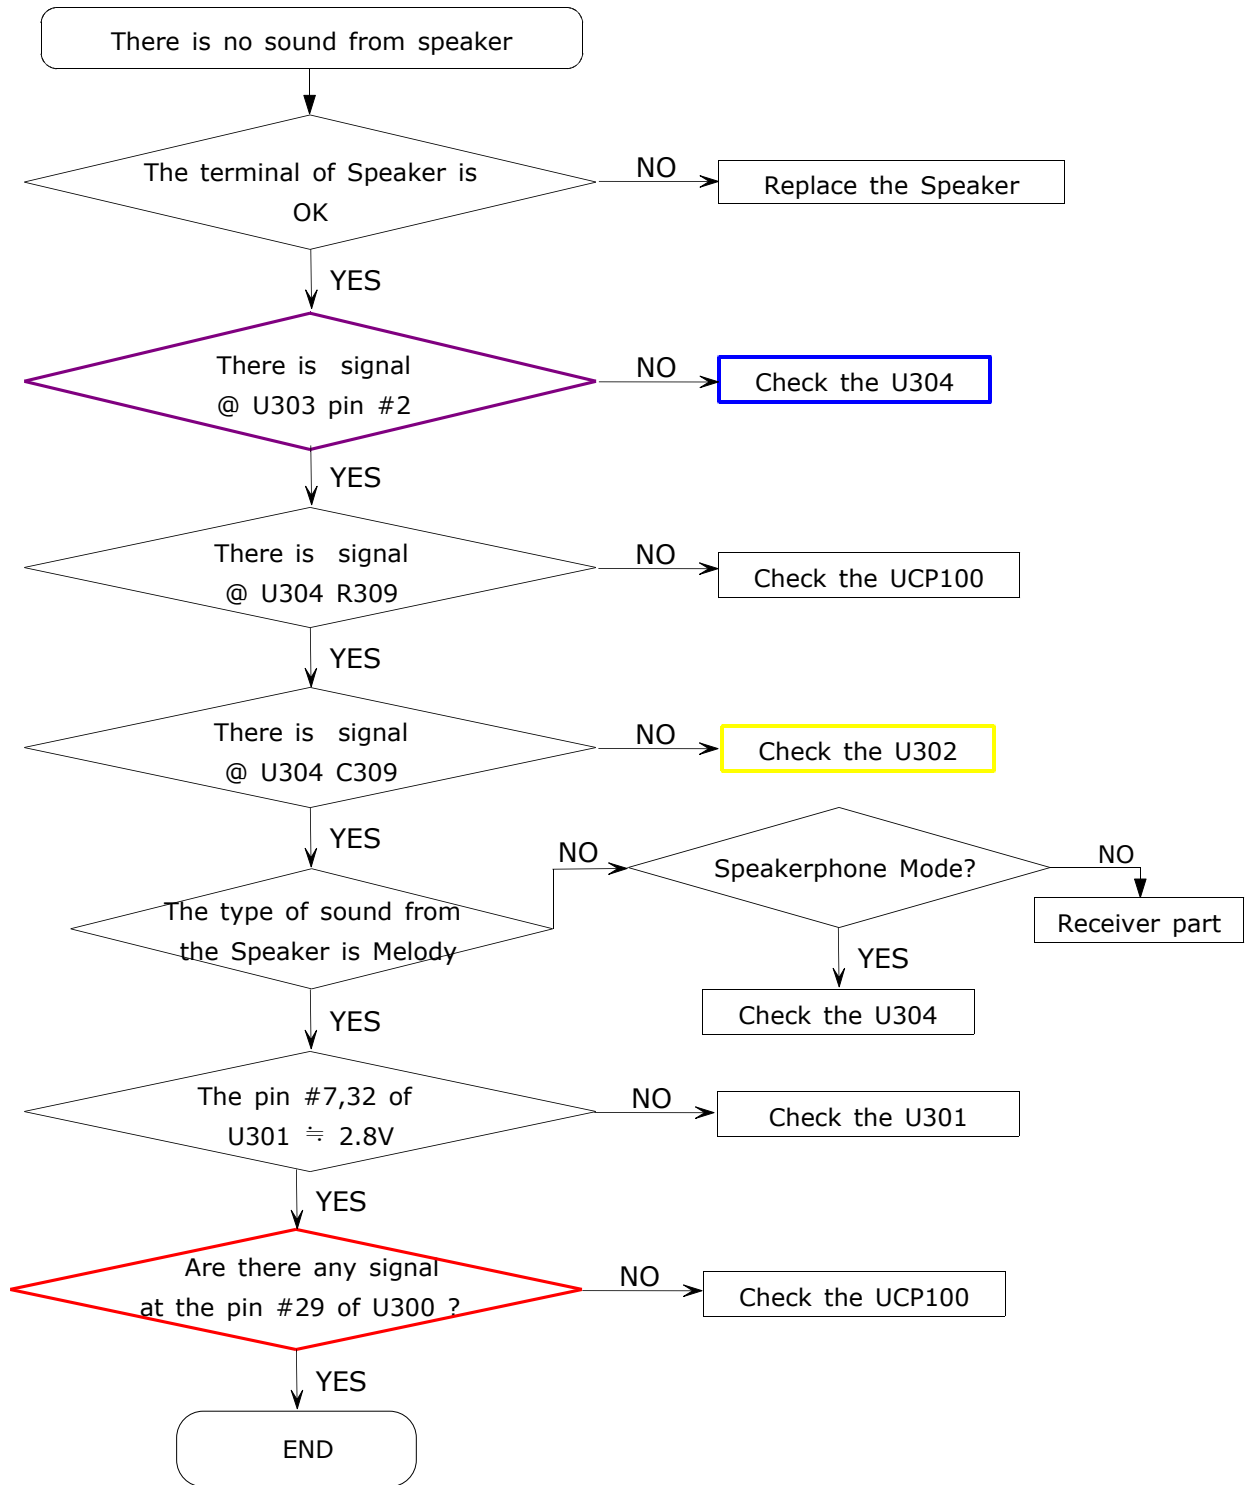


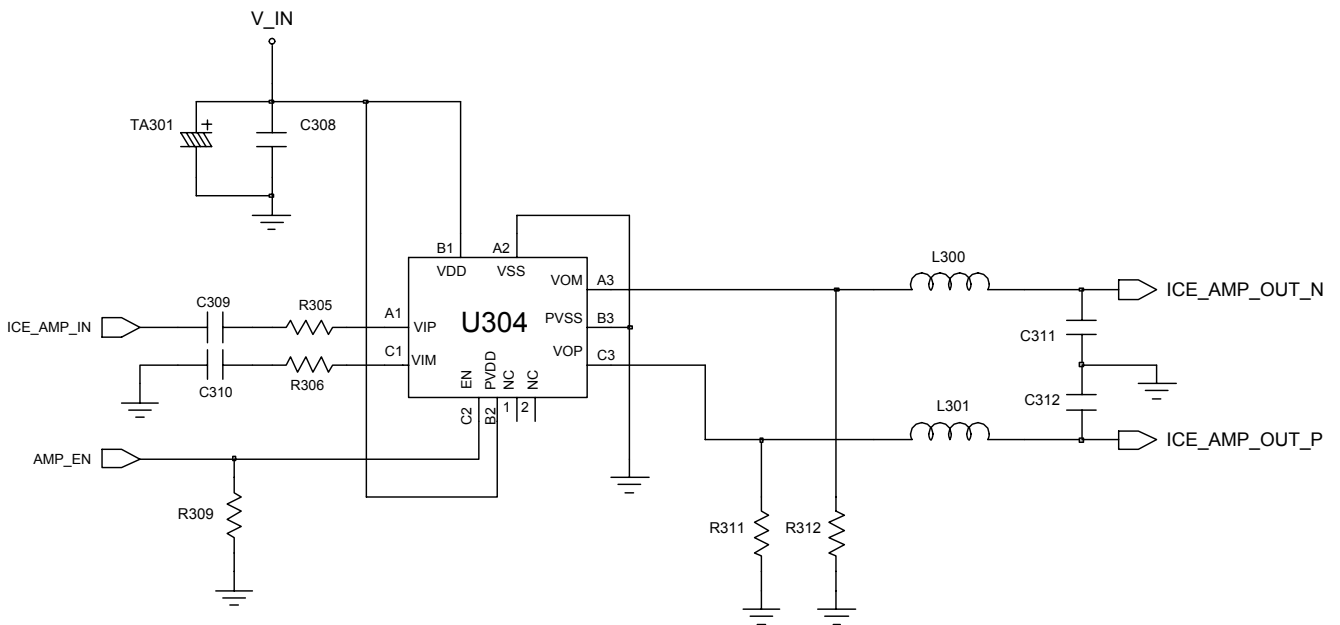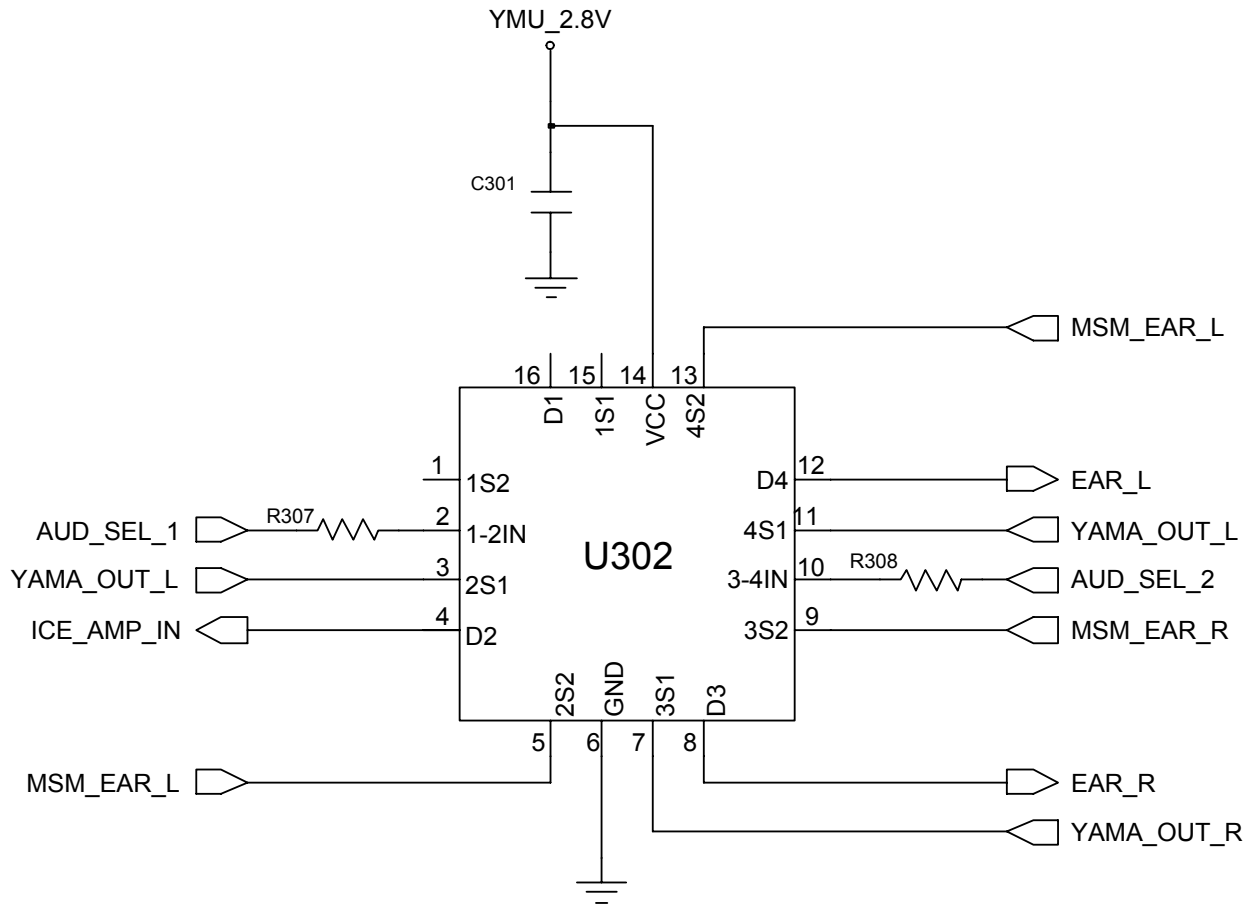


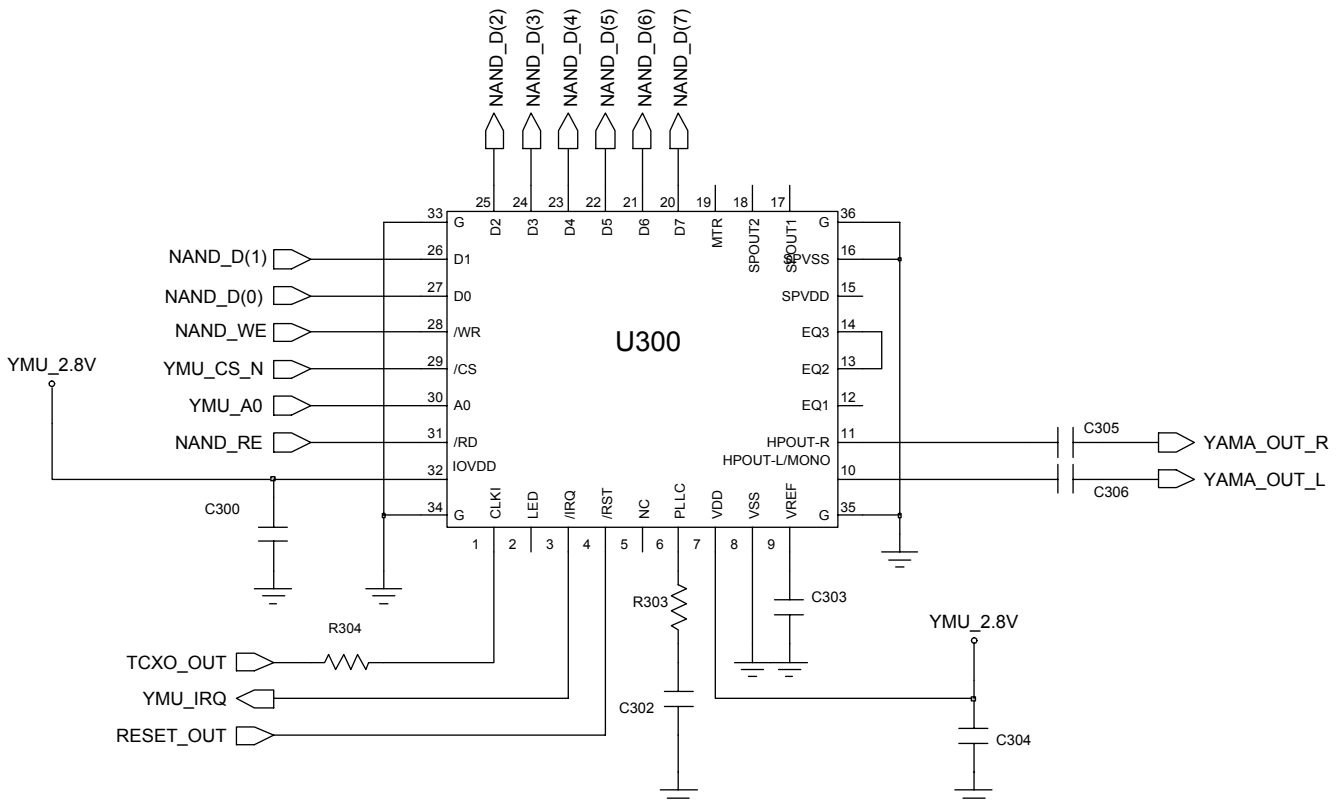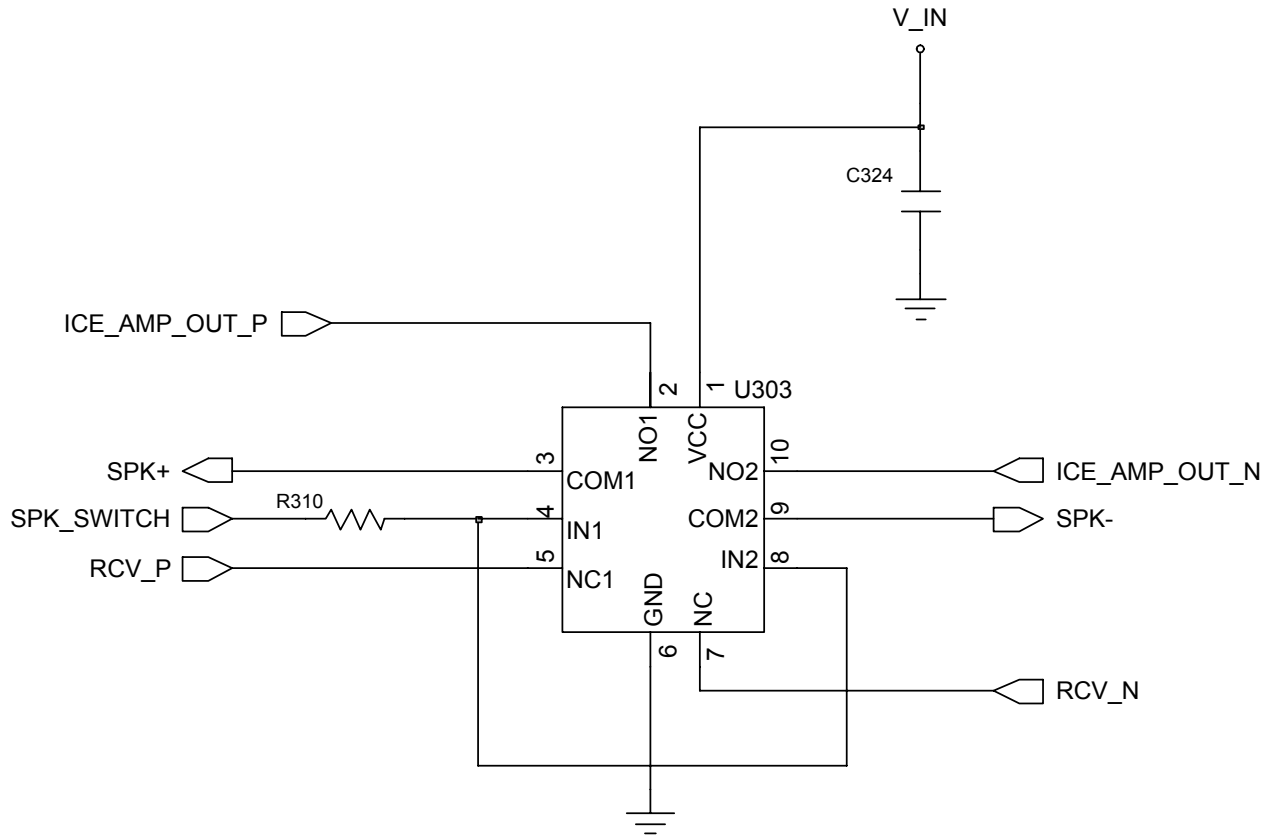


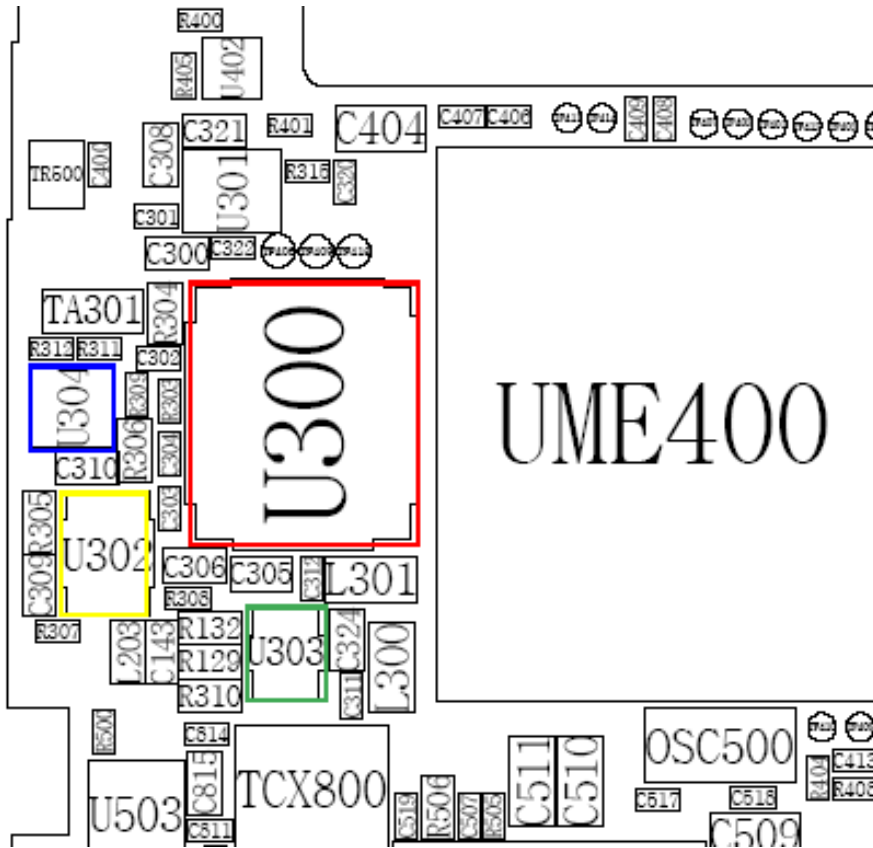


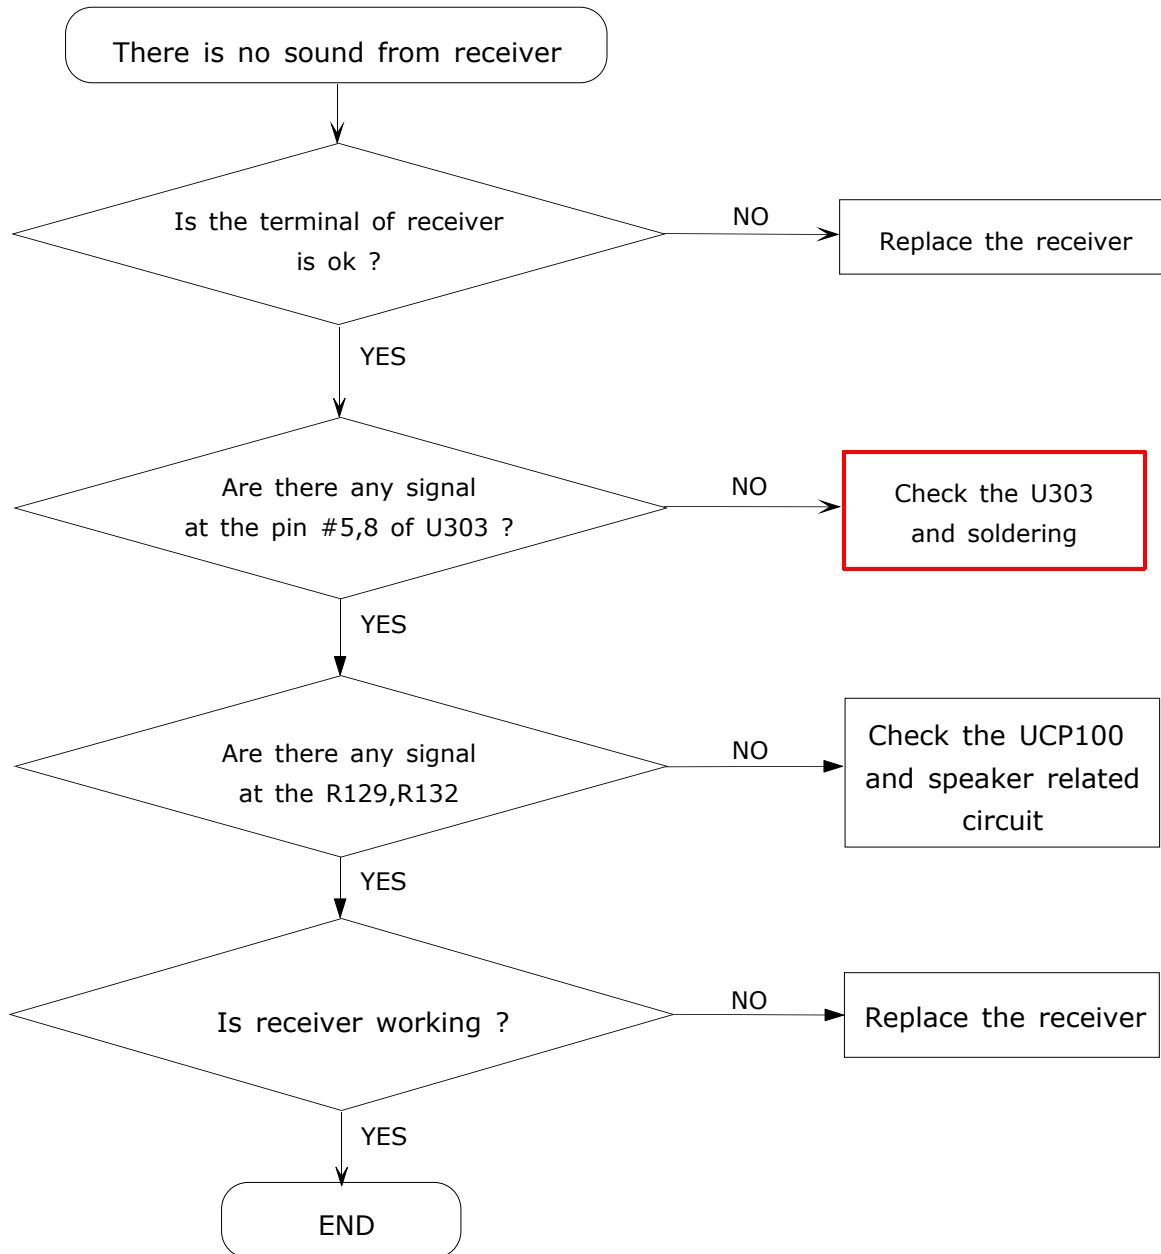9-1-7. Receiver Part

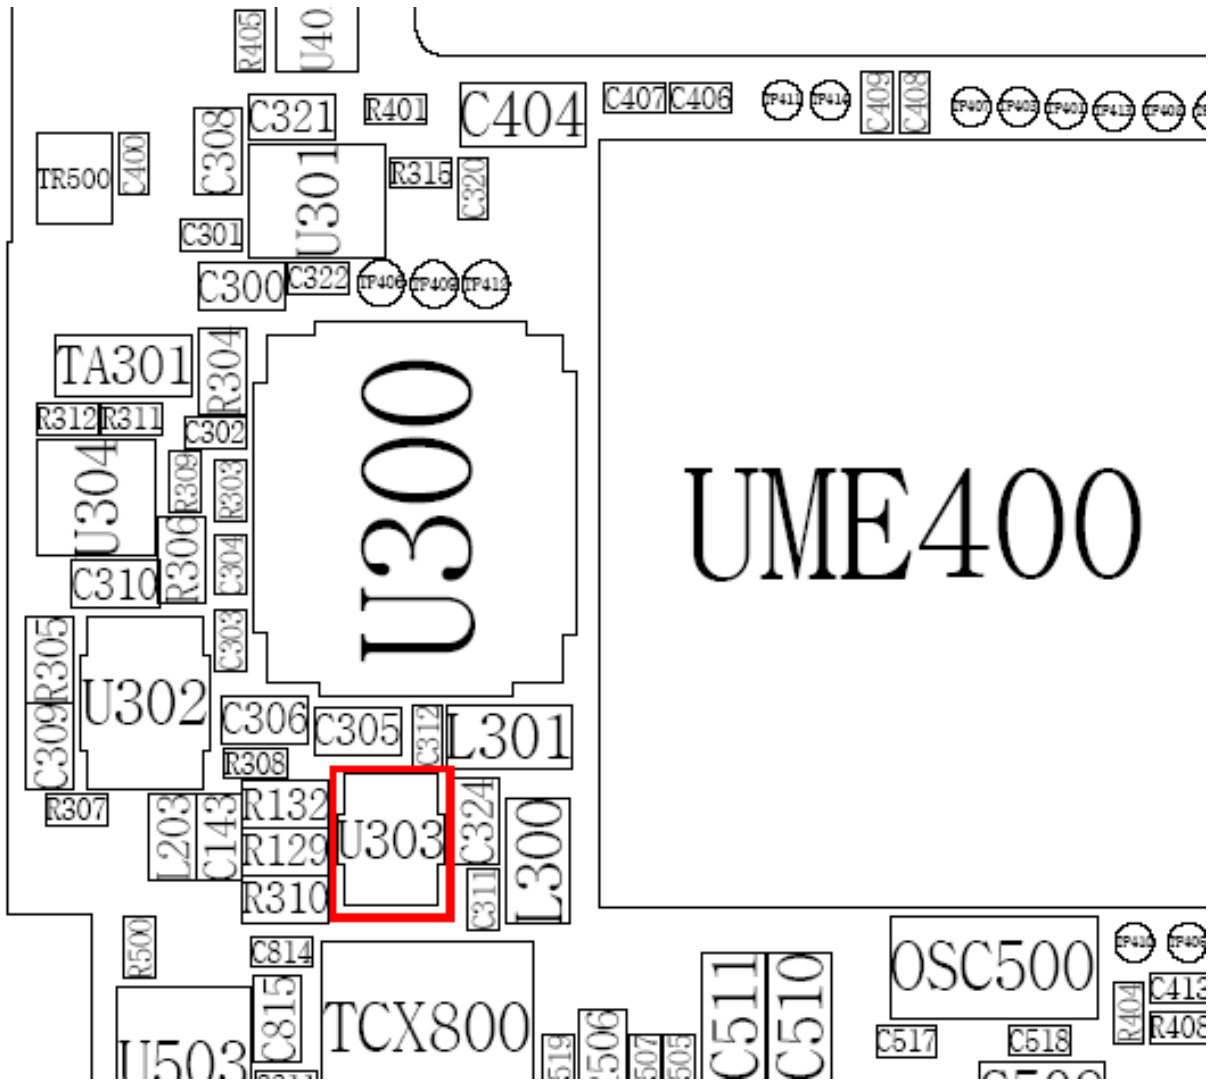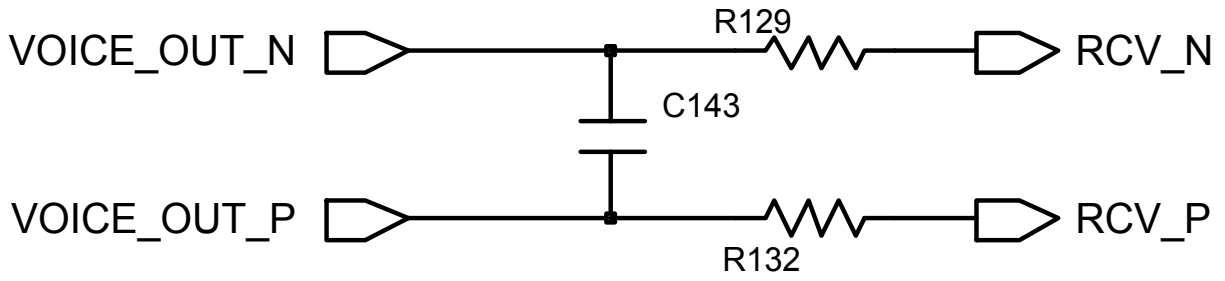

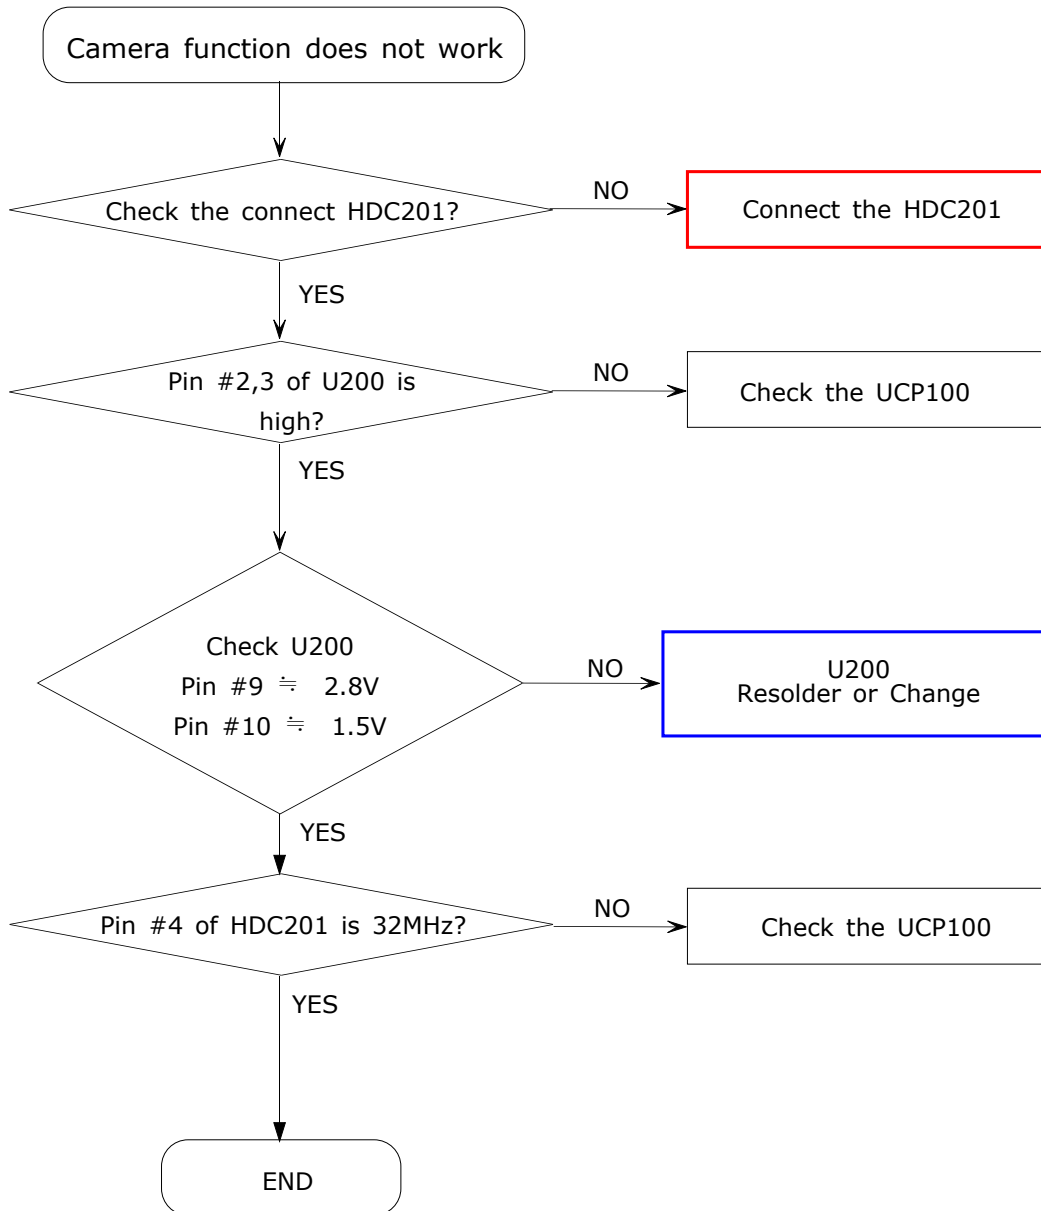
9-1-8. Camera Part

Flow Chart of Troubleshooting and Circuit Diagrams

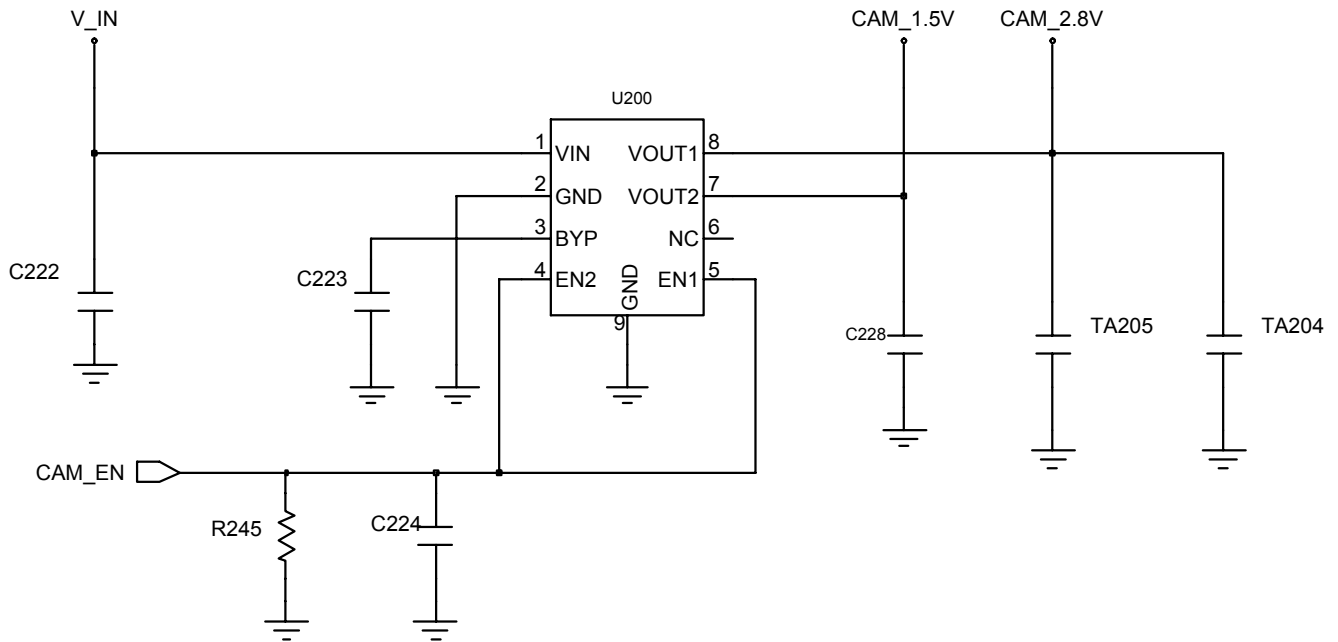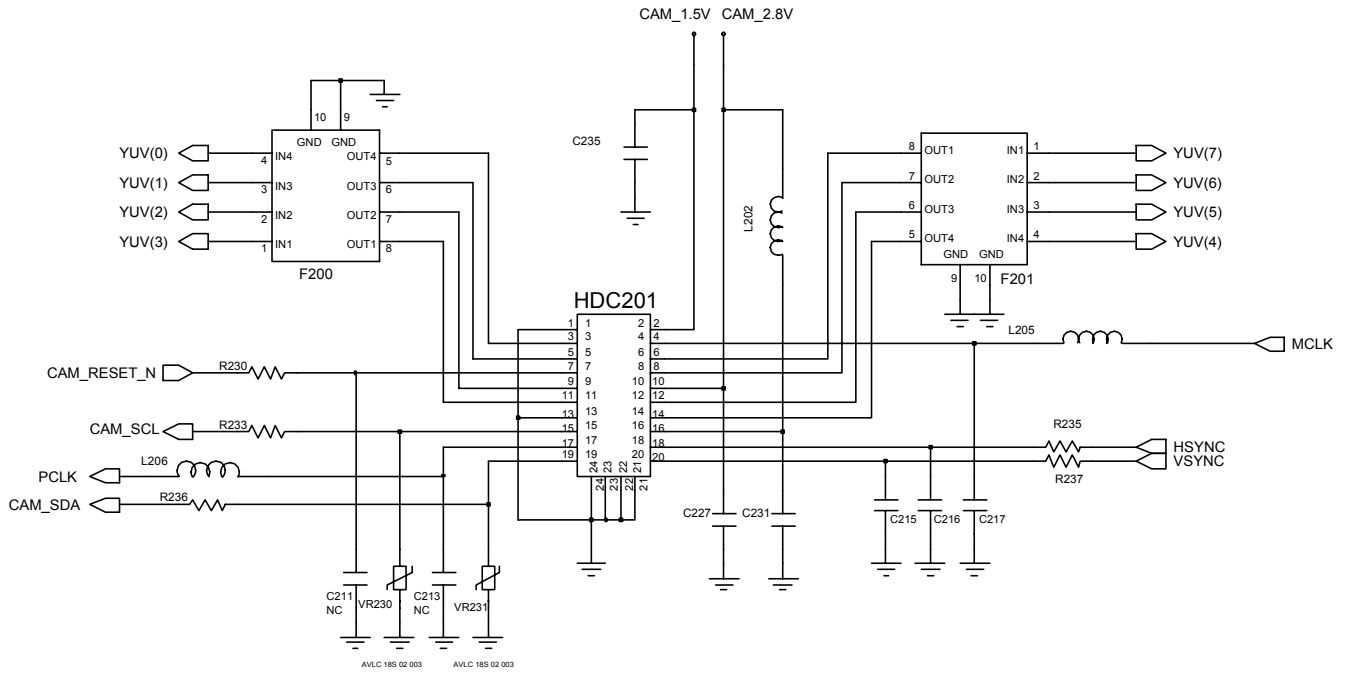


9-2.RF


9-2-1. EGSM Receiver

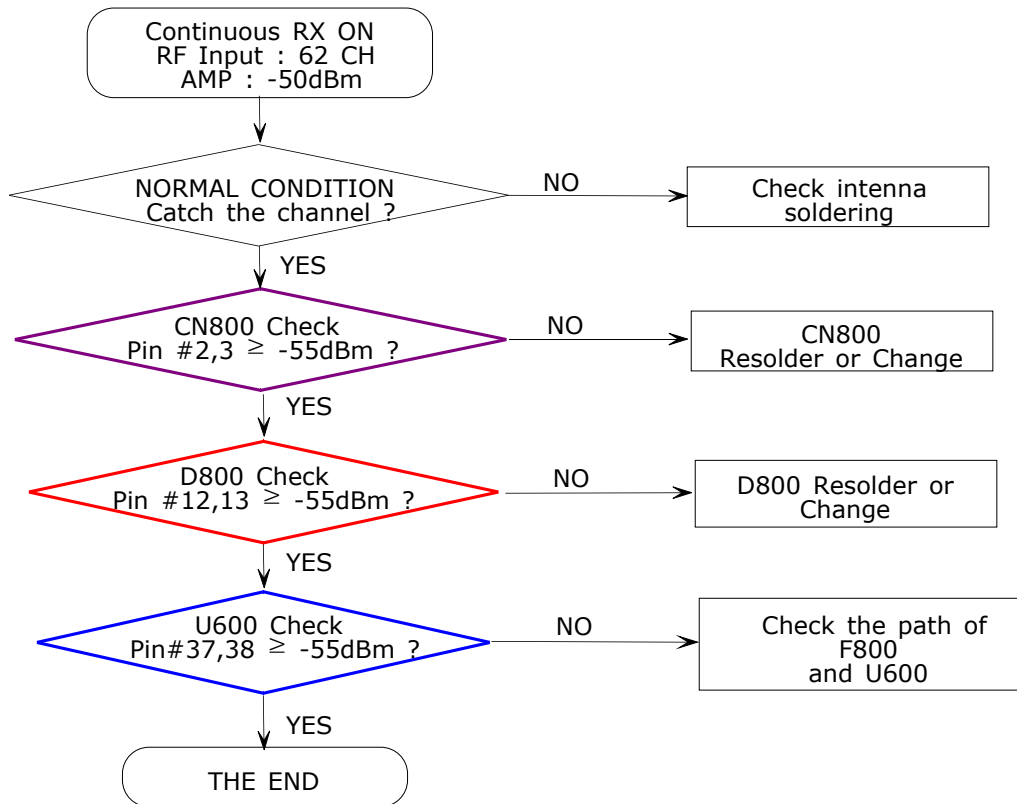


9-2-2. EGSM Transmitter

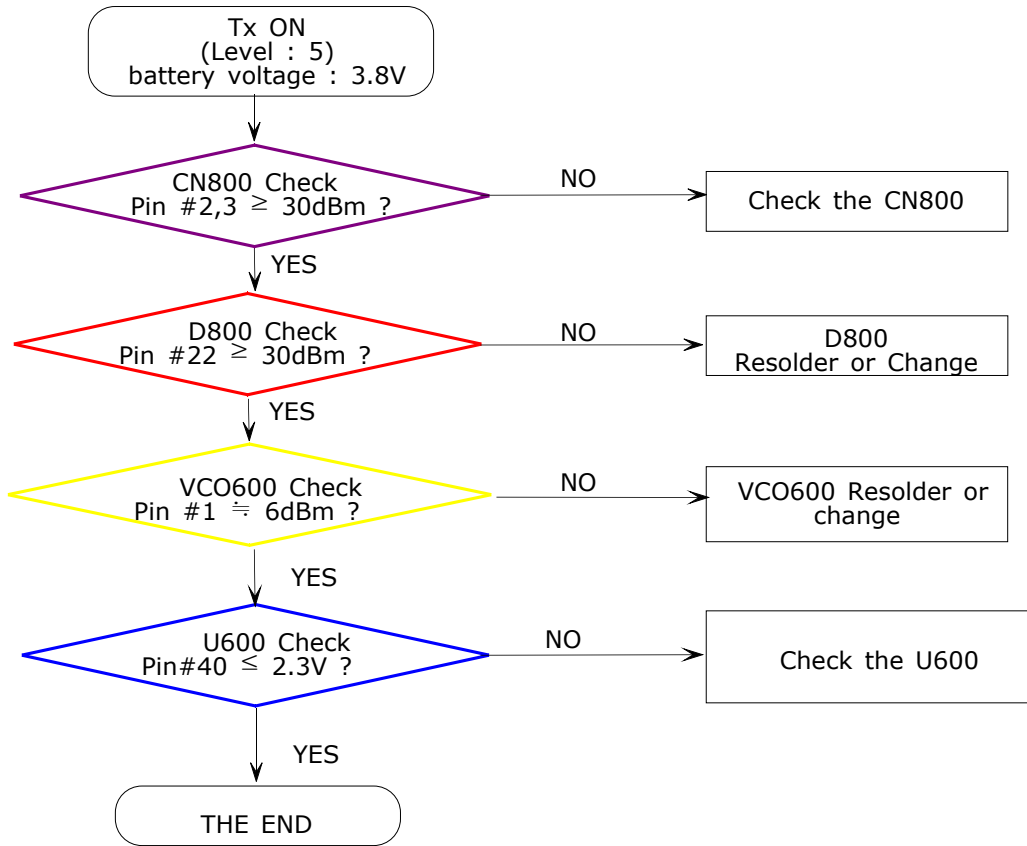


9-2-3. DCS Receiver

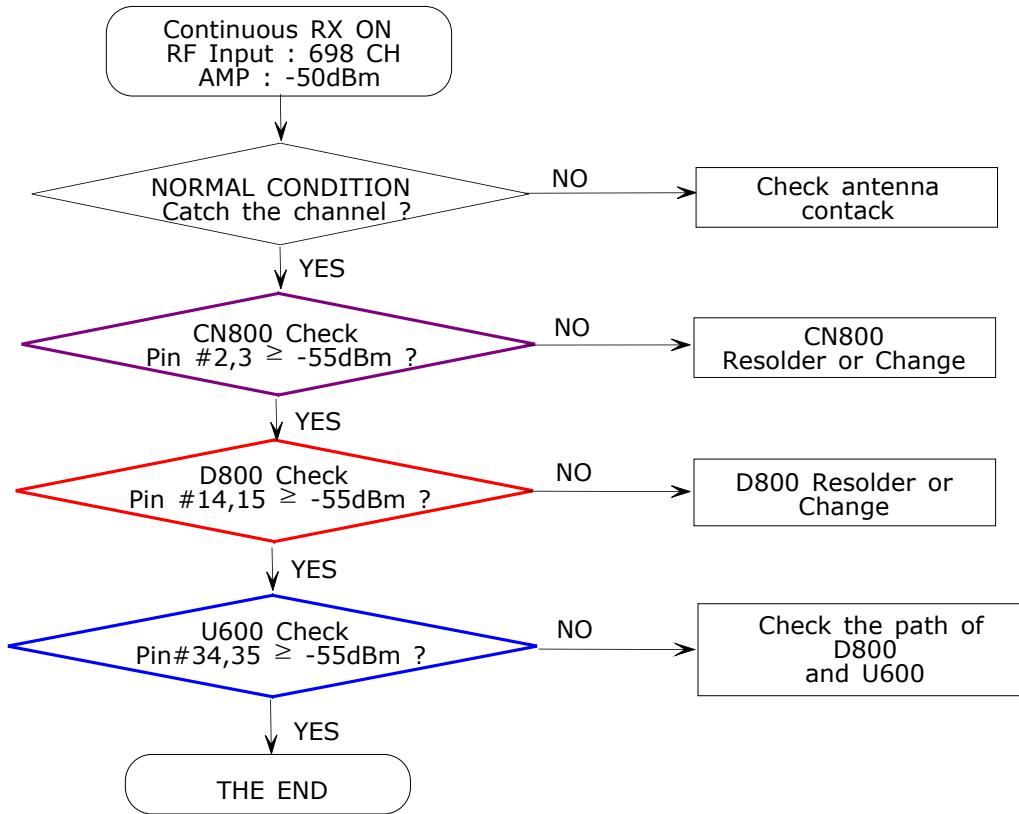


9-2-4. DCS Transmitter

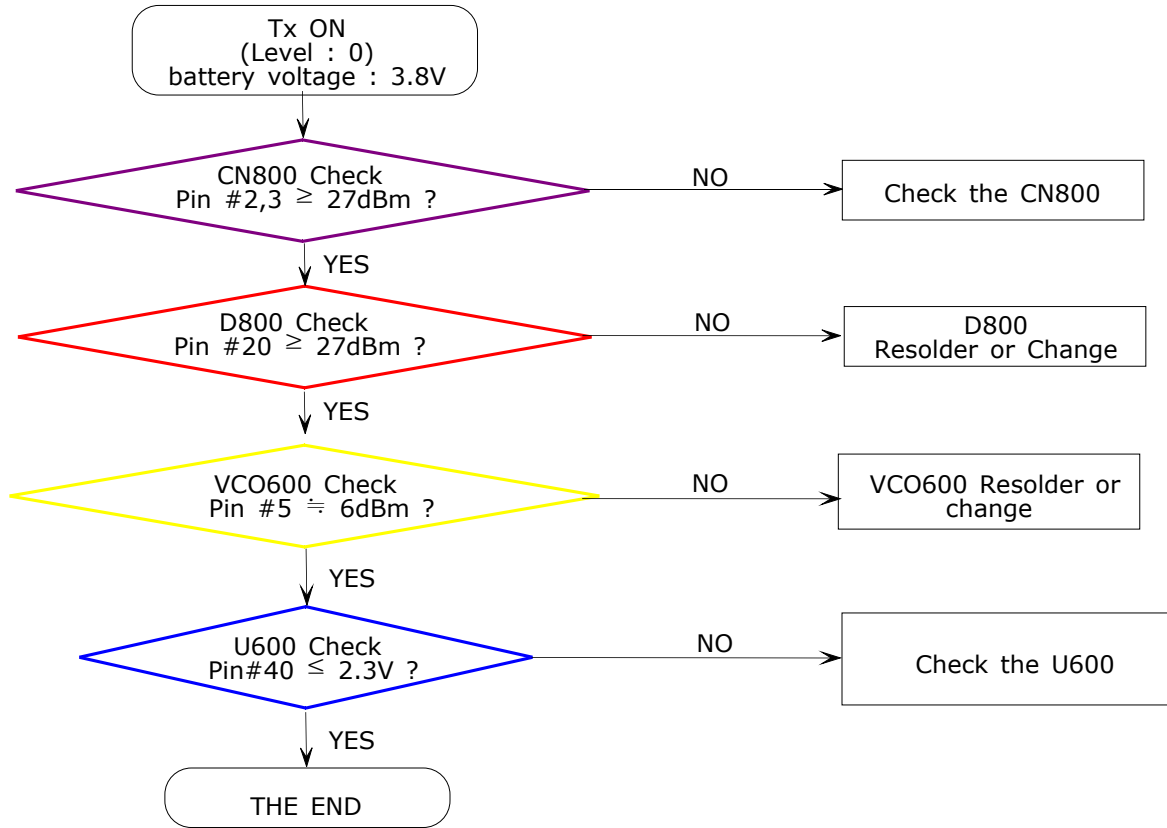



9-2-5. PCS Receiver


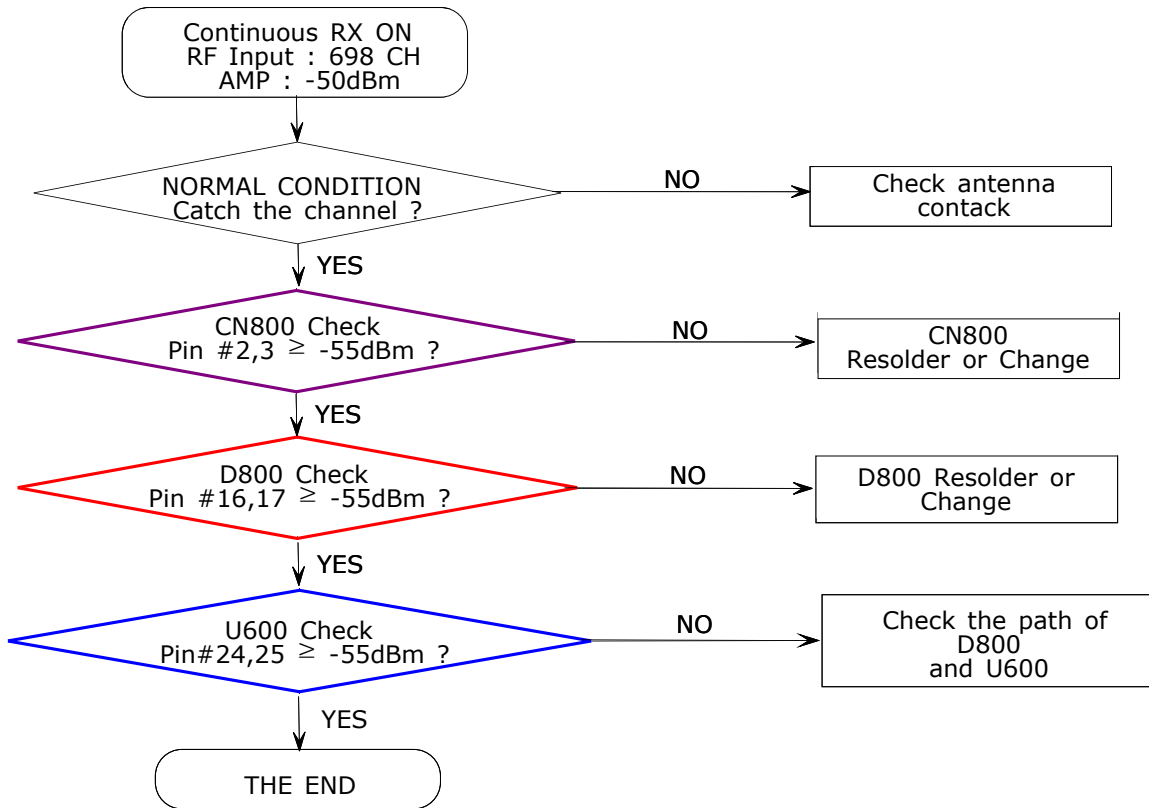


9-2-6. PCS Transmitter

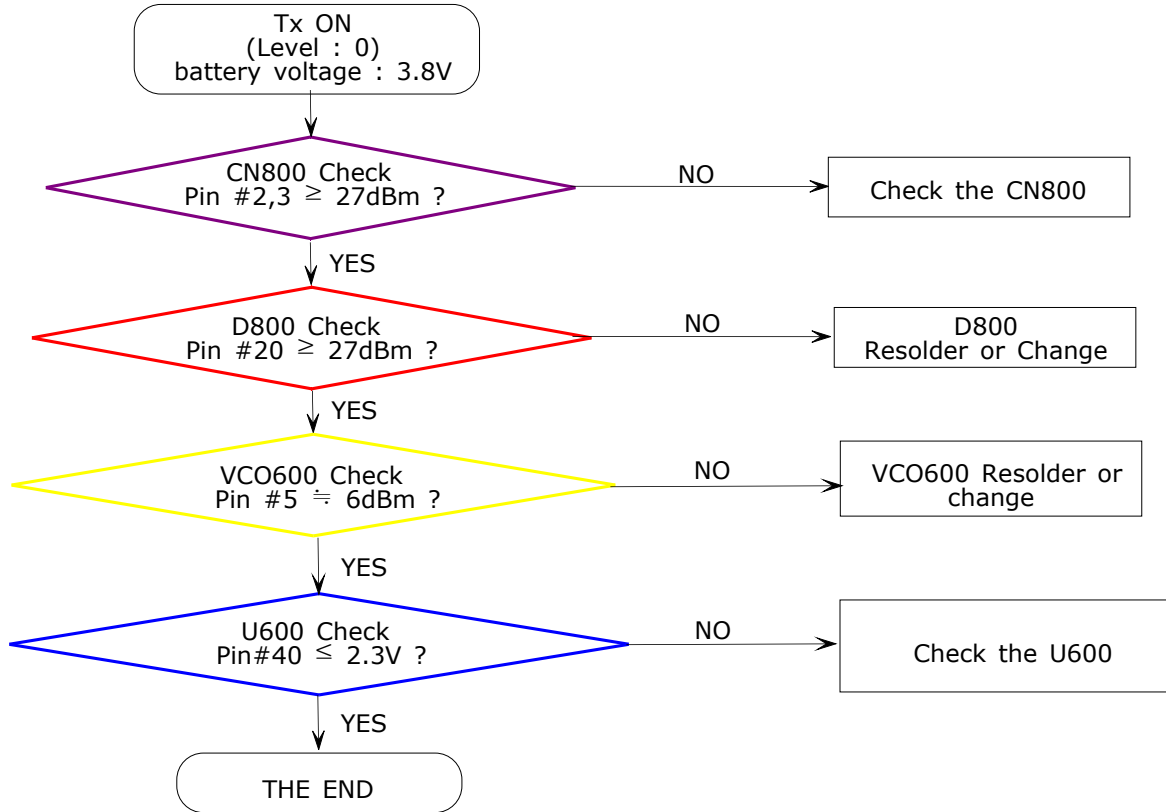


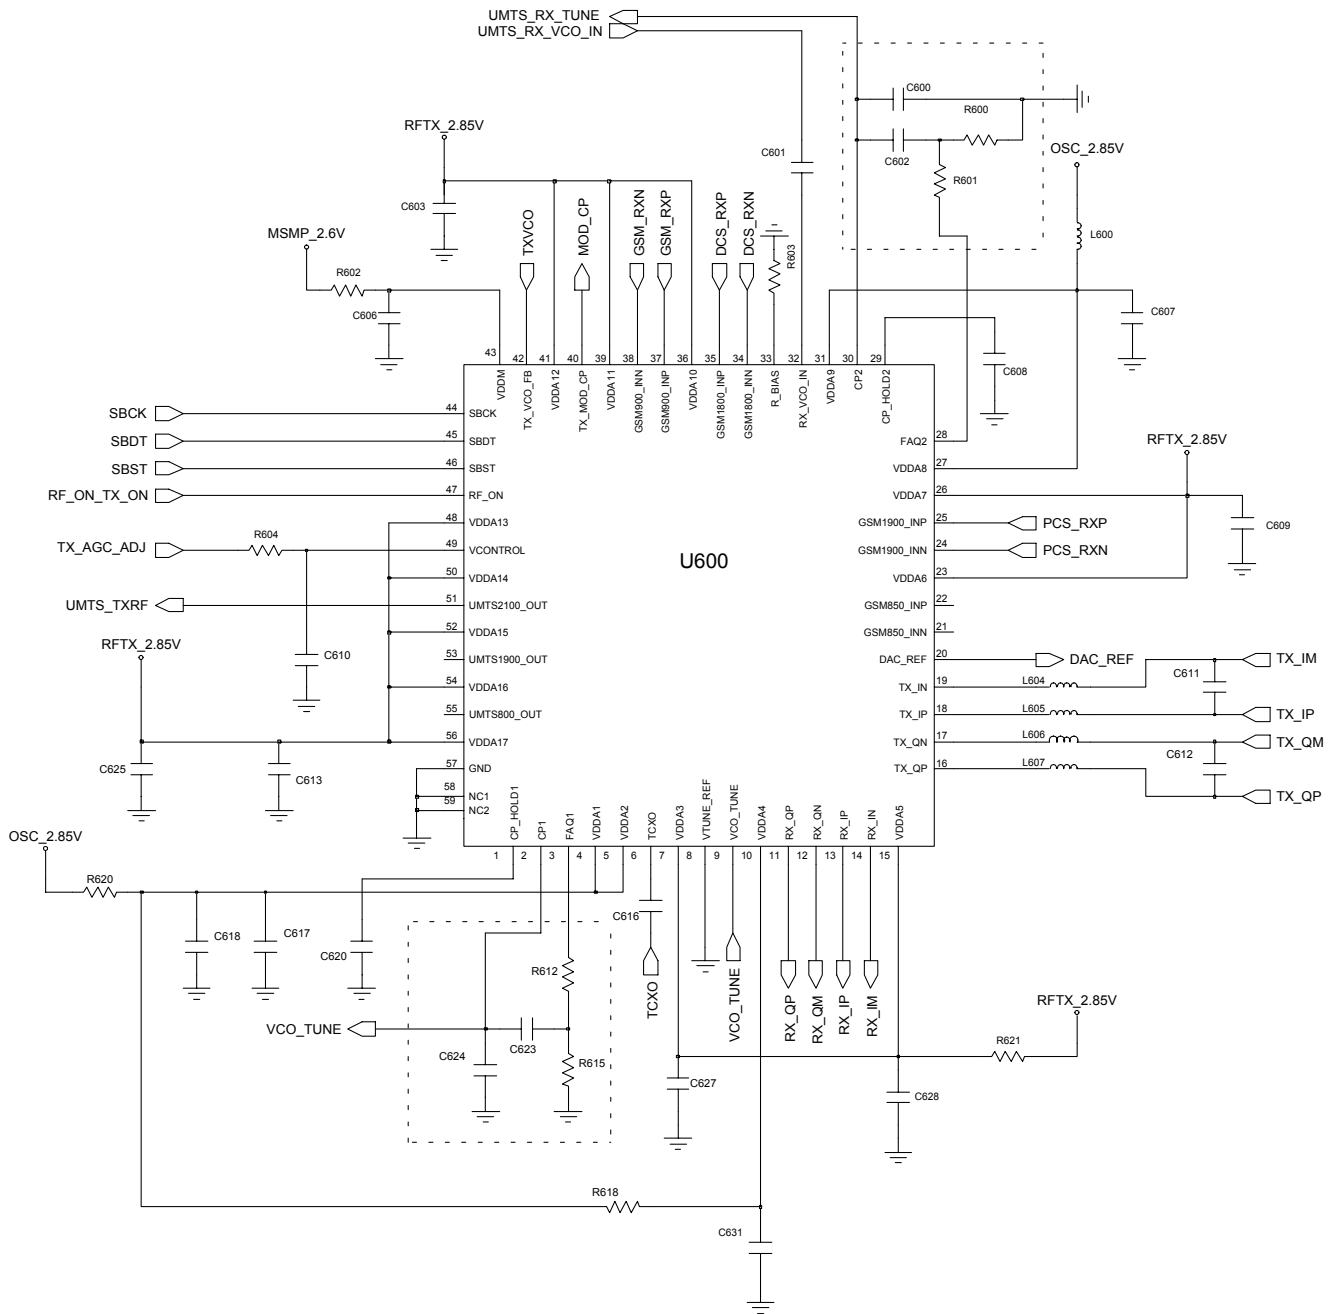

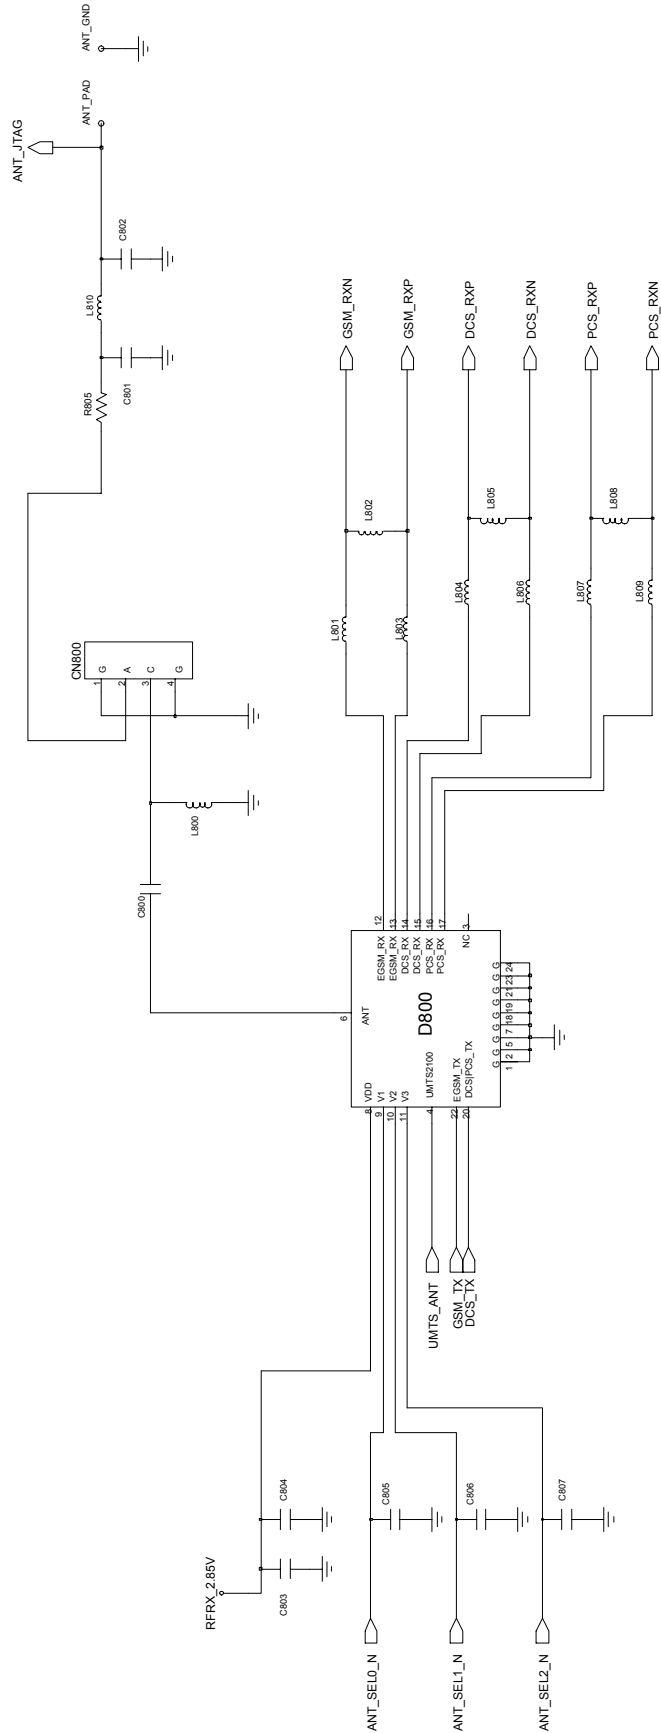


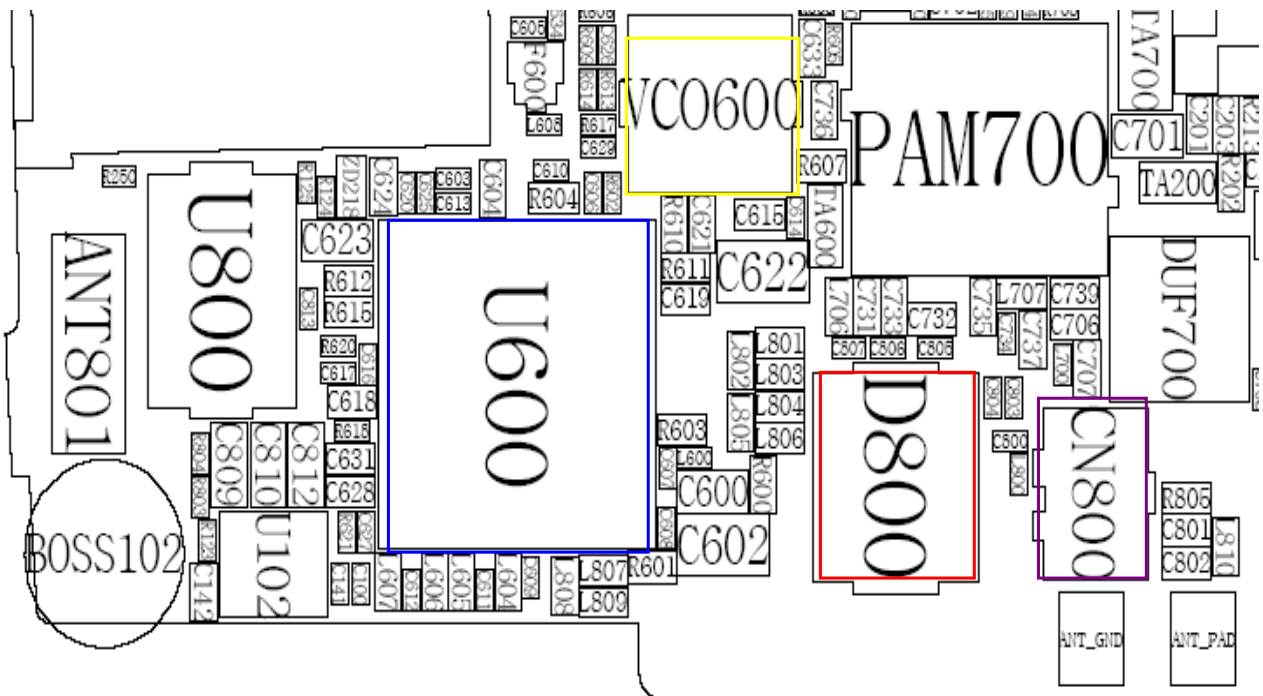
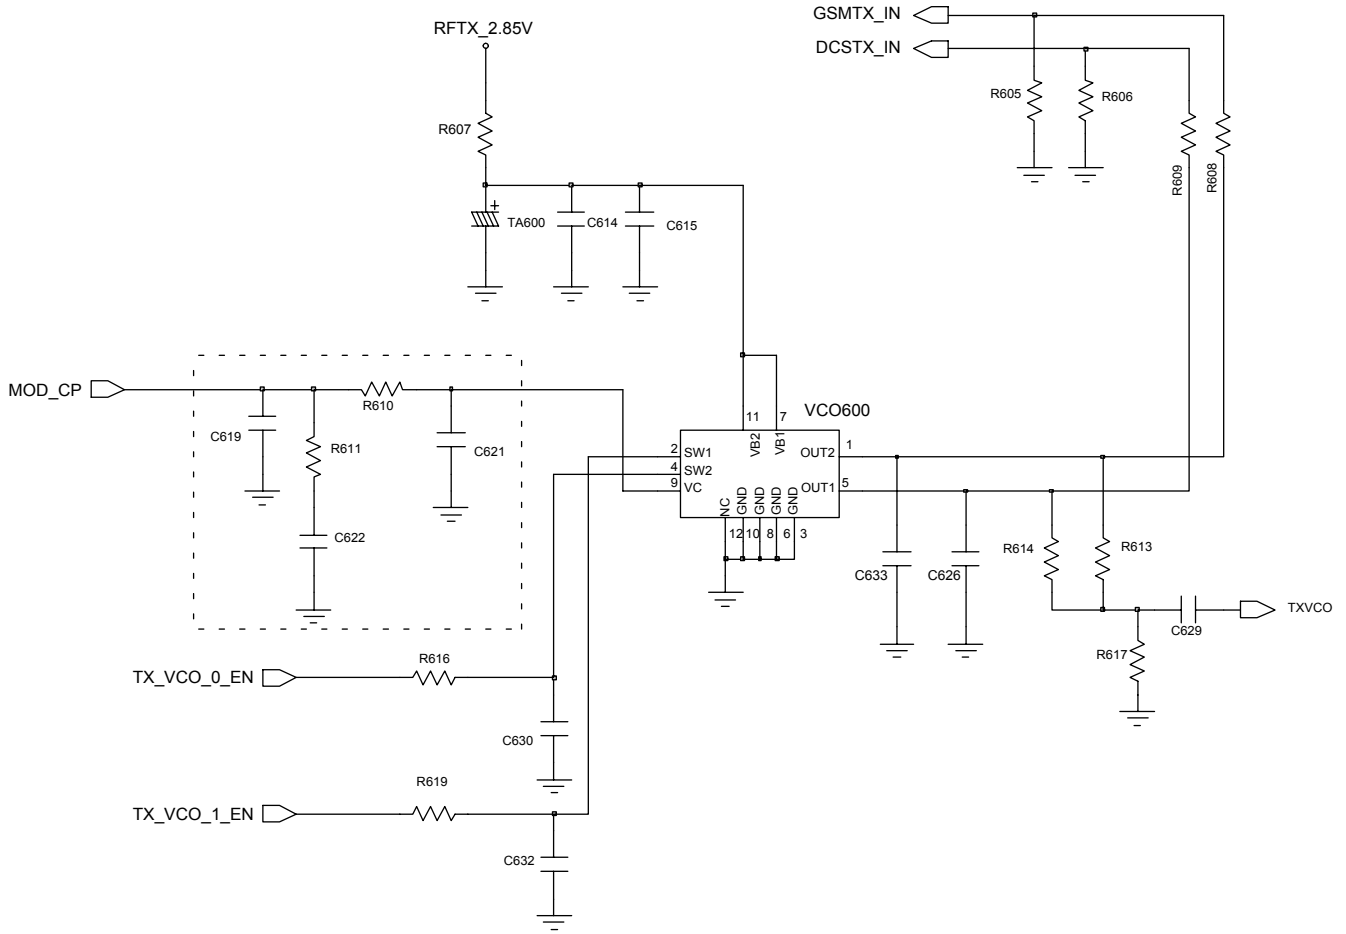



9-2-7. UMTS Receiver


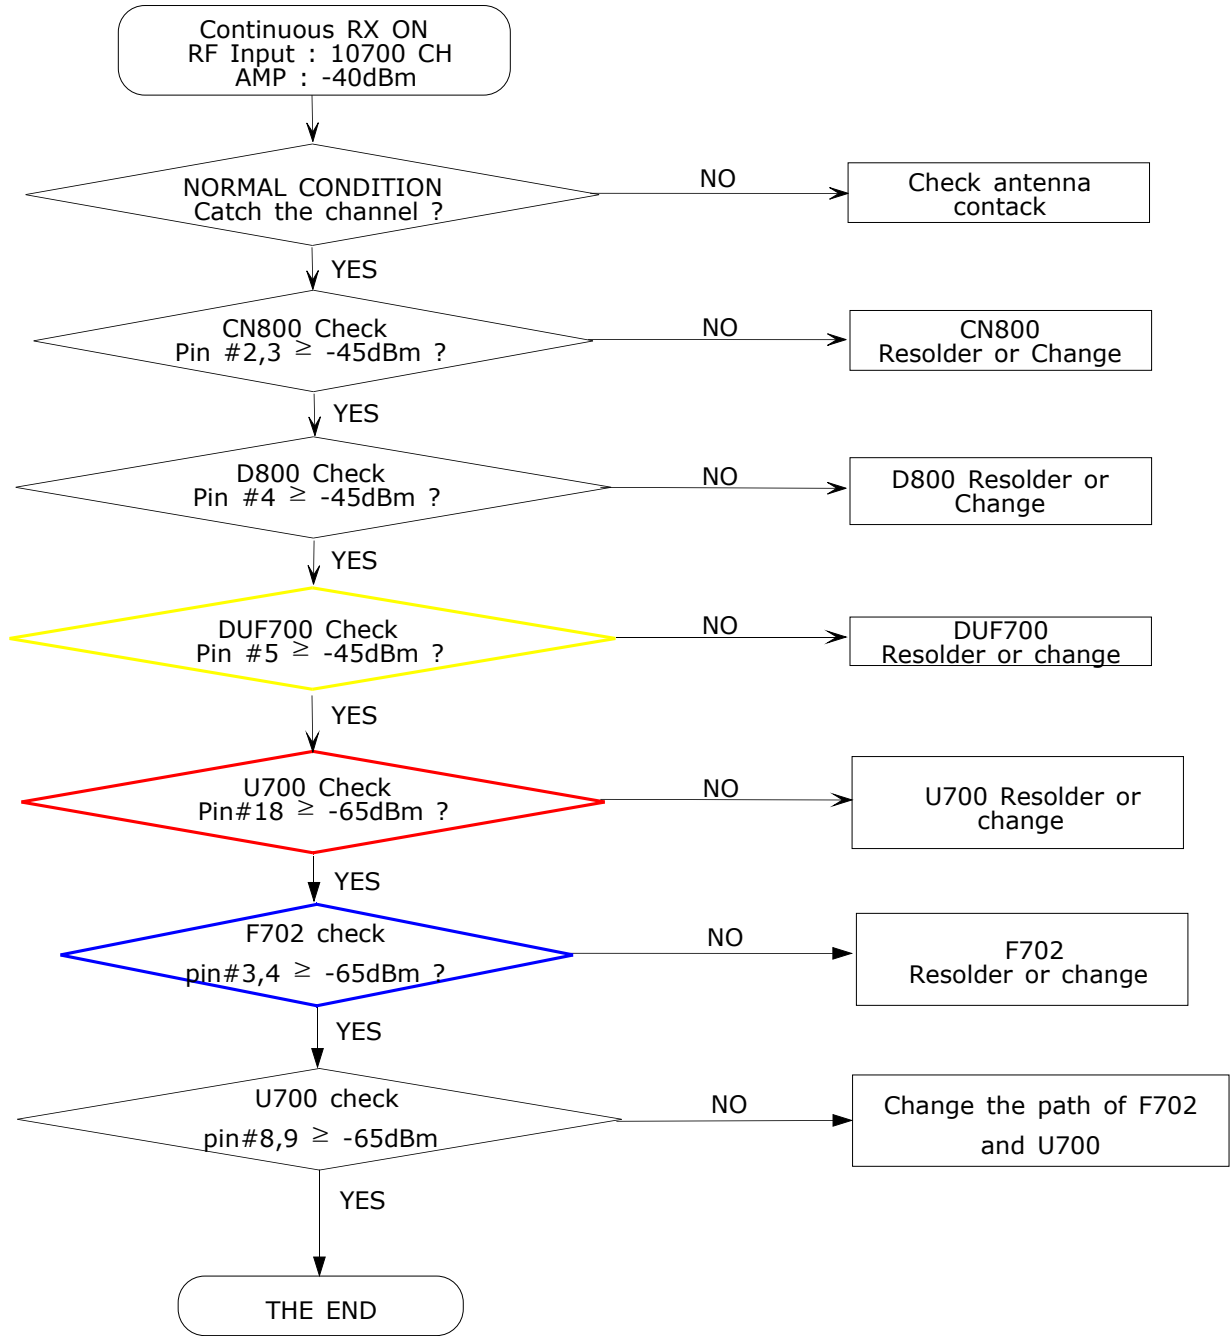


9-2-8. UMTS Transmitter

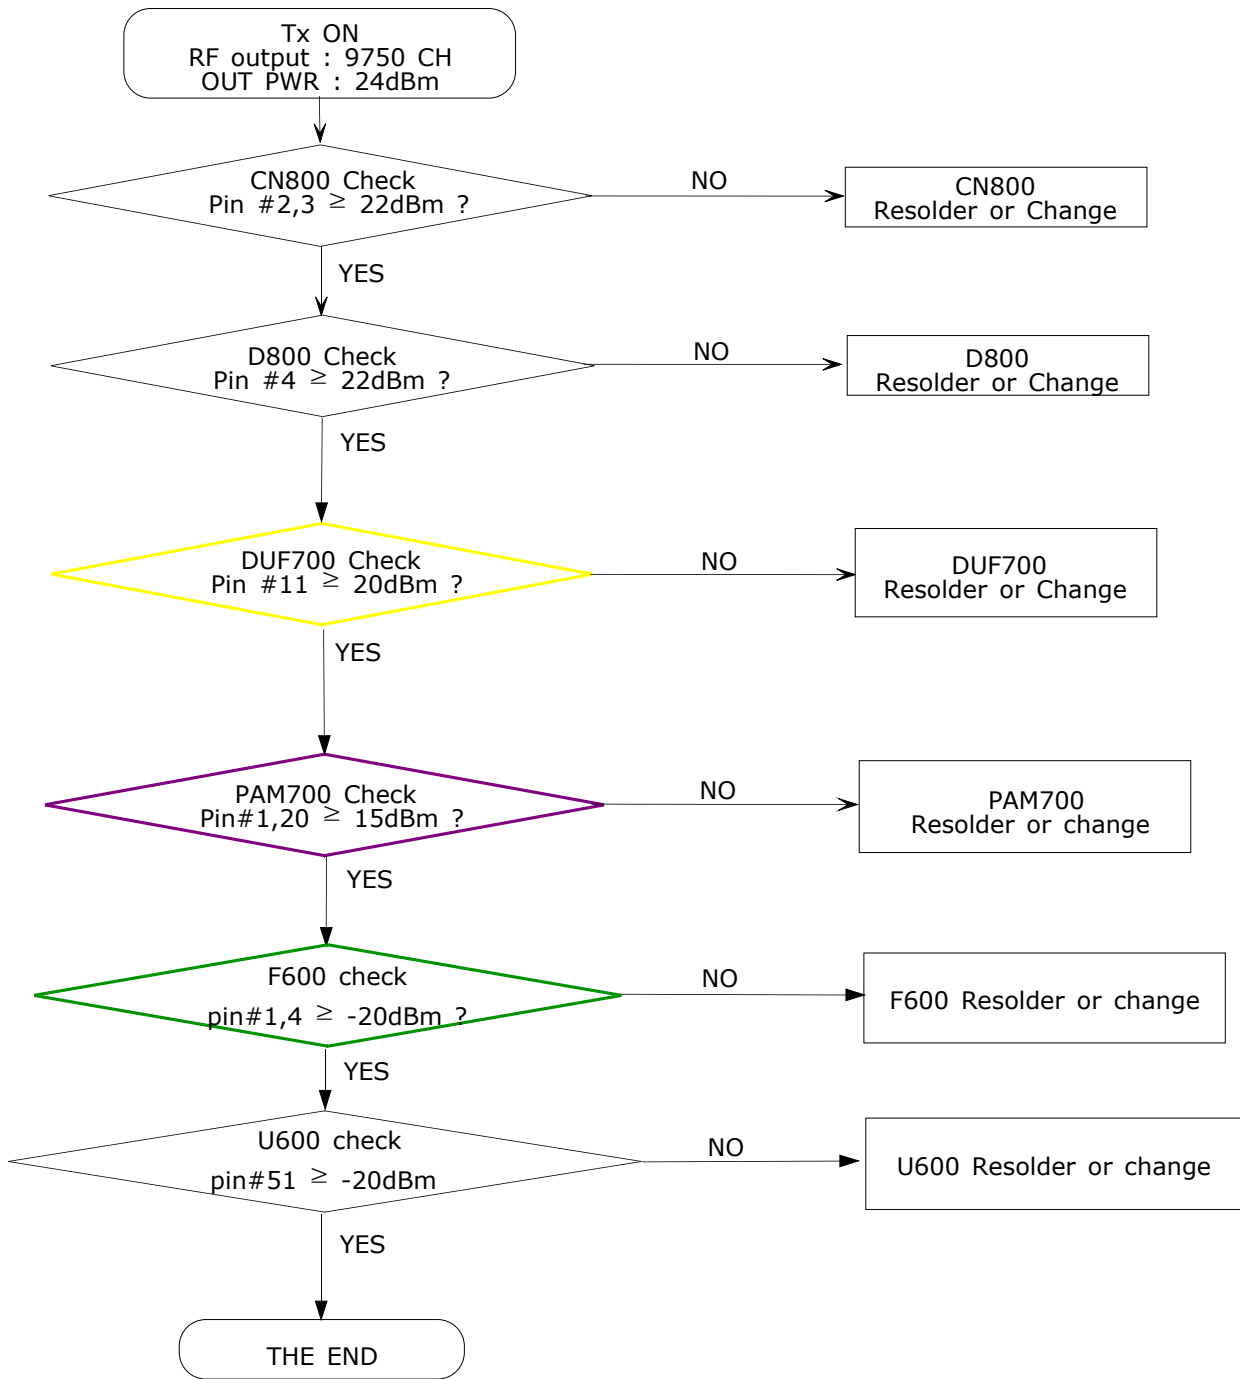

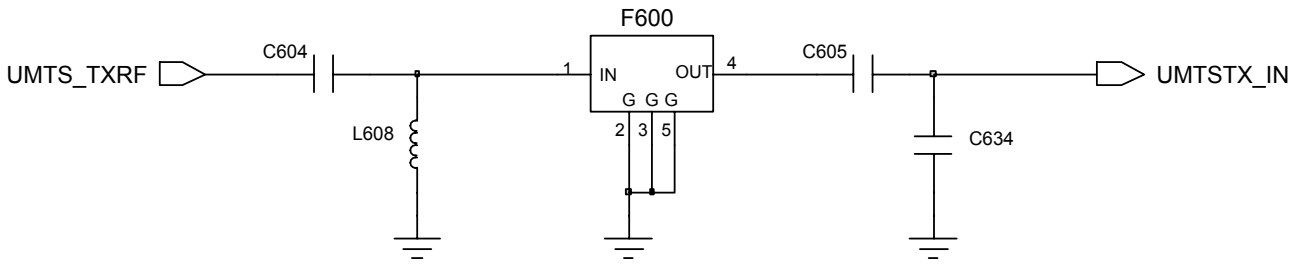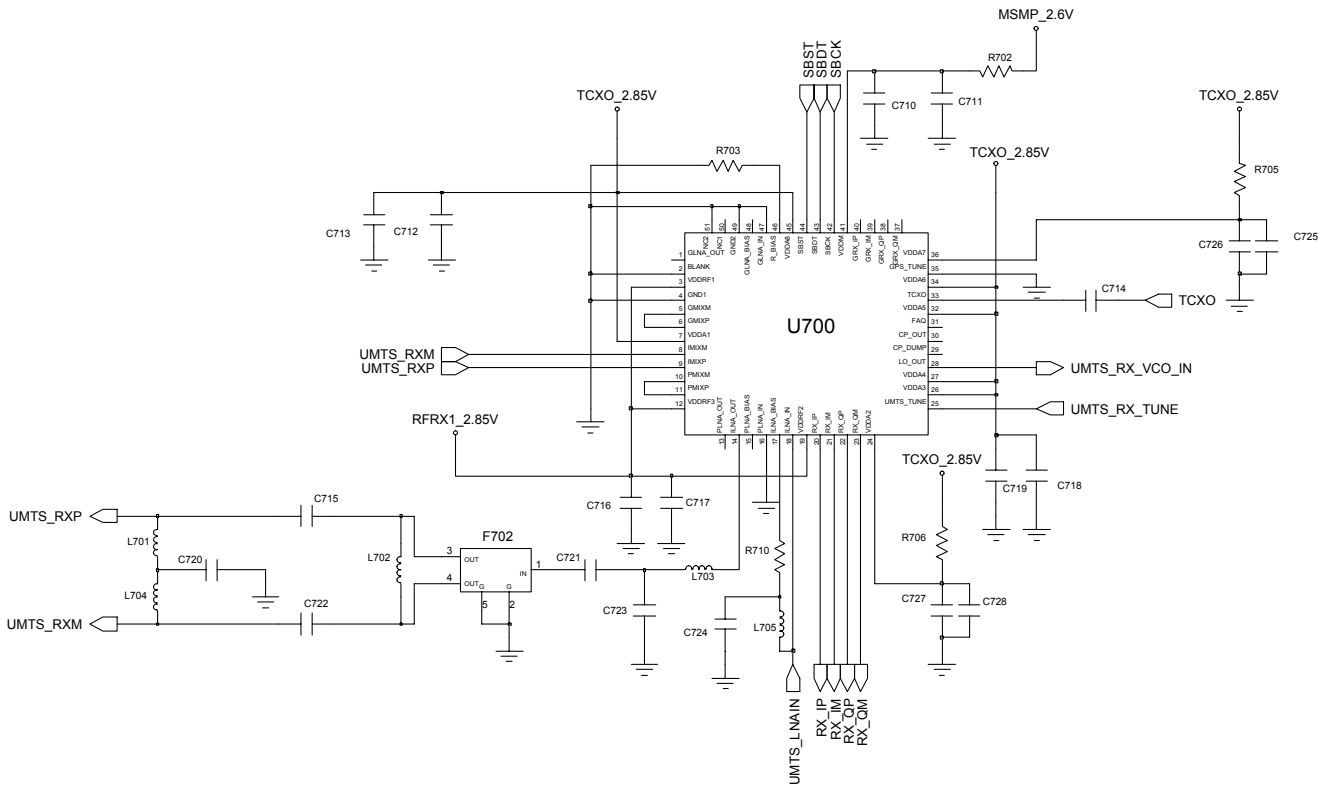

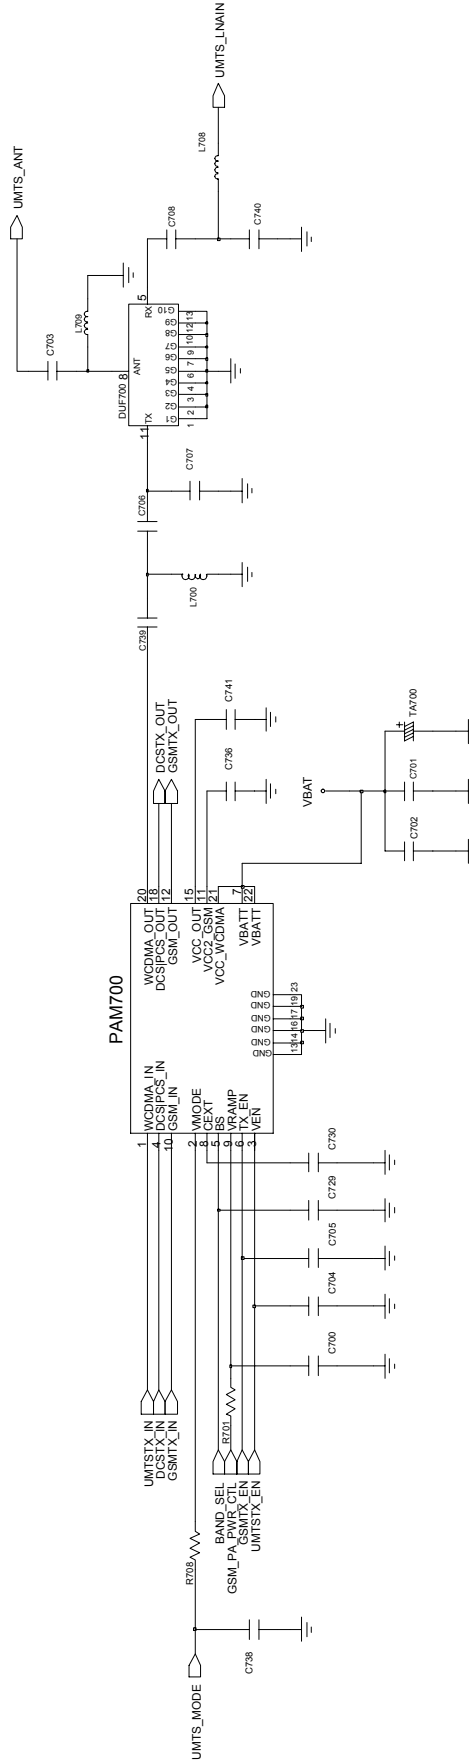

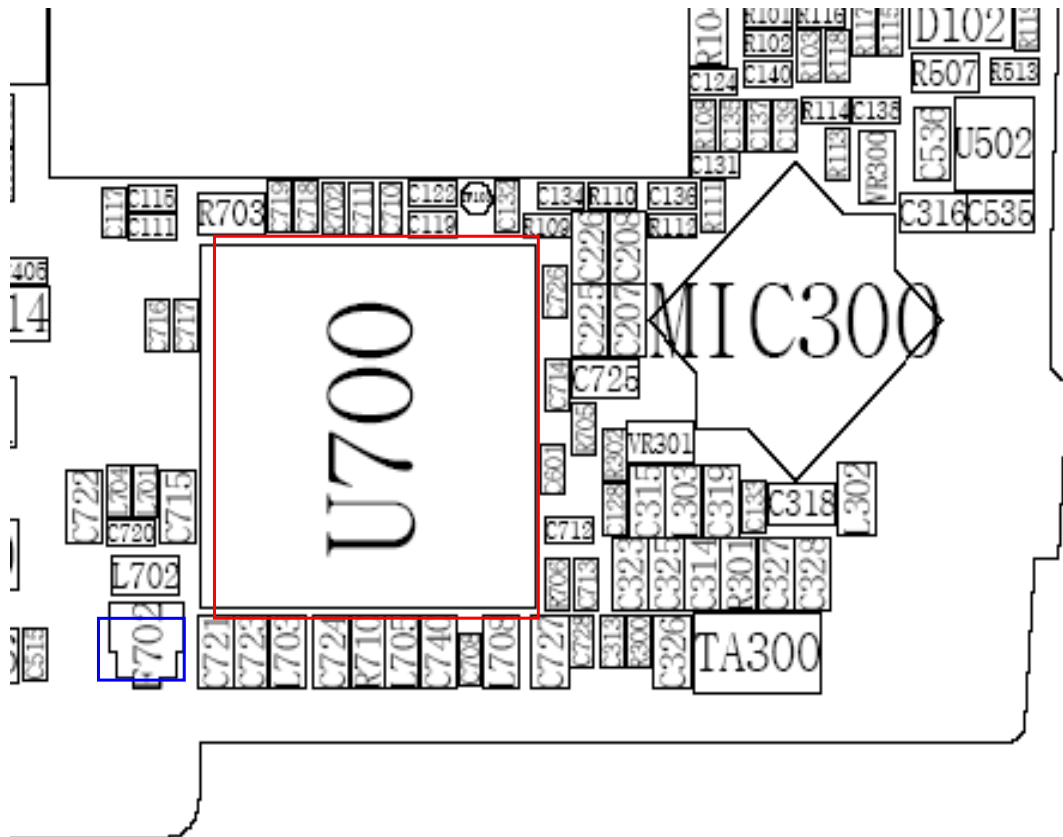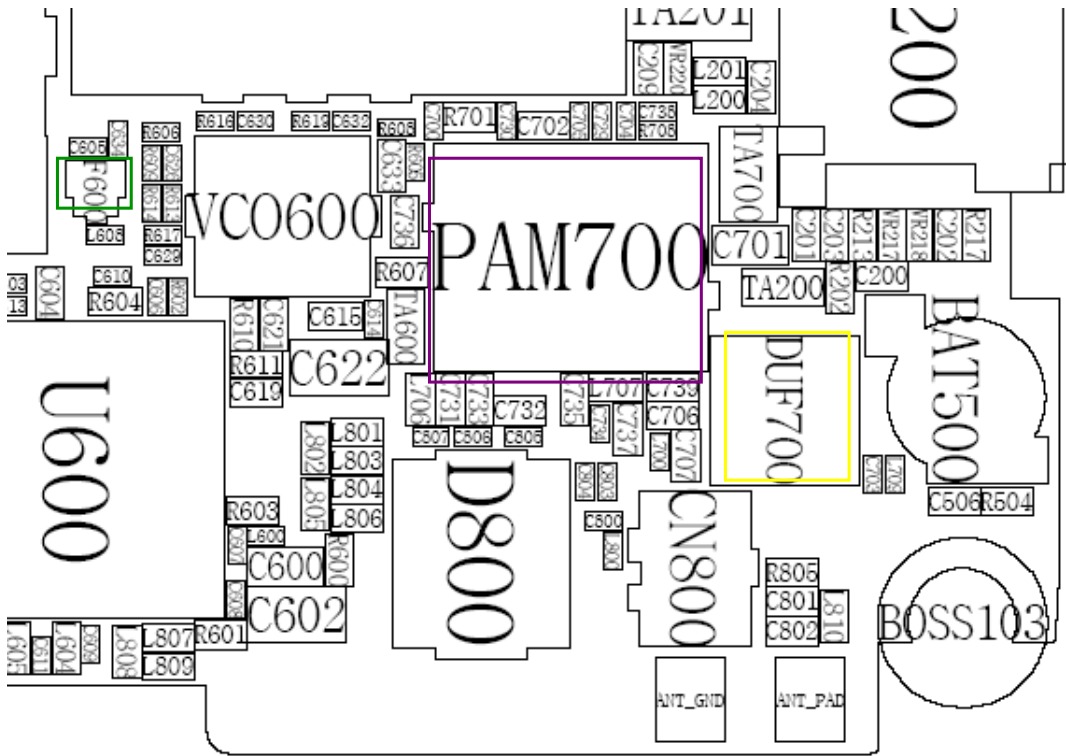

9-2-9. BLUETOOTH

