

# **Disassembling Apple Time Capsule Lower Case**

#### Tools used in this guide


- Heat gun or hair dryer
- Phillips #00 Screwdriver
- Spudger





#### Step 1 - Lower Case

- Place the unit bottom up on your work surface. Use a cloth or similar to protect it from scratches.
- Use a heat gun, hair dryer or similar in order to weaken the adhesives in the tape that hold it in place.
  - Start in a corner, it can be tricky to get a good grip at first.
  - Progress slowly not to tear the tape, but do not over heat the unit.
  - You will tear some of the tape, don't worry to much about it. It will still hold in place.

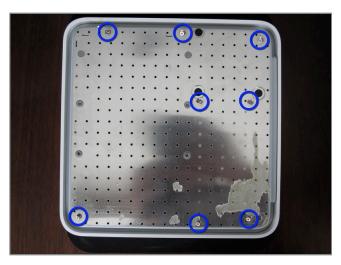

### Step 2

 Using a Phillips #00 screwdriver undo the 8 screws shown with blue.



## Step 3

- With the ethernet connectors facing you carefully open the unit like on the picture. I can best describe the opening technique as you would open a book from the rear cover.
- Unplug the fan, a spudger can be of good use here.
  - Unless you are replacing or working on the fan you don't need to unplug it.



 The fan is connected to the motherboard next to the power connector. Don't lift the plate straight up or use force.



