



Repairing IBM ThinkPad 560z RAM

Tools used in this guide

- [phillips screwdriver](#)



Step 1 - installation Battery

- Slide the button to the right and hold.



Step 2

- Slide the battery out.



Step 3 - RAM

- Remove a single phillips head screw.



Step 4

- Lift the cover to reveal the RAM.



Step 5

- Use your fingers to push apart the clamps holding the RAM.





Step 6

- Use your fingers to pull out the RAM.