



## Disassembling IBM ThinkPad A30 CD Drive

Take the battery out before removing the CD drive.



### Step 1 - Battery

- Place the ThinkPad on its back.
- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it outwards.



### Step 2 - CD Drive

- With the laptop on its left side towards you, locate the highlighted switch.
- Slide the switch to the right. The plastic lever will pop out.
- Pull the plastic lever, then, pull the CD drive out.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 15, 2010.