



## Disassembling IBM ThinkPad A30 Floppy Disk Drive

To take the floppy disk drive out, remove the battery first.



## Step 1 - Battery

- Place the ThinkPad on its back.
- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it outwards.



## Step 2 - Floppy Disk Drive

- With the ThinkPad's right side facing you, locate marked switch.
- Slide switch left. A black lever will pop out.
- Pull the lever gently and remove Floppy Disk drive.



To reassemble, place the floppy disk drive back into its bay the way it was facing before

This document was last generated on Dec 15, 2010.