



# Disassembling IBM ThinkPad A30 RAM

## Tools used in this guide

- [Phillips #1 Screwdriver](#) (1)



### Step 1 - Battery

- Place the ThinkPad on its back.
- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it outwards.



### Step 2 - RAM

- Remove the two 5.3mm cover screws.
- Gently lift the cover containing the RAM.



### Step 3

- Remove RAM module by pressing the two metal pieces outward with your thumbs.



### Step 4

- Lift the RAM module up and out, away from the yellow connector.
- Place the RAM module away from any magnets or static electricity prone areas.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 15, 2010.