




## Installing IBM ThinkPad T42 Battery



### Step 1 - Battery

- Slide the 2 sliders on the under side of the laptop to the unlock position, as shown.

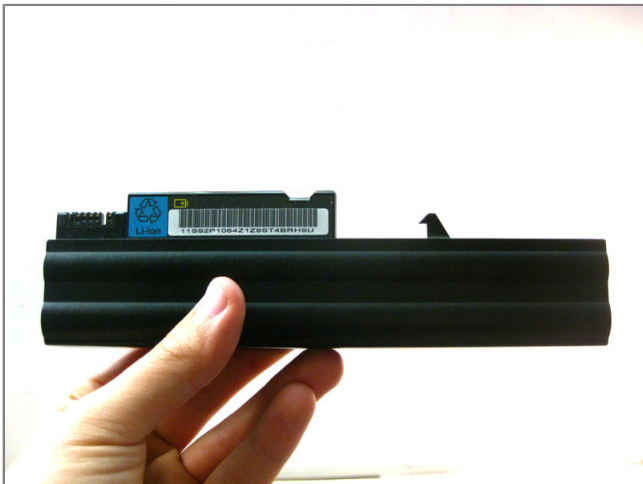

### Step 2

- Grasp the battery and pull it straight out - not at an angle.