



## Installing IBM ThinkPad T42 RAM

### Tools used in this guide

- [small philips screwdriver](#)



### Step 1 - RAM

- Unscrew the pictured screwed holding the memory cover in place.



### Step 2

- Pry the cover open carefully (flathead screwdriver might help)
- To remove the RAM memory stick, push both metal pieces holding it in place outwards, and the stick will pop up.
- Pull the stick out carefully.