



Repairing IBM ThinkPad T42 Speakers

Step 1 - disassembly Rear Cover



- Unscrew the following screws on the underside of the T42.
 - Note: for ease of reassembly, keep track of which screws go where.

Step 2


- Unscrew the 4 screws on either side the rear end of the laptop.





Step 3 - installation Keyboard and Trackpad


- Flip the laptop over and open the display carefully - the keyboard, palm rest and bezel will be loose.

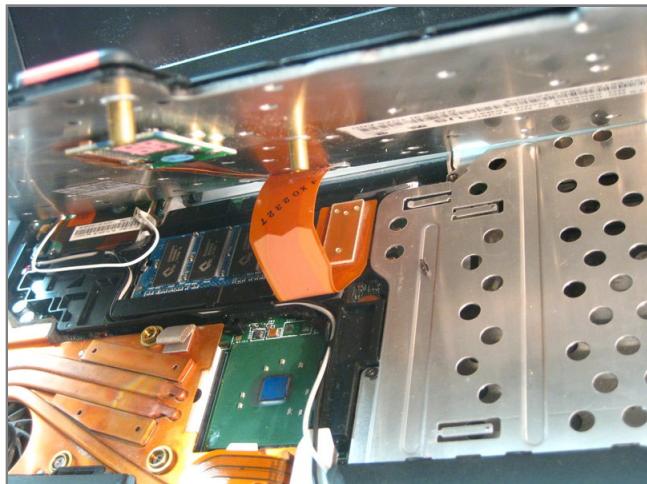

Step 4

- Maneuver the palm rest away from the keyboard carefully, both the keyboard and palm rest/trackpad will come off together.
- ****WARNING**** Both the keyboard and trackpad have connectors to the motherboard. Disconnect these before completely removing either component.



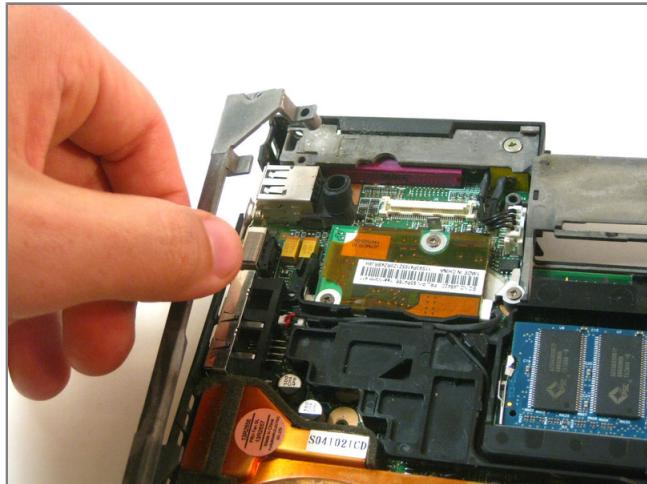

Step 5 - disassembly Lower Bracket

- The bracket will be free to move.



Step 6

- Remove the bracket.




Step 7

- Then remove the small rubber piece covering the small battery.



Step 8 - Speakers

- This component is free to move.

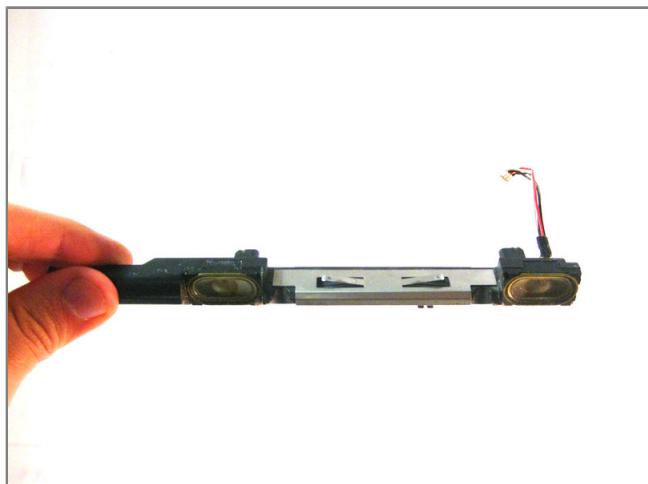

Step 9

- Disconnect its connector and pull it out carefully.