



## Removing PowerMac G4 M5183 DVD-ROM Drive Tray

### Tools used in this guide

- [Phillips #1 Screwdriver](#)
- [Spudger](#)



### Step 1 - disassembly Case

- Pull on outer latch.
- Lower door until it is level with your work surface.
- Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.





### Step 2 - DVD-ROM Drive

- Removing the faceplate.
  - On the inside of the case, find the two plastic tabs.
  - While depressing the tabs, remove the faceplate by pulling and rotating outward.



### Step 3

- Remove the two screws on the front of the drive with the Phillips #1 screwdriver.



## Step 4

- Pull the drive out to allow access to the power and ribbon cables. Do not fully remove.
- Remove both the power and ribbon cable.

