






Installing Power Mac G4 M5183 Internal Battery

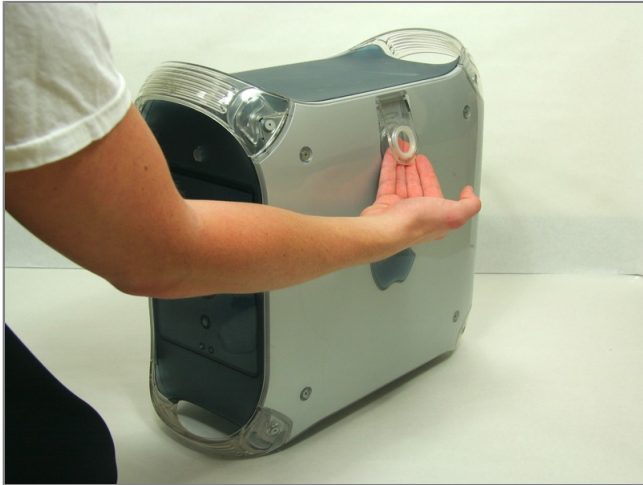

Step 1 - disassembly Case

- Pull on outer latch.
- Lower door until it is level with your work surface.
- Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.



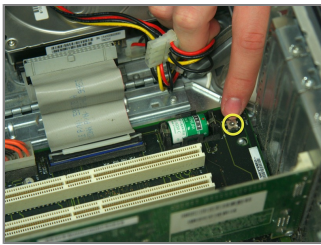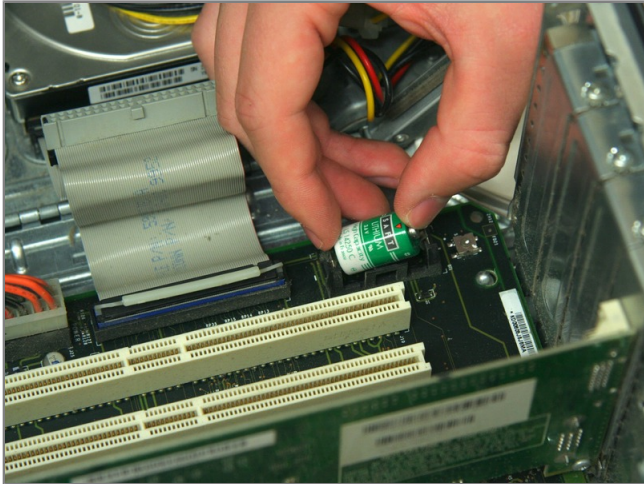

Step 2 - Internal Battery

- Locate the battery.
- Remove and replace battery.
 - Push the PMU button once, and only once, to reset the power supply.