



Remove PowerMac G4 M5183 Main Fan

Tools used in this guide


- [Phillips #1 Screwdriver](#)
- [Phillips #2 Screwdriver](#)
- [Spudger](#)



Step 1 - disassembly Case



- Pull on outer latch.
- Lower door until it is level with your work surface.
- Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.



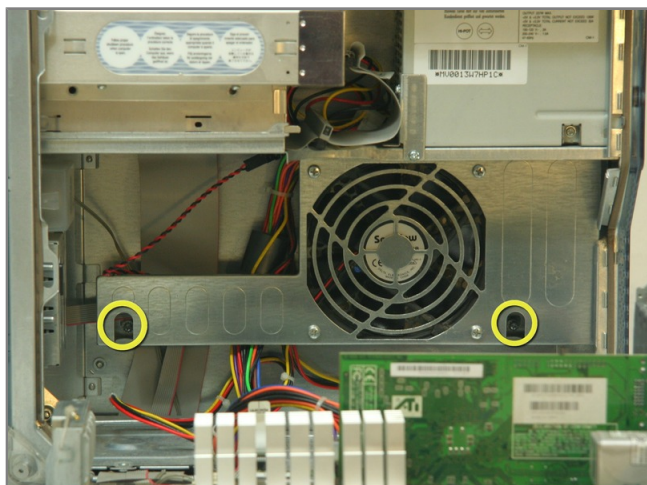

Step 2 - Main Fan

- Remove the screw from each of the two niches on lower part of fan using the Phillips #1 screwdriver.
- The fan housing will still be connected to the computer by a power cable which will be removed in the next step.

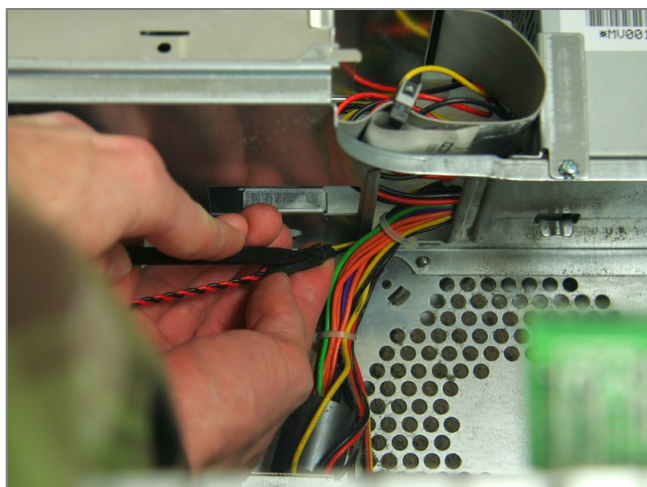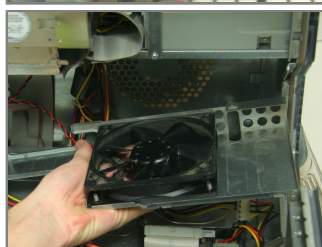

Step 3

- Remove the power cable from the fan and detach bracing.