




PowerMac G4 M5183 RAM Removal



Step 1 - disassembly Case

- Pull on outer latch.
- Lower door until it is level with your work surface.
- Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.



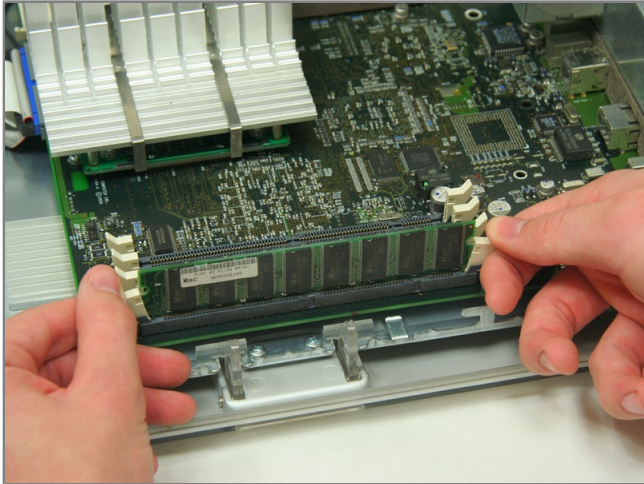

Step 2 - RAM Removal

- Locate the RAM modules.
- Pull side tabs outward. The RAM will pop out of the housing.

