



Installing eMac RAM

Tools used in this guide

- [Phillips #2 Screwdriver](#) (1)

Parts relevant to this guide

- [PC133 512 MB RAM Chip \(New\)](#) (1)
- [PC133 256 MB RAM Chip](#) (1)
- [PC133 128 MB RAM Chip](#) (1)

How to upgrade or replace the RAM



Step 1 - RAM

- The 700MHz thru the second 1 GHz models use PC 133 sticks. The maximum RAM is 1 GB. The second two 1 GHz models and higher machines use PC 2700 memory sticks and have a maximum RAM of 2GB.
- Lay a towel (to protect the screen) on your work area and place the unit face down with the bottom facing you.



Step 2

- The access panel is held in place by one Phillips screw. Unscrew it.
- Unplug the machine after touching the metal housing to prevent ESD (electro static discharge)



Step 3

- There are two RAM slots. Release the RAM by pushing the white outer tabs. Then pull the RAM straight out.
- Place new RAM in slots and press with both thumbs on each end till you feel them seat.
- Replace the access panel. Turn it over and plug it in. Start up and go under the Apple to "about this Mac" and check to see that the RAM is being seen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.