



Installing iPad Wi-Fi Home Button Switch

Tools used in this guide

- [Metal Spudger](#) (1)
- [Plastic Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

Use this guide to replace a non-functioning home button switch.



Step 1 - Display Assembly

- Insert a metal spudger between the top edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.
- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.




Step 2

- With one spudger, work your way along the right edge of the iPad, releasing tabs as you go.




Step 3

- Lift the display assembly away from the rear panel assembly by its bottom edge.
- Do not attempt to remove the display at this time, as it is attached to the rear panel assembly.

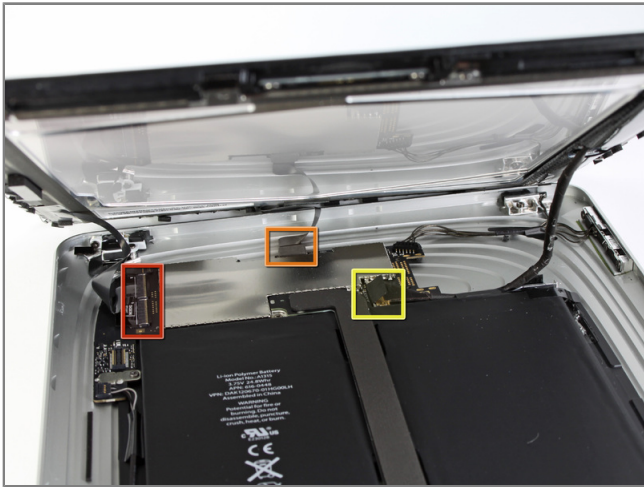

Step 4

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
 - Digitizer
 - Ambient Light Sensor
 - Display Data Cable

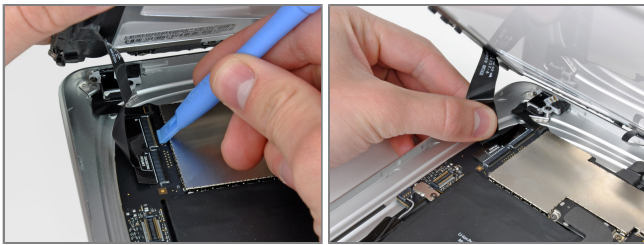



Step 5

- Use the edge of a plastic opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.
- Be sure you are flipping up the retaining flap, **not** the socket itself.
- Pull the digitizer ribbon cables straight out of their sockets.




Step 6

- Use a plastic opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

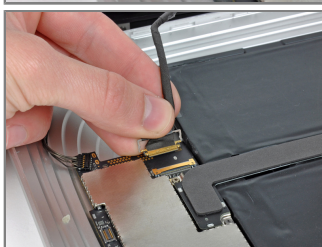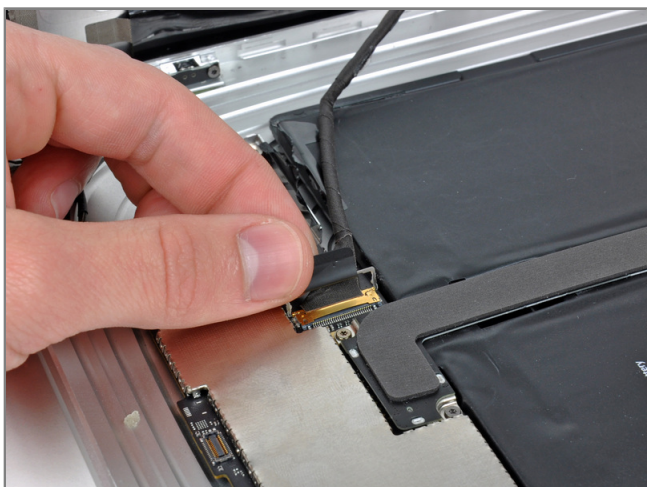

Step 7

- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.
- Pull the connector parallel to the face of the logic board.

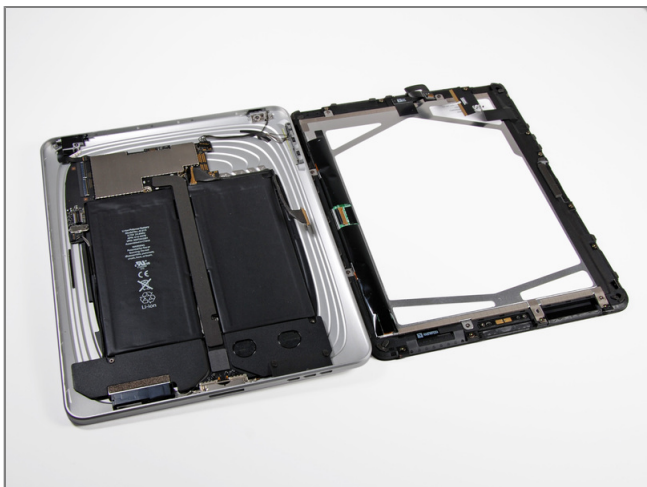


Step 8

- Remove the display assembly from the rear panel assembly.



Step 9 - Home Button Switch

- Remove the two T5 Torx screws securing the home button switch board to the display frame.

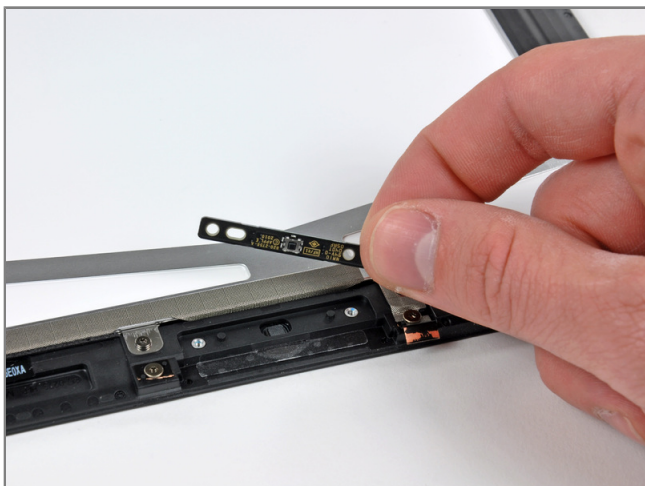

Step 10

- Remove the home button switch board from the display frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.