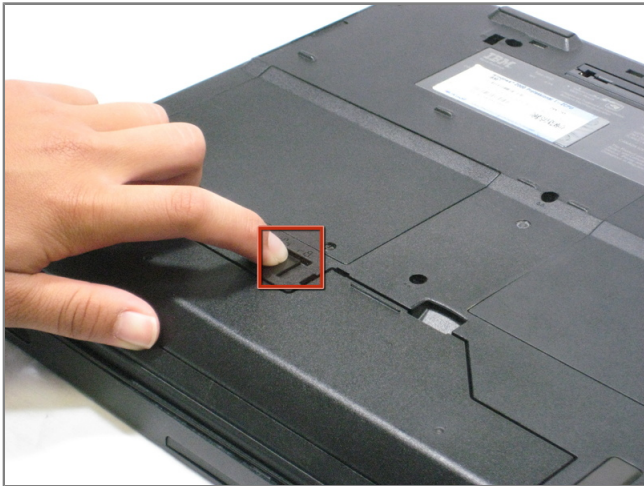# Disassembling IBM ThinkPad A30 BIOS Battery
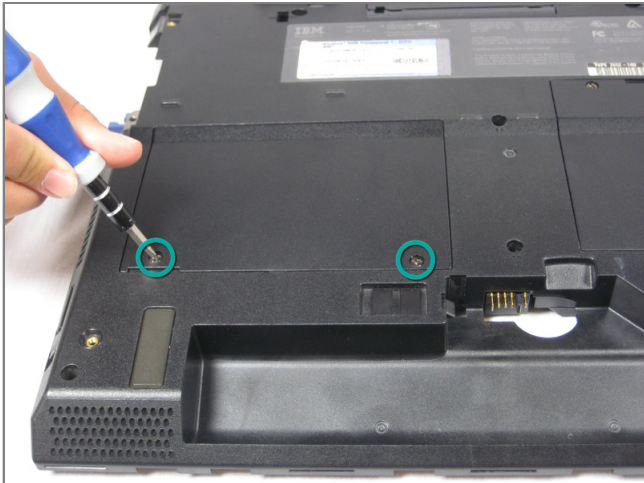
Remove the ThinkPad A30 BIOS battery.

The following steps will be shown:

Battery removalBIOS battery removal

Step 1 - Battery

- Place the ThinkPad on its back.

- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it outwards.

Step 2 - BIOS Battery

- Remove the two 5.3mm cover screws.
- Gently lift the cover.
- Take out the BIOS battery by unplugging it from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 15, 2010.