





Installing Mac mini Model A1283 Logic Board

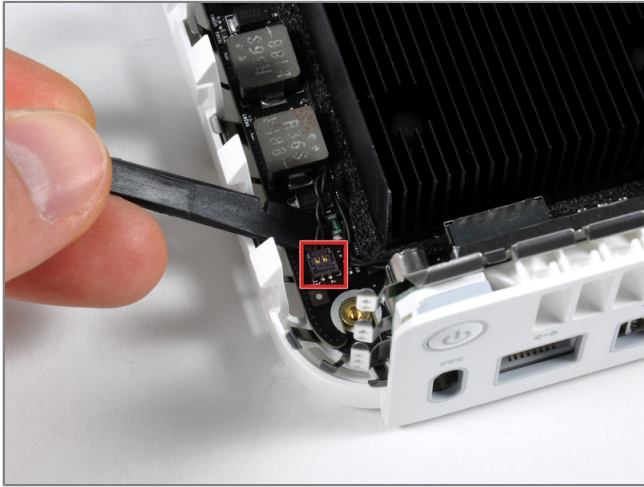

Step 1 - Logic Board


- Use the flat end of a spudger to pry the power button cable connector up off the logic board.

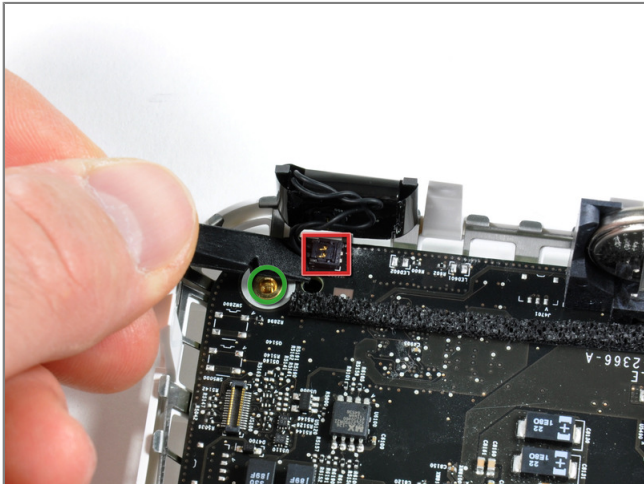

Step 2


- Use the flat end of a spudger to pry the sleep light cable connector up off the logic board.
- During reassembly, make sure the cable does not come near the lug on the bottom case (shown in green) to avoid damaging the cable.



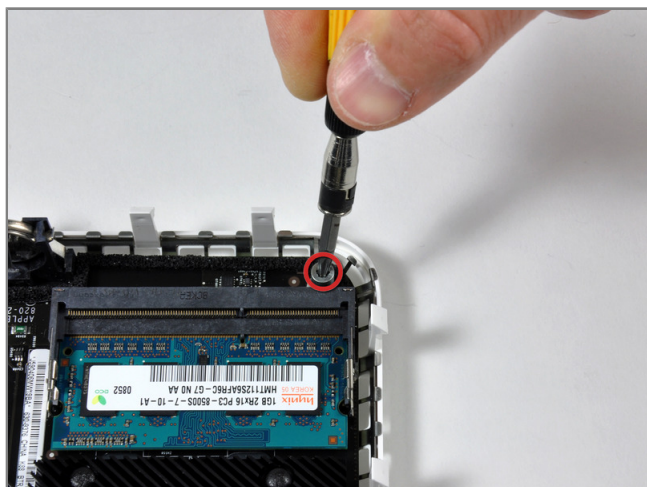


Step 3

- Remove the single T10 Torx lug next to the RAM sockets on the logic board.

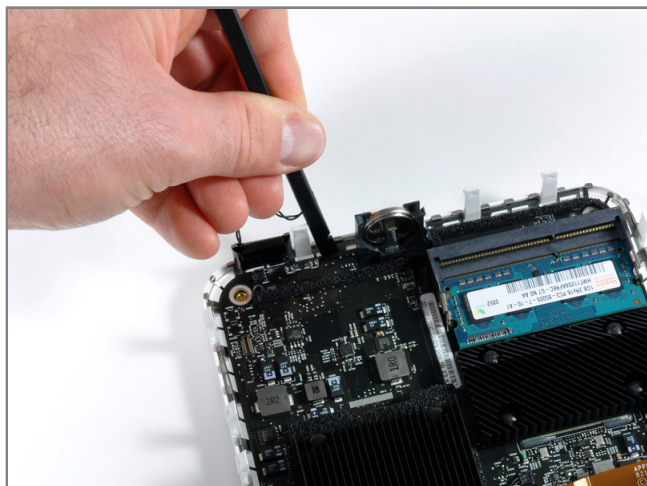

Step 4

- Use a spudger to lift the free end of the logic board off the bottom housing near the PRAM battery.

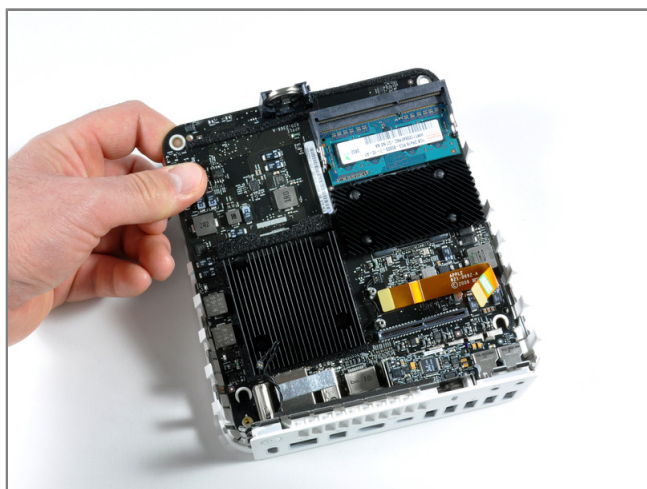

Step 5

- While slightly lifting the free end of the board pull it away from the port side of the mini, minding any edges that may get caught.