




Installing Power Mac G5 Hard Drive




Step 1 - disassembly Side Panel

- To avoid electrocution, shut down the computer. Do not open the computer or attempt to install any items inside it while the computer is on.
- To avoid being shocked wait at least 10 minutes to allow the computer's internal components to cool.

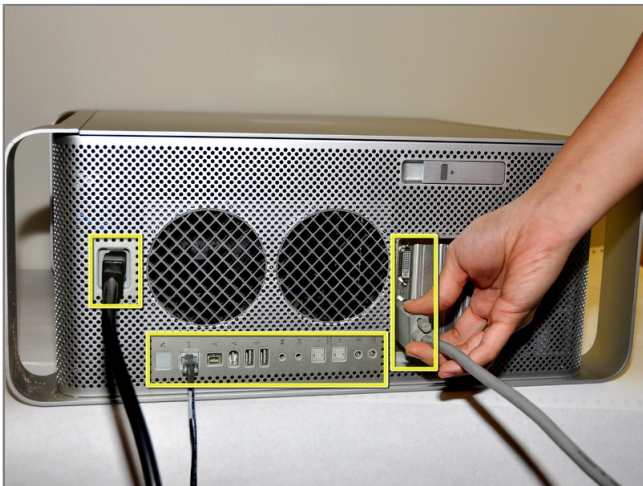

Step 2

- Remove all the cables, including the power cables before opening the unit.

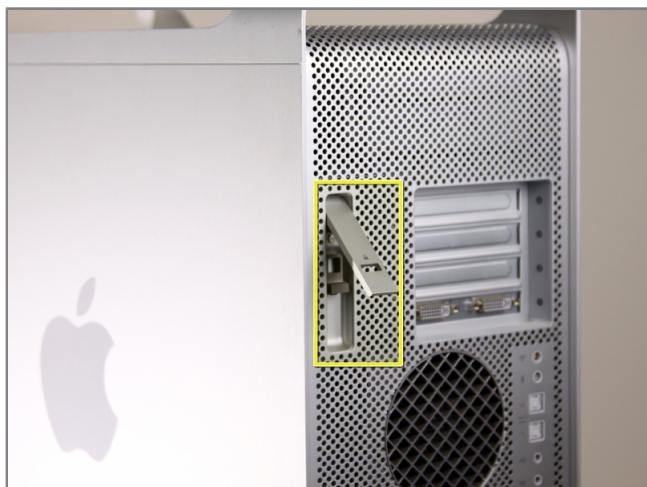

Step 3

- Lift the tab to unlock the side panel.
- The panel should fall out. If the panel does not fall out by itself pull a little from the edges.



Step 4


- Remove the air deflector (the clear plastic cover) by pulling on the handle.





Step 5 - Hard Drive

- Locate hard drive on the top right-hand corner of the desktop.

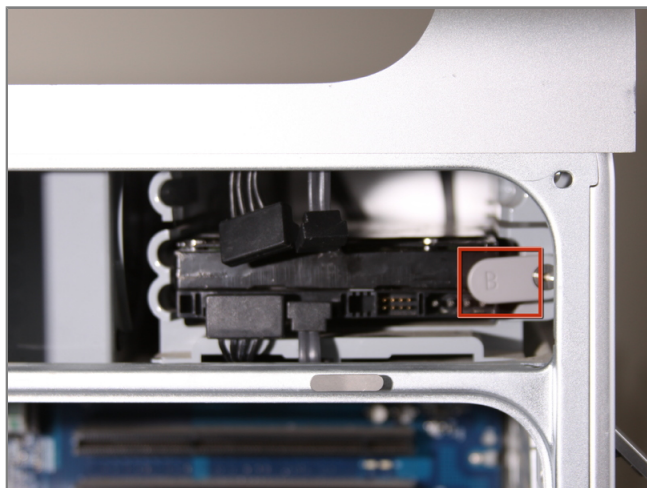

Step 6

- Rotate up plastic tab labeled "B" on the right hand side of hard drive.





Step 7


- Detach both cables from the hard drive.



Step 8

- Pull out the hard drive out.



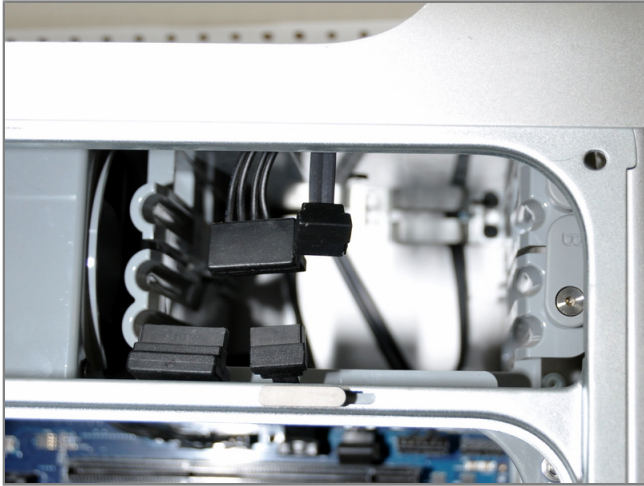

Step 9

- After hard drive is out, the space should look like this.