



# Installing iPad Wi-Fi Headphone Jack/Microphone Assembly

## Tools used in this guide

- [Metal Spudger](#) (1)
- [Plastic Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

## Parts relevant to this guide

- [iPad Headphone Jack/Microphone Assembly](#) (1)

Use this guide to replace your iPad's Headphone Jack/Microphone Assembly.



### ***Step 1 - Display Assembly***

- Insert a metal spudger between the top edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.
- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.




### ***Step 2***

- With one spudger, work your way along the right edge of the iPad, releasing tabs as you go.



### Step 3

- Lift the display assembly away from the rear panel assembly by its bottom edge.
- Do not attempt to remove the display at this time, as it is attached to the rear panel assembly.

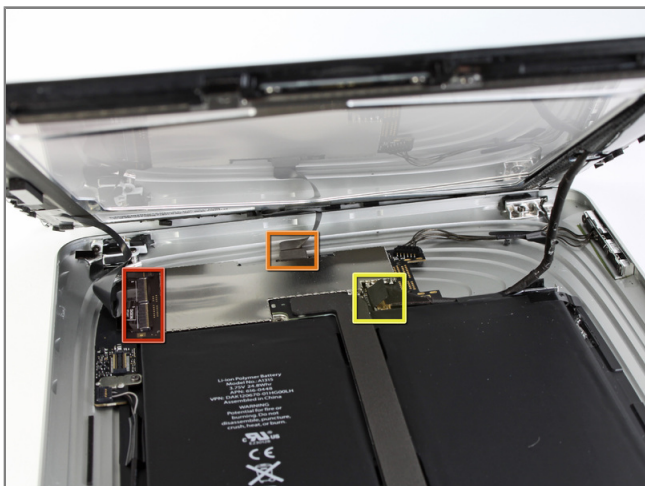


### Step 4

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
  - Digitizer
  - Ambient Light Sensor
  - Display Data Cable





### Step 5

- Use the edge of a plastic opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.
- Be sure you are flipping up the retaining flap, **not** the socket itself.
- Pull the digitizer ribbon cables straight out of their sockets.

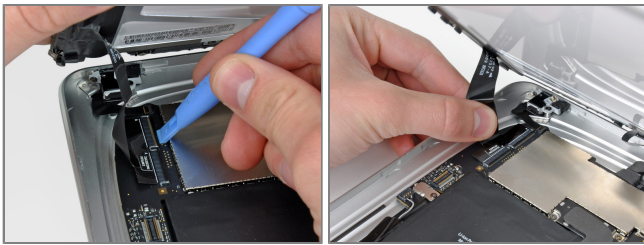


### Step 6

- Use a plastic opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

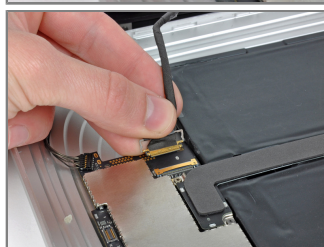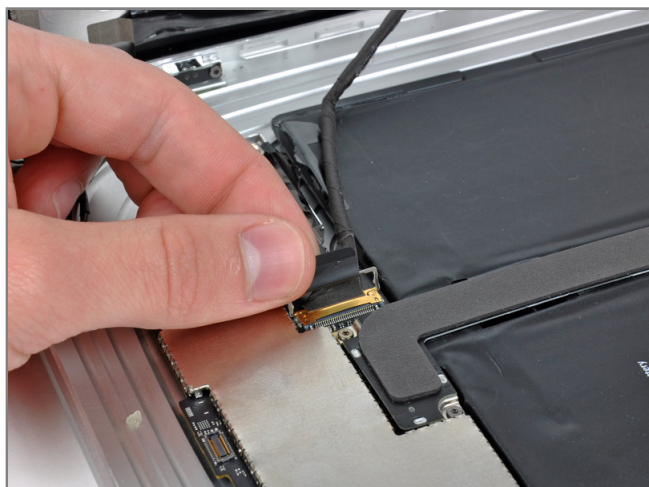

### Step 7


- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.
- Pull the connector parallel to the face of the logic board.

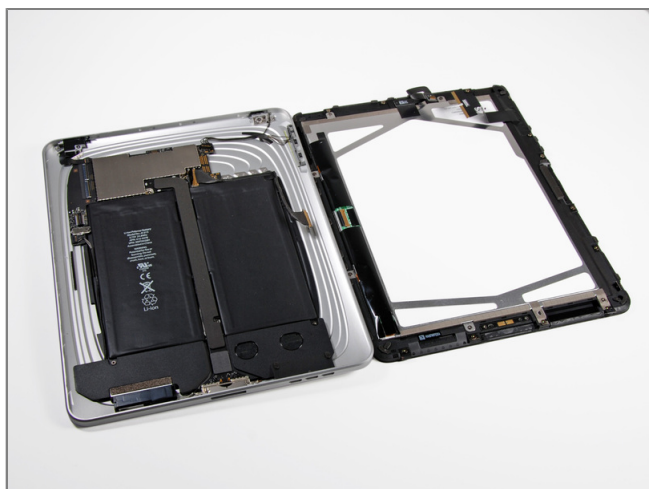

### Step 8


- Remove the display assembly from the rear panel assembly.



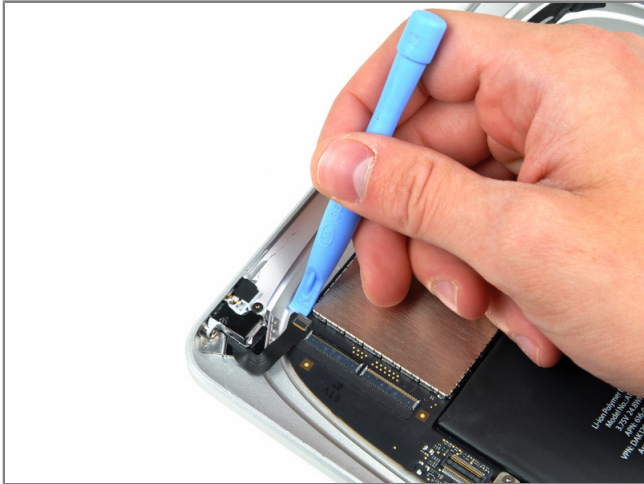

### Step 9 - Headphone Jack/Microphone Assembly

- Use the edge of an iPod opening tool or your fingernail to flip up the ZIF cable retaining flap on the headphone jack socket.
- Be sure you pry up on the cable retaining flap, **not** the socket itself.

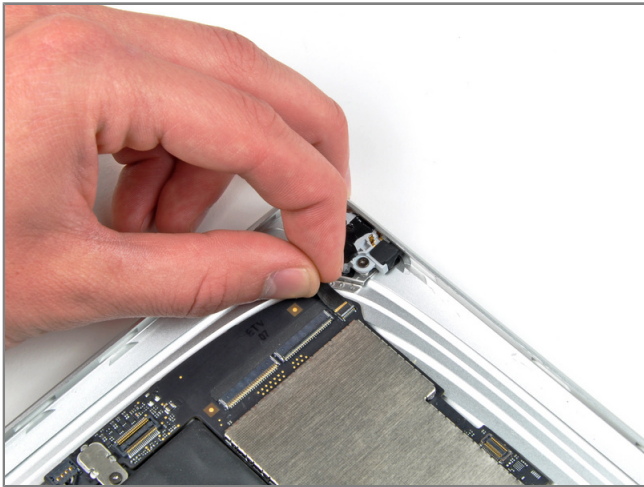

### Step 10

- Carefully pull the headphone jack cable out of its socket on the logic board.



### Step 11

- Remove the two 2.8 mm T5 Torx screws securing the headphone jack to the rear case.



### Step 12

- Remove the headphone jack from the rear case.
- Make sure you transfer the rubber sound channel from your old microphone to the new microphone.
- Before reinstalling the screws, be sure the headphone jack is properly seated in the headphone jack hole cut into the top edge of the rear case.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.