



Installing iPad 3G LCD

Tools used in this guide

- [Metal Spudger](#) (1)
- [Plastic Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

Use this guide to replace a burned-out LCD and/or backlight.



Step 1 - Display Assembly

- The iPad shown in the photos may look slightly different from your iPad, but the procedure is the same.
- Insert a metal spudger between the right edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.



Step 2

- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.
- Pry the display assembly away from the rear panel.



Step 3

- Continue prying the display assembly away from the rear panel along the bottom and left edges of the iPad.



Step 4


- Lift the display assembly away from the rear panel assembly by its right edge.
- Do not excessively lift the display assembly off the rest of the iPad, as a fragile antenna cable with very little slack still connects the two components.





Step 5

- Use the flat end of a spudger to pry the antenna connector closest to the bottom of the iPad up off its socket on the communications board.

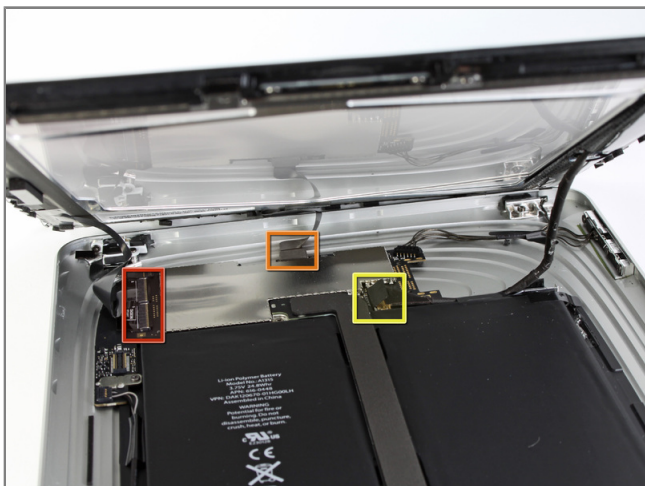


Step 6

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
 - Digitizer
 - Ambient Light Sensor
 - Display Data Cable





Step 7

- Use the edge of an iPod opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.
- Be sure you are flipping up the retaining flap, **not** the socket itself.
- Pull the digitizer ribbon cables straight out of their sockets.

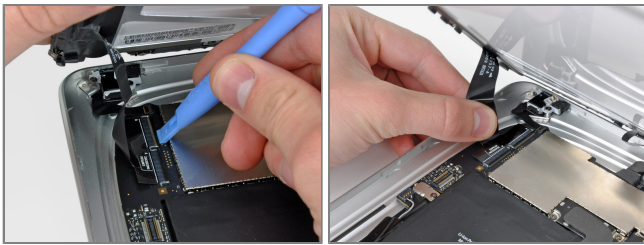


Step 8

- Use an iPod opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

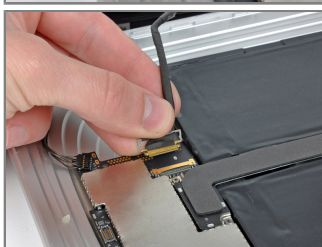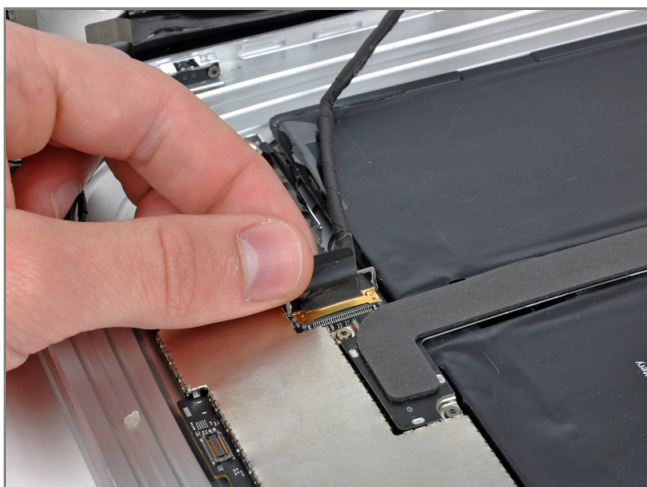

Step 9

- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.
- Pull the connector parallel to the face of the logic board.

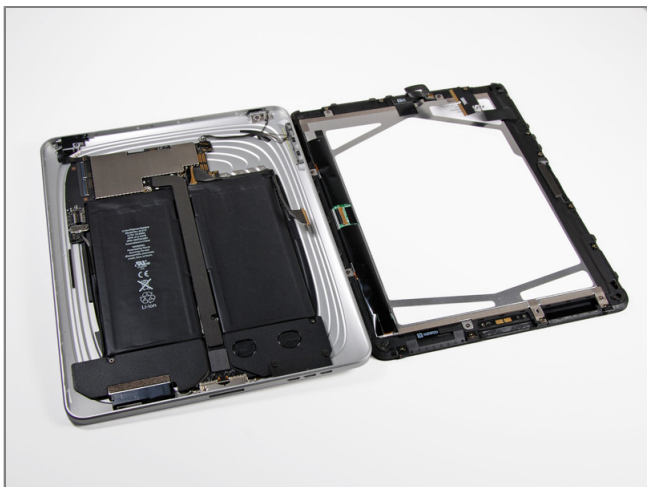

Step 10

- Remove the display assembly from the rear panel assembly.




Step 11 - Ambient Light Sensor

- If necessary, peel the strip of foam tape off the ambient light sensor.
- It is not necessary to completely remove the foam tape attached to the antenna.



Step 12


- Use the edge of an iPod opening tool to carefully pry the ambient light sensor board off the adhesive securing it to the display frame.
- Once you've gained enough clearance, peel the ambient light sensor off the LCD.
- If necessary, attach the plastic view window to your new ambient light sensor before installation.

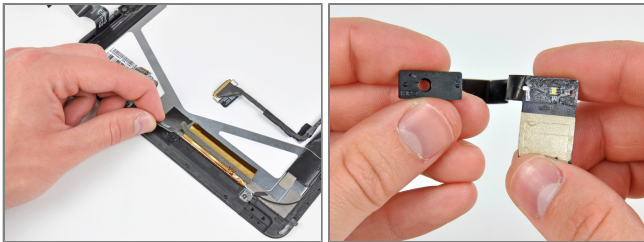




Step 13 - LCD

- If present, remove the strip of foam tape along the long edge of the display assembly near the digitizer cable.

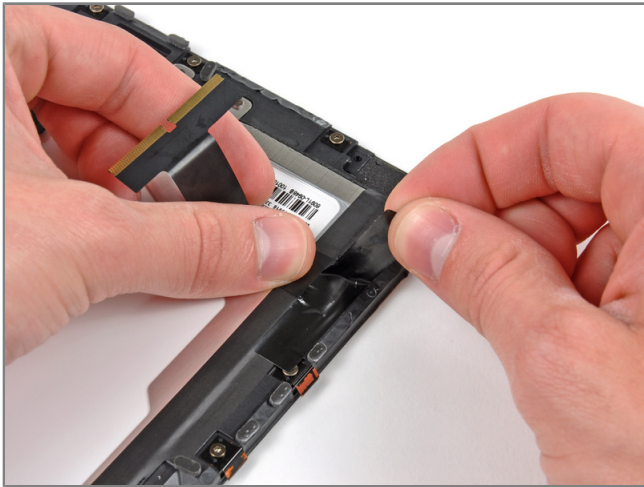


Step 14

- While holding the digitizer cable down, carefully peel back the piece of tape connecting the digitizer cable to the display frame.

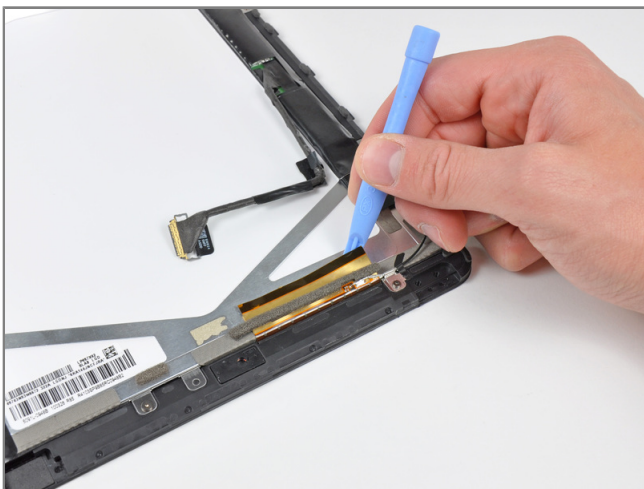

Step 15

- Use the edge of an iPod opening tool to peel the antenna off the adhesive securing it to the top edge of the display.

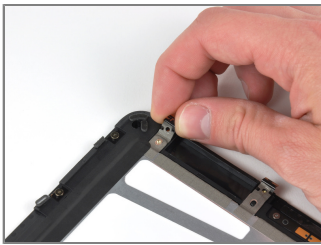

Step 16

- Remove the three T5 Torx screws securing the clips and LCD brackets covered in EMI tape near the home button switch.
- Carefully peel the display clip and its attached tape off the black plastic display frame.
- If you are replacing the LCD, be sure to transfer these pieces of EMI tape and their attached clips to the new LCD.



Step 17

- Remove the remaining T5 Torx screws securing the LCD to the black plastic display frame.




Step 18

- Remove the small strip of tape securing the antenna lead to the LCD.



Step 19

- Insert the edge of an iPod opening tool under one of the ears attached to the steel LCD frame.
- Twist the iPod opening tool to gently pry the LCD up off the adhesive securing it to the front glass panel.
- Be sure not to excessively bend the LCD, as it is made of glass.

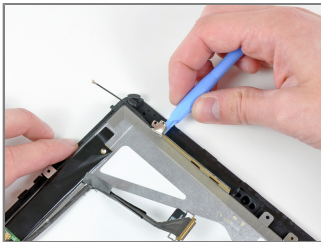



Step 20

- Repeat the process detailed on the previous step to pry up the display around the three sides opposite the digitizer cable side of the display.



Step 21


- Lift the LCD from its free end, and remove it from the display frame.
- Carefully peel the adhesive securing the long side of the LCD to the display frame, then remove the LCD.





Step 22

- If it is still stuck to the front panel, remove the strip of EMI tape near the ambient light sensor socket.
- If necessary, transfer this to your new LCD.
- If it is attached to the LCD and you are reusing the LCD, skip this step. If you are replacing the LCD as well, transfer the strip of EMI tape to your new LCD.

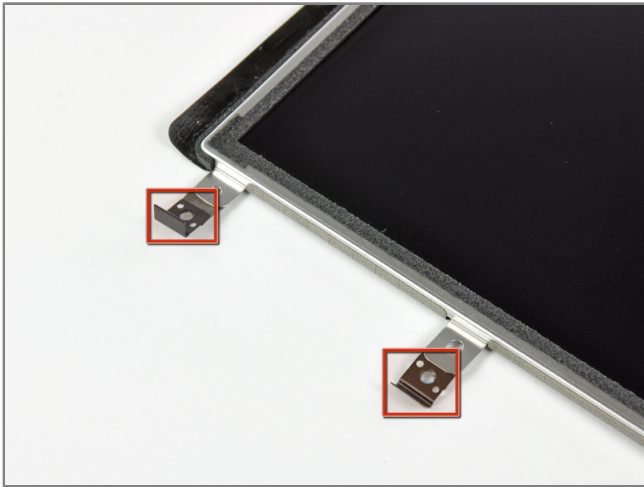

Step 23

- If they are still in good shape, transfer the clips and EMI tape near the bottom of the LCD to your new LCD.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.