# DaughterBorad to MotherBoard CONN

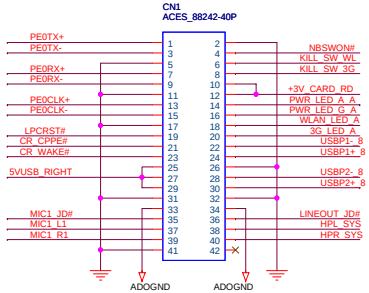


# CardReader









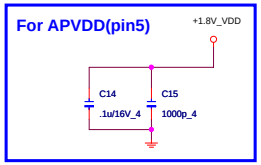


**APVDD(pin5) must put C601/1000pF close to APVDD(pin5) (length must under 120mil) and trace width = 20mil, after C601, pls put one more 0.1uF for it.**

# USB CONN

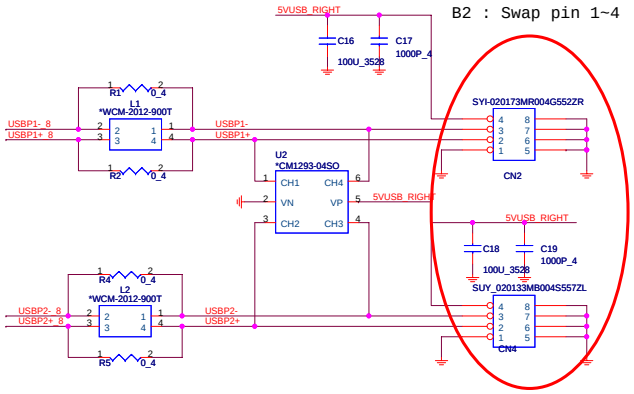


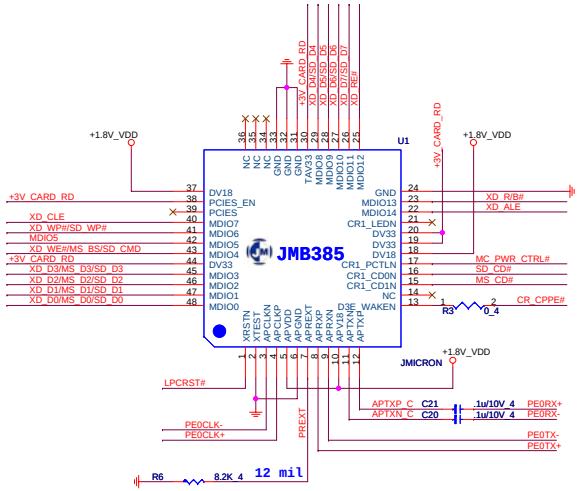


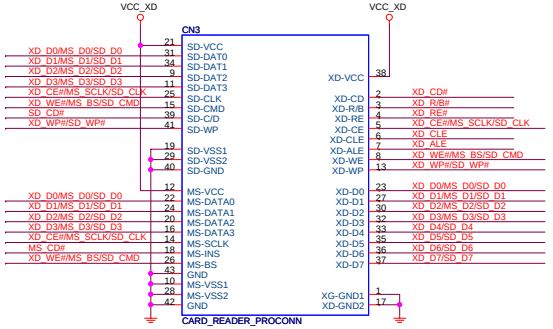


# PHONE JACK

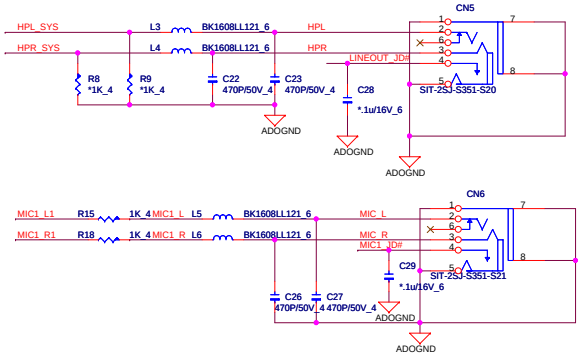


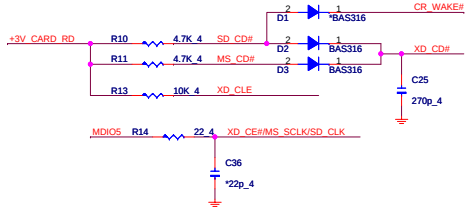


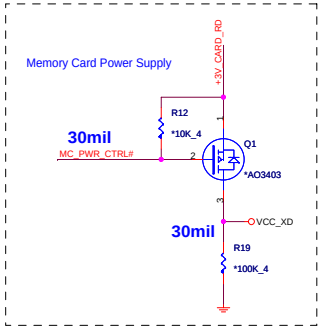


**Use 0805 type and over 20 mils trace width on both side**

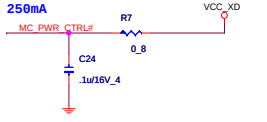


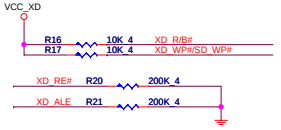


# LED

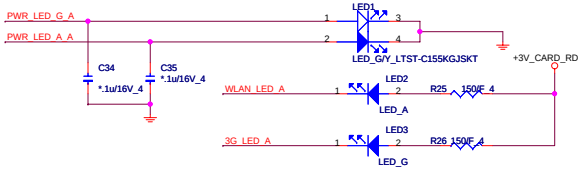


# Kill SW

chnge pin sequence

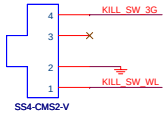


# Power SW




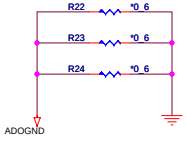


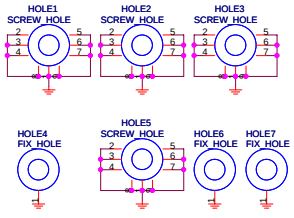


| | | |
|---|---|---|
| Title | <Title> | |
| Size C | Document Number <Doc> | Rev <RevCode> |
| Date: Friday, May 30, 2008 | Sheet 1 of 1 | |