

4. Array course control

4-1. Software Adjustments

JIG BOX (GH80-01909A)




**Test Cable (0.4M:GH39-00918A)
(1.5M:GH39-00920A)**

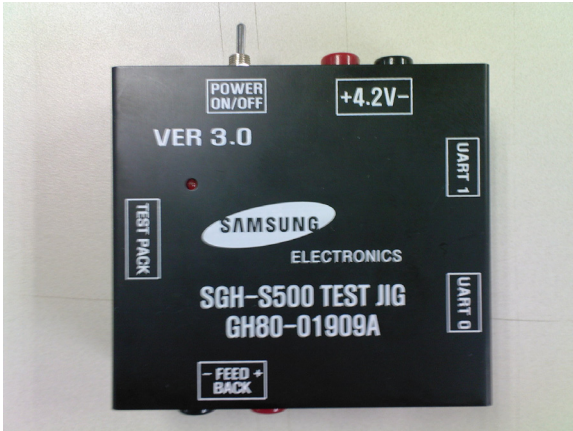

RF test cable (GH39-00985A)



Power Supply Cable

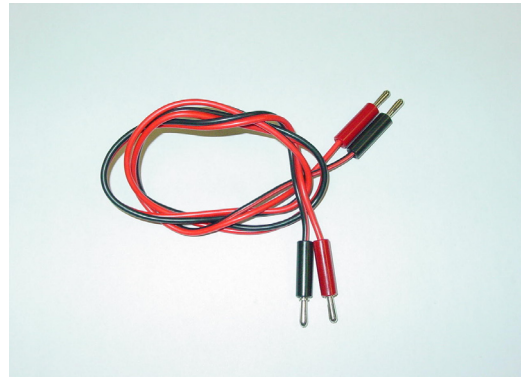

4-2. Software Downloading

4-2-1 Downloading Binary Files


- 2 binary files for downloading B130.
 - B130XEHE6_BIN
 - B130XEHE6_TFS

4-2-2. Pre-request for Downloading


- Downloader Program(PNX4901 ULC Downloader_v21_Lite)
- SGH-B130 Mobile Phone
- JIG Box
- Test Cable
- Serial Cable
- Binary file, TFS file

4-2-3. S/W Downloader Program


1. Load the binary download program by executing the “PNX4901 ULC Downloader_v21_Lite”.

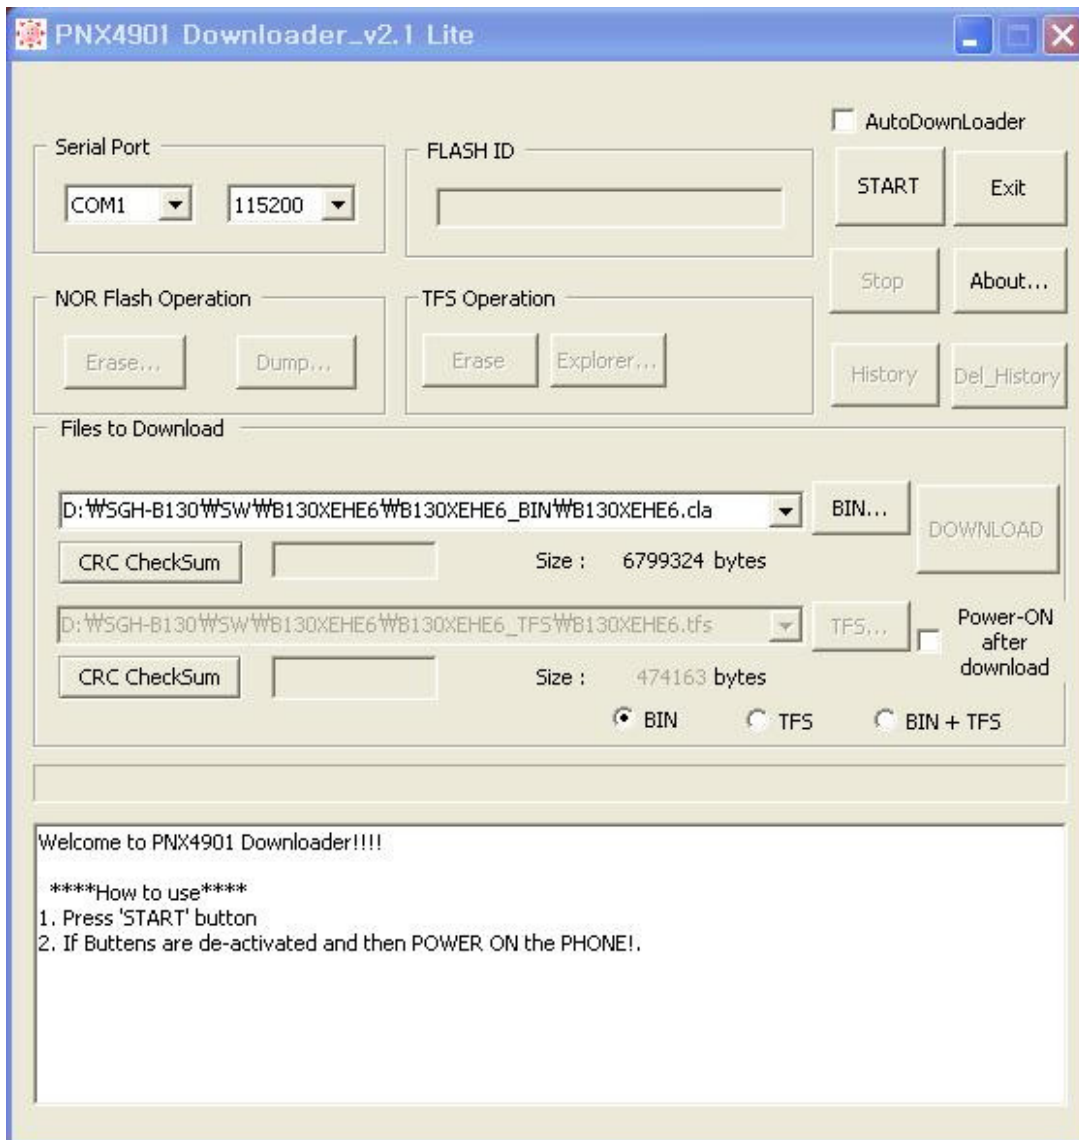


2. Select the Port, Baud Rate and Mode

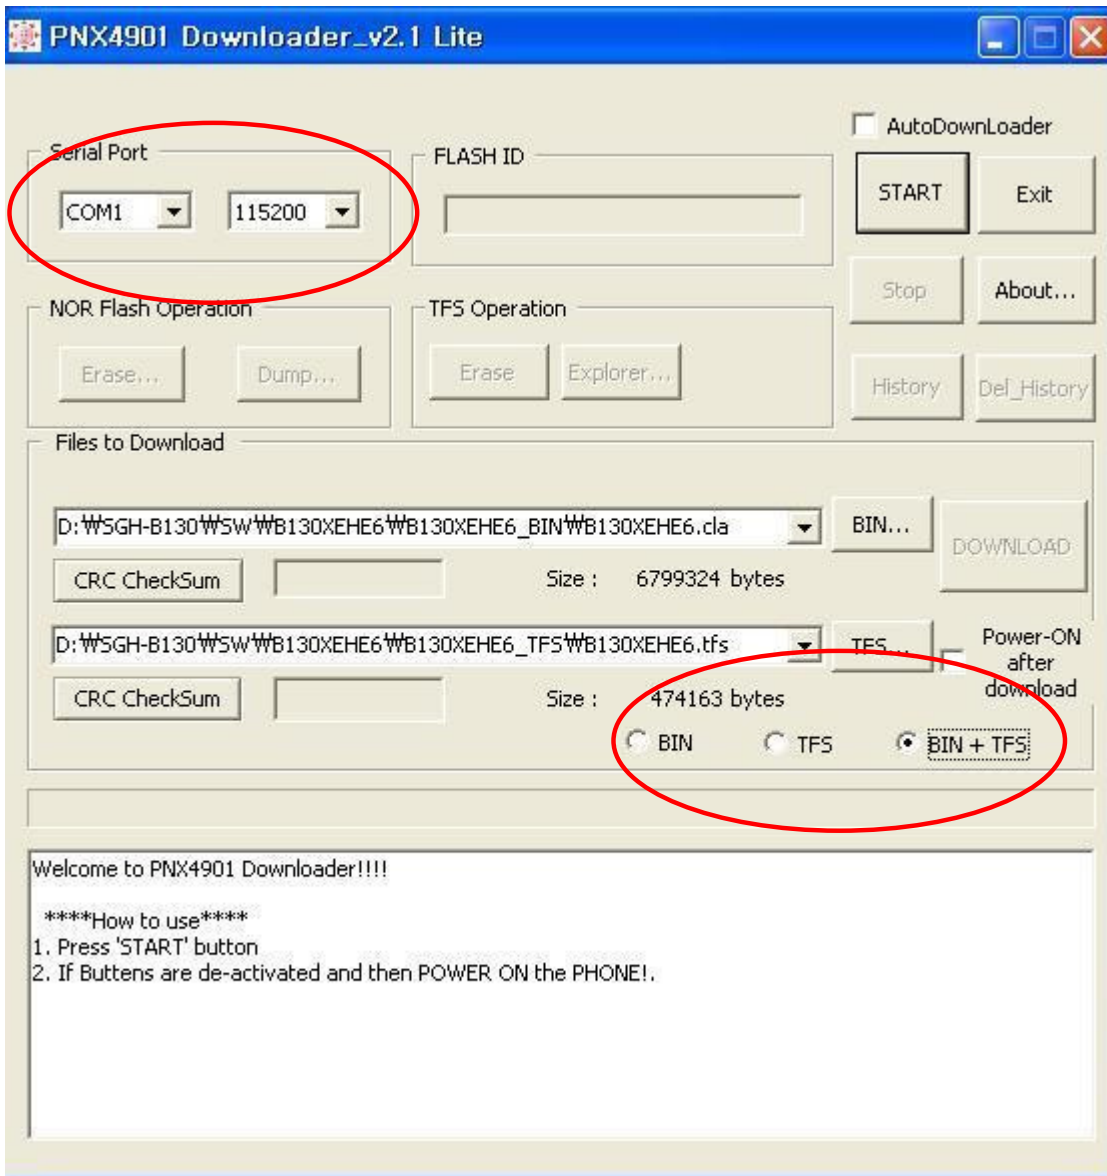


3. Select the file(s) what you want to download

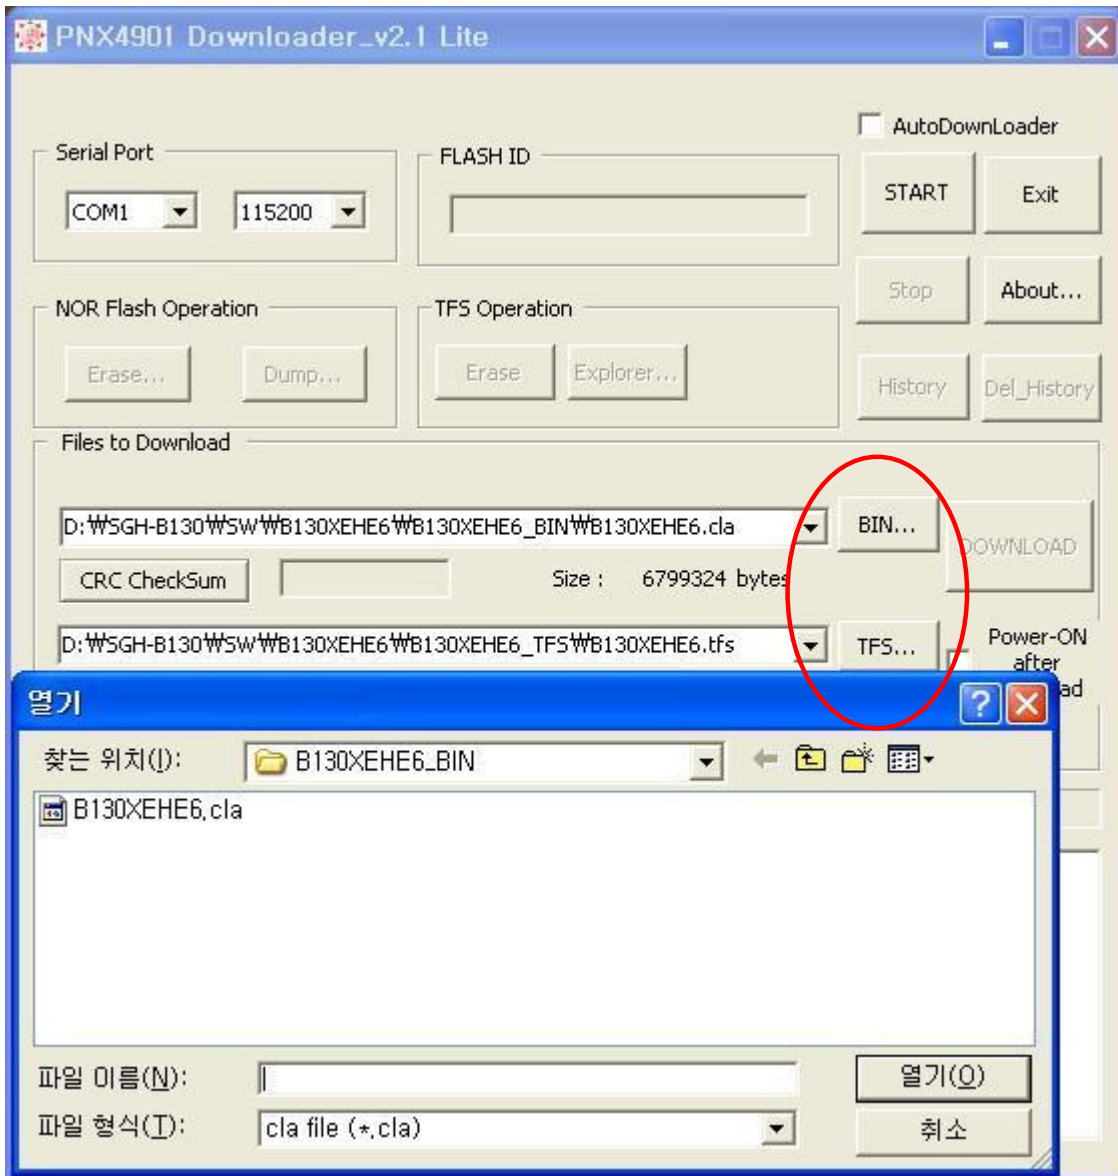

4. Press the "Start" button and connect the Handset

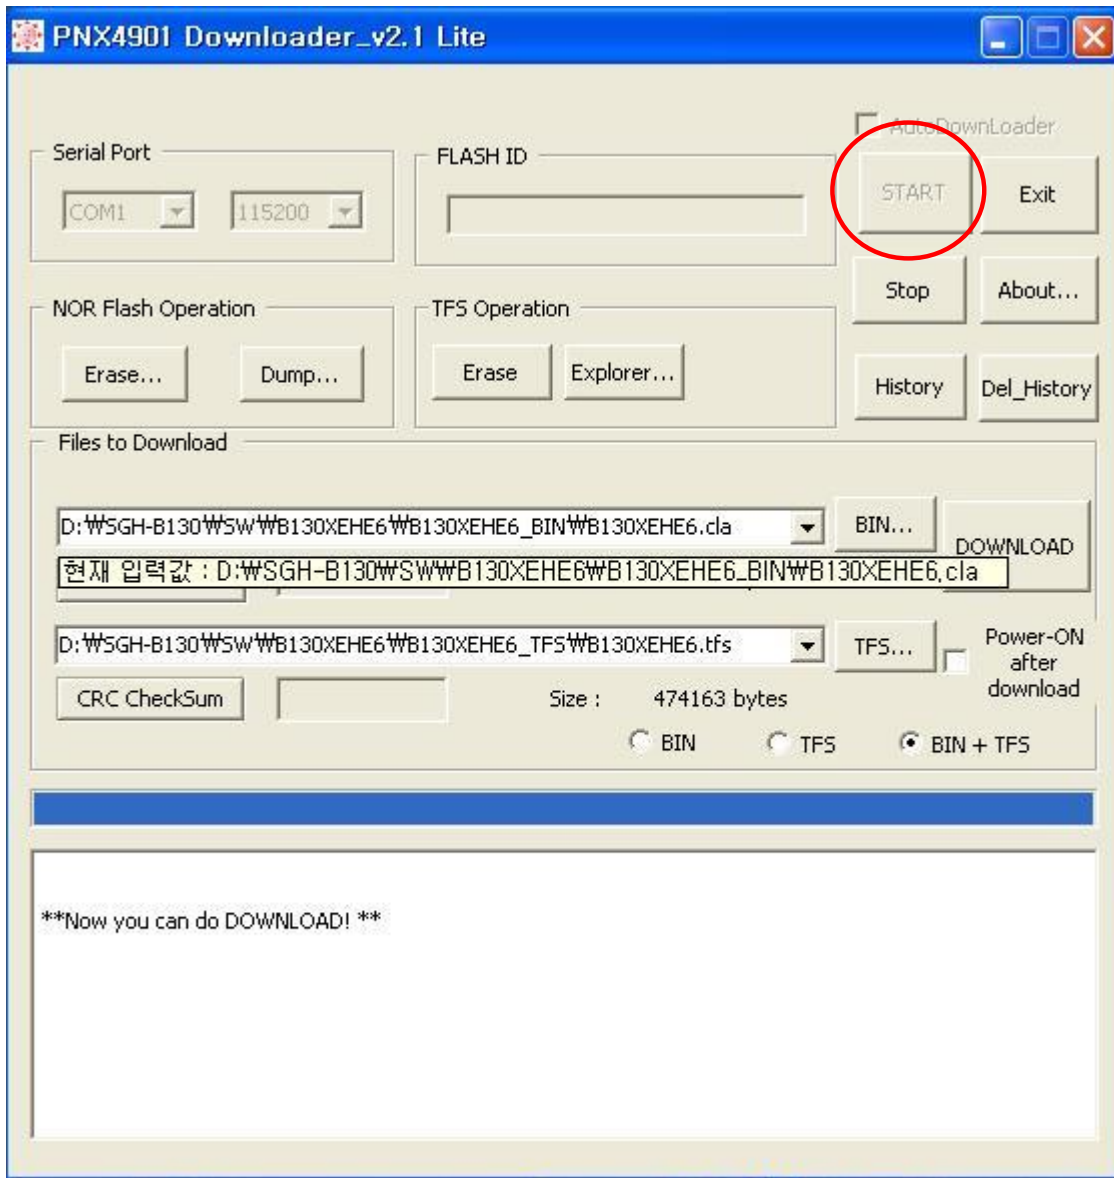

5. Press the "Download" button.

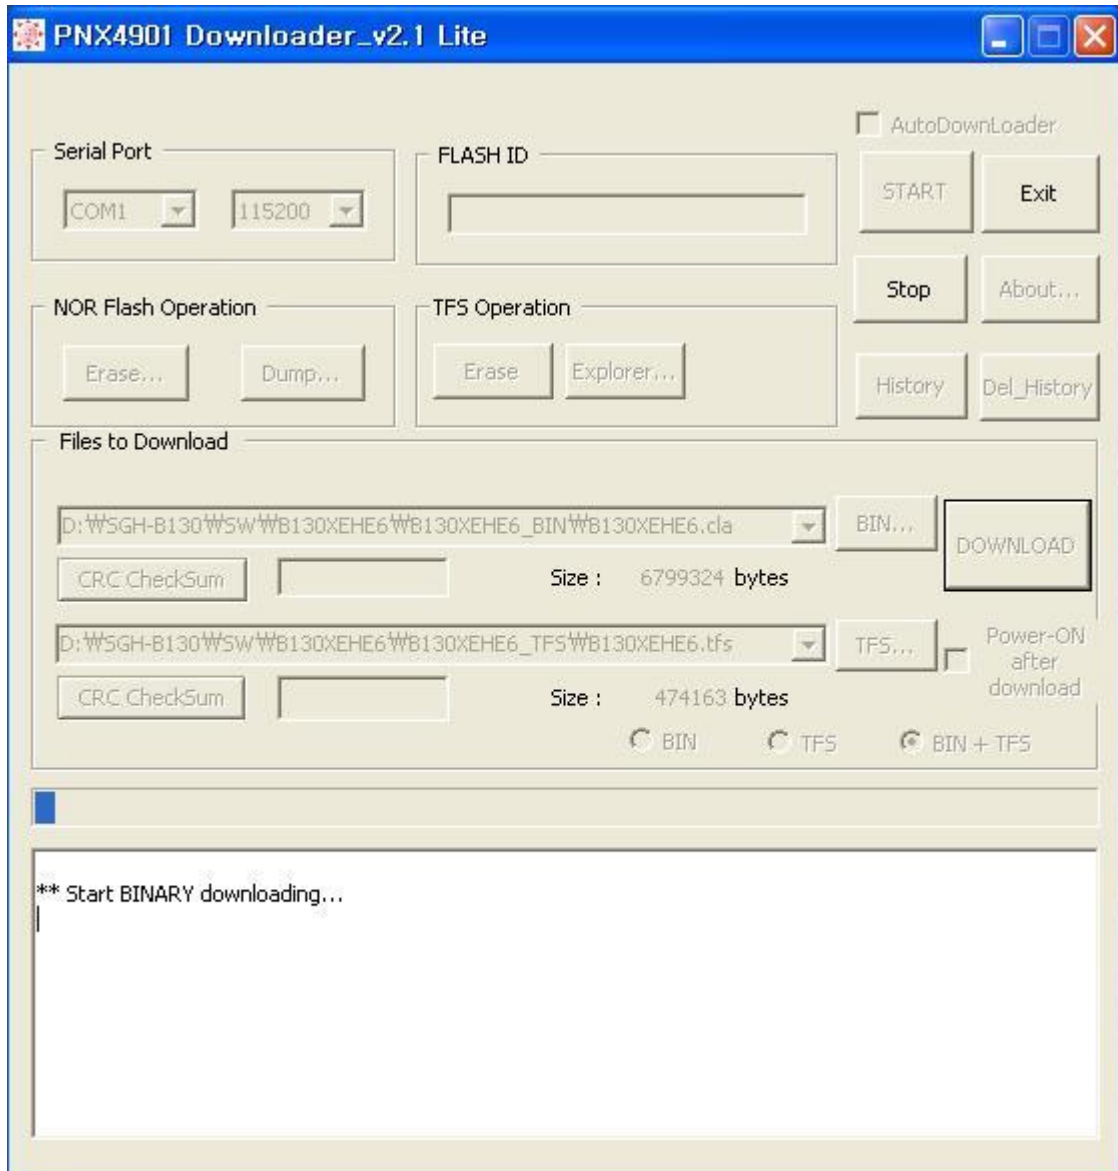

6. When downloading is complete, automatically the small window was showed up.

