

Acer TravelMate C300 Series

Service Guide

Service guide files and updates are available on the ACER/CSD web; for more information, please refer to <http://csd.acer.com.tw>

SERVICE CD PART NO.: VD.T28V1.001

PRINTED IN TAIWAN

Revision History

Please refer to the table below for the updates made on TravelMate C300 service guide.

Date	Chapter	Updates
2003/10/28	Chapter 1	Delete introduction to front panel on page 8.

Copyright

Copyright © 2003 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.

Intel is a registered trademark of Intel Corporation.

Pentium and Pentium II/III are trademarks of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Conventions

The following conventions are used in this manual:

SCREEN MESSAGES	Denotes actual messages that appear on screen.
NOTE	Gives bits and pieces of additional information related to the current topic.
WARNING	Alerts you to any damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

Preface

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Chapter 1	System Specifications	1
	Features	1
	System Block Diagram	3
	Board Layout	4
	Outlook View	6
	Indicators	12
	Lock Keys	14
	Embedded Numeric Keypad	15
	Windows Keys	16
	Hot Keys	17
	The Euro Symbol	19
	Launch Keys	20
	Touchpad	21
	Hardware Specifications and Configurations	23
Chapter 2	System Utilities	35
	BIOS Setup Utility	35
	BIOS Flash Utility	47
Chapter 3	Machine Disassembly and Replacement	49
	General Information	50
	Disassembly Procedure Flowchart	51
	Removing the Battery Pack	52
	Removing the HDD Module/Optical Module/ Wireless LAN Card/Keyboard and LCD Module	53
	Disassembling the Main Unit	56
	Disassembling the LCD Module	59
	Disassembling the External Modules	62
Chapter 4	Troubleshooting	65
	System Check Procedures	66
	Power-On Self-Test (POST) Error Message	69
	Index of Error Messages	70
	Index of Symptom-to-FRU Error Message	72
	Intermittent Problems	76
	Undetermined Problems	77
Chapter 5	Jumper and Connector Locations	79
	Top View	79
	Bottom View	80
Chapter 6	FRU (Field Replaceable Unit) List	81
	TravelMate C300 Series	92
Appendix A	Model Definition and Configuration	92
Appendix B	Test Compatible Components	93
	Microsoft® Windows® XP Pro Environment Test	94
	Microsoft® Windows® XP Home Environment Test	96
	Microsoft® Windows® 2000 Environment Test	98
Appendix C	Online Support Information	101
Index		103

Table of Contents

System Specifications

Features

This computer was designed with the user in mind. Here are just a few of its many features:

Performance

- ☐ Intel® Pentium® M processor with 1MB L2 cache
- ☐ Intel® 855GM chipset
- ☐ CD ROM, DVD, DVD/CD-RW combo, DVD or DVD-dual drive
- ☐ High-capacity Enhanced-IDE hard disk
- ☐ Advanced Configuration Power Interface (ACPI) power management system

Display

- ☐ 14.1" Thin-Film Transistor (TFT) liquid-crystal display (LCD) supporting pen-based input, with 16M color at 1024X768 XGA (eXtended Graphics Array) resolution
- ☐ 3D capabilities
- ☐ Simultaneous LCD and CRT display support
- ☐ Dual display capability
- ☐ Supports other output display devices such as LCD projection panels for large-audience presentations
- ☐ Light Sensing background luminance detection - panel automatically adjusts screen brightness
- ☐ S-video for output to a television or display device that supports S-video input
- ☐ "Automatic LCD dim" feature that automatically decides the best settings for your display and conserves power

Multimedia

- ☐ 16-bit high-fidelity AC'97 stereo audio with 3D sound and wavetable synthesizer
- ☐ Built-in stereo speakers
- ☐ High-speed CD, DVD, DVD/CD-RW combo or DVD or DVD dual drive

Connectivity

- ☐ High-speed fax/data modem port
- ☐ 10/100/1000 t-based Gigabit Ethernet port
- ☐ USB (Universal Serial Bus) 2.0 ports
- ☐ IEEE 1394 port
- ☐ 802.11b, 802.11a+b wireless LAN options
- ☐ Bluetooth option

Keyboard and Pointing Device

- ☐ Sleek, smooth and stylish design
- ☐ Full-sized keyboard
- ☐ Ergonomically-centered touchpad pointing device
- ☐ Rotating/folding screen for Tablet PC functionality

Expansion

- ☐ One Type II CardBus PC Card slot
- ☐ Upgradeable memory
- ☐ AcerMedia bay
- ☐ Acer EasyPort II

I/O Ports


- ☐ One Card bus type II card slot
- ☐ One smart-card slot
- ☐ One RJ-11 phone jack (V.90/92, 56Kbps modem)
- ☐ One RJ-45 jack (Gigabit Ethernet)
- ☐ One DC-in jack for AC adapter
- ☐ One external monitor (VGA) port
- ☐ One S-video TV out port
- ☐ One 100-pin port replicator connector
- ☐ One line-out (headphone) jack (3.5mm mini jack)
- ☐ One line-in (microphone) jack (3.5mm mini jack)
- ☐ One microphone-in jack
- ☐ Two USB 2.0 ports
- ☐ One 4-pin IEEE 1394 port
- ☐ One FIR port (IrDA)

Chapter 1




Board Layout

Top View

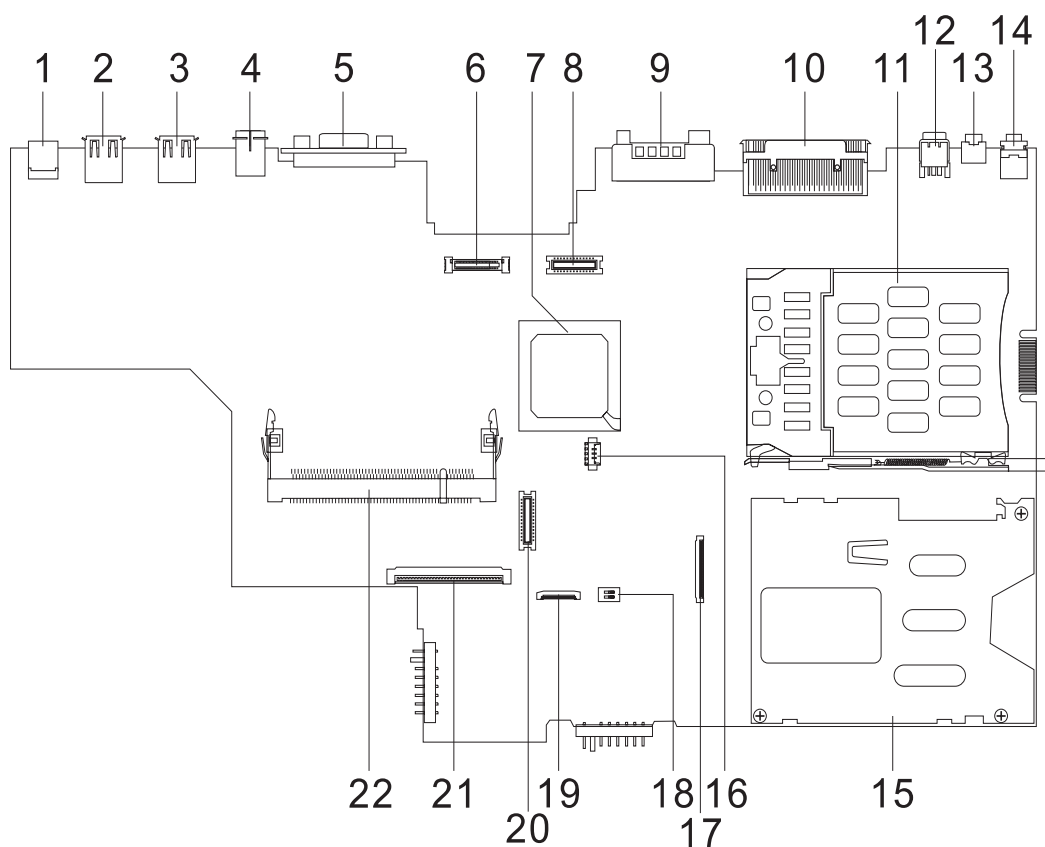

1	DC-In Jack	12	IEEE 1394 Port
2	USB Port	13	Line-Out Jack
3	USB Port	14	Mic-In Jack
4	S-Vedio Port	15	Smart Card Reader Slot
5	External Display Port	16	RTC Battery Connector
6	LCD Coaxial Cable Connector	17	Smart Card Connector
7	South Bridge	18	SW2
8	Inverter Cable Connector	19	Touchpad Connector
9	Modem Jack/LAN Jack	20	MDC Board Connector
10	Expansion Port	21	Keyboard Connector
11	PCMCIA Slot	22	DIMM Socket 2

Bottom View

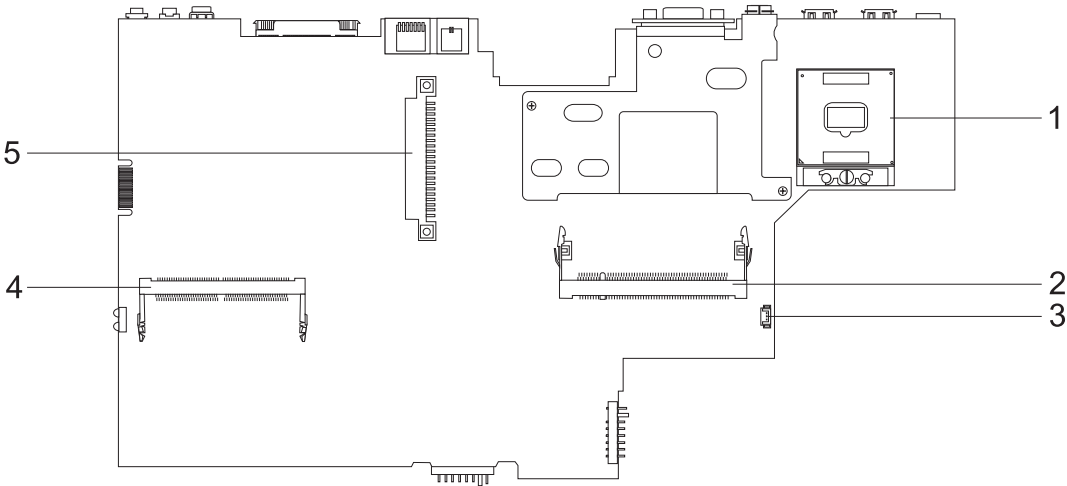

- | | | | |
|---|---------------|---|--------------------|
| 1 | CPU Socket | 4 | Mini PCI Connector |
| 2 | DIMM Socket 1 | 5 | HDD Connector |
| 3 | FAN Connector | | |

Outlook View

A general introduction of ports allow you to connect peripheral devices, as you would with a desktop PC.


Front View



#	Icon	Item	Description
1		EMR stylus	Electromagnetic resonate (EMR) stylus is used to input data in tablet mode. Use only an EMR-compatible stylus to input data on the screen.
2		Display screen	Also called LCD (liquid-crystal display), displays computer output.
3		Tablet Keys	Add enhanced functionality when operating in Tablet mode.
4		Launch Keys	Buttons for launching frequently used programs.
5		Palmrest	Comfortable support area for your hands when you use the computer.
6		Click buttons (left, center and right)	The left and right buttons function like the left and right mouse buttons; the center button serves as a 4-way scroll button.
7		Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
8		Keyboard	Inputs data into your computer.


9		Status indicator	LEDs (light-emitting diodes) that turn on and off to show the status of the computer, its functions and component.
---	--	------------------	--

Left view

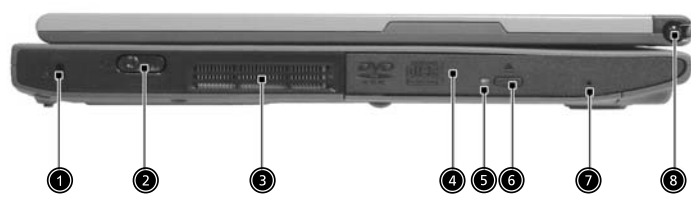


#	Icon	Item	Description
1		Security keylock	Connects to a Kensington-compatible computer security lock.
2		Power switch	Turns on the computer power.
3		Ventilation slot	Allows air to circulate through the computer chassis.
4		AcerMedia Bay	For hot-swappable modules including DVD-ROM, DVD/CD-RW combo or DVD dual drive.
5		LED indicator	Lights up when the optical drive is active.
6		Eject button	Ejects the optical drive tray from the drive.
7		Emergency eject slot	Ejects the optical drive tray when the computer is turned off.
8		Pen slot	Keeps the stylus handy when not in use.

Right view

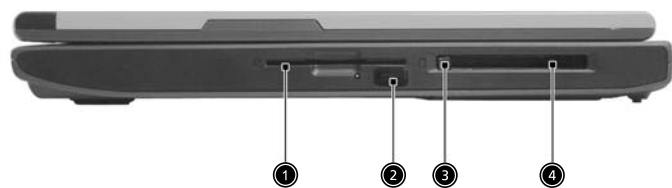


#	Icon	Item	Description
1		Smart Card slot	Slot for Smart Card interface with pre-boot authentication system.
2		Infrared port	Interfaces with infrared devices (e.g., infrared printer, IR-aware computer).
3		PC Card eject button	Ejects the PC Card from the slot.
4		PC Card slot	Accepts one Type II 16-bit PC Card or 32-bit CardBus PC Card.

Rear Panel

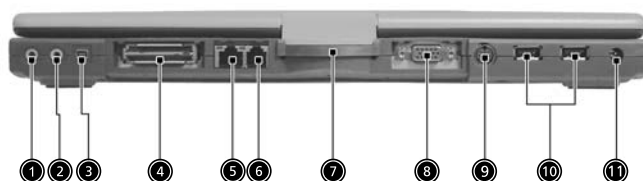

#	Icon	Item	Description
1		Line-in/Mic-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman).
2		Speaker/Line-out Headphone jack	Connects to audio line-out devices (e.g., speakers, headphones).
3		IEEE 1394 port	Connects to IEEE 1394 devices.
4		Expansion port	Connects to an I/O port replicator or Acer EasyPort port expansion device.
5		Network jack	Connects to a 10/100/1000 t-based Gigabit Ethernet network.
6		Modem jack	Connects to phone line.
7		Convertible hinge	Hinges the LCD screen in place when switching from PC mode to tablet mode and vice versa.
8		External display	Connects to a display device (e.g., external monitor, LCD projector).
9		S-video	Connects to a television or display device with S-video input.
10		USB 2.0 ports (2)	Connects to Universal Serial Bus (USB) 2.0 devices (e.g., USB mouse, USB camera).
11		Power jack	Connects to an AC adapter.

Bottom Panel

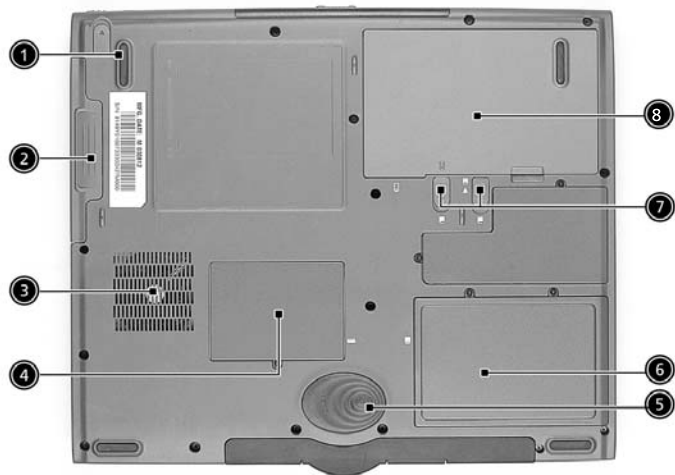

#	Icon	Item	Description
1		AcerMedia Bay release latch	Unlatches the AcerMedia drive for removing or swapping.
2		AcerMedia Bay	Houses an AcerMedia drive module.
3		Cooling fans	Help keep the computer cool. Note: Don't cover or obstruct the opening of the fans.
4		Memory compartment	Houses the computer's main memory.
5		Hard disk protector	Protects the hard disk from accidental dumps and vibration.
6		Hard disk bay	Houses the computers Hard disk drive.
7		Battery Lock & release latch	Unlock and unlatches the battery to remove the battery pack.
8		Battery bay	Houses the computer's battery pack.

Indicators

The computer has seven easy-to-read status icons below the display screen.




The status LCD displays icons that show the status of the computer and its components.

Icon	Function	Description
	Wireless communication	Lights orange when the Wireless LAN capabilities are enabled.
	Bluetooth	Lights when the Bluetooth is enabled or a Bluetooth enabled device is within range.
	Power	Lights when the computer is on.
	Sleep	Lights when the computer enters Standby mode and blinks when it enters into or resumes from hibernation mode.
	Media Activity	Lights when the floppy drive, hard disk or optical drive is active.
	Battery Charge	Lights when the battery is being charged.
	Caps lock	Lights when Caps Lock is activated.

Icon	Function	Description
	Num loc	Lights when Num Lock is activated.

Lock Keys

The keyboard has three lock keys which you can toggle on and off.

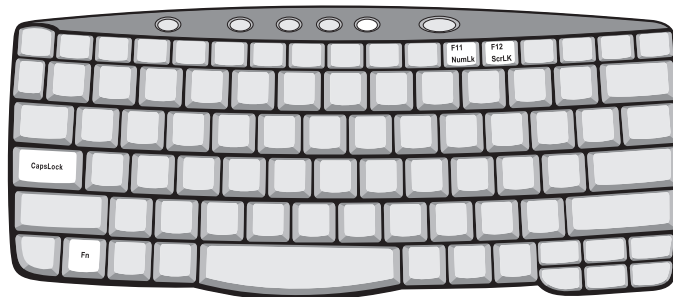

Lock Key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Num lock (Fn-F11)	When Num Lock is on, the embedded keypad is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect an external keypad.
Scroll lock (Fn-F12)	When Scroll Lock is on, the screen moves one line up or down when you press the up or down arrow keys respectively. Scroll Lock does not work with some applications.

Embedded Numeric Keypad

The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.



Desired Access	Num Lock On	Num Lock Off
Number keys on embedded keypad	Type numbers in a normal manner.	
Cursor-control keys on embedded keypad	Hold  while using cursor-control keys.	Hold Fn while using cursor-control keys.
Main keyboard keys	Hold Fn while typing letters on embedded keypad.	Type the letters in a normal manner.

NOTE: If an external keyboard or keypad is connected to the computer, the Num Lock feature automatically shifts from the internal keyboard to the external keyboard or keypad.

Windows Keys

The keyboard has two keys that perform Windows-specific functions.



Key	Icon	Description
Windows logo key		Start button. Combinations with this key perform shortcut functions. Below are a few examples:  + Tab (Activates next taskbar button)  + E (Explores My Computer)  + F (Finds Document)  + M (Minimizes All) Shift +  + M (Undoes Minimize All)  + R (Displays the Run... dialog box)
Application key		Opens a context menu (same as a right-click).

Hot Keys

The computer uses hotkey or key combinations to access most of the computer's controls like screen brightness, volume output.

To activate hot keys, press and hold the **Fn** key before pressing the other key in the hot key combination.



Hot Key	Icon	Function	Description
Fn-F1	?	Hot key help	Displays help on hot keys.
Fn-F2		System Property	Displays the System Property.
Fn-F3		Power Options	Display the Power Options Properties used by the computer (function available if supported by operating system). See "Power management" on page 25.
Fn-F4	Z ^z	Sleep	Puts the computer in Sleep mode. See "Power management" on page 25.
Fn-F5		Display toggle	Switches display output between the display screen, external monitor (if connected) and both the display screen and external monitor.
Fn-F6		Screen blank	Turns the display screen backlight off to save power. Press any key to return.
Fn-F7		Touchpad toggle	Turns the internal touchpad on and off.
Fn-F8		Speaker toggle	Turns the speakers on and off.
Fn-		Volume up	Increases the speaker volume.

Hot Key	Icon	Function	Description
Fn- 		Volume down	Decreases the speaker volume.
Fn- 		Brightness up	Increases the screen brightness.
Fn- 		Brightness down	Decreases the screen brightness
Fn-PgUp		Home	Functions as the “Home” key.
Fn-PgDn		End	Functions as the “End” key.
Alt Gr-Euro		Euro	Types the Euro symbol.

The Euro Symbol

If your keyboard layout is set to United States-International or United Kingdom or if you have a keyboard with a European layout, you can type the Euro symbol on your keyboard.

NOTE: For US keyboard users: The keyboard layout is set when you first set up Windows. For the Euro symbol to work, the keyboard layout has to be set to United States-International.

To verify the keyboard type:

1. Click on **Start, Control Panel**.
2. Double-click on **Regional and Language Options**.
3. Click on the **Language** tab and click on **Details**.
4. Verify that keyboard layout used for "En English (United States)" is set to United States-International. If not, select and click on **ADD**; then select **United States-International** and click on **OK**.
5. Click on **OK**.

To type the Euro symbol:

1. Locate the Euro symbol on your keyboard.
2. Open a text editor or word processor.
3. Hold **Alt Gr** and press the Euro symbol.

NOTE: Some fonts and software do not support the Euro symbol. Please refer to www.microsoft.com/typography/faq/faq12.htm for more information.

Launch Keys

Located at the top of keyboard are five buttons. These buttons are called launch keys. They are designated as the mail button, the web browser button and two programmable buttons (P1 and P2).



No.	Launch Key	Default application
1	 Wireless LAN (optional)	Activate wirelss LAN for wireless communication
2	 Bluetooth (optional)	Activate Bluetooth for wireless communication.
3	P1	User-programmable
4	P2	User-programmable
5	Email	Email application
6	Web browser	Internet browser application

CAUTION: It's important that Wireless LAN and Bluetooth is turned off before boarding an airplane.

Touchpad

The built-in touchpad is a pointing device that senses movement on its surface. This means the cursor responds as you move your finger on the surface of the touchpad. The central location on the palmrest provides optimal comfort and support.



NOTE: If you are using an external USB mouse, you can press **Fn-F7** to disable the touchpad.

Touchpad Basics

The following teaches you how to use the touchpad:



- ☐ Move your finger across the touchpad to move the cursor.
- ☐ Press the left (1) and right (3) buttons located on the edge of the touchpad to do selection and execution functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad produces similar results.
- ☐ Use the 4-way scroll (2) button to scroll up or down and move left or right a page. This button mimics your cursor pressing on the right scroll bar of Windows applications.

Function	Left Button	Right Button	Scroll Button	Tap
Execute	Click twice quickly			Tap twice (at the same speed as double-clicking the mouse button)
Select	Click once			Tap once

Function	Left Button	Right Button	Scroll Button	Tap
Drag	Click and hold, then use finger to drag the cursor on the touchpad			Tap twice (at the same speed as double-clicking a mouse button) then hold finger to the touchpad on the second tap to drag the cursor
Access context menu		Click once		
Scroll			Click and hold the button in the desired direction (up/down/left/right)	

NOTE: Keep your fingers dry and clean when using the touchpad. Also keep the touchpad dry and clean. The touchpad is sensitive to finger movements. Hence, the lighter the touch, the better the response. Tapping too hard will not increase the touchpad's responsiveness.

Hardware Specifications and Configurations

Processor

Item	Specification
CPU type	Intel® Pentium® M at 1.4Ghz ~1.7Ghz or higher
CPU package	/μ -FCPGA package
CPU core voltage	0.95V - 1.42V

BIOS

Item	Specification
BIOS vendor	Phoenix
BIOS Version	V1.00
BIOS ROM type	Flash ROM
BIOS ROM size	512KB
BIOS package	TSOP
Supported protocols	ACPI 1.0b, PC Card 95, SM BIOS 2.3, EPP/IEEE 1284, ECP/IEEE 1284 1.7 & 1.9, PCI 2.2, PnP 1.0a, DMI 2.0, PS/2 keyboard and mouse, USB 2.0, VGA BIOS, CD-ROM bootable, IEEE 1394
BIOS password control	Set by setup manual

Second Level Cache

Item	Specification
Cache controller	Built-in CPU
Cache size	1MB
1st level cache control	Always enabled
2st level cache control	Always enabled
Cache scheme control	Fixed in write-back

System Memory

Item	Specification
Memory controller	Intel Montara GM+ and ICH4-M
Memory size	0MB (no on-board memory)
DIMM socket number	2 sockets
Supports memory size per socket	256MB, 512MB and 1024MB
Supports maximum memory size	2048MB (by two 1024MB DDR RAM module)
Supports DIMM type	DDR RAM
Supports DIMM Speed	333 MHz
Supports DIMM voltage	2.5V
Supports DIMM package	200-pin soDIMM
Memory module combinations	You can install memory modules in any combinations as long as they match the above specifications.

Memory Combinations

Slot 1	Slot 2	Total Memory
0MB	256MB	256MB
0MB	512MB	512MB
0MB	1024MB	1024MB
256MB	0MB	256MB
256MB	256MB	512MB
256MB	512MB	768MB
256MB	1024MB	1280MB
512MB	0MB	512MB
512MB	256MB	768MB
512MB	512MB	1024MB
512MB	1024MB	1536MB
1024MB	0MB	1024MB
1024MB	256MB	1280MB
1024MB	512MB	1536MB
1024MB	1024MB	2048MB

NOTE: Above table lists some system memory configurations. You may combine DIMMs with various capacities to form other combinations. On above table, the configuration of slot 1 and slot 2 could be reversed.

Modem Interface

Item	Specification
Data modem data baud rate (bps)	56K
Supports modem protocol	V90/V92 MDC
Modem connector type	RJ11
Modem connector location	Rear panel

LAN Interface

Item	Specification
Chipset	Broad Com 5705
Supports LAN protocol	10/100/1000 Mbps
LAN connector type	RJ45
LAN connector location	Rear panel

Bluetooth-MODEM Interface

Item	Specification
Chipset	CSR BC02/Agere Scorpio solution
Data throughput	200k bps (Blue-tooth)/56K bps (MODEM)
Protocol	Blue-tooth 1.1
Interface	USB 1.1+MDC
Connector type	RJ11 (MODEM)

Wireless Module 802.11b

Item	Specification
Chipset	Intel Claxico

Wireless Module 802.11b

Item	Specification
Data throughput	up to 11M bps
Protocol	802.11b
Interface	Mini-PCI type II
Connector interface	124-pin SO-DIMM edge connector

Five-in-One Card Reader

Item	Specification
Chipset	OZ711EC1
Data throughput	USB 1.1
Protocol	Secure Digital (SD), SmartMedia, MultiMediaCard, Memory Stick, Compact Flash

Hard Disk Drive Interface

Item	Specification			
Vendor & Model Name	HGST IC25N030ATMR04 TOSHIBA MK3021GAS	HGST IC25N040ATMR04 TOSHIBA MK4021GAS	HGST IC25N060ATMR04 HGST TS548060M9AT00 TOSHIBA MK6021GAS	HGST IC25N080ATMR04 TOSHIBA MK8025GAS KA023A
Capacity (GB)	30	40	60	80
Bytes per sector	512	512	512	512
Data heads	2	2/3	3/4 for Toshiba	4
Logical heads	16	16	16	16
Logical sectors	63	63	63	63
Drive Format				
Disks	1	1/2	2/3 for Toshiba	2
Logical cylinders	16383	16383	16383	16383
Spindle speed (RPM)	4200 RPM	4200 RPM	4200 RPM/5400 RPM for HGST TS548060M9AT00	5400 RPM/4200 RPM for Toshiba
Performance Specifications				
Buffer size	2MB	2MB	8MB/2MB for Toshiba	8MB
AT Interface	ATA/ATAPI-6 ATA-5 for Toshiba	ATA/ATAPI-6 ATA-5 for Toshiba	ATA/ATAPI-6 ATA-5 for Toshiba	ATA/ATAPI-6
Data transfer rate (buffer to/ from media Mbytes/s)	350	350	350/450	350
Data transfer rate (host-buffer, Mbytes/s)	100 MB/Sec. Ultra DMA mode-5	100 MB/Sec. Ultra DMA mode-5	100 MB/Sec. Ultra DMA mode-5	100 MB/Sec. Ultra DMA mode-5
DC Power Requirements				
Voltage tolerance	5V(DC) +/- 5%	5V(DC) +/- 5%	5V(DC) +/- 5%	5V(DC) +/- 5%

DVD/CDRW Interface

Item	Specification	
Vendor & model name	DVD/CDRW COMBO MODULE QSI SBW-242 DVD/CDRW COMBO MODULE SONY CRX830E C	
Performance Specification	With CD Diskette	With DVD Diskette
Transfer rate (KB/sec)	Sustained: Max 3.6Mbytes/sec	Sustained: Max 10.8Mbytes/sec
Data Buffer Capacity	128 KBytes	
Interface	IDE/ATAPI (ATA/ATAPI-5)	
Applicable disc format (for SONY)	DVD: DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD+R, DVD-RW, DVD+RW, CD: CD Digital Audio and CD Extra, CD-ROM (mode 1), CD-ROM XA (Mode 2, Form 1 and Form 2) and CD-I Ready and CD-I Bridge, Photo CD, (Single and Multi session), Video CD, CD-TEXT, CD-R, CD-RW, CD Layer of Hybrid SACD	
Applicable disc format (for QSI)	DVD: DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM (optional) CD: CD-DA, CD-ROM/XA, CD-i, Karaoke CD, Video CD, Multi-session Photo CD, Enhanced CD, itrax CD, CD extra, CD Plus, CD-Text, CD-R and CD-RW discs	
Loading mechanism	Load: Manual Release: (a) Electrical Release (Release Button) (b) Release by ATAPI command (c) Emergency Release	
Power Requirement		
Input Voltage	5 V +/- 5 % (Operating)	

DVD-RW Interface

Item	Specification	
Vendor & model name	DVD-RW MODULE PIONEER DVR-K12D	
Performance Specification	With CD Diskette	With DVD Diskette
Transfer rate (KB/sec)	Sustained: Max 3.6Mbytes/sec	Sustained: Max 10.8Mbytes/sec
Data Buffer Capacity	128 KBytes	
ATAPI Interface	SFF-8020i, SFF8090 Ver5	
Applicable disc format	Supports KODAK Photo CD single and Multi-session Supports CD Extra (CD PLUS) Supports Mixed CD Supports Video CD Supports to read/write CD-R discs Supports to read/write CD-RW discs Supports CD text data read/write Supports to read DVD-ROM Supports to read/write DVD-R Ver. 2.00 for General Supports to read/write DVD-RW Ver.1.0 & 1.1	
Loading mechanism	Load: Manual Release: (a) Electrical Release (Release Button) (b) Release by ATAPI command (c) Emergency Release	
Power Requirement		
Input Voltage	5 V +/- 5 % (Operating)	

DVD Interface

Item	Specification	
Vendor & model name	DVD-ROM MODULE MKE SR8177	
Performance Specification	With CD Diskette	With DVD Diskette
Transfer rate (KB/sec)	Sustained: Max 3.6Mbytes/sec	Sustained: Max 11.08Mbytes/sec
Data Buffer Capacity	256 KBytes	
ATAPI Interface	SFF8090 Ver 0.99	
Applicable disc format	DVD: DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R (3.95G/4.7G), DVD-RW, DVD-RAM (2.6G/4.7G) CD: CD-Audio, CD-ROM (mode 1 and mode 2), CD-ROM XA (mode 2, form 1 and form 2), CD-I (mode 2, form 1 and form 2), CD-I Ready, CD-I Bridge, CD-WO, CD-RW, Photo CD, Video CD, Enhanced Music CD (CD Plus), CD-TEXT	
Loading mechanism	Load: Manual Release: (a) Electrical Release (Release Button) (b) Release by ATAPI command (c) Emergency Release	
Power Requirement		
Input Voltage	5 V +/- 5 % (Operating)	

Speaker

Item	Specification
Number of speaker	2
Rating	1W, max; 4 ohm
Connector type	Headphone out, microphone in and line-in

Video Interface

Item	Specification
Chipset	Montara GM+ intergrated (UMA)
Interface	Integration
Supports ZV (Zoomed Video) port	No
Maximum resolution LCD	1600X1200 (UXGA)
Maximum resolution CRT	2048X1536@75HZ

Audio Interface

Item	Specification
Audio Controller	Intel ICH4-M intergrated
Audio Codec	Cirrus 4299XQ
Audio onboard or optional	Built-in
Mono or Stereo	Stereo
Resolution	20 bit stereo Digital to analog converter 18 bit stereo Analog to Ditial converter
Compatibility	AC97
Mixed sound source	Line-in, CD

Audio Interface

Item	Specification
Voice channel	8/16-bit, mono/stereo
Sampling rate	44,1 KHz (48K byte for AC97 interface)
Internal microphone	Yes
Internal speaker / Quantity	Yes/2
Supports PnP IRQ	IRQ10

Video Resolutions Mode (for both LCD and CRT)

Resolution	16 bits (High color)	32 bits (True color)
480x600	Yes	Yes
800x600	Yes	Yes
1024x768	Yes	Yes
1152x864	Yes	Yes
1280x1024	Yes	Yes
1400x1050 (SXGA+panel only)	Yes	Yes

Video Memory

Item	Specification
Fixed or Upgradeable	Fixed
Vendor	Intel
Memory size	Default 16M (Adjust via BIOS)
Interface	DDR

Parallel Port

Item	Specification
Parallel port controller	ICH4-M
Number of parallel port	1
Location	Rear side
Connector type	25-pin D-SUB
Parallel port function control	Enable/Disable/Auto (BIOS or operating system chooses configuration) by BIOS Setup Note: Depending on your operating system, disabling an unused device may help free system resources for other devices.
Supports ECP/EPP/Bi-directional/Output only (PS/2 compatible)	Yes (set by BIOS setup) Note: When Mode is selected as EPP mode, "3BCh" will not be available.
Optional ECP DMA channel (in BIOS Setup)	DMA channel 3
Optional parallel port I/O address (in BIOS Setup)	378h, 278h, 3BCH
Optional parallel port IRQ (in BIOS Setup)	IRQ7, IRQ5

USB Port

Item	Specification
Chipset	ICH4-M intergrated
USB Compliancy Level	2.0
OHCI	USB 2.0
Number of USB port	2
Location	Rear side
Serial port function control	Enable/Disable by BIOS Setup

IEEE 1394 Port

Item	Specification
Chipset	TI TSAB43AB22
InterfaceUSB Compliancy Level	IEEE 1394 1.0
Number of IEEE 1394 port	1
Location	Rear side
Connector type	IEEE 1394

PCMCIA Port

Item	Specification
PCMCIA controller	OZ 711EC1
Supports card type	Type-II
Number of slots	One type-II
Access location	Right panel
Supports ZV (Zoomed Video) port	No ZV support
Supports 32 bit CardBus	Yes (IRQ10)

System Board Major Chips

Item	Controller
Core logic	Intel Montara GM+ and ICH4-m
VGA	Montara GM+ intergrated (UMA)
LAN	Broad Com 5705
IEEE 1394	TI TSAB43AB22
USB 2.0	ICH4-M intergrated
Super I/O controller	PC 87392
MODEM	Intel Montara GM+ and ICH4-M
Blue tooth	CSR BC02/Agere Scorpio solution
Wireless 802.11 b	Intel Claxico
PCMCIA	OZ 711EC1
Audio	Intel ICH4-M intergrated/Audio Codec: Cirrus 4299XQ
Five-in-one card reader	OZ711EC1
Touchpad	M38857

Keyboard

Item	Specification
Keyboard controller	M38857
Keyboard vendor & model name	DARFON
Total number of keypads	84/85/88
Windows logo key	Yes
Internal & external keyboard work simultaneously	No Note: Internal and external keyboard can not work simultaneously by software specification.

Battery

Item	Specification
Vendor & model name	SANYO
Battery Type	Li-ion
Pack capacity	4400 Ah
Cell voltage	3.7V/cell
Number of battery cell	8
Package configuration	4 cells in series, 2 series in parallel
Package voltage	14.8V

LCD

Item	Specification
Vendor & model name	AU B141XG08 CHIME N141X9-L01
Mechanical Specifications	
LCD display area (diagonal, inch)	14.1
Display technology	TFT
Resolution	XGA (1024x768)
Supports colors	262K
Optical Specification	
Brightness control	keyboard hotkey
Contrast control	No
Typical White Luminance	200 (5 points average) 180 for CHIME
Contrast ratio	300 (Min.), 500 (Typ.) for CHIME
	250 (Min.), 300 (Typ.) for AU
Response time (msec)	TR: 6 (Typ.), 10 (Max.) TF: 17 (Typ.), 25 (Max.) for CHIME
	25 (Typ.) for AU
Electrical Specification	
Supply voltage for LCD display (V)	3.0 (Min.), 3.3 (Typ.), 3.6 (Max.)

LCD Inverter

Item	Specification
Vendor & model name	Ambit
Brightness conditions	Vadj=3.3V
Input voltage (V)	7 (Min.), 14 (Max.)
Input current (A)	0.6 (Min.)
Output voltage (V, rms)	650
Output current (mA, rms)	5.5~6.5
Output voltage frequency (k Hz)	40~60 Hz

AC Adaptor

Item	Specification
Model number	DELTA ADP-65DB 17V 70W (3 PIN)
AC input	90~264V, 47Hz to 63Hz
Output power	65W, 19V@3.42V

System Power Management

ACPI mode	Power Management
Mech. Off (G3)	All devices in the system are turned off completely.
Soft Off (G2/S5)	OS initiated shutdown. All devices in the system are turned off completely.
Working (G0/S0)	Individual devices such as the CPU and hard disk may be power managed in this state.
Suspend to RAM (S3)	CPU set power down VGA Suspend PCMCIA Suspend

Memory Address Map

Memory Address	Size	Function
00100000h-000F0000h	512 KB	System BIOS
000CFFFFh-000C0000h		VGA BIOS
00009FFFFh-00000000h	640KB	Conventional memory

I/O Address Map

I/O Address	Function
0000-001F, 0081-008F, 0090-0091, 0093-009F, 00C0-00DF, 040B, 04D6	DMA controller
0D00-FFFF	PCI bus
0020-0021, 0024-0025, 0028-0029, 002C-002D, 0030-0031, 0034-0035, 0038-0039, 003C-003D, 00A0-00A1, 00A4-00A5, 00A8-00A9, 00AC-00AD, 00B0-00B1, 00B4-00B5, 00B8-00B9, 00BC-00BD, 00C0-00DF	Programmable interrupt controller
0040-0043, 0050-0053	System timer
0060, 0064	Acer Tablet PC Keyboard Buttons (101/102 key)

I/O Address Map

I/O Address	Function
002E-002F, 004E-004F, 0061, 0063, 0065, 0067, 0080, 0092, 00B2-00B3, 0200-020F, 0600-060F, 0700-070F, 0800-080F, 1000-107F, 1180-11BF,	Main board resources
0066	Microsoft ACPI-Compliant Embedded Controller
0070-0077	System CMOS/real time clock
00F0	Numeric data processor
0170-0177, 0376	Secondary IDE Channel
01F0-01F7, 03F6	Primary IDE Channel
0274-0277, 0279, 0A79,	ISAPNP Read Data Port
0378-037F, 0778-077B	Printer Port (LPT1)
03B0-03BB, 03C0-03DF, 1800-1807,	Intel (R) 82852/82855 GM/GME Graphics Controller
06F8-06FF	Wacom Serial Pen Tablet
1810-181F	Intel (R) 82801DBM Ultra ATA Storage Controller-24CA
1820-183F	Intel (R) 82801DB/DBM USB Universal Host Controller-24C2
1840-185F	Intel (R) 82801DB/DBM USB Universal Host Controller-24C4
1860-187F	Intel (R) 82801DB/DBM USB Universal Host Controller-24C7
1880-189F	Intel (R) 82801DB/DBM SMBus Controller-24C3
18C0-18FF, 1C00-1CFF	Cystal WDM AC97 Driver for ICH4
2000-207F, 2400-24FF	Agere System AC97 Modem
FB00-FBFE	O2Micro SmartCardBus Reader
FC00-FCFF, FD00-FDFF, FE00-FEFF, FF00-FFFF	Generic Cardbus Controller

IRQ Assignment Map

Interrupt Channel	System timer
IRQ00	System time
IRQ01	Keyboard
IRQ02	Programmable Interrupt Controller
IRQ03	FIR
IRQ04	Communications Port (COM1)
IRQ05	Free
IRQ06	Wacom Serial Pen Tablet/Standard Floppy Disk Controller
IRQ07	ECP Printer Port (LPT1)/O2Micro Smart CardBus Reader
IRQ08	Real Time Clock
IRQ09	SCI
IRQ10	PCI Device (LAN, Audio, Modem...)
IRQ11	USB 1.1, USB 2.0, VGA
IRQ12	PS/2 Mouse
IRQ13	Numeric data processor
IRQ14	1st EIDE device (hard disk)
IRQ15	2nd EIDE device (optical drive)

DMA Channel Assignment

Item	Specification
00	PnP Audio System CODEC
01	Free
02	Standard Floppy Disk Controller
03	ECP Printer Port

System Utilities

BIOS Setup Utility

The BIOS Setup Utility is a hardware configuration program built into your computer's BIOS (Basic Input/Output System).

Your computer is already properly configured and optimized, and you do not need to run this utility. However, if you encounter configuration problems, you may need to run Setup. Please also refer to Chapter 4 Troubleshooting when problem arises.

To activate the BIOS Utility, press **F2** during POST (when "Press <F2> to enter Setup" message is prompted on the bottom of screen).

Press **F2** to enter setup. Press <F12> during POST to enter multi-boot menu. In this menu, user can change boot device without entering BIOS SETUP Utility.

PhoenixBIOS Setup Utility	
Information	Main Advanced Security Boot Exit
CPU Type:	Intel (R) Pentium (R) M processor
CPU Speed:	1500 MHz
Floppy Drive:	None
IDE1 Model Name:	None
IDE1 Serial Number:	None
IDE2 Model Number:	QSI CD-RW/DVD-ROM SBW242U- (SM)
IDE2 Serial Number:	None
System BIOS Ver:	Canary V0.20
VGA BIOS Ver:	2991
KBC Ver:	02.13.29
Serial Number:	xxxxxxxxxxxxxxxxxxxxxx
Asset Tag Number:	N/A
Product Name:	TravelMate C300
Manufacturer Name:	Acer
UUID:	xxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx

F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit

Navigating the BIOS Utility

There are six menu options: Information, Main, Advanced, Security, Boot, and Exit.

Follow these instructions:

- ☐ To choose a menu, use the cursor left/right keys (← →).
- ☐ To choose a parameter, use the cursor up/down keys (↑ ↓).
- ☐ To change the value of a parameter, press F5 or F6.
- ☐ A plus sign (+) indicates the item has sub-items. Press ENTER to expand this item.
- ☐ Press ESC while you are in any of the menu options to go to the Exit menu.
- ☐ In any menu, you can load default settings by pressing F9. You can also press F10 to save any changes made and exit the BIOS Setup Utility.

NOTE: You can change the value of a parameter if it is enclosed in square brackets. Navigation keys for a particular menu are shown on the bottom of the screen. Help for parameters are found in the Item Specific Help part of the screen. Read this carefully when making changes to parameter values.

This menu provides you the information of the system.

Information

PhoenixBIOS Setup Utility	
Information	Main Advanced Security Boot Exit
CPU Type:	Intel (R) Pentium (R) M processor
CPU Speed:	1500 MHz
Floppy Drive:	None
IDE1 Model Name:	None
IDE1 Serial Number:	None
IDE2 Model Number:	QSI CD-RW/DVD-ROM SBW242U- (SM)
IDE2 Serial Number:	None
System BIOS Ver:	Canary V0.20
VGA BIOS Ver:	2991
KBC Ver:	02.13.29
Serial Number:	xxxxxxxxxxxxxxxxxxxxxx
Asset Tag Number:	N/A
Product Name:	TravelMate C300
Manufacturer Name:	Acer
UUID:	xxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx

F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit

Parameter	Description
IDE1 Model Name	Shows the Model name of HDD installed on Primary IDE master. The hard disk model name is automatically detected by the system. If there is no hard disk present or unknown type, " None " should be shown on this field.
IDE1 Serial #	This field display the Serial number of HDD installed on Primary IDE master. If no Hard disk or other devices are installed on Primary IDE master, then it will display a blank line.
IDE2 Model Name	This item will show the Model name of device installed on Secondary IDE master. The hard disk or CD-ROM model name is automatically detected by the system. If there is no hard disk or CD-ROM present or unknown type, " None " should be shown on this field.
IDE2 Serial #	This item will show the Serial number of HDD installed on Secondary IDE master. If no hard disk or other devices are installed on Primary IDE master, then it will display a blank line.
Serial Number	This field displays the serial number of this unit.
UUID Number	UUID=32bytes

Main

The Main screen displays a summary of your computer hardware information, and also includes basic setup parameters. It allows the user to specify standard IBM PC AT system parameters.

PhoenixBIOS Setup Utility																											
Information	Main	Advanced	Security	Boot	Exit																						
<table><tbody><tr><td>System Time:</td><td>[00:00:00]</td></tr><tr><td>System Date:</td><td>[10/11/2003]</td></tr><tr><td>System Memory:</td><td>640 KB</td></tr><tr><td>Extended Memory:</td><td>238 MB</td></tr><tr><td>VGA Memory:</td><td>16MB</td></tr><tr><td>Quiet Boot:</td><td>[Enabled]</td></tr><tr><td>Power on display:</td><td>[Auto]</td></tr><tr><td>LCD Auto Dim:</td><td>[Enabled]</td></tr><tr><td>PXE Boot From LAN</td><td>[Disabled]</td></tr><tr><td>F12 Boot Menu</td><td>[Enabled]</td></tr></tbody></table>				System Time:	[00:00:00]	System Date:	[10/11/2003]	System Memory:	640 KB	Extended Memory:	238 MB	VGA Memory:	16MB	Quiet Boot:	[Enabled]	Power on display:	[Auto]	LCD Auto Dim:	[Enabled]	PXE Boot From LAN	[Disabled]	F12 Boot Menu	[Enabled]	<table><thead><tr><th>Item Specific Help</th></tr></thead><tbody><tr><td><Tab>, <Shift-Tab>, or <Enter> selects field.</td></tr></tbody></table>		Item Specific Help	<Tab>, <Shift-Tab>, or <Enter> selects field.
System Time:	[00:00:00]																										
System Date:	[10/11/2003]																										
System Memory:	640 KB																										
Extended Memory:	238 MB																										
VGA Memory:	16MB																										
Quiet Boot:	[Enabled]																										
Power on display:	[Auto]																										
LCD Auto Dim:	[Enabled]																										
PXE Boot From LAN	[Disabled]																										
F12 Boot Menu	[Enabled]																										
Item Specific Help																											
<Tab>, <Shift-Tab>, or <Enter> selects field.																											

F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←→ Select Menu	Enter Select ► Sub-Menu	F10 Save and Exit

NOTE: The screen above is for reference only. Actual values may differ.

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Format/Option
System Time	Sets the system time.	Format: HH:MM:SS (hour:minute:second) System Time
System Date	Sets the system date.	Format MM/DD/YYYY (month/day/year) System Date
System Memory	This field reports the memory size of the system. Memory size is fixed to 640MB	
Extended Memory	This field reports the memory size of the extended memory in the system. Extended Memory size=Total memory size-1MB	
VGA Memory	Shows the VGA memory size. The default value is set to 16MB	Option: 16 /32MB
Quiet Boot	Determines if Customer Logo will be displayed or not; shows Summary Screen is disabled or enabled. Enabled: Customer Logo is displayed, and Summary Screen is disabled. Disabled: Customer Logo is not displayed, and Summary Screen is enabled.	Option: Enabled or Disabled
Power on display	Auto: During power process, the system will detect if any display device is connected on external video port. If any external display device is connected, the power on display will be in CRT (or projector) only mode. Otherwise it will be in LCD only mode. Both: Simultaneously enable both the integrated LCD screen and the system's external video port (for an external CRT or projector).	Option: Auto or Both
LCD Auto Dim	Determines if the system will automatically dim the LCD brightness in order to save power when AC is not present.	Option: Enabled or Disabled
PXE (Preboot Execution Environment) Boot From LAN	Indicates that whether the notebook can boot from LAN or not.	Option: Enabled or Disabled
F12 Boot Menu	Determines if the OEM POST screen will have "Press <F12> Change Boot Device" or not during user's quite boot.	Option: Enabled or Disabled

NOTE: The sub-items under each device will not be shown if the device control is set to disable or auto. This is because the user is not allowed to control the settings in these cases.

Advanced

The Advanced menu screen contains parameters involving your hardware devices. It also provides advanced settings of the system.

PhoenixBIOS Setup Utility		
Information	Main	Advanced
Internal Touchpad :		[Both]
Infrared/Serial port:		[Disabled]
Parallel port:		[Enabled]
Mode:		[Bi-direct]
Base I/O address:		[378]
Interrupt:		[IRQ 7]
Legacy USB Support:		[Disabled]
System Boot From Hard Disk Recovery:		[Disabled]
		Item Specific Help
		Configure Infrared Port using options:
		[Auto]
		Disable the touchpad if an external PS/2 mouse is connected. Otherwise enable the touchpad
		[Both]
		The touchpad is always enabled. Any external PS/2 mouse connected will be enabled at the same time.

F1 Help	↑ ↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	← → Select Menu	Enter Select ► Sub-Menu	F10 Save and Exit

The table below describes the parameters in the screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Options
Infrared Port (FIR)	Enables, disables or auto detects the infrared port.	Enabled /Disabled/Auto
Base I/O address/IRQ	Sets I/O address of the infrared port.	3F8h/IRQ4; 2F8h/IRQ3; 3E8h/IRQ4; 2E8h/IRQ3
DMA	Sets a DMA channel of the infrared port.	DMA 1/DMA 3
Parallel Port	Enables, disables or auto detects the parallel port.	Enabled /Disabled/Auto
Mode	Sets the operation mode of the parallel port.	ECP , EPP, Output only or Bi-directional
Base I/O address	Sets the I/O address of the parallel port. This parameter is enabled only if Mode is set to ECP or Bi-directional. This parameter is enabled only if Mode is set to ECP.	378 /278/3BC
Interrupt	Sets the interrupt request of the parallel port.	IRQ7 /IRQ5

Parameter	Description	Options
DMA channel	Sets a DMA channel for the printer to operate in ECP mode. This parameter is enabled only if Mode is set to ECP.	DMA3/DMA1
Legacy USB Support	Enables or disables USB port under DOS mode.	Disabled/Enabled

Security

The Security screen contains parameters that help safeguard and protect your computer from unauthorized use.

PhoenixBIOS Setup Utility					
Information	Main	Advanced	Security	Boot	Exit
User Password is Clear Supervisor Password is Clear Set User Password [Enter] Set Supervisor Password [Enter] Password on boot: [Enabled]				Item Specific Help	
				Supervisor Password controls accesses of the whole setup utility. It can be used to boot up when Password on boot is enabled.	
F1 Help ↑ ↓ Select Item Esc Exit ← → Select Menu F5/F6 Change Values Enter Select ▶ Sub-Menu F9 Setup Defaults F10 Save and Exit					

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Option
User Password is	Shows the setting of the uer password.	Clear or Set
Supervisor Password is	Shows the setting of the Supervisor password	Clear or Set
Set User Password	Press Enter to set the user password. When set, this password protects the BIOS Setup Utility from unauthorized access.	
Set Supervisor Password	Press Enter to set the supervisor password. When set, this password protects the BIOS Setup Utility from unauthorized access.	
Password on Boot	Defines whether a password is required or not while the events defined in this group happened. The following sub-options are all requires the Supervisor password for changes and should be grayed out if the user password was used to enter setup.	Disabled or Enabled

NOTE: When you are prompted to enter a password, you have three tries before the system halts. Don't forget your password. If you forget your password, you may have to return your notebook computer to your dealer to reset it.

Setting a Password

Follow these steps as you set the user or the supervisor password:

1. Use the  and  keys to highlight the Set Supervisor Password parameter and press the  key. The Set Supervisor Password box appears:

Set Supervisor Password	
Enter New Password	[]
Confirm New Password	[]

2. Type a password in the “Enter New Password” field. The password length can not exceeds 8 alphanumeric characters (A-Z, a-z, 0-9, not case sensitive). Retype the password in the “Confirm New Password” field.

IMPORTANT:Be very careful when typing your password because the characters do not appear on the screen.

3. Press  .
After setting the password, the computer sets the User Password parameter to “Set”.
4. If desired, you can opt to enable the Password on boot parameter.
5. When you are done, press  to save the changes and exit the BIOS Setup Utility.

Removing a Password

Follow these steps:

1. Use the  and  keys to highlight the Set Supervisor Password parameter and press the  key. The Set Password box appears:

Set Supervisor Password	
Enter current password	[]
Enter New Password	[]
Confirm New Password	[]

2. Type the current password in the Enter Current Password field and press  .
3. Press  twice **without** typing anything in the Enter New Password and Confirm New Password fields. The computer then sets the Supervisor Password parameter to “Clear”.
4. When you have changed the settings, press  to save the changes and exit the BIOS Setup Utility.

Changing a Password

1. Use the  and  keys to highlight the Set Supervisor Password parameter and press the  key. The Set Password box appears:

Set Supervisor Password		
Enter current password	[	]
Enter New Password	[	]
Confirm New Password	[	]

2. Type the current password in the Enter Current Password field and press **ENTER**.
3. Type a password in the Enter New Password field. Retype the password in the Confirm New Password field.
4. Press **ENTER**. After setting the password, the computer sets the User Password parameter to "Set".
5. If desired, you can enable the Password on boot parameter.
6. When you are done, press **F10** to save the changes and exit the BIOS Setup Utility.

If the verification is OK, the screen will display as following.

Setup Notice
Changes have been saved.
[continue]

The password setting is complete after the user presses **F10**.

If the current password entered does not match the actual current password, the screen will show you the Setup Warning.

Setup Warning
Invalid password
Re-enter Password
[continue]

If the new password and confirm new password strings do not match, the screen will display the following message.

Setup Warning
Password do not match
Re-enter Password

Boot

This menu allows the user to decide the order of boot devices to load the operating system. Bootable devices includes the distette drive in module bay, the onboard hard disk drive and the CD-ROM in module bay.

PhoenixBIOS Setup Utility					
Information	Main	Advanced	Security	Boot	Exit
Hard Drive Removable Device CD-ROM Drive				Item Specific Help	
				Keys used to view or configure devices: <Enter> expnads or Collapses Devices with a + or - <Ctrl+Enter> expnads all <Shift + 1> enables or disables a device. <+> and <-> moves the device up or down. <n> May move removable device between Hard Disk or Removable Disk. <d> Remove a device that is not installed.	
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults		
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit		

Exit

The Exit screen contains parameters that help safeguard and protect your computer from unauthorized use.

PhoenixBIOS Setup Utility

InformationMainAdvancedSecurityBootExit

Exit Saving Changes

Exit Discarding Changes

Load Setup Defaults

Discard Changes

Save Changes

Item Specific Help

Exit System Setup and save your changes to CMOS.

F1 Help

↑↓ Select Item

F5/F6 Change Values

F9 Setup Defaults

Esc Exit

←→ Select Menu

Enter Select ▶ Sub-Menu

F10 Save and Exit

The table below describes the parameters in this screen.

Parameter	Description
Exit Saving Changes	Exit System Setup and save your changes to CMOS.
Exit Discarding Changes	Exit utility without saving setup data to CMOS.
Load Setup Default	Load default values for all SETUP item.
Discard Changes	Load previous values from CMOS for all SETUP items.
Save Changes	Save Setup Data to CMOS.

BIOS Flash Utility

The BIOS flash memory update is required for the following conditions:

- ☐ New versions of system programs
- ☐ New features or options
- ☐ Restore a BIOS when it becomes corrupted.

Use the Phlash utility to update the system BIOS flash ROM.

NOTE: If you do not have a crisis recovery diskette at hand, then you should create a **Crisis Recovery Diskette** before you use the Phlash utility.

NOTE: Do not install memory-related drivers (XMS, EMS, DPMI) when you use the Phlash.

NOTE: Please use the AC adaptor power supply when you run the Phlash utility. If the battery pack does not contain enough power to finish BIOS flash, you may not boot the system because the BIOS is not completely loaded.

Follow the steps below to run the Phlash.

1. Prepare a bootable diskette.
2. Copy the Phlash utilities to the bootable diskette.
3. Then boot the system from the bootable diskette. The Phlash utility has auto-execution function.

Machine Disassembly and Replacement

This chapter contains step-by-step procedures on how to disassemble the notebook computer for maintenance and troubleshooting.

To disassemble the computer, you need the following tools:

- ☐ Wrist grounding strap and conductive mat for preventing electrostatic discharge
- ☐ Philips screw drivers
- ☐ Flat head screwdriver

NOTE: The screws for the different components vary in size. During the disassembly process, group the screws with the corresponding components to avoid mismatch when putting back the components. When you remove the middle cover, please be careful not to scrape the cover.

General Information

Before You Begin

Before proceeding with the disassembly procedure, make sure that you do the following:


1. Turn off the power to the system and all peripherals.
2. Unplug the AC adapter and all power and signal cables from the system.
3. Remove the battery pack.

NOTE: TravelMate C300 series product uses tape to fasten the antenna/cable, you may need to tear the tape before you remove the antenna.

NOTE: The disassembly is based on an engineering sample, therefore, the number of the screws may differ from what you would actually get. ct the wireless antennas before you detach the entire LCD module.

Disassembly Procedure Flowchart

The flowchart on the succeeding page gives you a graphic representation on the entire disassembly sequence and instructs you on the components that need to be removed during servicing. For example, if you want to remove the system board, you must first remove the then disassemble the inside assembly frame in that order.

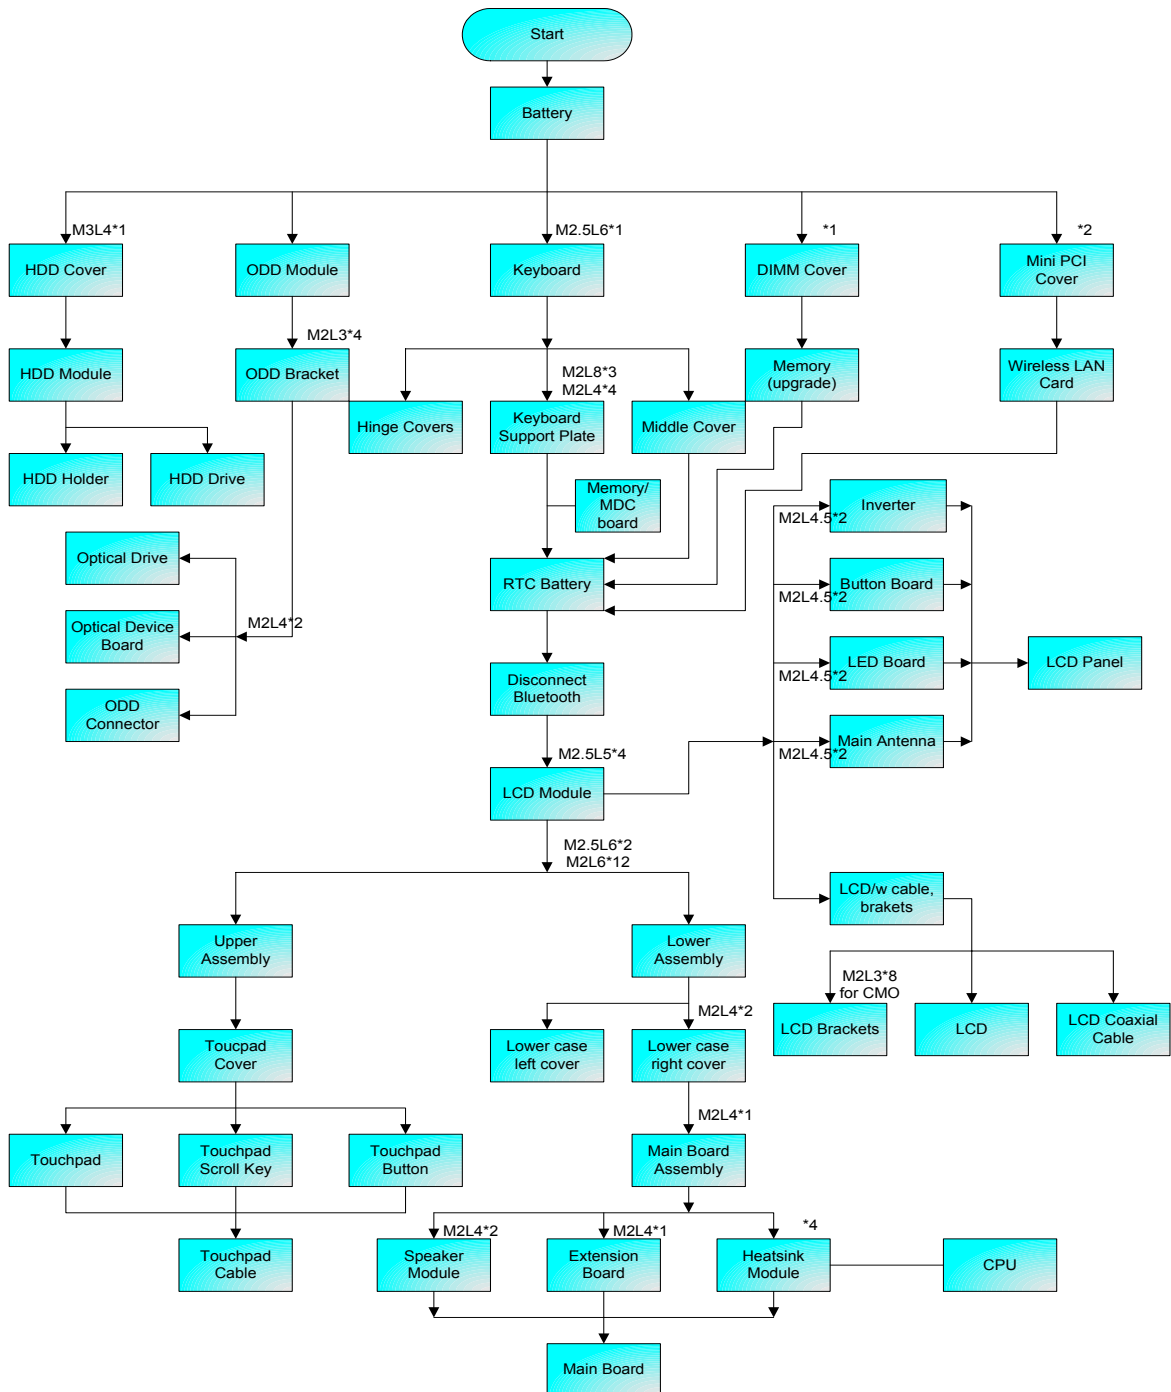

Removing the Battery Pack


1. Release the battery lock.
2. Slide the battery latch then remove the battery.



Removing the HDD Module/Optical Module/Wireless LAN Card/Keyboard and LCD Module

Removing the HDD Module

1. Remove the two screws holding the HDD cover.
2. Pull out the hard disk drive then detach it from the main unit.

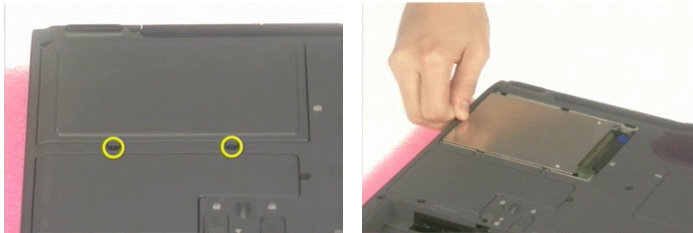

Removing the Optical Disc Drive Module

1. Slide the ODD latch then remove the ODD module from the main unit carefully.






Removing the Wireless LAN Card

1. Remove the two screws that fasten the Mini PCI cover.
2. Disconnect the main and the auxiliary antenna.
3. Pop out the wireless LAN card then remove it.



Removing the Keyboard

1. Remove the screw holding the keyboard.
2. Release the keyboard locks.
3. Turn the keyboard over and disconnect the keyboard cable then remove the keyboard.

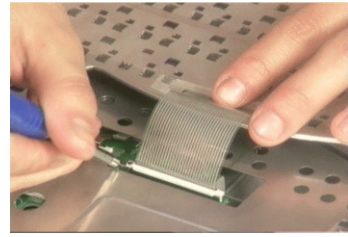
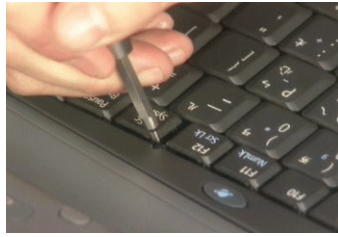
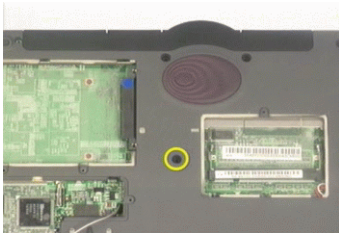


Removing the LCD Module

1. See "Removing the Keyboard" on page 53.
2. Turn the LCD module clockwise, then remove the hinge cap (back).
3. Turn the LCD module clockwise and press the LCD down, then detach the hinge cap (front).
4. Detach the middle cover carefully.





5. Remove the three screws holding the keyboard support plate then remove the plate.
6. Remove the screw fastening the modem board.
7. Disconnect bluetooth antenna.

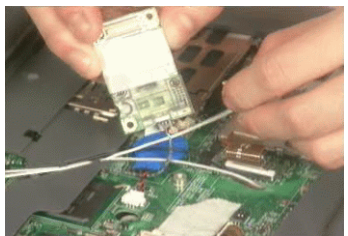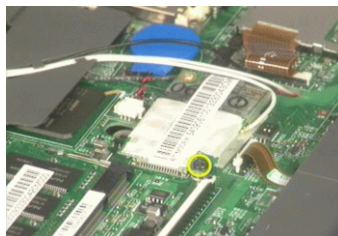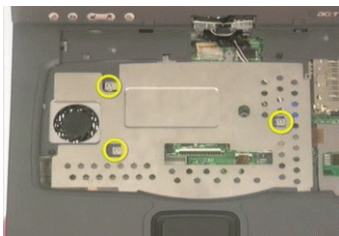


NOTE: This is an engineering sample. The number of screws holding the keyboard support plate maybe vary from the mass production units.

8. Disconnect the modem board cable then remove the modem board.
9. Pull out the wireless antenna from the hole on the main board.
10. Remove the four screws fastening the LCD module; two on the front and another two on the back.

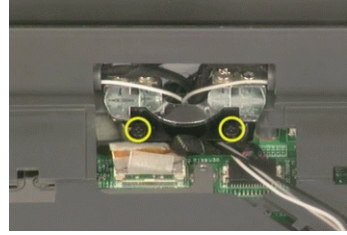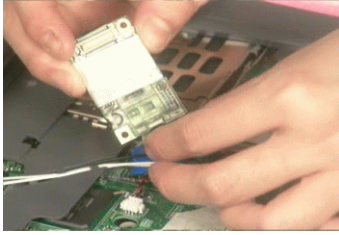


- 11.** Place the LCD module as the picture shows carefully.
- 12.** Disconnect the LCD coaxial cable and inverter cable respectively.

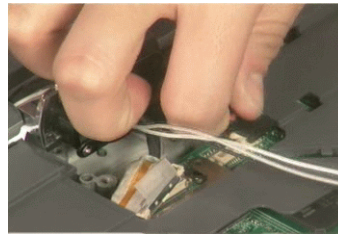


Disassembling the Main Unit

Separate the main unit into the logic upper and the logic lower assembly

1. Disconnect the RTC battery then remove it.
2. Pop out the memory then remove it from the DIMM socket.
3. Remove the 14 screws holding the upper case assembly and the lower case assembly.

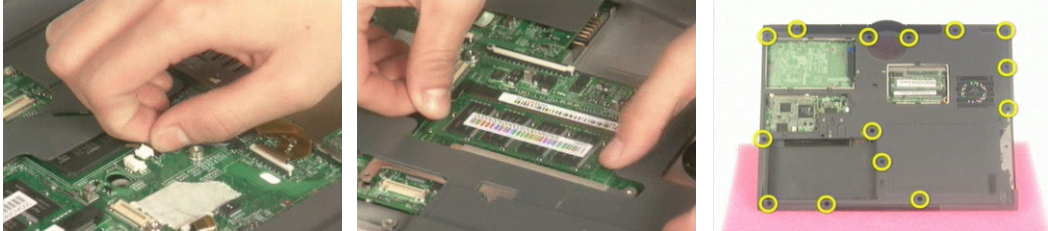


4. Remove the screw holding the upper case assembly and lower case assembly.
5. Disconnect touchpad cable connecting to the main board.
6. Separate the main unit into the upper case assembly and the lower case assembly.

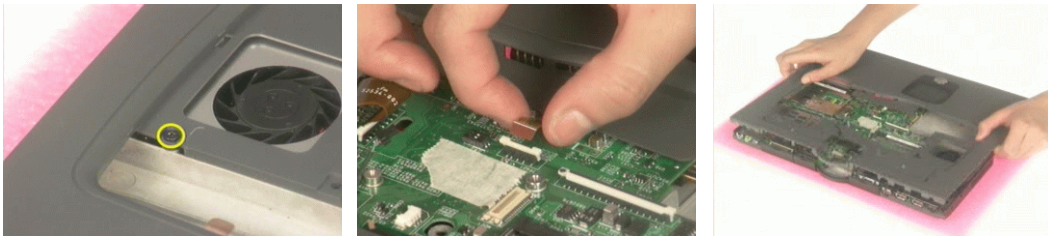


Disassembling the logic upper assembly

1. Disconnect the touchpad cable.
2. Tear off the touchpad cable.

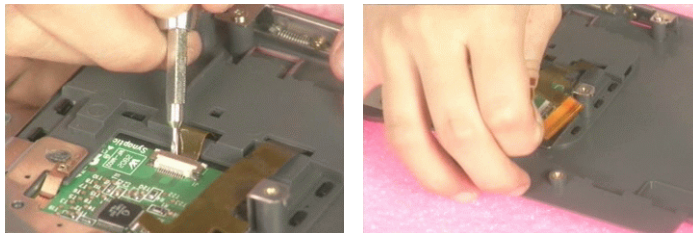

3. Release the touchpad cover latches.
4. Detach the touchpad holder.

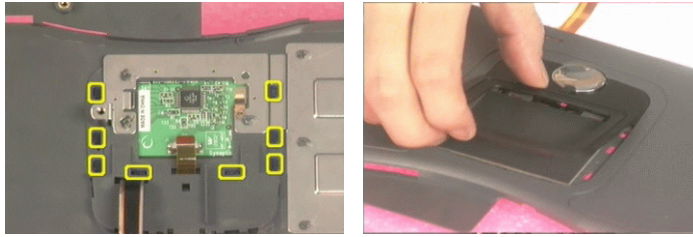


5. Remove the touchpad.
6. Detach the touchpad button.
7. Then detach touchpad scroll key.



Disassembling the logic lower assembly

1. Remove the lower case left cover.
2. Remove the screw holding the lower case right cover.
3. Then remove another screw fastening the lower case right cover.

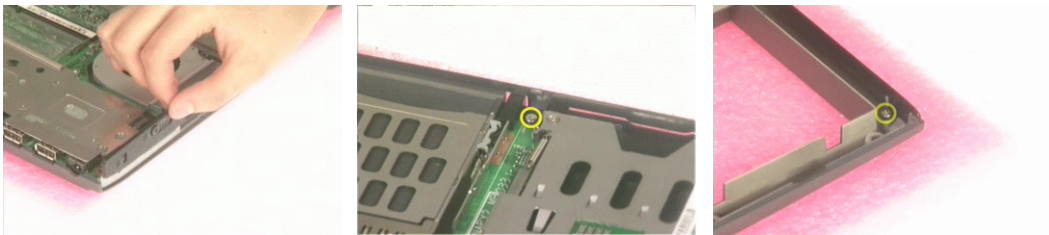


4. Remove the lower case right cover.
5. Disconnect the speaker cable.
6. Remove the screw that secure the main board to the lower case.




7. Take out the main board from the lower case.
8. Remove the two screws that fasten the speaker module.


-
9. Disconnect the fan cable.

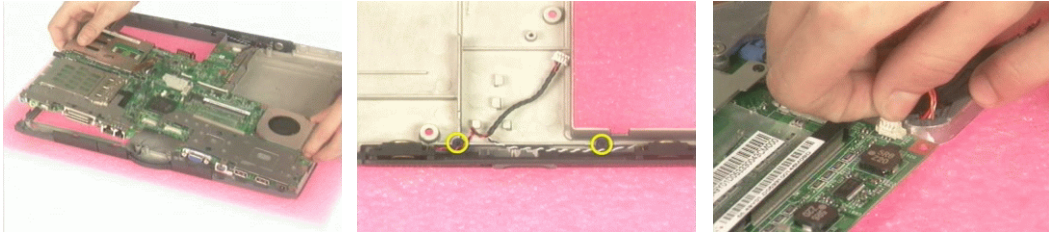

10. Remove the four screws that fasten the heatsink module then remove the heatsink module.
11. Release the CPU lock with a flat-head screwdriver then remove the CPU from the socket.
12. Take the main board off the thermal plate.

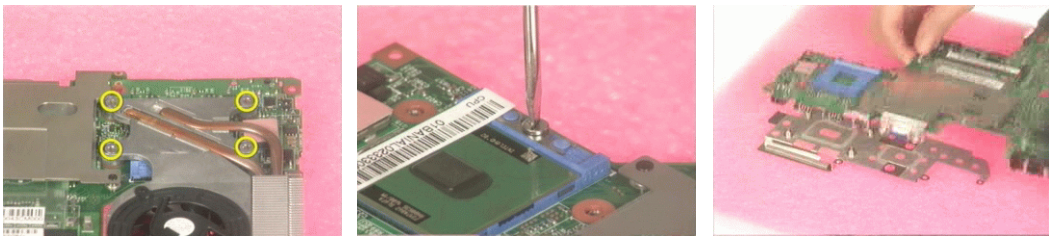

13. Remove the screw that secures the extension board.
14. Disconnect the card reader cable.
15. Remove the three screws fastening the card reader slot then detach the card reader slot.

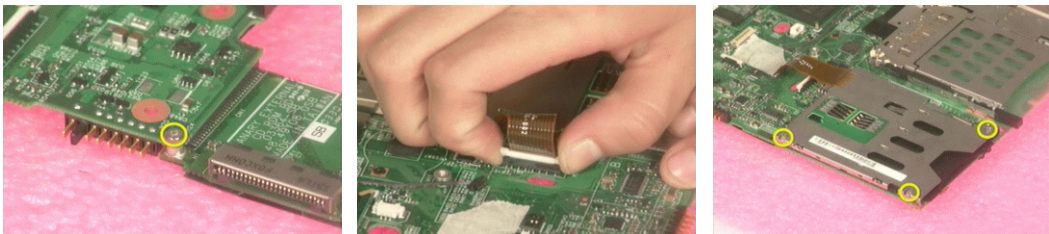

Disassembling the LCD Module

1. Remove the four LCD screw caps.
2. Then remove the four screws that secure the LCD bezel.
3. Detach the LCD bezel carefully.





4. Tear off the tape fastening the bluetooth antenna.
5. Then remove the bluetooth antenna from the LCD bezel.
6. Then disconnect the LCD inverter cable.






7. Remove the auxiliary wireless antenna.
8. Pull out the main wireless antenna, LCD coaxial cable and inverter cable.
9. Remove the two screws holding the inverter.





10. Disconnect the inverter cable then remove the inverter.
11. Remove the four screws that secure the LCD to the LCD panel; two on each side.
12. Take out the LCD from the LCD panel.

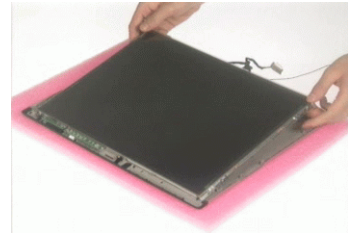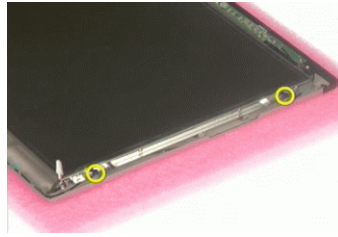



13. Remove the two screws holding the LED board.
14. Disconnect the LED board cable.
15. Remove the two screws that secure the button board.

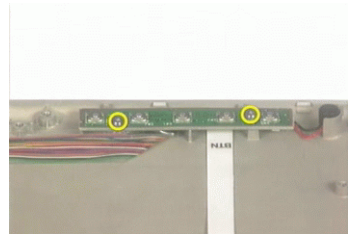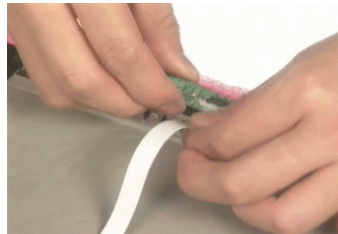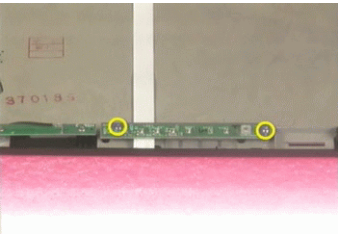


16. Take out the microphone, detach the button board assembly.
17. Disconnect the microphone, the LCD coaxial cable and the button board to LED board cable.
18. Tear off the tape fastening the main wireless antenna.

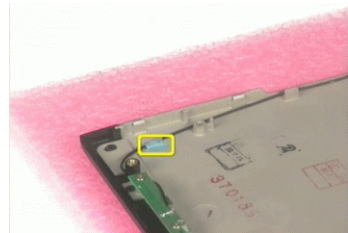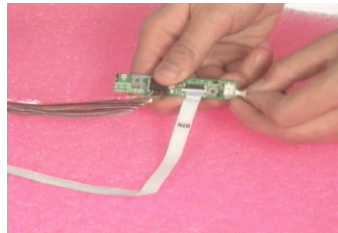

19. Remove the two screws holding the main wireless antenna.
20. Remove the main wireless antenna from the LCD panel.
21. Disconnect the LCD coaxial cable and detach the cable from the LCD.

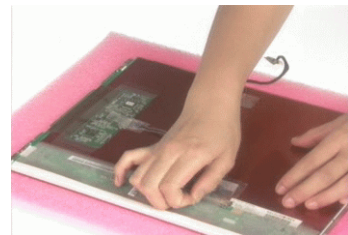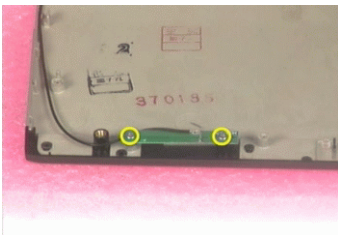


22. Remove the eight screws fastening the LCD brackets; four on each side.
23. Remove the right and the left LCD brackets.

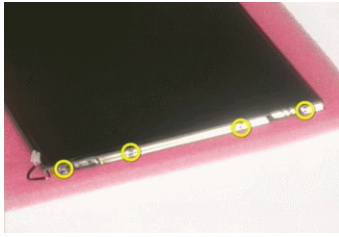

Disassembling the External Modules

Disassembling and Reassembling the HDD Module

1. Remove the screw holding the HDD holder.
2. Take out the hard disc drive from the HDD holder carefully.

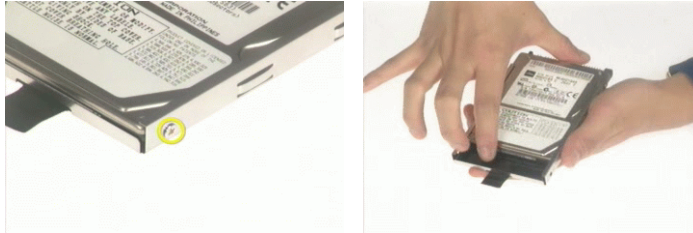


3. Place the hard disc drive back to the HDD holder.
4. Secure the hard disc drive to the HDD holder with the screw as shown.




Disassembling and Reassembling the Optical Disc Drive Module


1. Remove the two screws holding the optical bracket.
2. Remove another two screws as shown.
3. Then remove the optical bracket.

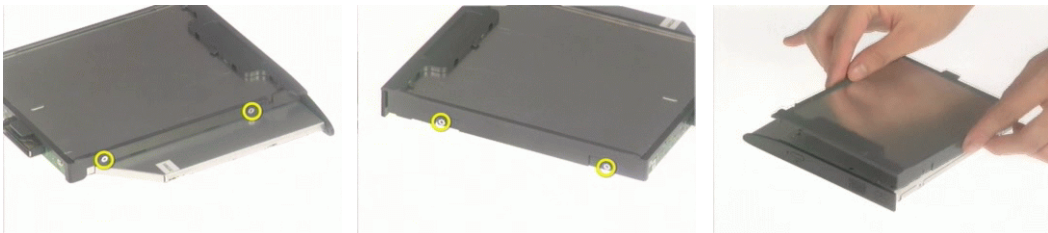


4. Remove the two screws holding the optical board.
5. Remove the optical device board.
6. Reattach the optical device board to the optical disc drive.

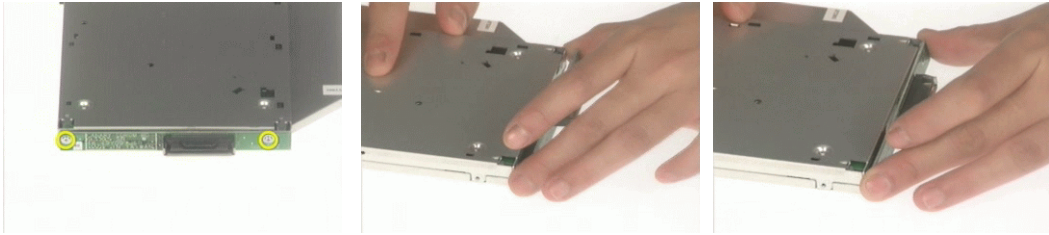

7. Secure the optical device board with two screws as shown.
8. Attach the optical bracket back to the ODD.

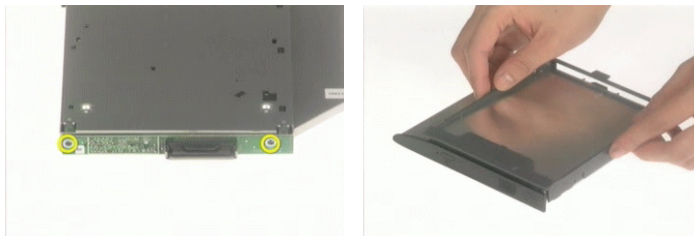

9. Secure the optical bracket with the two screws as shown.
10. Then fasten the optical bracket with another two screws as shown.

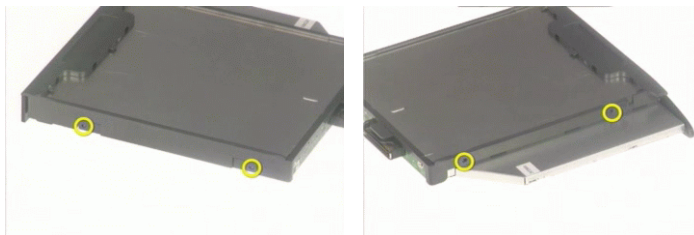

Troubleshooting

Use the following procedure as a guide for computer problems.

NOTE: The diagnostic tests are intended to test this model. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.

1. Duplicate symptom and obtain the failing symptoms in as much detail as possible.
2. Distinguish symptom. Verify the symptoms by attempting to re-create the failure by running the diagnostic test or by repeating the same operation.
3. Disassemble and assemble the unit without any power sources.
4. If any problem occurs, you can perform visual inspection before you follow this chapter's instructions. You can check the following:
 - power cords are properly connected and secured;
 - there are no obvious shorts or opens;
 - there are no obviously burned or heated components;
 - all components appear normal.
5. Use the following table with the verified symptom to determine which page to go to.

Symptoms (Verified)	Go To
Power failure. (The power indicator does not go on or stay on.)	"Power System Check" on page 67.
POST does not complete. No beep or error codes are indicated.	"Power-On Self-Test (POST) Error Message" on page 69 "Undetermined Problems" on page 77
POST detects an error and displayed messages on screen.	"Error Message List" on page 70
Other symptoms (i.e. LCD display problems or others).	"Power-On Self-Test (POST) Error Message" on page 69
Symptoms cannot be re-created (intermittent problems).	Use the customer-reported symptoms and go to "Power-On Self-Test (POST) Error Message" on page 69 "Intermittent Problems" on page 76 "Undetermined Problems" on page 77

System Check Procedures

External Diskette Drive Check

Do the following to isolate the problem to a controller, driver, or diskette. A write-enabled, diagnostic diskette is required.

NOTE: Make sure that the diskette does not have more than one label attached to it. Multiple labels can cause damage to the drive or cause the drive to fail.

Do the following to select the test device.

1. Boot from the diagnostics diskette and start the diagnostics program.
2. See if FDD Test is passed as the program runs to FDD Test.
3. Follow the instructions in the message window.

If an error occurs with the internal diskette drive, reconnect the diskette connector on the system board.

If the error still remains:

1. Reconnect the external diskette drive/DVD-ROM module.
2. Replace the external diskette drive/CD-ROM module.
3. Replace the main board.

External CD-ROM Drive Check

Do the following to isolate the problem to a controller, drive, or CD-ROM. Make sure that the CD-ROM does not have any label attached to it. The label can cause damage to the drive or can cause the drive to fail.

Do the following to select the test device:

1. Boot from the diagnostics diskette and start the diagnostics program.
2. See if CD-ROM Test is passed when the program runs to CD-ROM Test.
3. Follow the instructions in the message window.

If an error occurs, reconnect the connector on the System board. If the error still remains:

1. Reconnect the external diskette drive/CD-ROM module.
2. Replace the external diskette drive/CD-ROM module.
3. Replace the main board.

Keyboard or Auxiliary Input Device Check

Remove the external keyboard if the internal keyboard is to be tested.

If the internal keyboard does not work or an unexpected character appears, make sure that the flexible cable extending from the keyboard is correctly seated in the connector on the system board.

If the keyboard cable connection is correct, run the Keyboard Test.

If the tests detect a keyboard problem, do the following one at a time to correct the problem. Do not replace a non-defective FRU:

1. Reconnect the keyboard cables.
2. Replace the keyboard.
3. Replace the main board.

The following auxiliary input devices are supported by this computer:

- ☐ Numeric keypad
- ☐ External keyboard

If any of these devices do not work, reconnect the cable connector and repeat the failing operation.

Memory check

Memory errors might stop system operations, show error messages on the screen, or hang the system.

1. Boot from the diagnostics diskette and start the doagmpstotics program (please refer to main board).
2. Go to the diagnostic memory in the test items.
3. Press F2 in the test items.
4. Follow the instructions in the message window.

NOTE: Make sure that the DIMM is fully installed into the connector. A loose connection can cause an error.

Power System Check

To verify the symptom of the problem, power on the computer using each of the following power sources:

1. Remove the battery pack.
2. Connect the power adapter and check that power is supplied.
3. Disconnect the power adapter and install the charged battery pack; then check that power is supplied by the battery pack.

If you suspect a power problem, see the appropriate power supply check in the following list:

- ☐ "Check the Battery Pack" on page 68

Check the Battery Pack

To check the battery pack, do the following:

From Software:

1. Check out the Power Management in control Panel
2. In Power Meter, confirm that if the parameters shown in the screen for Current Power Source and Total Battery Power Remaining are correct.
3. Repeat the steps 1 and 2, for both battery and adapter.
4. This helps you identify first the problem is on recharging or discharging.

From Hardware:

1. Power off the computer.
2. Remove the battery pack and measure the voltage between battery terminals 1(+) and 6(ground). See the following figure
3. If the voltage is still less than 7.5 Vdc after recharging, replace the battery.

To check the battery charge operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

If the battery status indicator does not light up, remove the battery pack and let it return to room temperature. Re-install the battery pack.

If the charge indicator still does not light up, replace the battery pack. If the charge indicator still does not light up, replace the DC/DC charger board.

Touchpad check

If the touchpad doesn't work, do the following actions one at a time to correct the problem. Do not replace a non-defective FRU:

1. After rebooting, run Tracking Pad PS2 Mode Driver. For example, run Syn touch driver.
2. Run utility with the PS/2 mouse function and check if the mouse is working.
3. If the the PS/2 mouse does not work, then check if the main board to switch board FPC is connected O.K.
4. If the main board to switch board FPC is connected well, then check if the FCC on touch pad PCB connects properly.
5. If the FFC on touch pad PCB connects properly, then check if LS851 JP1 Pin6=5V are pulse. If yes, then replace switch board. If no, then go to next step.
6. Replace touch pad PCB.
7. If the touch pad still does not work, then replace FPC on Track Pad PCB.

After you use the touchpad, the pointer drifts on the screen for a short time. This self-acting pointer movement can occur when a slight, steady pressure is applied to the touchpad pointer. This symptom is not a hardware problem. No service actions are necessary if the pointer movement stops in a short period of time.

Power-On Self-Test (POST) Error Message

The POST error message index lists the error message and their possible causes. The most likely cause is listed first.

NOTE: Perform the FRU replacement or actions in the sequence shown in FRU/Action column, if the FRU replacement does not solve the problem, put the original part back in the computer. Do not replace a non-defective FRU.

This index can also help you determine the next possible FRU to be replaced when servicing a computer.

If the symptom is not listed, see “Undetermined Problems” on page 77.

The following lists the error messages that the BIOS displays on the screen and the error symptoms classified by function.

NOTE: Most of the error messages occur during POST. Some of them display information about a hardware device, e.g., the amount of memory installed. Others may indicate a problem with a device, such as the way it has been configured.

NOTE: If the system fails after you make changes in the BIOS Setup Utility menus, reset the computer, enter Setup and install Setup defaults or correct the error.

Index of Error Messages

Error Message List

Error Messages	FRU/Action in Sequence
Struck Key	See "Keyboard or Auxiliary Input Device Check" on page 66
System CMOS checksum bad - Default configuration used	RTC battery Run BIOS Setup Utility to reconfigure system, then reboot system.
Real time clock error	RTC battery Run BIOS Setup Utility to reconfigure system time, then reboot system. Main board
Previous boot incomplete - Default configuration used	"Load Default Settings" in BIOS Setup Utility. RTC batter Main board.
Invalid System Configuration Data	"Load Default Settings" in BIOS Setup Utility. Main board.
Operating system not found	Enter Setup and see if fixed disk and drive A are properly identified. Diskette drive Hard disk drive Main board.

Error Message List

No beep Error Messages	FRU/Action in Sequence
Power-on indicator turns off and LCD is blank.	Power source (battery pack and power adapter.) See "Power System Check" on page 67 Ensure every connector is connected tightly and correctly. Reconnect the DIMM. Main board.
Power-on indicator turns on and LCD is blank.	Power source (battery pack and power adapter.) See "Power System Check" on page 67 Reconnect the LCD connector Hard disk drive LCD cable LCD inverter LCD Main board
Power-on indicator turns on and LCD is blank. But you can see POST on an external CRT.	Reconnect the LCD connectors. LCD cable LCD inverter LCD Main board
Power-on indicator turns on and a blinking cursor shown on LCD during POST.	Ensure every connector is connected tightly and correctly. Main board

Index of Symptom-to-FRU Error Message

LCD-Related Symptoms

Symptom / Error	Action in Sequence
LCD backlight doesn't work	First, plug a monitor to CRT port. Next, enter BIOS utility to running "Load Default Settings" then reboot the system. Reconnect the LCD connectors. Keyboard (if the brightness function key doesn't work). LCD cable LCD inverter LCD Main board
LCD is too dark LCD brightness cannot be adjusted	Enter BIOS Utility to execute "Load Setup Default Settings", then reboot system. Reconnect the LCD connectors. Keyboard (if the brightness function key doesn't work). LCD cable LCD inverter LCD Main board
Unreadable LCD screen Missing pels in characters Abnormal screen Wrong color displayed LCD has extra horizontal or vertical lines displayed.	Reconnect the LCD cable LCD cable LCD Main board

Indicator-Related Symptoms

Symptom / Error	Action in Sequence
Indicator incorrectly remains off or on, but system runs correctly	Main board
HDD/CD-ROM active indicators cannot work	HDD/CD-ROM drive Device driver Main board

Power-Related Symptoms

Symptom / Error	Action in Sequence
Power shuts down during operation	Power source (battery pack and power adapter). See "Power System Check" on page 67. Battery pack AC adapter See if the thermal module is overheat (Heat sink or fan). Main board
The system cannot power-on.	Power source (battery pack and power adapter). See "Power System Check" on page 67. Battery pack Power adapter CPU Main board
The system cannot power-off.	In Windows XP operating system, hold and press the power switch for more than 4 seconds. If the system can power off, then the main board is OK. Verify OS in the HDD. Main board

Power-Related Symptoms

Symptom / Error	Action in Sequence
Battery can't be charged or discharged	See "Check the Battery Pack" on page 68. Battery pack Main board
System hang during POST	ODD/HDD/FDD/RAM module Main board

PCMCIA-Related Symptoms

Symptom / Error	Action in Sequence
System cannot detect the PC Card (PCMCIA)	PCMCIA slot assembly Main board
PCMCIA slot pin is damaged.	PCMCIA slot assembly
PC Card cannot be inserted or ejected	Check if the PCMCIA slot is blocked Main board

Memory-Related Symptoms

Symptom / Error	Action in Sequence
Memory count (size) appears different from actual size.	Enter BIOS Setup Utility to execute "Load Default Settings" then reboot system. RAM module Main board Check BIOS revision
System can power on, but you hear two long beeps: "B--, B--" and the LCD is blank.	Reinsert DIMM DIMM Main board

Speaker-Related Symptoms

Symptom / Error	Action in Sequence
In Windows, multimedia programs, no sound comes from the computer.	OS volume control Audio driver Speaker Main board
Internal speakers make noise or emit no sound.	Speaker Main board
Microphone cannot work	Audio driver Volume control in Windows XP Main board

Power Management-Related Symptoms

Symptom / Error	Action in Sequence
The system will not enter hibernation mode	Power option in Windows XP Hard disk drive Main board
The system doesn't enter standby mode after closing the lid of the portable computer.	Driver of Power Option Properties Lid close switch in upper case Main board

Power Management-Related Symptoms

Symptom / Error	Action in Sequence
The system doesn't resume from hibernation/standby mode.	Connect AC adapter then check if the system resumes from Standby/Hibernation mode. Check if the battery is low. Hard disk drive Main board
The system doesn't resume from standby mode after opening the lid of the portable computer.	LCD cover switch Main board
Battery fuel gauge in Windows doesn't go higher than 90%.	Refresh battery (continue use battery until power off, then charge battery). Battery pack Main board
System hangs intermittently.	Reconnect hard disk/CD-ROM drives. Main board

Peripheral-Related Symptoms

Symptom / Error	Action in Sequence
System configuration does not match the installed devices.	Enter BIOS Setup Utility to execute "Load Setup defaults", then reboot system. Reconnect hard disk/CD-ROM drives/FDD or other peripherals. Main board
External display does not work correctly.	Press Fn+F5, LCD/CRT/Both display switching Keyboard Main board
USB does not work correctly	Main board
Print problems.	Enter BIOS Setup Utility to execute "Load Default Settings" then reboot the system. Run printer self-test. Printer driver Printer cable Printer Main board
Parallel port device problems	Enter BIOS Setup Utility to execute "Load Default Settings" then reboot the system. Device driver Device cable Device Main board

Keyboard/Touchpad-Related Symptoms

Symptom / Error	Action in Sequence
Keyboard (one or more keys) does not work.	Reconnect the keyboard cable. Keyboard Main board
Touchpad does not work.	Reconnect touchpad cable. Touchpad board Main board

Modem/LAN-Related Symptoms

Symptom / Error	Action in Sequence
Internal modem does not work correctly.	Phone cable Driver Reconnect the Internal modem cable to the main board tightly. Main board
Internal LAN does not work correctly	Lan cable Driver Main board

NOTE: If you cannot find a symptom or an error in this list and the problem remains, see “Undetermined Problems” on page 77.

Intermittent Problems

Intermittent system hang problems can be caused by a variety of reasons that have nothing to do with a hardware defect, such as: cosmic radiation, electrostatic discharge, or software errors. FRU replacement should be considered only when a recurring problem exists.

When analyzing an intermittent problem, do the following:

1. Run the diagnostic test for the system board in loop mode at least 10 times.
2. If no error is detected, do not replace any FRU.
3. If any error is detected, replace the FRU. Rerun the test to verify that there are no more errors.

Undetermined Problems

The diagnostic problems does not identify which adapter or device failed, which installed devices are incorrect, whether a short circuit is suspected, or whether the system is inoperative.

Follow these procedures to isolate the failing FRU (do not isolate non-defective FRU).


NOTE: Verify that all attached devices are supported by the computer.

NOTE: Verify that the power supply being used at the time of the failure is operating correctly. (See “Power System Check” on page 67):

1. Power-off the computer.
2. Visually check them for damage. If any problems are found, replace the FRU.
3. Remove or disconnect all of the following devices:
 - ☐ Non-Acer devices
 - ☐ Printer, mouse, and other external devices
 - ☐ Battery pack
 - ☐ Hard disk drive
 - ☐ DIMM
 - ☐ PC Cards
4. Power-on the computer.
5. Determine if the problem has changed.
6. If the problem does not recur, reconnect the removed devices one at a time until you find the failing FRU.
7. If the problem remains, replace the following FRU one at a time. Do not replace a non-defective FRU:
 - ☐ System board
 - ☐ LCD assembly


Jumper and Connector Locations

Top View

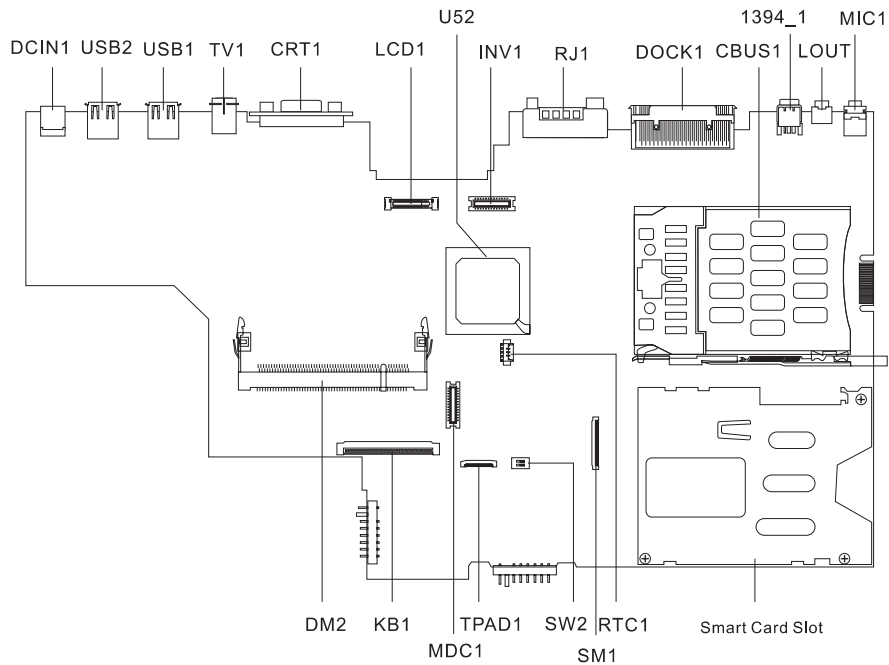

DCIN1	DC-In Jack	1394_1	IEEE 1394 Port
USB2	USB Port	LOUT	Line-Out Jack
USB1	USB Port	MIC1	Mic-In Jack
TV1	S-Vedio Port	Smart Card Slot	Smart Card Reader Slot
CRT1	External Display Port	RTC1	RTC Battery Connector
LCD1	LCD Coaxial Cable Connector	SW1	Smart Card Connector
U52	South Bridge	SW2	SW2
INV1	Inverter Cable Connector	TPAD1	Touchpad Connector
RJ1	Modem Jack/LAN Jack	MDC2	MDC Board Connector
DOCK1	Expansion Port	KB1	Keyboard Connector
CBUS1	PCMCIA Slot	DM2	DIMM Socket 2

Bottom View

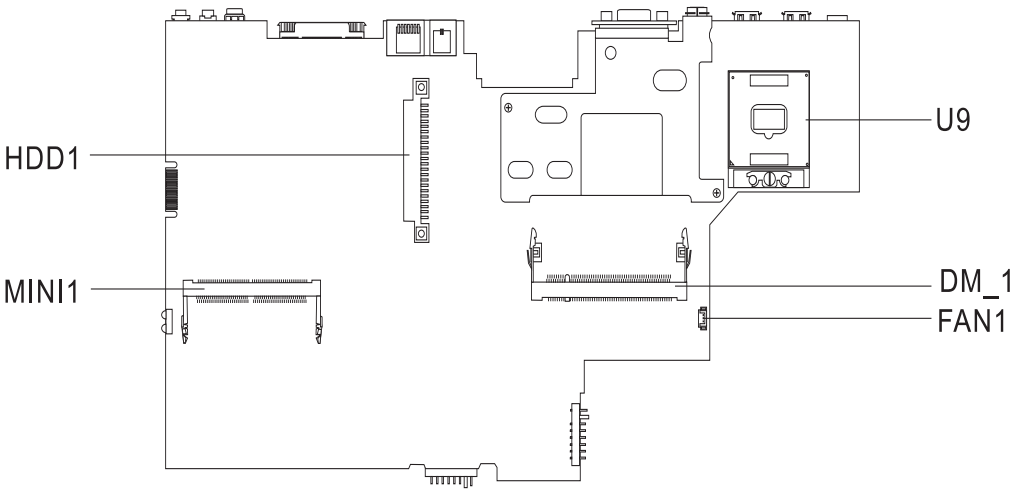

- U9

DM_1

FAN1
- CPU Socket

DIMM Socket 1

FAN Connector
- HDD1

MINI1
- Mini PCI Connector

HDD Connector

Switch Setting

	SW2-1	SW2-2
CHKPW	ON	X
BOOTBLOCK ENABLE	X	ON


FRU (Field Replaceable Unit) List

This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of TravelMate C300 series products. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

Please note that WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

NOTE: To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.


Exploded Diagram

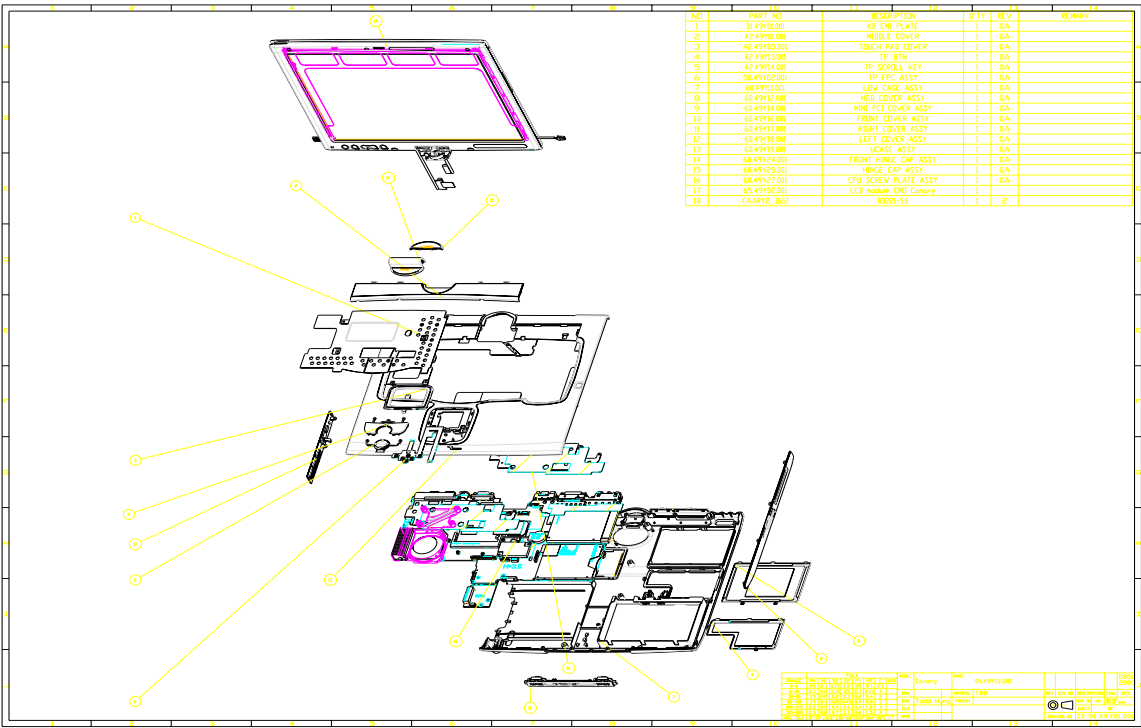

NOTE: The part numbers on the exploded diagram are vendor part numbers, not Acer part numbers. Please refer to the most up-to-date spare part list for the correct part numbers as you order the parts.

Picture	No.	Partname And Description	Part Number
Adapter			
	NS	ADAPTER 19V 70W 3PIN DELTA ADP-65DB	25.10110.171
Battery			
	NS	BATTERY PACK LI-ION 8CELL SANYO BTP-63D1	
		RTC BATTERY	23.T28V1.001
Boards			

Picture	No.	Partname And Description	Part Number
		EXTENSION BOARD	55.T28V1.001
		WIRELESS LAN BOARD INTEL 7100 802.11A/B	TBD
		WIRELESS LAN BOARD INTEL 802.11B WM3B2100NA	KI.CAX01.002/001
		WIRELESS LAN BOARD AMBIT 802.11AG T60H677.03	54.T28V1.001
		MODEM BOARD AMBIT T60M283.10	
		MODEM/BLUETOOTH BOARD AMBIT T60M665.00	
Cables			
	6	TOUCHPAD CABLE	50.T28V1.001
	NS	POWER CORD 10A 125V KINGCORD US	27.T30V1.001
	NS	MODEM CABLE 96MM	50.T28V1.002
Case/Cover/Bracket Assembly			
	2	MIDDLE COVER	42.T28V1.001
	15	HINGE CAP BACK	42.T28V1.002
	14	HINGE CAP FRONT	42.T28V1.003
	9	MINI PCI COVER W/SCREW	42.T28V1.004

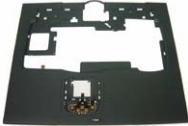Picture	No.	Partname And Description	Part Number
	10	LOWER CASE FRONT COVER W/SPEAKER PACK	60.T28V1.003
	12	LOWER CASE LEFT COVER POWER SWITCH SIDE	60.T28V1.004
	11	LOWER CASE RIGHT COVER SMART CARD/PCMCIA SIDE	60.T28V1.005
	8	HDD COVER W/SCREW	42.T28V1.005
	NS	HDD HOLDER	33.T28V1.001
	13	UPPER CASE W/LATCH MODULE & TOUCHPAD MODULE Note: The image here contains touchpad cable only.	60.T28V1.001
	3	TOUCHPAD HOLDER	42.T28V1.006
	7	LOWER CASE W/DIMM COVER & RUBBER FOOT	60.T28V1.002
	NS	DIMM COVER	42.T28V1.007

Picture	No.	Partname And Description	Part Number
	1	KEYBOARD SUPPORT PLATE	60.T28V1.010
Communication Module			
	NS	BLUETOOTH ANTENNA	50.T28V1.003
	NS	WIRELESS LAN ANTENNA AUX	50.T28V1.004
	NS	WIRELESS LAN ANTENNA MAIN	50.T28V1.005
CPU			
	NS	CPU BANIAS 1.7GMHZ 1MB INTEL	KC.BS001.17G
		CPU BANIAS 1.6GMHZ 1MB INTEL	KC.BS001.16G
		CPU BANIAS 1.5GMHZ 1MB INTEL	KC.BS001.15G
		CPU BANIAS 1.4GMHZ 1MB INTEL	KC.BS001.14G
		CPU BANIAS 1.3GMHZ 1MB INTEL	KC.BS001.13G
		CPU DOTHAN 1.8GMHZ INTEL	
FDD Module			
	NS	EXTENTION FDD MODULE USB YEDATA YD-8U10 REV.HL	
Card Reader			
	NS	5 IN 1 MEMORY CARD READER MODULE	LC.T3405.001
	NS	5-IN-1 MEMORY CARD READER BOARD	55.T34V5.005
	NS	CARD READER HOLDER	60.T34V5.004
	NS	CARD READER COVER	33.T34V5.005
	NS	CARD READER BRACKET ASSEMBLY	33.T34V5.006
	NS	MEMORY CARD READER FFC CABLE	50.T34V5.008

Picture	No.	Partname And Description	Part Number
HDD/ Hard Disk Drive			
	NS	HDD DRIVE 60G HGST IC25N060ATMR04	KH.06007.002
		HDD DRIVE 20G HGST IC25N020ATMR04	KH.02007.002
		HDD DRIVE 30G HGST IC25N030ATMR04	KH.03007.002
		HDD DRIVE 40G HGST IC25N040ATMR04	KH.04007.004
		HDD DRIVE 60G HGST TS548060M9AT00	KH.06007.003
		HDD DRIVE 80G HGST IC25N080ATMR04	KH.08007.002
		HDD DRIVE 30G TOSHIBA MK3021GAS	KH.33004.001
		HDD DRIVE 40G TOSHIBA MK4021GAS ACER	KH.34004.001
		HDD DRIVE 80G TOSHIBA MK8025GAS KA023A	KH.08004.001
		HDD DRIVE 60G TOSHIBA	KH.06004.001
		HDD DRIVE 40G FUJITSU V-40 MHT2040AT	KH.04006.002
		HDD DRIVE 60G MHT2060AT F/W:002E	KH.04006.003
		HDD DRIVE 60G TOSHIBA MK6021GAS	KH.36004.001
	NS	HDD HOLDER	33.T28V1.001
	8	HDD COVER W/SCREW	42.T28V1.005
Keyboard			
	NS	KEYBOARD 84 KEY DARFON NSK-A4001 US	
		KEYBOARD DARFON NSK-A4002 TAIWAN	
		KEYBOARD ITALIAN	
		KEYBOARD GERMAN	
		KEYBOARD GERMAN	
		KEYBOARD SPANISH	
LCD			
	17	ASSY LCD MODULE 14.1" XGA CHIMEI N141X9-L01	6M.T28V1.006
		LCD MODULE 14.1" XGA AU B141XG08 V.2	6M.T28V1.007
	NS	LCD ASSEMBLY 14.1" XGA CHIMEI N141X9-L01 W/PROTECTION COVER & SPONGE	
		LCD ASSEMBLY 14.1" XGA AU B141XG08 V.2 W/PROTECTION COVER & SPONGE	
	NS	INVERTER BOARD 14.1" AMBIT	19.T28V1.001

Picture	No.	Partname And Description	Part Number
	NS	BUTTON BOARD	55.T28V1.003
	NS	LED BOARD	55.T28V1.004
	NS	LCD COAXIAL CABLE 14.1"	50.T28V1.006
		LCD COAXIAL CABLE 14.1"	50.T28V1.008
	NS	INVERTER CABLE	50.T28V1.007
	NS	DIGITIZER TOUCHPAD PANEL FOR 14.1 IN. WACOM SU-015	56.T33V1.001
	NS	LCD BRACKET 14.1" RIGHT	33.T28V1.003
	NS	LCD BRACKET 14.1" LEFT	33.T28V1.004
	NS	LCD BEZEL W/ICON LABEL & NAME PLATE & WIRELESS LAN ANTENNA	60.T28V1.007
	NS	LCD PANEL W/ANTENNA & HINGE & LOGO	60.T28V1.008
	NS	HINGE ASSEMBLY	33.T28V1.005
Main Board			

Picture	No.	Partname And Description	Part Number
	18	MAINBOARD W/O CPU W/PCMCIA SLOT & RTC BATTERY & SMART CARD SLOT & THERMAL PLATE	
	NS	PCMCIA SLOT	22.T28V1.001
	NS	SMART CARD SLOT	22.T28V1.002
Memory			
	NS	SDIMM 512M INFINEON	KN.51202.007
		SDIMM 128M NANYA	KN.12803.008
		SDIMM 256M INFINEON	KN.25602.009
		SODIMM 256M NANYA	KN.25603.009
		SDIMM 256M ELPIDA	KN.25609.002
		SODIMM 512M MICRON	KN.25604.009
		SDIMM 512M ELPIDA	KN.51209.002
		SODIMM 512M MICRON	KN.51204.006
		SODIMM 512M NANYA	KN.51203.005
		SODIMM 1GB ELPIDA	TBD
Optical Drive/Combo Module			
	NS	CDRW/DVD COMBO MODULE 24X QSI SBW-242U	6M.T28V1.001
		COMBO MODULE 24X SONY CRX830E C	6M.T28V1.002
		DVD-ROM MODULE 8X MKE SR-8177	6M.T28V1.003
		DVD-ROM MODULE 8X LITEON XJ-SD081D	6M.T28V1.004
		DVD-RW MODULE 2X DUE PIONEER DVR-K12D	6M.T28V1.005
	NS	CDRW/DVD COMBO DRIVE 24X QSI SBW-242U	
		COMBO DRIVE 24X SONY CRX830E C	
		DVD-ROM DRIVE 8X MKE SR-8177	
		DVD-ROM DRIVE 8X LITEON XJ-SD081D	
		DVD-RW DRIVE 2X DUE PIONEER DVR-K12D	
	NS	OPTICAL BRACKET	33.T28V1.002
	NS	OPTICAL DEVICE BOARD	55.T28V1.002

Picture	No.	Partname And Description	Part Number
Pointing Device			
	NS	TOUCHPAD SYNAPTICS TM41P-341	56.T28V1.001
Heatsink/FAN			
	NS	CPU FANSINK W/FAN	60.T28V1.006
	NS	FAN	23.T28V1.002
	NS	HEATSINK	34.T28V1.001
Microphone			
	NS	MICROPHONE	23.T28V1.003
Others			
	NS	NAME PLATE	40.T28V1.001
	NS	ICON PLATE	40.T28V1.002
	NS	LOGO PLATE	31.48R18.001
	NS	RUBBER FOOT	47.T30V1.003
	NS	LCD SCREW MYLAR LOWER	47.T28V1.001
	NS	LCD SCREW MYLAR UPPER	47.T28V1.002
	NS	LCD LATCH MODULE	60.T28V1.009
	5	TOUCHPAD SCROLL KEY	42.T28V1.008
	4	TOUCHPAD BUTTON	42.T28V1.009
Screws			
		SCRW HEX NUT W/WASHER #4 NI BT)	34.00015.211
		SCREW M2X4 (HEAD 0.3) NYLOK	86.00A23.320
		SCREW M2X4 (HEAD 0.5) NYLOK	86.00A55.320
		SCREW M2.5X6	86.9A353.6R0

Picture	No.	Partname And Description	Part Number
		SCREW M3x4(86.9A524.4R0)	86.9A524.4R0
		SCRW M2*4 WAFER NI	86.9A552.4R0
		SCRW MAC PAN M2*L9.3NI NYL SPR	86.T28V1.003
		SCREW M2*3 NYLON 1JMCPC-420325	86.9A352.3R0
		SCREW MACH WAFER M2*6L BK-ZN	86.9A352.6R0
		SCREW MACH WAFER M2*L3.1 Y-ZN	86.T28V1.004
		SCREW M2 X L8 (DIA 6MM)	86.T28V1.005
		SCRW MACH WAFER M2*L8 NI S NOT	86.T28V1.006
		SCREW NYLOK M2.5-5	86.9A553.5R0
		SCRW M1.7*5.5 TAPPING NI	86.T28V1.007

Model Definition and Configuration

TravelMate C300 Series

Model Number	CPU	LCD	Memory	HDD (GB)	ODD	Wireless LAN	MDC
300XCi	P-M 1.4G	14.1XGA	1X256 2x256M	30/40	24x DVD+CD-RW	11b	Combo
301XCi	PM-1.4G PM-1.5G	14.1XGA	2X256 1X512	40/60	24x DVD+CD-RW	11b	N
302XMi	PM-1.6G	14.1XGA	2x256M	60	DVD-Dual	11b	Combo

Test Compatible Components

This computer's compatibility is tested and verified by Acer's internal testing department. All of its system functions are tested under Windows® XP Home, Windows® XP Pro and Windows® 2000 environment.

Refer to the following lists for components, adapter cards, and peripherals which have passed these tests. Regarding configuration, combination and test procedures, please refer to the TravelMate C300 series Compatibility Test Report released by the Acer Mobile System Testing Department.

Microsoft® Windows® XP Pro Environment Test

Item	Specifications
LAN Card	3Com EtherLink III IBM EtherJet CardBus Adapter 10/100 Intel EtherExpress Pro/100 Mobile Adapter Xircom CardBus Ethernet 10/100 32Bitr
Modem Card	USR Megahertz 56K PC Card Modem Xircom CreditCard Modem 56 IBM 56K Double Jack Modem
Combo Card	3Com Megahertz 10/100LAN+Modem 56 Xircom RealPort CardBus Ethernet 10/100+ Modem 56
ATA Card	IBM Microdrive 340MB IBM Microdrive 1G Iomega Click! 40MB Sony Memory Stick 64MB Sandisk Compact Flash Card 20MB Apacer SD Flash Card 128MB Apacer 128MB Memory Stick
USB 2.0 Card	Apricorn EZ-USB 2.0 Cardbus PC Card DTK USB 2.0 2Port CardBus Host Controller Adaptec USB2CONNECT
1394	Buffalo 1394 Interface Cardbus I-O Data 1394 Interface Cardbus Pixela 1394 Card PC Card
SCSI Card	Adaptec 1480A or B SCSI CB NewMedia Bus Toaster SCSI II
Wireless LAN Card	Intel Pro/Wireless LAN PC Card Proxim Skyline 802.11a Cardbus Card Cisco Aironet 350 series Wireless LAN Card NeWeb Wireless LAN Card 802.11b Cisco Wireless LAN Card 802.11a
Bluetooth Card	IBM Community Bluetooth PC Card Toshiba Bluetooth PC Card
ISDN Card	US Robotics Megahertz 128K ISDN Card
Token Ring Card	IBM Token Ring 16/4 Adapter II
External CRT	Acer 211c 21" ViewSonic PF790 19" Acer FP751 17" TFT LCD IBM Color TFT LCD 14" Compaq Color Monitor V70 NEC Color Monitor 20" Mozo 17" TFT LCD (DVI)
Projector	NEC MultiSync MT-1040
Legacy (Parallel) Printer / Scanner	Canon BJC-600J Epson Stylus Color 740 Parallel interface HP DeskJet 890C HP DeskJet 880C Parallel interface HP LaserJet 6MP HP LaserJet 2200
IR Printer	HP LaserJet 6MP use IR HP LaserJet 2200 use IR

Item	Specifications
USB Keyboard / Mouse	Chicony USB Keyboard Chicony USB Keypad Microsoft Natural Keyboard Pro Acer Aspire USB Mouse Logicoool USB Mouse Logitech Coreless MouseMan Wheel USB interface Logitech USB Wheel Mouse Microsoft IntelliMouse Optical USB interface
USB Printer / Scanner	Epson Stylus Color 740 USB interface HP DeskJet 880C USB interface HP ScanJet 3300C Color Scanner
	JS USB Digital Speaker Panasonic USB Speaker EAB-MPC57USB Aiwa Multimedia Digital Speaker Microsoft SideWinder Precision Pro Joystick Logitech WingMan RumblePad
USB Camera	Intel Easy PC Camera Logitech QuickCam Express Internet Logitech QuickCam Home PC Video Camera Orange Micro USB 2.0 WebCam
USB Storage Drive	Logitech CDRW + DVDROM combo USB interface Iomega USB Zip 250MB Plextor Burn-Proof CDRW (USB 2.0) Fujitsu MO-1300 1.3G (USB 2.0) Fujitsu 20G HDD (USB 2.0) Sony DVDROM (USB 2.0) IO-Data DVDROM (USB 2.0) Sandisk Card Reader 6 In 1 (USB 2.0)
USB Flash Drive	Apacer USB Handy Drive 32/128MB Apacer USB Handy Drive 256/512MB Sony Memory Key 128MB Dell Memory Key 64MB
USB Floppy Drive	Acer YE-Data USB Floppy Drive
USB Hub and Others	Belkin 4 Port USB Hub Eizo I Station USB Hub Elecom USB Hub 4 Port Sanwa USB Hub 4 Port Sanwa 4 Port Hub (USB 2.0) Corega WirelessLAN USB Stick (USB 1.1) *1
Bluetooth Printer	HP Deskjet 995C (bluetooth interface)
Access Point 802.11b	Hitachi DC-CN3300 Lucent RG-1000 Lucent WavePoint-II Cisco Aironet 350 Orinoco AP-500
Access Point 802.11a/b	Intel Dual Pro/Wireless 5000
Access Point 802.11a	Intel Pro/Wireless 5000

Microsoft® Windows® XP Home Environment Test

Item	Specifications
LAN Card	3Com EtherLink III IBM EtherJet CardBus Adapter 10/100 Intel EtherExpress Pro/100 Mobile Adapte Xircom CardBus Ethernet 10/100 32Bitr
Modem Card	USR Megahertz 56K PC Card Modem Xircom CreditCard Modem 56 IBM 56K Double Jack Modem
Combo Card	3Com Megahertz 10/100LAN+Modem 56 Xircom RealPort CardBus Ethernet 10/100+ Modem 56
ATA Card	IBM Microdrive 340MB IBM Microdrive 1G Iomega Click! 40MB Sony Memory Stick 64MB Sandisk Compact Flash Card 20MB Apacer SD Flash Card 128MB Apacer 128MB Memory Stick
USB 2.0 Card	Apricorn EZ-USB 2.0 Cardbus PC Card DTK USB 2.0 2Port CardBus Host Controller Adaptec USB2CONNECT
1394	Buffalo 1394 Interface Cardbus I-O Data 1394 Interface Cardbus Pixela 1394 Card PC Card
SCSI Card	Adaptec 1480A or B SCSI CB NewMedia Bus Toaster SCSI II
Wireless LAN Card	Intel Pro/Wireless LAN PC Card Proxim Skyline 802.11a Cardbus Card Cisco Aironet 350 series Wireless LAN Card NeWeb Wireless LAN Card 802.11b Cisco Wireless LAN Card 802.11a
Bluetooth Card	IBM Community Bluetooth PC Card Toshiba Bluetooth PC Card
ISDN Card	US Robotics Megahertz 128K ISDN Card
Token Ring Card	IBM Token Ring 16/4 Adapter II
External CRT	Acer 211c 21" ViewSonic PF790 19" Acer FP751 17" TFT LCD IBM Color TFT LCD 14" Compaq Color Monitor V70 NEC Color Monitor 20" Mozo 17" TFT LCD (DVI)
Projector	NEC MultiSync MT-1040
Legacy (Parallel) Printer / Scanner	Canon BJC-600J Epson Stylus Color 740 Parallel interface HP DeskJet 890C HP DeskJet 880C Parallel interface HP LaserJet 6MP HP LaserJet 2200
IR Printer	HP LaserJet 6MP use IR HP LaserJet 2200 use IR

Item	Specifications
USB Keyboard / Mouse	Chicony USB Keyboard Chicony USB Keypad Microsoft Natural Keyboard Pro Acer Aspire USB Mouse Logicoool USB Mouse Logitech Coreless MouseMan Wheel USB interface Logitech USB Wheel Mouse Microsoft IntelliMouse Optical USB interface
USB Printer / Scanner	Epson Stylus Color 740 USB interface HP DeskJet 880C USB interface HP ScanJet 3300C Color Scanner
	JS USB Digital Speaker Panasonic USB Speaker EAB-MPC57USB Aiwa Multimedia Digital Speaker Microsoft SideWinder Precision Pro Joystick Logitech WingMan RumblePad
USB Camera	Intel Easy PC Camera Logitech QuickCam Express Internet Logitech QuickCam Home PC Video Camera Orange Micro USB 2.0 WebCam
USB Storage Drive	Logitech CDRW + DVDROM combo USB interface Iomega USB Zip 250MB Plextor Burn-Proof CDRW (USB 2.0) Fujitsu MO-1300 1.3G (USB 2.0) Fujitsu 20G HDD (USB 2.0) Sony DVDROM (USB 2.0) IO-Data DVDROM (USB 2.0) Sandisk Card Reader 6 In 1 (USB 2.0)
USB Flash Drive	Apacer USB Handy Drive32/128MB Apacer USB Handy Drive 256/512MB Sony Memory Key 128MB Dell Memory Key 64MB
USB Floppy Drive	Acer YE-Data USB Floppy Drive
USB Hub and Others	Belkin 4 Port USB Hub Eizo I Station USB Hub Elecom USB Hub 4 Port Sanwa USB Hub 4 Port Sanwa 4 Port Hub (USB 2.0) Corega WirelessLAN USB Stick (USB 1.1) *1
Bluetooth Printer	HP Deskjet 995C (bluetooth interface)
Access Point 802.11b	Hitachi DC-CN3300 Lucent RG-1000 Lucent WavePoint-II Cisco Aironet 350 Orinoco AP-500
Access Point 802.11a/b	Intel Dual Pro/Wireless 5000
Access Point 802.11a	Intel Pro/Wireless 5000

Microsoft® Windows® 2000 Environment Test

Item	Specifications
LAN Card	IBM EtherJet CardBus Adapter 10/100
Modem Card	USR Megahertz 56K PC Card Modem Xircom CreditCard Modem 56 IBM 56K Double Jack Modem
Combo Card	Xircom RealPort CardBus Ethernet 10/100+ Modem 56
ATA Card	IBM Microdrive 340MB Iomega Click! 40MB Apacer SD Flash Card 128MB Apacer 128MB Memory Stick
USB 2.0 Card	Adaptec USB2CONNECT
1394	Buffalo 1394 Interface Cardbus I-O Data 1394 Interface Cardbus Pixela 1394 Card PC Card
SCSI Card	Adaptec 1480A or B SCSI CB
Wireless LAN Card	Intel Pro/Wireless LAN PC Card
Bluetooth Card	IBM Community Bluetooth PC Card
Token Ring Card	IBM Token Ring 16/4 Adapter II
External CRT	ViewSonic PF790 19" Acer FP751 17" TFT LCD NEC Color Monitor 20"
Projector	NEC MultiSync MT-1040
Legacy (Parallel) Printer / Scanner	Epson Stylus Color 740 Parallel interface HP DeskJet 880C Parallel interface HP LaserJet 2200
IR Printer	HP LaserJet 6MP use IR HP LaserJet 2200 use IR
USB Keyboard / Mouse	Chicony USB Keyboard Microsoft Natural Keyboard Pro Acer Aspire USB Mouse Logitech Coreless MouseMan Wheel USB interface Logitech USB Wheel Mouse
USB Printer / Scanner	HP DeskJet 880C USB interface HP ScanJet 3300C Color Scanner
	Panasonic USB Speaker EAB-MPC57USB Logitech WingMan RumblePad
USB Camera	Logitech QuickCam Home PC Video Camera Orange Micro USB 2.0 WebCam
USB Storage Drive	Plextor Burn-Proof CDRW (USB 2.0) Fujitsu 20G HDD (USB 2.0) Sony DVDROM (USB 2.0) Sandisk Card Reader 6 In 1 (USB 2.0)
USB Flash Drive	Apacer USB Handy Drive32/128MB Apacer USB Handy Drive 256/512MB Sony Memory Key 128MB
USB Floppy Drive	Acer YE-Data USB Floppy Drive
USB Hub and Others	Eizo I Station USB Hub Sanwa 4 Port Hub (USB 2.0)

Item	Specifications
Bluetooth Printer	HP Deskjet 995C (bluetooth interface)
Access Point 802.11b	Cisco Aironet 350 Orinoco AP-500
Access Point 802.11a/b	Intel Dual Pro/Wireless 5000
Access Point 802.11a	Intel Pro/Wireless 5000

Online Support Information

This section describes online technical support services available to help you repair your Acer Systems.

If you are a distributor, dealer, ASP or TPM, please refer your technical queries to your local Acer branch office. Acer Branch Offices and Regional Business Units may access our website. However some information sources will require a user i.d. and password. These can be obtained directly from Acer CSD Taiwan.

Acer's Website offers you convenient and valuable support resources whenever you need them.

In the Technical Information section you can download information on all of Acer's Notebook, Desktop and Server models including:

- ☐ Service guides for all models
- ☐ User's manuals
- ☐ Training materials
- ☐ Bios updates
- ☐ Software utilities
- ☐ Spare parts lists
- ☐ TABs (Technical Announcement Bulletin)

For these purposes, we have included an Acrobat File to facilitate the problem-free downloading of our technical material.

Also contained on this website are:

- ☐ Detailed information on Acer's International Traveler's Warranty (ITW)
- ☐ Returned material authorization procedures
- ☐ An overview of all the support services we offer, accompanied by a list of telephone, fax and email contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions or comments, please do not hesitate to communicate these to us.

A

- ACPI 1.0a 24
- AFLASH Utility 47

B

- Battery Pack 52
- BIOS 24
 - package 24
 - password control 24
 - ROM size 24
 - ROM type 24
 - vendor 24
 - Version 24
- BIOS Setup Utility 35
- BIOS Supports protocol 24
- BIOS Utility 35
 - Basic System Settings 40
 - Navigating 36
 - Onboard Device Configuration 43
 - Startup Configuration 42
 - System Information 36
 - System Security 46
- Board Layout 4
 - Bottom View 5
 - Top View 4

C

- Cache
 - controller 24
 - size 24
- CardBus 30
- CPU
 - core voltage 24
 - package 24
 - type 24

D

- DIMM
 - Combinations 25
 - external 53
 - removing 53
- Disassembly
 - Battery Pack 51
 - Floppy Disk Drive 59
 - Procedure Flowchart 51
- Display 3

E

- Error Symptom-to-Spare Part Index 69
- External CD-ROM Drive Check 66
- External Diskette Drive Check 66

F

- Features 1
- Flash Utility 47
- Floppy Disk
 - removing the 59
- FRU (Field Replaceable Unit) List 81

H

- Hard disk 26
- HDD 26
- Hot Keys 15

I

- Indicators 13
- Intermittent Problems 76

J

- Jumper and Connector Locations 79
 - Top View 79

K

- Keyboard 31
- Keyboard or Auxiliary Input Device Check 66

L

- L2 cache 24

M

- Memory Check 67
- Model Definition 92
- Modem 25

O

- Online Support Information 101

P

- Panel 6
 - Bottom 12
 - left 6
 - Rear 10
 - right 10
- Parallel Port 29

- PC Card 13, 30
- PCMCIA 30
- Pentium III 24
- Power System Check 67
 - Battery Pack 68
- Processor 24

R

- RMA 81

S

- Second Level Cache 24
- System
 - Block Diagram 3
 - Layout 4
- System Diagnostic Diskette 47
- System Memory 24
- System Utilities 35
- System Utility Diskette 47

T

- Test Compatible Components 93
- Touchpad Check 68
- Troubleshooting 65

U

- Undetermined Problems 77
- USB 30
- utility
 - BIOS 35

V

- Video
 - Resolutions 29

W

- Windows XP Pro Environment Test 94
- Windows 2000 Environment Test 96

