


Installing Mac mini Model A1283 Optical Drive

Tools used in this guide

- 1.5" Thin Putty Knife
- Phillips #00 Screwdriver
- Spudger

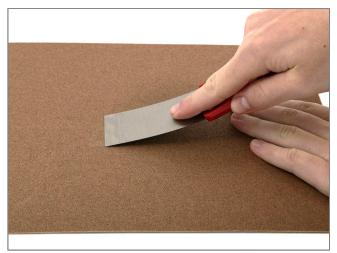

Step 1 - Top Housing





You'll need a putty knife in order to open the case. A
 1.5 inch thin putty knife will work well, but you'll want to
 grind the edge down. Rub the putty knife's short edge
 back and forth on a sheet of all purpose rough grit
 sandpaper (100 grit will work fine) until it attains a
 beveled edge.





- Carefully insert a putty knife into the crevice in between the top cover and bottom housing. Start on the left side first. Push the blade down until you meet firm resistance (roughly 3/8 of an inch).
- Gently enlarge the existing crevice by rotating the putty knife downward and away from the mini.



Step 3

 Repeat the prying motion until a portion of the bottom housing has been nudged upward.



Repeat the same prying procedure on the right side.



Step 5

 The top cover should now be marginally separated from the bottom housing. Use your fingers to completely separate the two, starting with the I/O side of the mini.





Step 6 - Internal Frame

 In the next few steps you will be removing the AirPort and Bluetooth antennas (shown in red) from the internal frame. Be very careful, as breaking the brackets will require replacing the internal frame.



 We will first remove the AirPort antenna, located in the lower left corner of this picture.

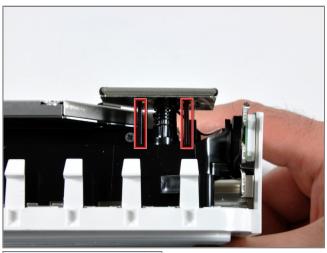

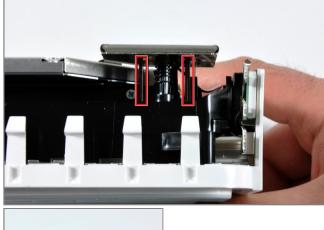

- Slightly squeeze the two retaining arms toward each other and lift the AirPort antenna off its post.
- Squeezing the two posts excessively will surely break them off the internal frame. Work delicately.



• During reinstallation, you will have to slightly squeeze the two posts together so they fit into the openings on the AirPort antenna board.





Step 8


• The two Bluetooth antenna boards simply lift off the internal frame.



• Grab the Bluetooth antenna nearest the port side of the computer by the edges of the board and pull it straight up off the internal frame.





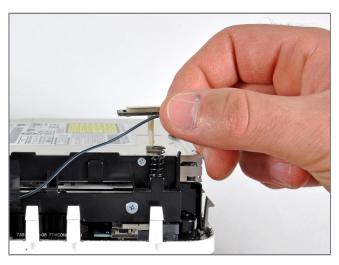

- Remove the antenna board near the front of the mini by pulling it straight up off the internal frame.
- If necessary, remove the piece of tape securing the antenna leads to the internal frame.
- Be sure to keep track of the springs under each of the three antenna boards.





Step 10


• Use the flat end of a spudger to pry the audio ribbon cable connector up off the audio board.



Step 11

- Remove the four Phillips screws securing the internal frame to the bottom housing.
- The screw in the lower right corner of this image is recessed deep in the internal frame. A flashlight and a thin screwdriver aid in removal.



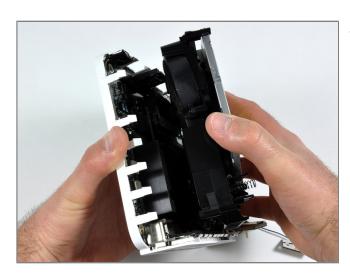

• Lift the internal frame off the bottom housing, minding any cables that may get caught.



Step 13 - Optical Drive

• Use the tip of a spudger to remove the black electrical tape spanning the interconnect board and optical drive.






• Use the flat end of a spudger to disconnect the audio ribbon cable from the interconnect board.




Step 15

• If necessary, remove the yellow kapton tape covering the internal frame and the optical drive.

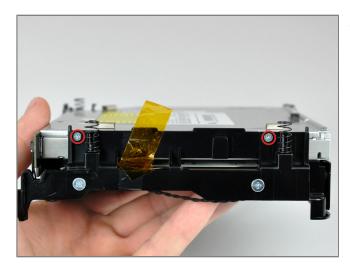

Step 16

 Remove the two Phillips screws securing the optical drive to the internal frame.

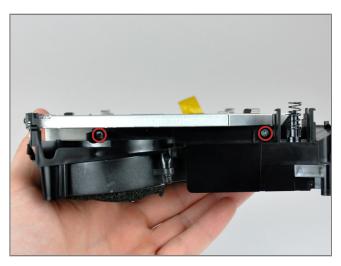

 Turn the mini 180 degrees and remove the two Phillips screws securing the optical drive to the internal frame on the other side.



Step 18

 Remove the two Phillips screws securing the interconnect board to the optical drive.



Step 19

- Insert the flat end of a spudger into the crevice between the optical drive and the interconnect board.
- Carefully increase the crevice to disconnect the optical drive from the interconnect board.



• Gently lift the optical drive out of the internal frame.